American Standard®
HEATING & AIR CONDITIONING

MITSUBISHI ELECTRIC

**Revision A:**
- 3. SPECIFICATION has been corrected.
- A warning when opening or closing the valve has been added.

OBHA873 is void.

# OUTDOOR UNIT

HFC utilized R410A

**No. OBHA873**
**REVISED EDITION-A**

# SERVICE MANUAL

## Models

# NAXSPH06B112AA NAXSPB06B112AA
# NAXSPH09B112AA NAXSPB09B112AA
# NAXSPH12B112AA NAXSPB12B112AA
# NAXSPH15B112AA NAXSPB15B112AA
# NAXSPH18B112AA NAXSPB18B112AA

**Indoor unit service manual**
**NAXWPH•B•AA Series (OBHA872)**

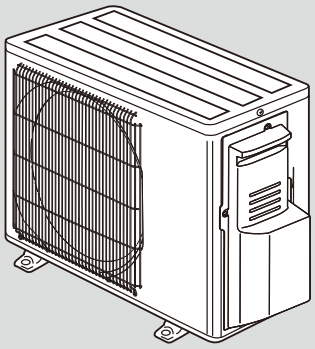

NAXSPH06B112AA NAXSPB06B112AA
NAXSPH09B112AA NAXSPB09B112AA
NAXSPH12B112AA NAXSPB12B112AA

CONTENTS


1. TECHNICAL CHANGES ····· 2
2. PART NAMES AND FUNCTIONS ····· 3
3. SPECIFICATION ····· 4
4. OUTLINES AND DIMENSIONS ····· 6
5. WIRING DIAGRAM ····· 8
6. REFRIGERANT SYSTEM DIAGRAM ····· 10
7. DATA ····· 12
8. ACTUATOR CONTROL ····· 23
9. SERVICE FUNCTIONS ····· 24
10. TROUBLESHOOTING ····· 25
11. DISASSEMBLY INSTRUCTIONS ····· 46

PARTS CATALOG (OBBA873)

# Use the specified refrigerant only

**Never use any refrigerant other than that specified.**

Doing so may cause a burst, an explosion, or fire when the unit is being used, serviced, or disposed of.
Correct refrigerant is specified in the manuals and on the spec labels provided with our products.
We will not be held responsible for mechanical failure, system malfunction, unit breakdown or accidents caused by failure to follow the instructions.

**<Preparation before the repair service>**

- Prepare the proper tools.
- Prepare the proper protectors.
- Provide adequate ventilation.
- After stopping the operation of the air conditioner, turn off the power-supply breaker and pull the power plug.
- Discharge the capacitor before the work involving the electric parts.

**<Precautions during the repair service>**

- Do not perform the work involving the electric parts with wet hands.
- Do not pour water into the electric parts.
- Do not touch the refrigerant.
- Do not touch the hot or cold areas in the refrigeration cycle.
- When the repair or the inspection of the circuit needs to be done without turning off the power, exercise great caution not to touch the live parts.

**⚠ WARNING**

- **When the refrigeration circuit has a leak, do not execute pump down with the compressor.**
- **When pumping down the refrigerant, stop the compressor before disconnecting the refrigerant pipes. The compressor may burst if air etc. get into it.**
- **When opening or closing the valve below freezing temperatures, refrigerant may spurt out from the gap between the valve stem and the valve body, resulting in injuries.**

**Revision A:**

• 3. SPECIFICATION has been corrected.
• A warning when opening or closing the valve has been added.

# 1 TECHNICAL CHANGES

**NAXSPH06B112AA NAXSPB06B112AA**
**NAXSPH09B112AA NAXSPB09B112AA**
**NAXSPH12B112AA NAXSPB12B112AA**
**NAXSPH15B112AA NAXSPB15B112AA**
**NAXSPH18B112AA NAXSPB18B112AA**

1. New model

# 2 PART NAMES AND FUNCTIONS

**NAXSPH06B112AA NAXSPB06B112AA**
**NAXSPH09B112AA NAXSPB09B112AA**
**NAXSPH12B112AA NAXSPB12B112AA**

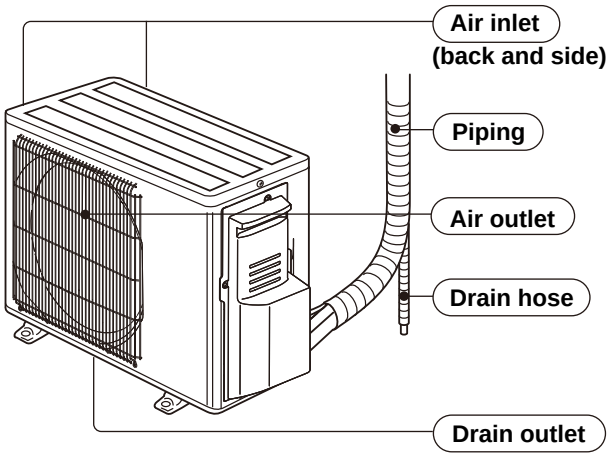


**NAXSPH15B112AA NAXSPB15B112AA**
**NAXSPH18B112AA NAXSPB18B112AA**

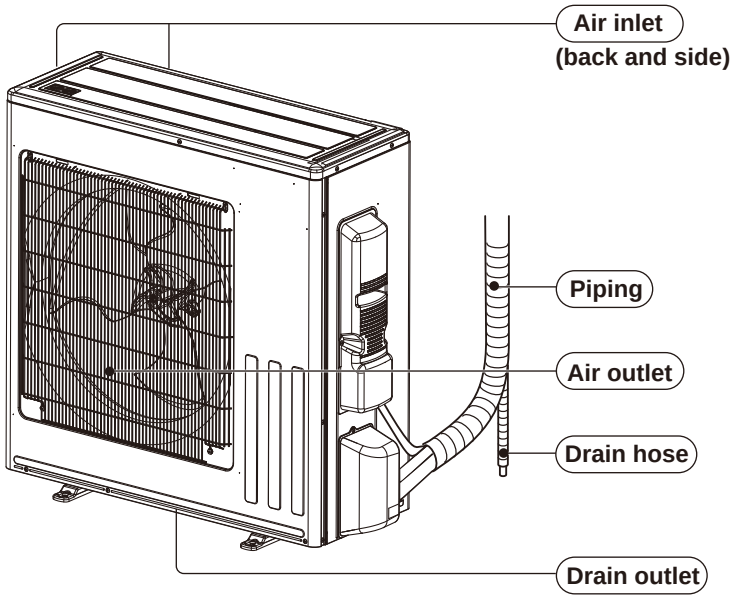

# 3 SPECIFICATION

| Outdoor unit model | | | NAXSPH06B112AA<br>NAXSPB06B112AA | NAXSPH09B112AA<br>NAXSPB09B112AA | NAXSPH12B112AA<br>NAXSPB12B112AA | NAXSPH15B112AA<br>NAXSPB15B112AA | NAXSPH18B112AA<br>NAXSPB18B112AA |
|---|---|---|---|---|---|---|---|
| Capacity<br>Rated (Minimum~Maximum) | Cooling *1 | Btu/h | 6,000<br>(1,700 ~ 9,000) | 9,000<br>(1,700 ~ 12,000) | 12,000<br>(2,500 ~ 13,600) | 14,000<br>(6,450 ~ 19,000) | 17,200<br>(6,450 ~ 21,000) |
| | Heating 47 *1 | Btu/h | 8,700<br>(1,600 ~ 14,000) | 9,600<br>(1,600 ~ 18,000) | 12,300<br>(3,700 ~ 21,000) | 16,000<br>(5,150 ~ 24,000) | 19,000<br>(5,150 ~ 30,000) |
| Capacity<br>Rated (Maximum) | Heating 17 *2 | Btu/h | 5,400 (12,700) | 5,900 (14,000) | 7,600(17,300) | 9,800 (22,700) | 11,700 (27,000) |
| Power consumption<br>Rated (Minimum~Maximum) | Cooling *1 | W | 315<br>(100 ~ 560) | 560<br>(100 ~ 1,000) | 870<br>(170 ~ 1,150) | 1,000<br>(410 ~ 2,000) | 1,375<br>(410 ~ 2,220) |
| | Heating 47 *1 | W | 545<br>(110 ~ 1,270) | 620<br>(110 ~ 1,740) | 850<br>(280 ~ 1,980) | 1,155<br>(430 ~ 3,190) | 1,610<br>(430 ~ 3,990) |
| Power consumption<br>Rated (Maximum) | Heating 17 *2 | W | 390 (1,000) | 450 (1,710) | 610 (1,980) | 830 (2,480) | 1,160 (3,820) |
| EER *1 [SEER] *3 | Cooling | | 19.0 [33.1] | 16.1 [30.5] | 13.8 [26.1] | 14.0 [22.2] | 12.5 [21.0] |
| HSPF IV *4 | Heating | | NAXSPH: 13.5 | NAXSPH: 13.5 | NAXSPH: 12.5 | NAXSPH: 12.5 | NAXSPH: 12.5 |
| | | | NAXSPB: 12.5 | NAXSPB: 12.5 | NAXSPB: 12.0 | NAXSPB: 12.0 | NAXSPB: 12.0 |
| COP | Heating *1 | | 4.68 | 4.54 | 4.24 | 4.06 | 3.46 |
| Power supply | V , phase , Hz | | 208/230, 1 , 60 | | | | |
| Max. fuse size (time delay) | | A | 15 | | | 20 | |
| Min. circuit ampacity | | A | 10 | | | 18 | |
| Fan motor | F.L.A | A | 0.50 | | | 0.93 | |
| Compressor | Model | | SNB092FQAMT | | SNB140FQUMT | SNB172FQKMT | |
| | R.L.A | A | 7.4 | | | 13.6 | |
| | L.R.A | A | 9.2 | | | 17.0 | |
| | Refrigeration oil | fl oz. (L)/(Model) | 11.8 (0.35)/(FV50S) | | | 13.5 (0.40)/(FV50S) | |
| Refrigerant control | | | Linear expansion valve | | | | |
| Sound level *1 | Cooling | dB(A) | 47 | 48 | 49 | 51 | 52 |
| | Heating | dB(A) | 49 | 49 | 51 | 55 | 55 |
| Defrost method | | | Reverse cycle | | | | |
| Dimensions | W | in. | 31-1/2 | | | 33-1/16 | |
| | D | in. | 11-1/4 | | | 13 | |
| | H | in. | 21-5/8 | | | 34-5/8 | |
| Weight | | lb. | NAXSPH: 82 | | NAXSPH: 83 | NAXSPH: 117 | |
| | | | NAXSPB: 83 | | NAXSPB: 84 | NAXSPB: 118 | |
| External finish | | | Munsell 3Y 7.8/1.1 | | | | |
| Remote controller | | | Wireless type | | | | |
| Control voltage (by built-in transformer) | | V DC | 12 - 24 | | | | |
| Refrigerant piping | | | Not supplied | | | | |
| Refrigerant pipe size<br>(Min. wall thickness) | Liquid | in. | 1/4 (0.0315) | | | | |
| | Gas | in. | 3/8 (0.0315) | | | 1/2 (0.0315) | |
| Connection method | Indoor | | Flared | | | | |
| | Outdoor | | Flared | | | | |
| Between the indoor & outdoor units | Height difference | ft. | 40 | | | 50 | |
| | Piping length | ft. | 65 | | | 100 | |
| Refrigerant charge (R410A) | | | 2 lb. 9 oz. | | | 3 lb. 7 oz. | |

**NOTE**: Test conditions are based on AHRI 210/240.

*1: Rating conditions (Cooling) — Indoor: 80˚FDB, 67˚FWB, Outdoor: 95˚FDB, (75˚FWB)
(Heating) — Indoor: 70˚FDB, 60˚FWB, Outdoor: 47˚FDB, 43˚FWB

*2: Rating conditions (Heating) — Indoor: 70˚FDB, 60˚FWB, Outdoor: 17˚FDB, 15˚FWB

## Test condition

*3, *4

| AHRI 210/240 | Mode | Test | Indoor air condition (°F) | | Outdoor air condition (°F) | |
|---|---|---|---|---|---|---|
| | | | Dry bulb | Wet bulb | Dry bulb | Wet bulb |
| | SEER (Cooling) | "A-Full" Cooling Steady State at rated compressor speed | 80 | 67 | 95 | (75) |
| | | "B-Full" Cooling Steady State at rated compressor speed | 80 | 67 | 82 | (65) |
| | | "B-Low" Cooling Steady State at minimum compressor speed | 80 | 67 | 82 | (65) |
| | | "F-Low" Cooling Steady State at minimum compressor speed | 80 | 67 | 67 | (53.5) |
| | | "E-Int" Cooling Steady State at intermediate compressor speed *5 | 80 | 67 | 87 | (69) |
| | HSPF (Heating) | "H1-Nom" Heating Steady State at rated compressor speed | 70 | 60 | 47 | 43 |
| | | "H3-Full" Heating at rated compressor speed | 70 | 60 | 17 | 15 |
| | | "H0-Low" Heating Steady State at minimum compressor speed | 70 | 60 | 62 | 56.5 |
| | | "H1-Low" Heating Steady State at minimum compressor speed | 70 | 60 | 47 | 43 |
| | | "H2-Int" Heating at intermediate compressor speed *5 | 70 | 60 | 35 | 33 |

*5: At intermediate compressor speed
= ("Rated compressor speed" - "minimum compressor speed") / 3 + "minimum compressor speed".

**OPERATING RANGE**

(1) POWER SUPPLY

| | Rated voltage | Guaranteed voltage (V) |
|---|---|---|
| Outdoor unit | 208/230 V<br>1 phase<br>60 Hz | Min. 187 — 208 — 230 — Max. 253 |

(2) OPERATION

| Mode | Condition | Intake air temperature (°F) | | | |
|---|---|---|---|---|---|
| | | Indoor | | Outdoor | |
| | | DB | WB | DB | WB |
| Cooling | Standard temperature | 80 | 67 | 95 | — |
| | Maximum temperature | 90 | 73 | 115 | — |
| | Minimum temperature | 67 | 57 | 14 | — |
| | Maximum humidity | 78 % | | — | |
| Heating | Standard temperature | 70 | 60 | 47 | 43 |
| | Maximum temperature | 80 | 67 | 75 | 65 |
| | Minimum temperature | 70 | 60 | -13 | -14 |

# 4 OUTLINES AND DIMENSIONS

**NAXSPH06B112AA NAXSPB06B112AA NAXSPH09B112AA NAXSPB09B112AA NAXSPH12B112AA NAXSPB12B112AA**

**Unit: inch**

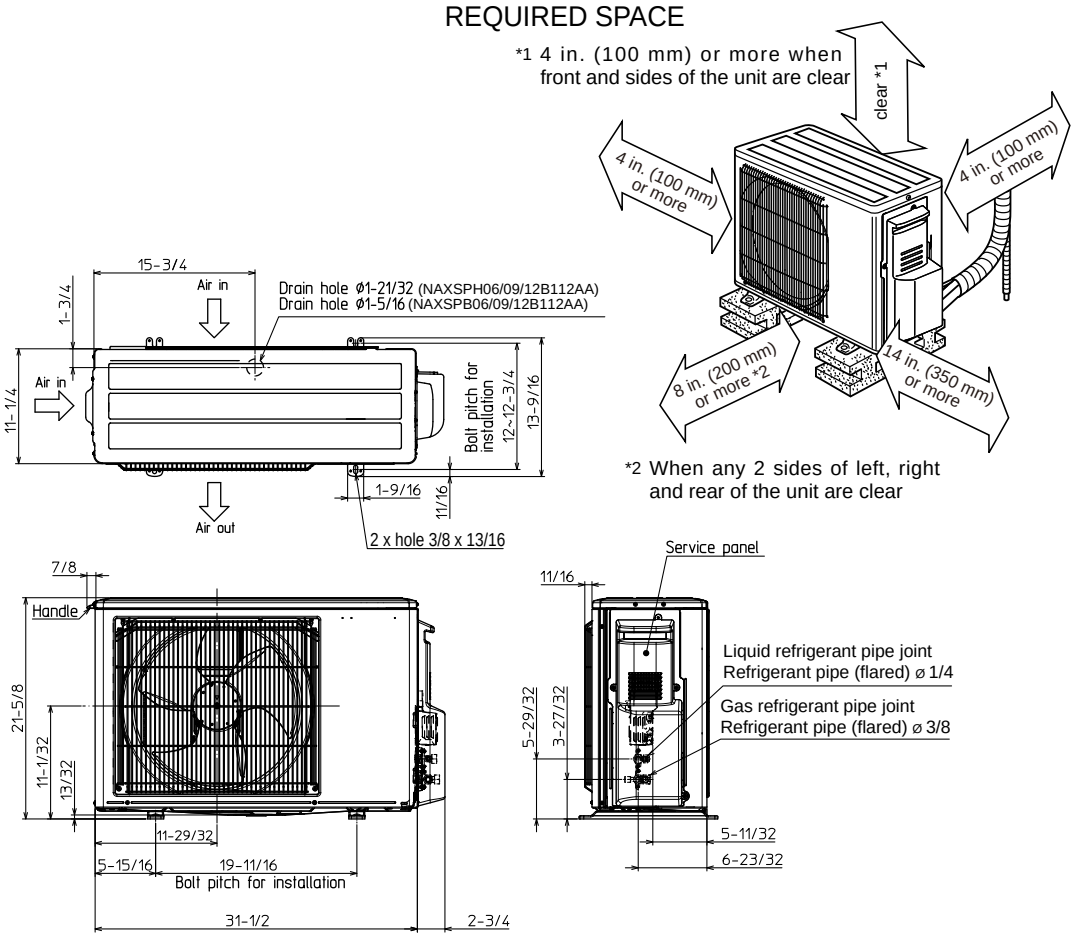

## NAXSPH15B112AA NAXSPB15B112AA NAXSPH18B112AA NAXSPB18B112AA

**Unit: inch**

REQUIRED SPACE

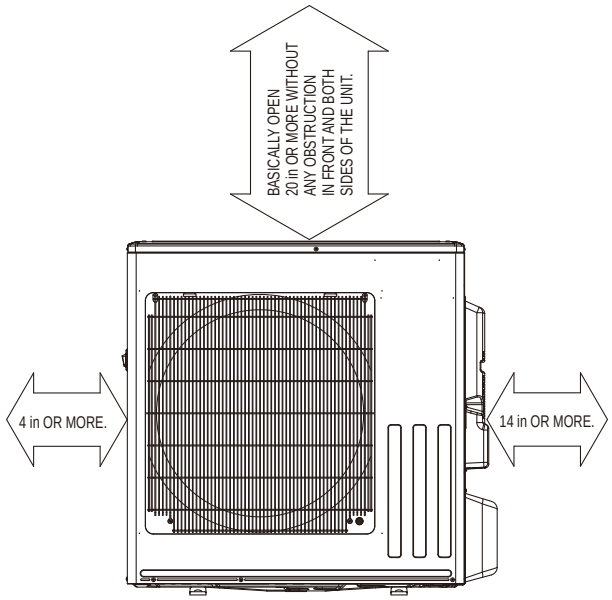


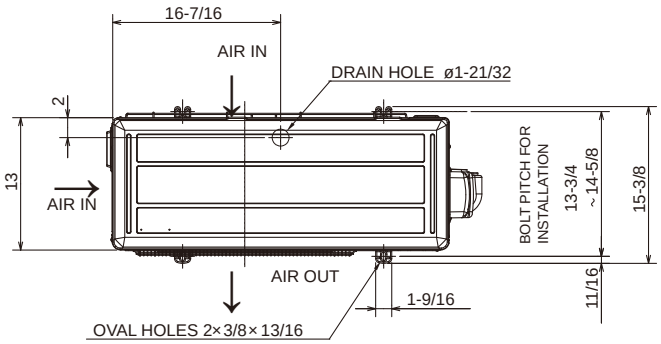


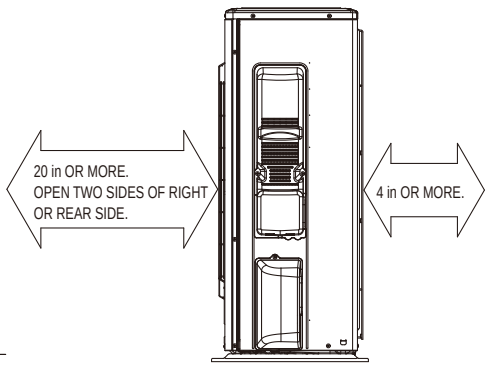


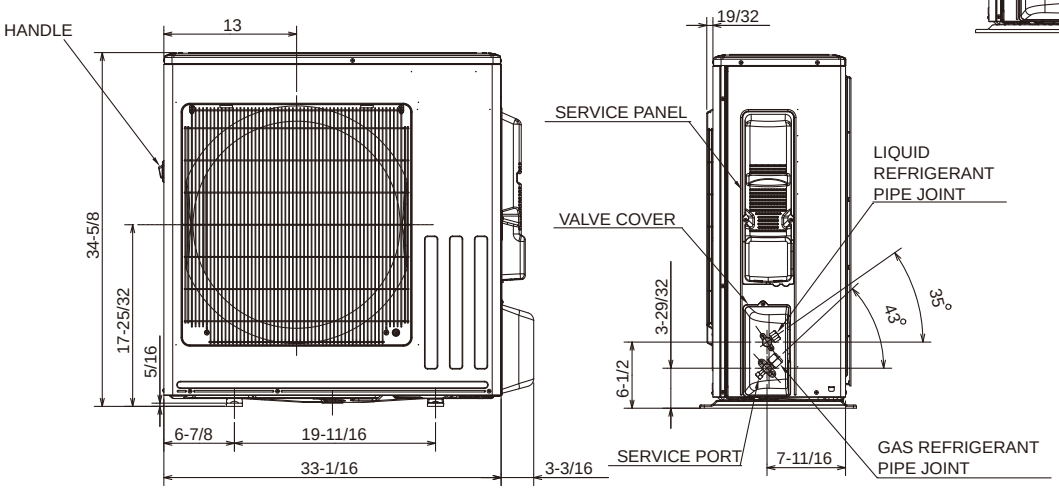


| | | |
|---|---|---|
| REFRIGERANT PIPE JOINT | LIQUID REFRIGERANT PIPE | FLARED ø6.35 (1/4") |
| | GAS REFRIGERANT PIPE | FLARED ø12.7 (1/2") |

# 5 WIRING DIAGRAM

## NAXSPH06B112AA NAXSPH09B112AA NAXSPH12B112AA

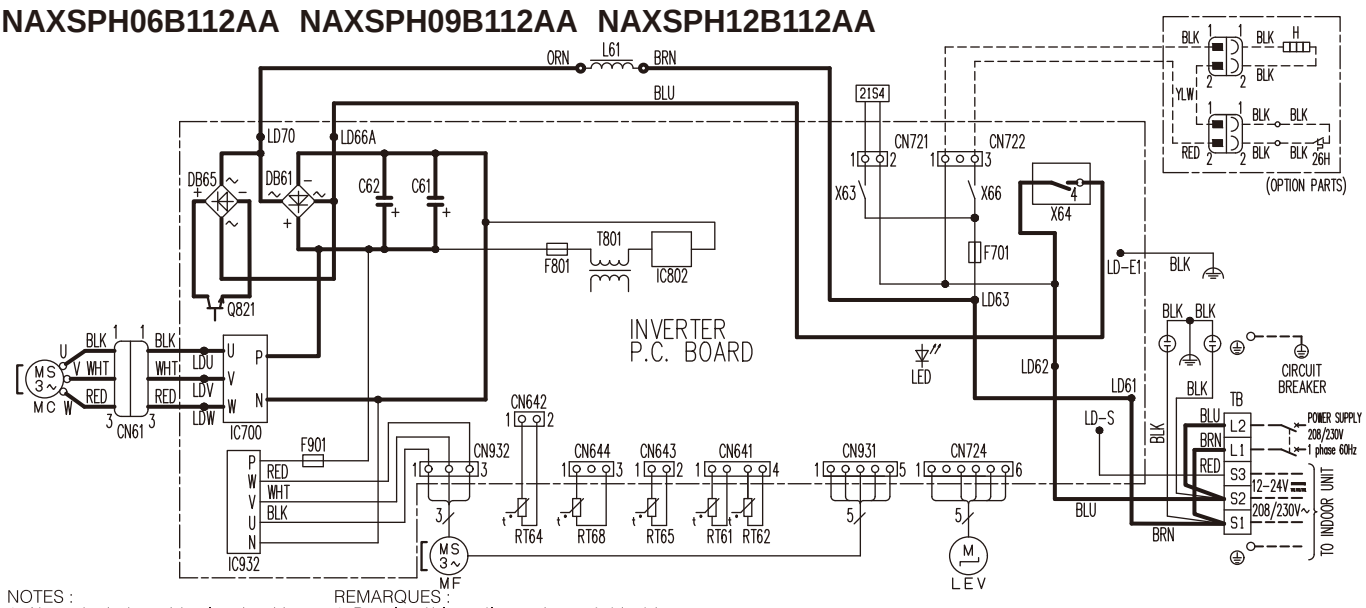


NOTES :
1. About the indoor side electric wiring, refer to the indoor unit electric wiring diagram for servicing.
2. Use copper supply wires.
3. Symbols indicate, ▭ :Terminal block
   ▭ :Connector

REMARQUES :
1. Pour le câblage électronique côté intérieur, se reporter au schéma d'entretien du câblage électronique de l'appareil intérieur.
2. Utiliser des fils d'alimentation en cuivre.
3. Les symboles ont les ▭ :Borne
   significations suivantes, ▭ :Connecteur

| SYMBOL | NAME | SYMBOL | NAME | SYMBOL | NAME |
|---|---|---|---|---|---|
| CN61 | CONNECTOR | LEV | EXPANSION VALVE COIL | RT65 | AMBIENT TEMP. THERMISTOR |
| C61,C62 | SMOOTHING CAPACITOR | L61 | REACTOR | RT68 | OUTDOOR HEAT EXCHANGER TEMP. THERMISTOR |
| DB61,DB65 | DIODE MODULE | MC | COMPRESSOR | | |
| F701,F801,F901 | FUSE (T3. 15AL250V) | MF | FAN MOTOR | TB | TERMINAL BLOCK |
| H | DEFROST HEATER (OPTION PARTS) | Q821 | SWITCHING POWER TRANSISTOR | T801 | TRANSFORMER |
| IC700,IC932 | POWER MODULE | RT61 | DEFROST THERMISTOR | X63, X64, X66 | RELAY |
| IC802 | POWER DEVICE | RT62 | DISCHARGE TEMP. THERMISTOR | 21S4 | REVERSING VALVE COIL |
| LED | LED | RT64 | FIN TEMP. THERMISTOR | 26H | HEATER PROTECTOR (OPTION PARTS) |

## NAXSPB06B112AA NAXSPB09B112AA NAXSPB12B112AA

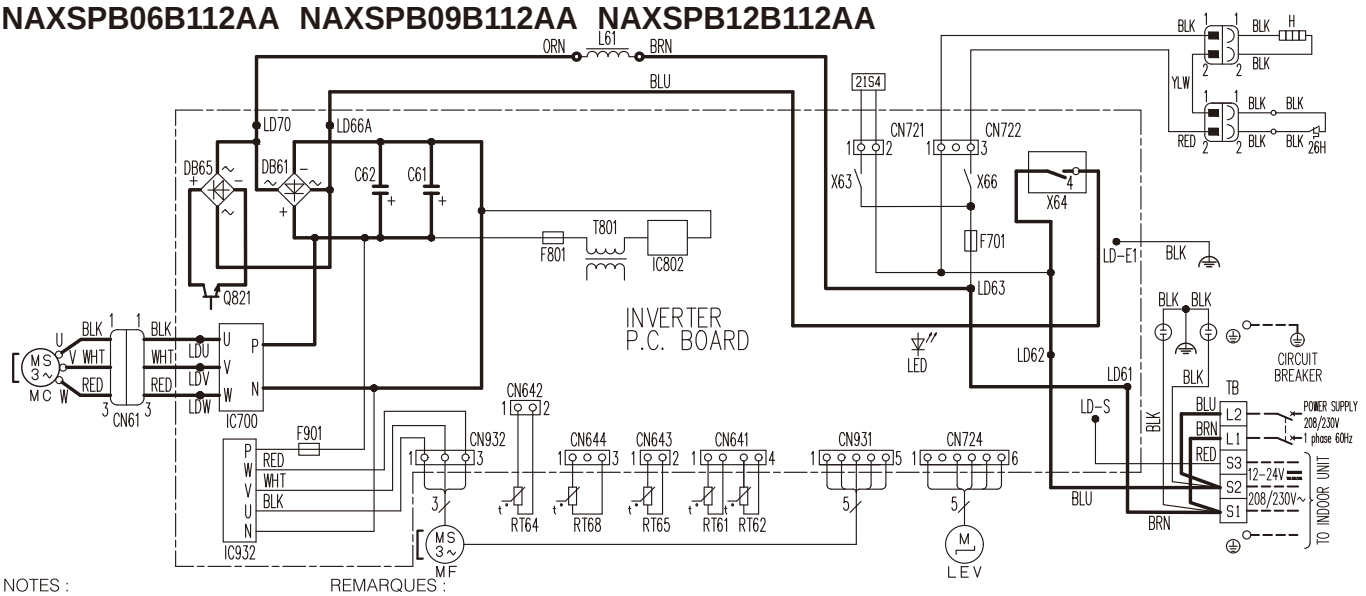


NOTES :
1. About the indoor side electric wiring, refer to the indoor unit electric wiring diagram for servicing.
2. Use copper supply wires.
3. Symbols indicate, ▭ :Terminal block
   ▭ :Connector

REMARQUES :
1. Pour le câblage électronique côté intérieur, se reporter au schéma d'entretien du câblage électronique de l'appareil intérieur.
2. Utiliser des fils d'alimentation en cuivre.
3. Les symboles ont les ▭ :Borne
   significations suivantes, ▭ :Connecteur

| SYMBOL | NAME | SYMBOL | NAME | SYMBOL | NAME |
|---|---|---|---|---|---|
| CN61 | CONNECTOR | LEV | EXPANSION VALVE COIL | RT65 | AMBIENT TEMP. THERMISTOR |
| C61,C62 | SMOOTHING CAPACITOR | L61 | REACTOR | RT68 | OUTDOOR HEAT EXCHANGER TEMP. THERMISTOR |
| DB61,DB65 | DIODE MODULE | MC | COMPRESSOR | | |
| F701,F801,F901 | FUSE (T3. 15AL250V) | MF | FAN MOTOR | TB | TERMINAL BLOCK |
| H | DEFROST HEATER | Q821 | SWITCHING POWER TRANSISTOR | T801 | TRANSFORMER |
| IC700,IC932 | POWER MODULE | RT61 | DEFROST THERMISTOR | X63, X64, X66 | RELAY |
| IC802 | POWER DEVICE | RT62 | DISCHARGE TEMP. THERMISTOR | 21S4 | REVERSING VALVE COIL |
| LED | LED | RT64 | FIN TEMP. THERMISTOR | 26H | HEATER PROTECTOR |

## NAXSPH15B112AA NAXSPH18B112AA

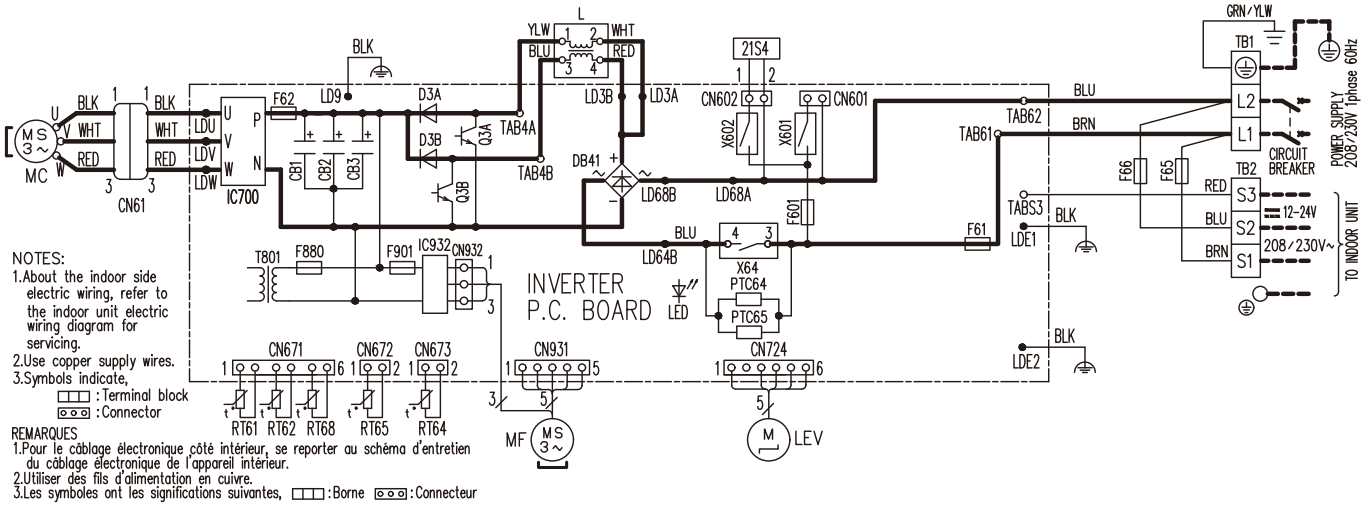


| SYMBOL | NAME | SYMBOL | NAME | SYMBOL | NAME |
|---|---|---|---|---|---|
| CB1,CB2,CB3 | SMOOTHING CAPACITOR | LED | LED | RT68 | OUTDOOR HEAT EXCHANGER TEMP. THERMISTOR |
| CN61 | CONNECTOR | LEV | EXPANSION VALVE COIL | | |
| DB41 | DIODE MODULE | MC | COMPRESSOR | TB1,TB2 | TERMINAL BLOCK |
| D3A,D3B | DIODE | MF | FAN MOTOR | T801 | TRANSFORMER |
| F61 | FUSE (25A 250V) | PTC64,PTC65 | CIRCUIT PROTECTION | X64,X601,X602 | RELAY |
| F62 | FUSE (15A 250V) | Q3A,Q3B | SWITCHING POWER TRANSISTOR | 21S4 | REVERSING VALVE COIL |
| F65,F66 | FUSE (T6.3AL250V) | RT61 | DEFROST TEMP. THERMISTOR | | |
| F601,F880,F901 | FUSE (T3.15AL250V) | RT62 | DISCHARGE TEMP. THERMISTOR | | |
| IC700,IC932 | POWER MODULE | RT64 | FIN TEMP. THERMISTOR | | |
| L | REACTOR | RT65 | AMBIENT TEMP. THERMISTOR | | |

## NAXSPB15B112AA NAXSPB18B112AA

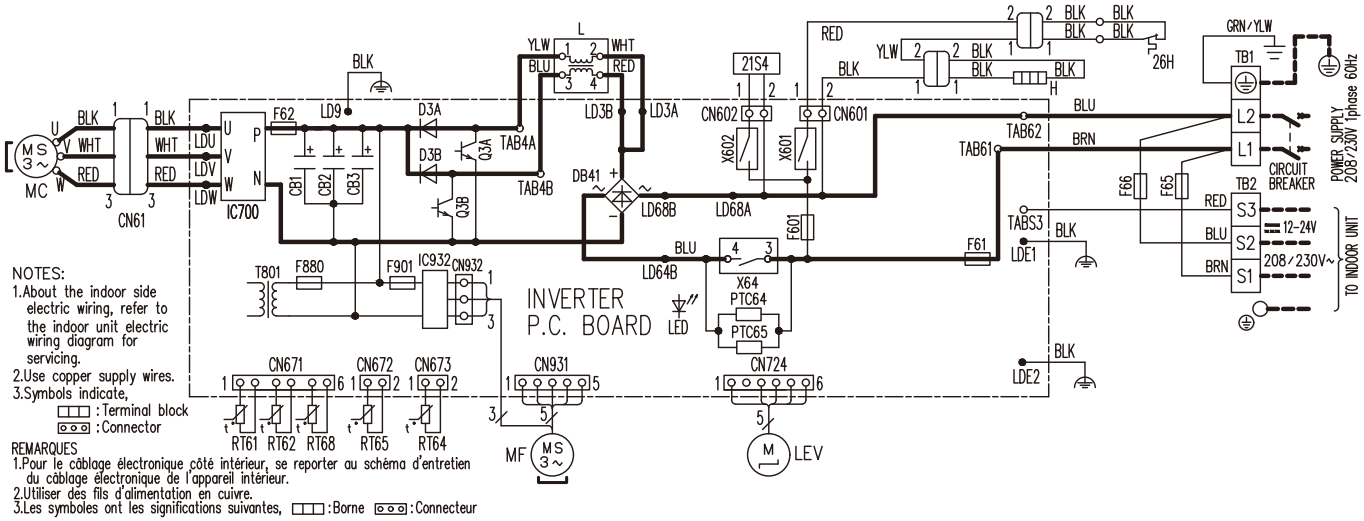


| SYMBOL | NAME | SYMBOL | NAME | SYMBOL | NAME |
|---|---|---|---|---|---|
| CB1,CB2,CB3 | SMOOTHING CAPACITOR | L | REACTOR | RT65 | AMBIENT TEMP. THERMISTOR |
| CN61 | CONNECTOR | LED | LED | RT68 | OUTDOOR HEAT EXCHANGER TEMP. THERMISTOR |
| DB41 | DIODE MODULE | LEV | EXPANSION VALVE COIL | | |
| D3A,D3B | DIODE | MC | COMPRESSOR | TB1,TB2 | TERMINAL BLOCK |
| F61 | FUSE (25A 250V) | MF | FAN MOTOR | T801 | TRANSFORMER |
| F62 | FUSE (15A 250V) | PTC64,PTC65 | CIRCUIT PROTECTION | X64,X601,X602 | RELAY |
| F65,F66 | FUSE (T6.3AL250V) | Q3A,Q3B | SWITCHING POWER TRANSISTOR | 21S4 | REVERSING VALVE COIL |
| F601,F880,F901 | FUSE (T3.15AL250V) | RT61 | DEFROST TEMP. THERMISTOR | 26H | HEATER PROTECTOR |
| H | DEFROST HEATER | RT62 | DISCHARGE TEMP. THERMISTOR | | |
| IC700,IC932 | POWER MODULE | RT64 | FIN TEMP. THERMISTOR | | |

# 6 REFRIGERANT SYSTEM DIAGRAM

## NAXSPH06B112AA NAXSPB06B112AA NAXSPH09B112AA NAXSPB09B112AA NAXSPH12B112AA NAXSPB12B112AA

**Unit: inch**

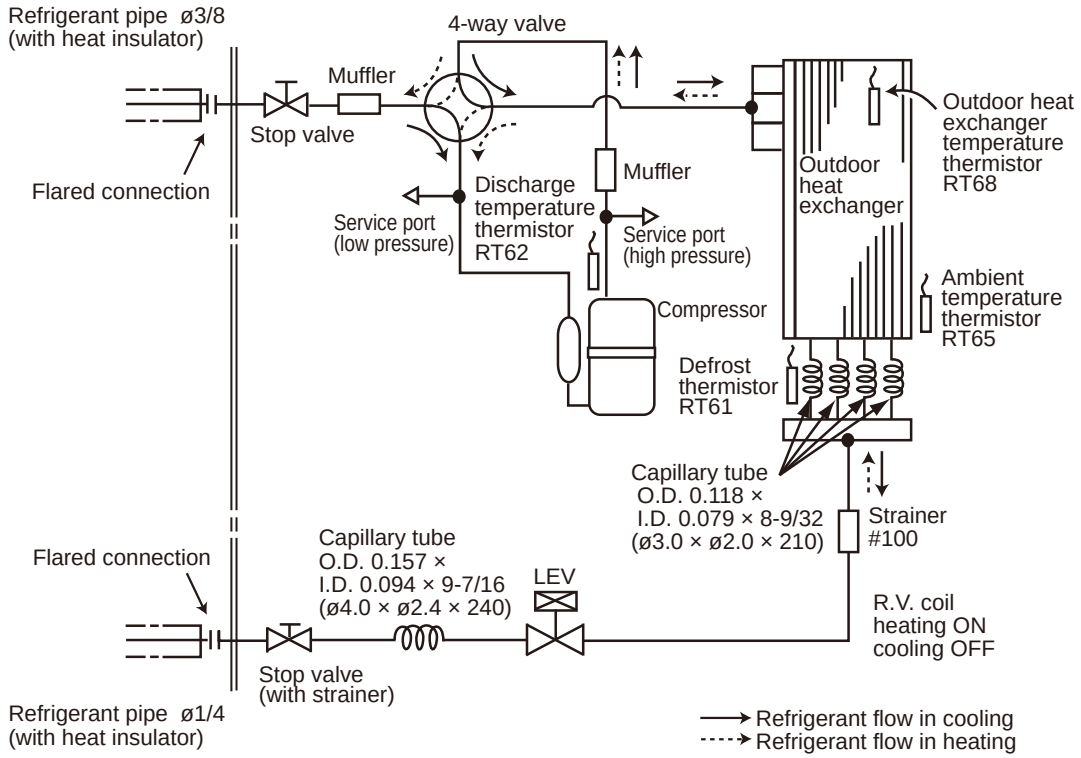


## NAXSPH15B112AA NAXSPB15B112AA NAXSPH18B112AA NAXSPB18B112AA

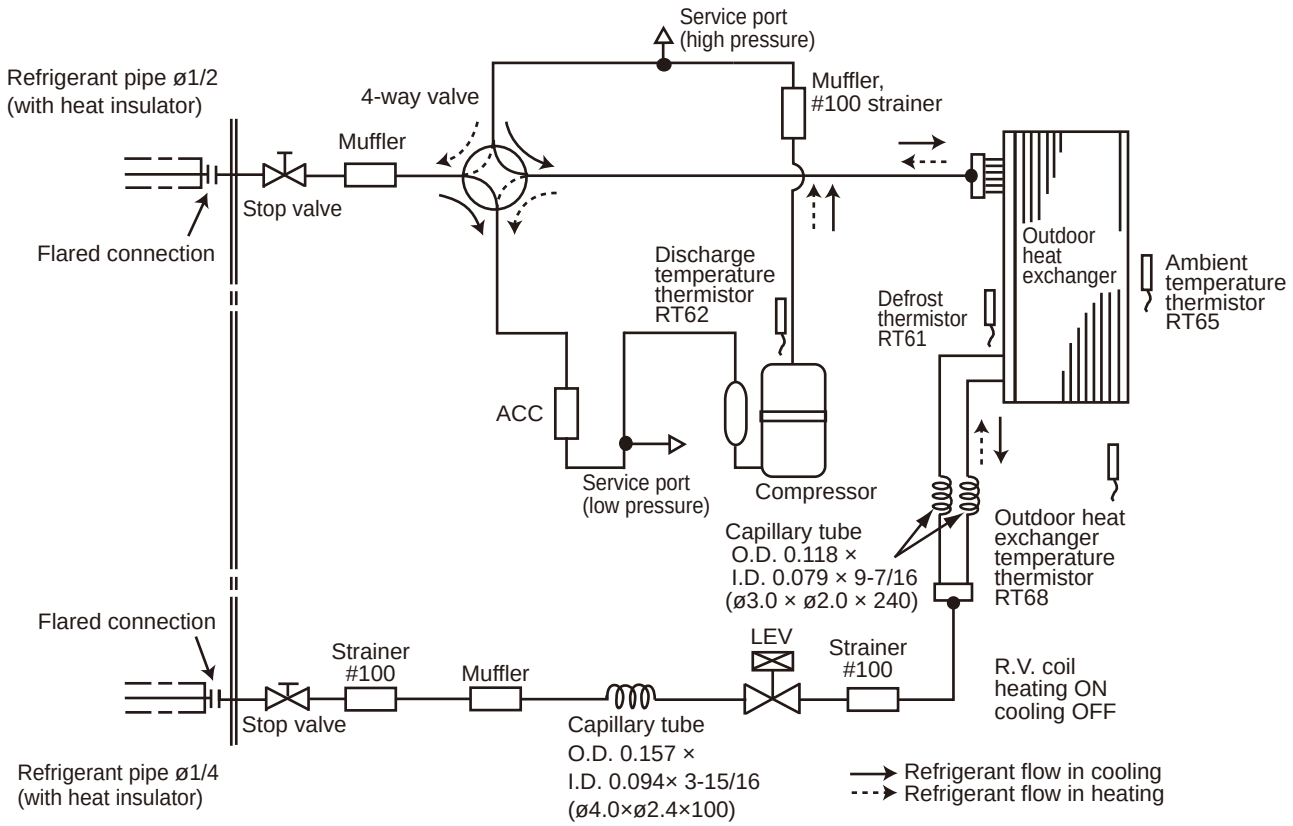

## MAX. REFRIGERANT PIPING LENGTH and MAX. HEIGHT DIFFERENCE

| Model | Refrigerant piping: ft. | | Piping size O.D: in. | |
|---|---|---|---|---|
| | Max. Length A | Max. Height difference B | Gas | Liquid |
| NAXSPH06B112AA<br>NAXSPB06B112AA<br>NAXSPH09B112AA<br>NAXSPB09B112AA<br>NAXSPH12B112AA<br>NAXSPB12B112AA | 65 | 40 | 3/8 | 1/4 |
| NAXSPH15B112AA<br>NAXSPB15B112AA<br>NAXSPH18B112AA<br>NAXSPB18B112AA | 100 | 50 | 1/2 | 1/4 |

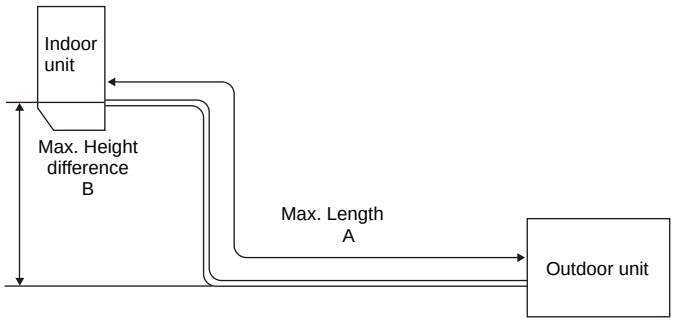


## ADDITIONAL REFRIGERANT CHARGE (R410A: oz.)

**NOTE**: Refrigerant piping exceeding 25 ft. requires additional refrigerant charge according to the calculation.

| Model | Outdoor unit precharged | Refrigerant piping length (one way): ft. | | | | | |
|---|---|---|---|---|---|---|---|
| | | 25 | 30 | 40 | 50 | 60 | 65 |
| NAXSPH06B112AA<br>NAXSPB06B112AA<br>NAXSPH09B112AA<br>NAXSPB09B112AA<br>NAXSPH12B112AA<br>NAXSPB12B112AA | 2 lb. 9 oz. | 0 | 1.08 | 3.24 | 5.40 | 7.56 | 8.64 |

Calculation: X oz. = 1.08/5 oz./ft. × (Refrigerant piping length (ft.) - 25)

**NOTE**: Refrigerant piping exceeding 25 ft. requires additional refrigerant charge according to the calculation.

| Model | Outdoor unit precharged | Refrigerant piping length (one way): ft. | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|
| | | 25 | 30 | 40 | 50 | 60 | 70 | 80 | 90 | 100 |
| NAXSPH15B112AA<br>NAXSPB15B112AA<br>NAXSPH18B112AA<br>NAXSPB18B112AA | 3 lb. 7 oz. | 0 | 1.08 | 3.24 | 5.40 | 7.56 | 9.72 | 11.88 | 14.04 | 16.20 |

Calculation: X oz. = 1.08/5 oz./ft. × (Refrigerant piping length (ft.) - 25)

# 7 DATA

## NAXSPH06B112AA NAXSPB06B112AA NAXSPH09B112AA NAXSPB09B112AA NAXSPH12B112AA NAXSPB12B112AA NAXSPH15B112AA NAXSPB15B112AA NAXSPH18B112AA NAXSPB18B112AA

### 7-1. PERFORMANCE DATA

#### 1) COOLING CAPACITY

| Model | Indoor air | Outdoor intake air DB temperature (˚F) | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | IWB (˚F) | 75 | | | | 85 | | | | 95 | | | |
| | | TC | SHC | SHF | TPC | TC | SHC | SHF | TPC | TC | SHC | SHF | TPC |
| NAXSPH06B112AA NAXSPB06B112AA | 71 | 7.4 | 6.1 | 0.83 | 0.28 | 6.9 | 5.7 | 0.83 | 0.31 | 6.5 | 5.3 | 0.83 | 0.33 |
| | 67 | 7.0 | 6.7 | 0.96 | 0.26 | 6.5 | 6.2 | 0.96 | 0.29 | 6.0 | 5.8 | 0.96 | 0.32 |
| | 63 | 6.5 | 7.2 | 1.09 | 0.25 | 6.1 | 6.6 | 1.09 | 0.28 | 5.6 | 6.2 | 1.09 | 0.30 |
| NAXSPH09B112AA NAXSPB09B112AA | 71 | 11.0 | 8.7 | 0.79 | 0.50 | 10.3 | 8.1 | 0.79 | 0.55 | 9.7 | 7.6 | 0.79 | 0.59 |
| | 67 | 10.4 | 9.6 | 0.92 | 0.47 | 9.7 | 8.9 | 0.92 | 0.52 | 9.0 | 8.3 | 0.92 | 0.56 |
| | 63 | 9.8 | 10.3 | 1.05 | 0.45 | 9.1 | 9.6 | 1.05 | 0.50 | 8.5 | 8.9 | 1.05 | 0.53 |
| NAXSPH12B112AA NAXSPB12B112AA | 71 | 14.7 | 10.2 | 0.70 | 0.77 | 13.7 | 9.6 | 0.70 | 0.85 | 12.9 | 9.0 | 0.70 | 0.91 |
| | 67 | 13.9 | 11.6 | 0.83 | 0.73 | 13.0 | 10.8 | 0.83 | 0.80 | 12.0 | 10.0 | 0.83 | 0.87 |
| | 63 | 13.1 | 12.6 | 0.96 | 0.70 | 12.1 | 11.7 | 0.96 | 0.77 | 11.3 | 10.9 | 0.96 | 0.83 |
| NAXSPH15B112AA NAXSPB15B112AA | 71 | 17.2 | 9.7 | 0.57 | 0.89 | 16.0 | 9.1 | 0.57 | 0.98 | 15.1 | 8.5 | 0.57 | 1.05 |
| | 67 | 16.2 | 11.4 | 0.70 | 0.84 | 15.1 | 10.6 | 0.70 | 0.93 | 14.0 | 9.8 | 0.70 | 1.00 |
| | 63 | 15.3 | 12.7 | 0.83 | 0.80 | 14.1 | 11.8 | 0.83 | 0.89 | 13.2 | 11.0 | 0.83 | 0.96 |
| NAXSPH18B112AA NAXSPB18B112AA | 71 | 21.1 | 11.3 | 0.54 | 1.22 | 19.7 | 10.6 | 0.54 | 1.34 | 18.5 | 9.9 | 0.54 | 1.44 |
| | 67 | 20.0 | 13.4 | 0.67 | 1.16 | 18.6 | 12.4 | 0.67 | 1.27 | 17.2 | 11.5 | 0.67 | 1.38 |
| | 63 | 18.7 | 15.1 | 0.80 | 1.10 | 17.4 | 14.0 | 0.80 | 1.22 | 16.2 | 13.0 | 0.80 | 1.31 |

| Model | Indoor air | Outdoor intake air DB temperature (˚F) | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|
| | IWB (˚F) | 105 | | | | 115 | | | |
| | | TC | SHC | SHF | TPC | TC | SHC | SHF | TPC |
| NAXSPH06B112AA NAXSPB06B112AA | 71 | 6.0 | 5.0 | 0.83 | 0.35 | 5.5 | 4.6 | 0.83 | 0.36 |
| | 67 | 5.6 | 5.4 | 0.96 | 0.33 | 5.1 | 4.9 | 0.96 | 0.35 |
| | 63 | 5.1 | 5.6 | 1.09 | 0.32 | 4.7 | 5.1 | 1.09 | 0.33 |
| NAXSPH09B112AA NAXSPB09B112AA | 71 | 9.0 | 7.1 | 0.79 | 0.62 | 8.3 | 6.5 | 0.79 | 0.64 |
| | 67 | 8.4 | 7.7 | 0.92 | 0.59 | 7.7 | 7.1 | 0.92 | 0.62 |
| | 63 | 7.7 | 8.1 | 1.05 | 0.57 | 7.0 | 7.4 | 1.05 | 0.59 |
| NAXSPH12B112AA NAXSPB12B112AA | 71 | 12.0 | 8.4 | 0.70 | 0.96 | 11.0 | 7.7 | 0.70 | 1.00 |
| | 67 | 11.2 | 9.3 | 0.83 | 0.92 | 10.3 | 8.5 | 0.83 | 0.97 |
| | 63 | 10.3 | 9.9 | 0.96 | 0.89 | 9.4 | 9.0 | 0.96 | 0.92 |
| NAXSPH15B112AA NAXSPB15B112AA | 71 | 14.0 | 7.9 | 0.57 | 1.11 | 12.9 | 7.3 | 0.57 | 1.15 |
| | 67 | 13.0 | 9.1 | 0.70 | 1.06 | 12.0 | 8.4 | 0.70 | 1.11 |
| | 63 | 12.0 | 10.0 | 0.83 | 1.02 | 10.9 | 9.1 | 0.83 | 1.06 |
| NAXSPH18B112AA NAXSPB18B112AA | 71 | 17.2 | 9.2 | 0.54 | 1.52 | 15.8 | 8.5 | 0.54 | 1.58 |
| | 67 | 16.0 | 10.7 | 0.67 | 1.46 | 14.7 | 9.9 | 0.67 | 1.53 |
| | 63 | 14.7 | 11.8 | 0.80 | 1.40 | 13.4 | 10.8 | 0.80 | 1.46 |

**NOTE**: 1. IWB : Intake air wet-bulb temperature TC : Total Capacity ($x10^3$ Btu/h)
SHC : Sensible Heat Capacity ($x10^3$ Btu/h) SHF : Sensible Heat Factor
TPC : Total Power Consumption (kW)
2. SHC is based on 80˚F of indoor Intake air DB temperature.

**2) COOLING CAPACITY CORRECTIONS**

| | Refrigerant piping length (one way: ft.) | | | |
|---|---|---|---|---|
| | 25 (std.) | 40 | 65 | 100 |
| **NAXSPH06B112AA**<br>**NAXSPB06B112AA**<br>**NAXSPH09B112AA**<br>**NAXSPB09B112AA**<br>**NAXSPH12B112AA**<br>**NAXSPB12B112AA** | 1.0 | 0.988 | 0.967 | - |
| **NAXSPH15B112AA**<br>**NAXSPB15B112AA**<br>**NAXSPH18B112AA**<br>**NAXSPB18B112AA** | 1.0 | 0.985 | 0.963 | 0.933 |

**3) HEATING CAPACITY CORRECTIONS**

| | Refrigerant piping length (one way: ft.) | | | |
|---|---|---|---|---|
| | 25 (std.) | 40 | 65 | 100 |
| **NAXSPH06B112AA**<br>**NAXSPB06B112AA**<br>**NAXSPH09B112AA**<br>**NAXSPB09B112AA**<br>**NAXSPH12B112AA**<br>**NAXSPB12B112AA** | 1.0 | 0.997 | 0.993 | - |
| **NAXSPH15B112AA**<br>**NAXSPB15B112AA**<br>**NAXSPH18B112AA**<br>**NAXSPB18B112AA** | 1.0 | 0.997 | 0.993 | 0.987 |

**4) HEATING CAPACITY**

| Model | Indoor air IDB (˚F) | Outdoor intake air WB temperature (˚F) | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | | 5 | | 15 | | 25 | | 35 | | 43 | | 45 | | 55 | |
| | | TC | TPC | TC | TPC | TC | TPC | TC | TPC | TC | TPC | TC | TPC | TC | TPC |
| **NAXSPH06B112AA** | 75 | 3.8 | 0.32 | 5.0 | 0.41 | 6.3 | 0.48 | 7.5 | 0.53 | 8.5 | 0.56 | 8.7 | 0.57 | 9.9 | 0.59 |
| | 70 | 4.1 | 0.31 | 5.4 | 0.39 | 6.5 | 0.47 | 7.7 | 0.52 | 8.7 | 0.55 | 9.0 | 0.56 | 10.1 | 0.58 |
| | 65 | 4.4 | 0.29 | 5.5 | 0.38 | 6.8 | 0.45 | 8.0 | 0.50 | 9.0 | 0.53 | 9.2 | 0.54 | 10.4 | 0.57 |
| **NAXSPB06B112AA** | 75 | 3.8 | 0.45 | 5.0 | 0.54 | 6.3 | 0.61 | 7.5 | 0.53 | 8.5 | 0.56 | 8.7 | 0.57 | 9.9 | 0.59 |
| | 70 | 4.1 | 0.44 | 5.4 | 0.52 | 6.5 | 0.60 | 7.7 | 0.52 | 8.7 | 0.55 | 9.0 | 0.56 | 10.1 | 0.58 |
| | 65 | 4.4 | 0.42 | 5.5 | 0.51 | 6.8 | 0.58 | 8.0 | 0.50 | 9.0 | 0.53 | 9.2 | 0.54 | 10.4 | 0.57 |
| **NAXSPH09B112AA** | 75 | 4.2 | 0.37 | 5.6 | 0.46 | 7.0 | 0.54 | 8.3 | 0.60 | 9.4 | 0.64 | 9.6 | 0.64 | 10.9 | 0.67 |
| | 70 | 4.6 | 0.35 | 5.9 | 0.45 | 7.2 | 0.53 | 8.5 | 0.59 | 9.6 | 0.62 | 9.9 | 0.63 | 11.2 | 0.66 |
| | 65 | 4.8 | 0.33 | 6.0 | 0.43 | 7.5 | 0.51 | 8.8 | 0.57 | 9.9 | 0.60 | 10.2 | 0.61 | 11.4 | 0.64 |
| **NAXSPB09B112AA** | 75 | 4.2 | 0.50 | 5.6 | 0.59 | 7.0 | 0.67 | 8.3 | 0.60 | 9.4 | 0.64 | 9.6 | 0.64 | 10.9 | 0.67 |
| | 70 | 4.6 | 0.48 | 5.9 | 0.58 | 7.2 | 0.66 | 8.5 | 0.59 | 9.6 | 0.62 | 9.9 | 0.63 | 11.2 | 0.66 |
| | 65 | 4.8 | 0.46 | 6.0 | 0.56 | 7.5 | 0.64 | 8.8 | 0.57 | 9.9 | 0.60 | 10.2 | 0.61 | 11.4 | 0.64 |
| **NAXSPH12B112AA** | 75 | 5.4 | 0.50 | 7.1 | 0.63 | 8.9 | 0.74 | 10.6 | 0.83 | 12.0 | 0.87 | 12.4 | 0.88 | 14.0 | 0.92 |
| | 70 | 5.8 | 0.48 | 7.6 | 0.61 | 9.2 | 0.73 | 10.9 | 0.81 | 12.3 | 0.85 | 12.7 | 0.87 | 14.3 | 0.90 |
| | 65 | 6.2 | 0.46 | 7.7 | 0.59 | 9.7 | 0.70 | 11.3 | 0.79 | 12.7 | 0.83 | 13.0 | 0.84 | 14.6 | 0.88 |
| **NAXSPB12B112AA** | 75 | 5.4 | 0.63 | 7.1 | 0.76 | 8.9 | 0.87 | 10.6 | 0.83 | 12.0 | 0.87 | 12.4 | 0.88 | 14.0 | 0.92 |
| | 70 | 5.8 | 0.61 | 7.6 | 0.74 | 9.2 | 0.86 | 10.9 | 0.81 | 12.3 | 0.85 | 12.7 | 0.87 | 14.3 | 0.90 |
| | 65 | 6.2 | 0.59 | 7.7 | 0.72 | 9.7 | 0.83 | 11.3 | 0.79 | 12.7 | 0.83 | 13.0 | 0.84 | 14.6 | 0.88 |
| **NAXSPH15B112AA** | 75 | 7.0 | 0.68 | 9.3 | 0.86 | 11.6 | 1.01 | 13.8 | 1.13 | 15.6 | 1.18 | 16.1 | 1.20 | 18.2 | 1.25 |
| | 70 | 7.6 | 0.65 | 9.8 | 0.83 | 12.0 | 0.99 | 14.2 | 1.10 | 16.0 | 1.16 | 16.5 | 1.18 | 18.6 | 1.22 |
| | 65 | 8.0 | 0.62 | 10.1 | 0.80 | 12.6 | 0.95 | 14.6 | 1.07 | 16.5 | 1.13 | 17.0 | 1.14 | 19.0 | 1.20 |
| **NAXSPB15B112AA** | 75 | 7.0 | 0.80 | 9.3 | 0.98 | 11.6 | 1.13 | 13.8 | 1.13 | 15.6 | 1.18 | 16.1 | 1.20 | 18.2 | 1.25 |
| | 70 | 7.6 | 0.77 | 9.8 | 0.95 | 12.0 | 1.11 | 14.2 | 1.10 | 16.0 | 1.16 | 16.5 | 1.18 | 18.6 | 1.22 |
| | 65 | 8.0 | 0.74 | 10.1 | 0.92 | 12.6 | 1.07 | 14.6 | 1.07 | 16.5 | 1.13 | 17.0 | 1.14 | 19.0 | 1.20 |
| **NAXSPH18B112AA** | 75 | 8.4 | 0.95 | 11.0 | 1.20 | 13.8 | 1.41 | 16.4 | 1.57 | 18.5 | 1.65 | 19.1 | 1.67 | 21.7 | 1.74 |
| | 70 | 9.0 | 0.91 | 11.7 | 1.16 | 14.3 | 1.38 | 16.8 | 1.53 | 19.0 | 1.61 | 19.6 | 1.64 | 22.1 | 1.71 |
| | 65 | 9.5 | 0.87 | 12.0 | 1.11 | 14.9 | 1.33 | 17.4 | 1.49 | 19.6 | 1.57 | 20.1 | 1.59 | 22.6 | 1.67 |
| **NAXSPB18B112AA** | 75 | 8.4 | 1.07 | 11.0 | 1.32 | 13.8 | 1.53 | 16.4 | 1.57 | 18.5 | 1.65 | 19.1 | 1.67 | 21.7 | 1.74 |
| | 70 | 9.0 | 1.03 | 11.7 | 1.28 | 14.3 | 1.50 | 16.8 | 1.53 | 19.0 | 1.61 | 19.6 | 1.64 | 22.1 | 1.71 |
| | 65 | 9.5 | 0.99 | 12.0 | 1.23 | 14.9 | 1.45 | 17.4 | 1.49 | 19.6 | 1.57 | 20.1 | 1.59 | 22.6 | 1.67 |

**NOTE**: 1. IDB : Intake air dry-bulb temperature
TC : Total Capacity ($x10^3$ Btu/h) TPC : Total Power Consumption (kW)
2. Above data is for heating operation without any frost.

## 7-2. PERFORMANCE CURVE

### Cooling

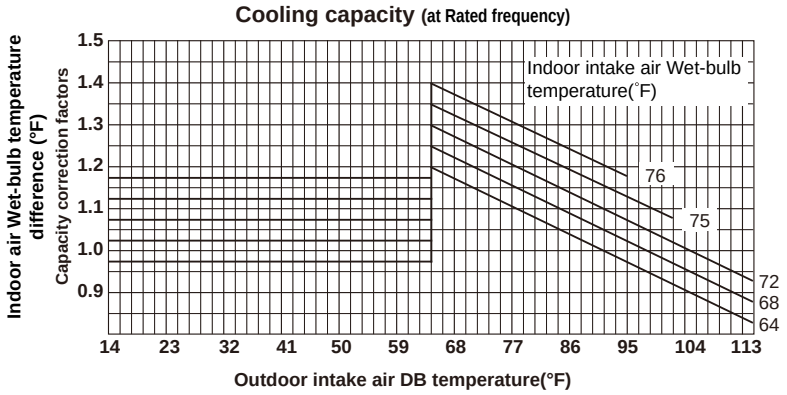


**NAXSPH06B112AA NAXSPB06B112AA**

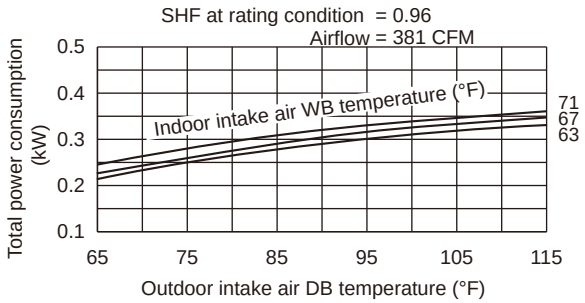


**NAXSPH09B112AA NAXSPB09B112AA**

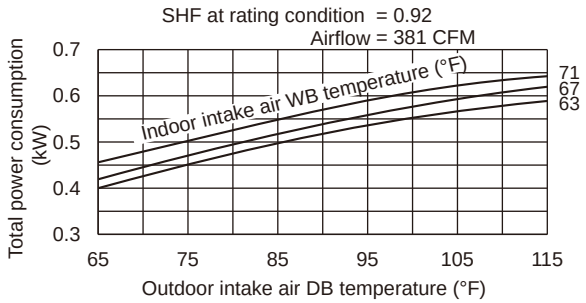


**NAXSPH12B112AA NAXSPB12B112AA**

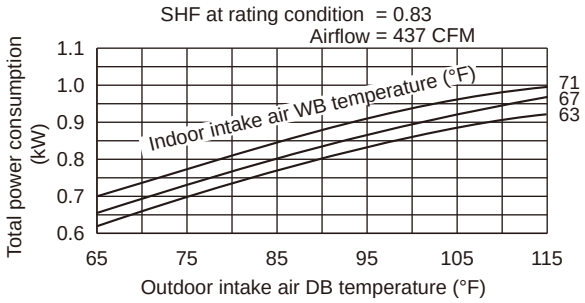


**NAXSPH15B112AA NAXSPB15B112AA**

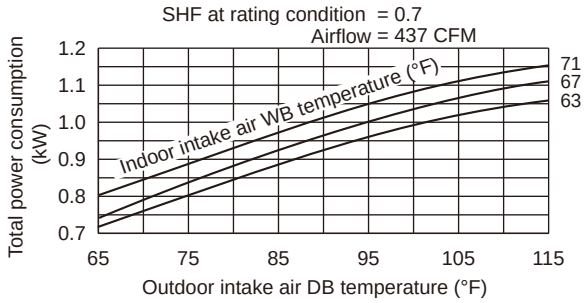


**NAXSPH18B112AA NAXSPB18B112AA**

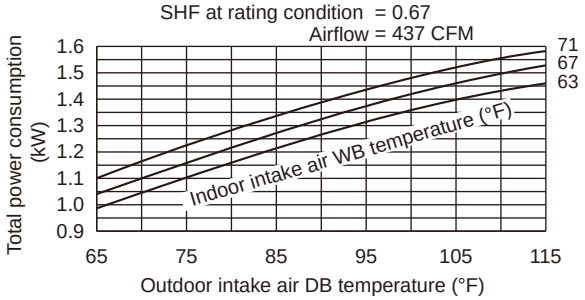


This value of frequency is not the same as the actual frequency in operating. Refer to 7-5 and 7-6 for the relationships between frequency and capacity.

## Heating

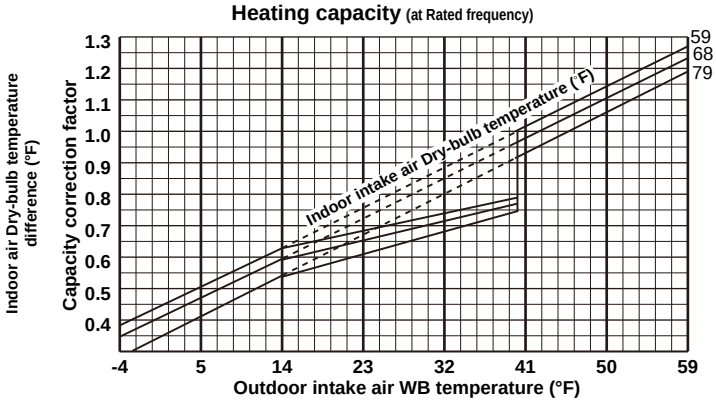


### NAXSPH06B112AA

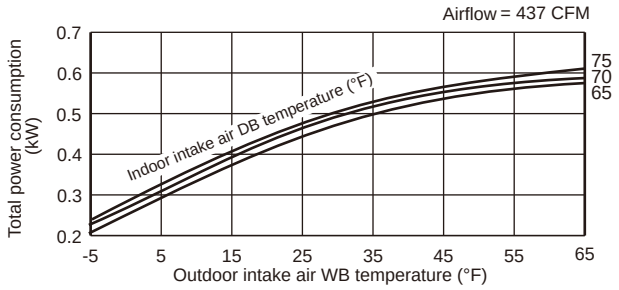


### NAXSPB06B112AA

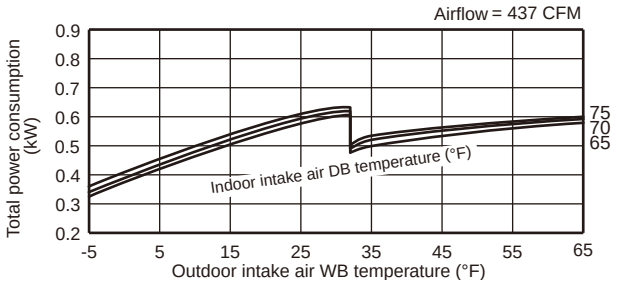


### NAXSPH09B112AA

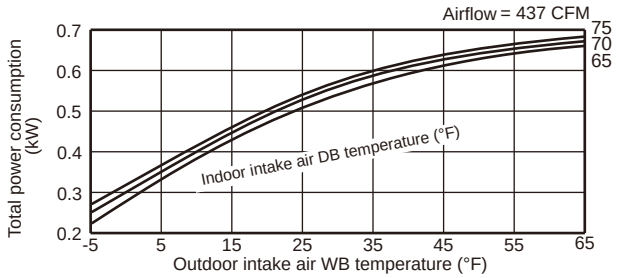


### NAXSPB09B112AA

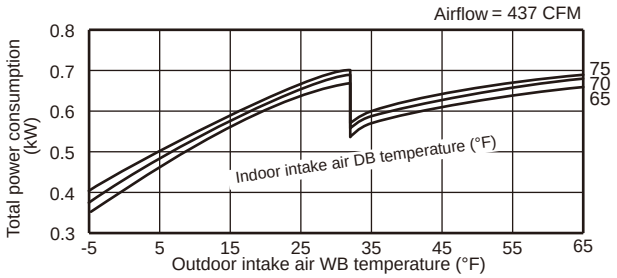


### NAXSPH12B112AA

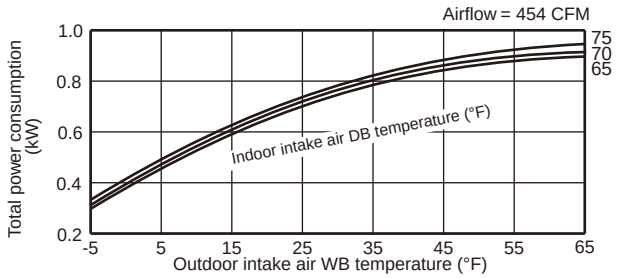


### NAXSPB12B112AA

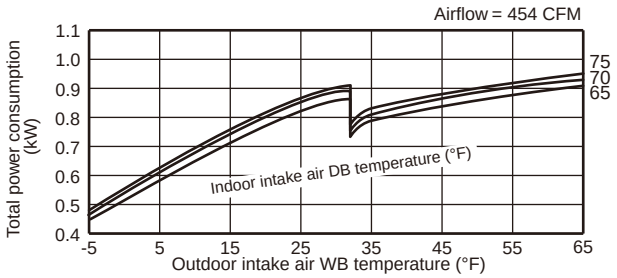


### NAXSPH15B112AA

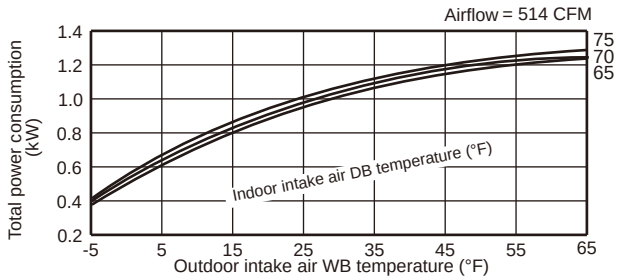


### NAXSPB15B112AA

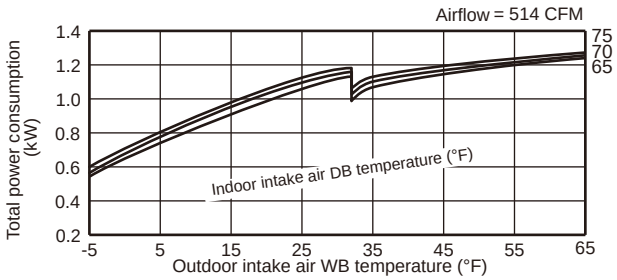

**NAXSPH18B112AA**

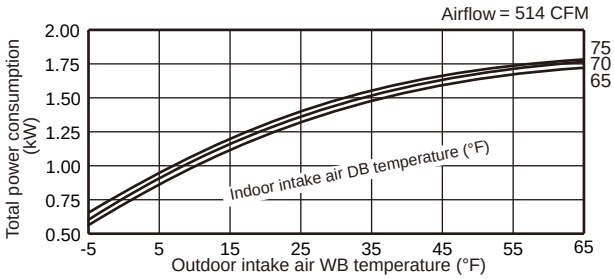


**NAXSPB18B112AA**

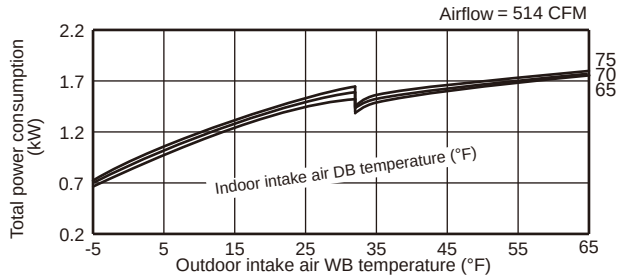


This value of frequency is not the same as the actual frequency in operating. Refer to 7-5 and 7-6 for the relationships between frequency and capacity.

## 7-3. CONDENSING PRESSURE

### Cooling

Data are based on the condition of indoor humidity 50 %.
Air flow should be set to High speed.

**NAXSPH06B112AA NAXSPB06B112AA**

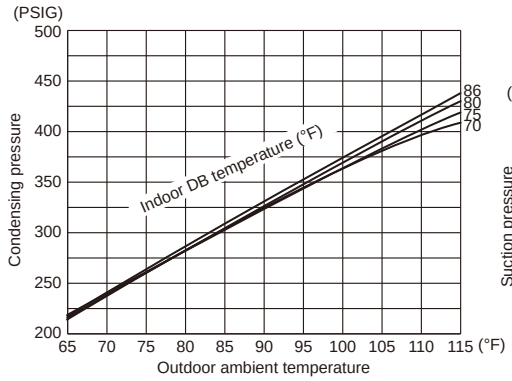


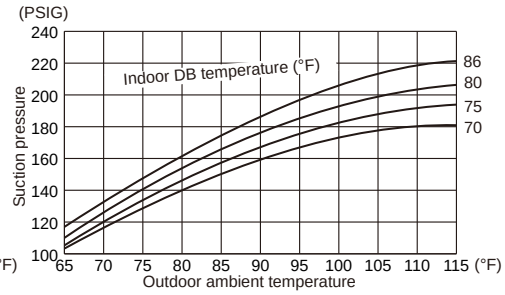


**NAXSPH09B112AA NAXSPB09B112AA**

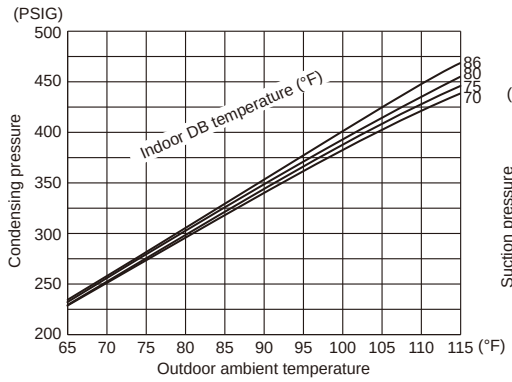


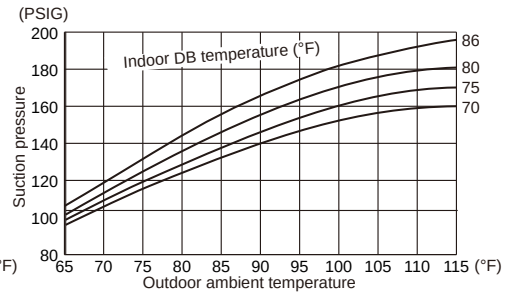


**NAXSPH12B112AA NAXSPB12B112AA**

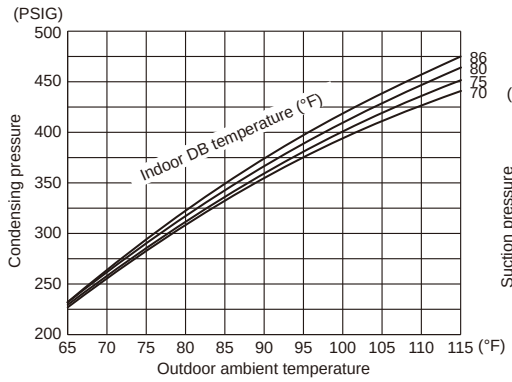


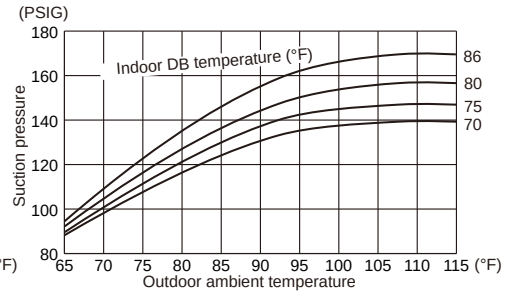

## NAXSPH15B112AA NAXSPB15B112AA

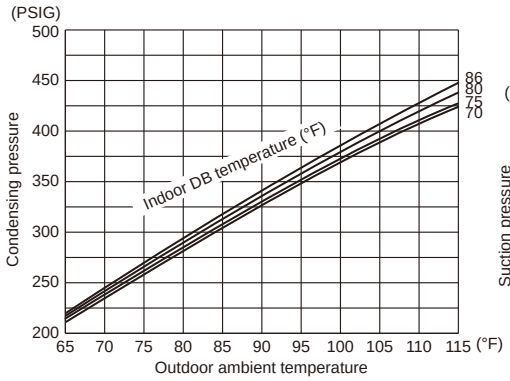


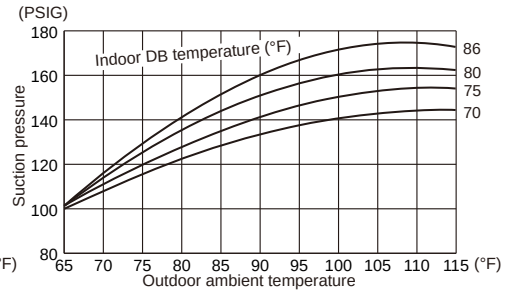


## NAXSPH18B112AA NAXSPB18B112AA

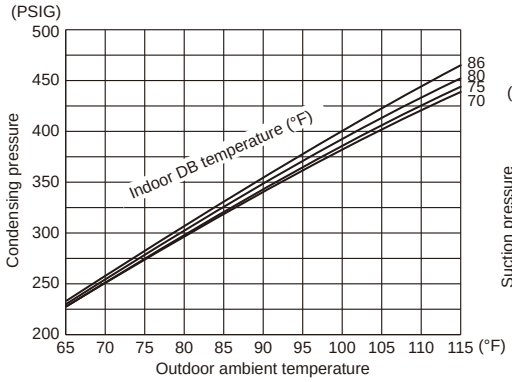


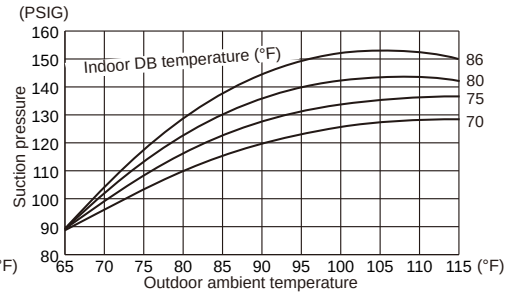


### Heating

Data are based on the condition of outdoor humidity 75%.
Air flow should be set to High speed.
Data are for heating operation without any frost.

## NAXSPH06B112AA NAXSPB06B112AA NAXSPH09B112AA NAXSPB09B112AA

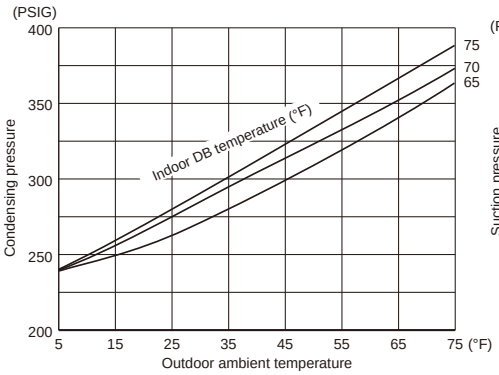


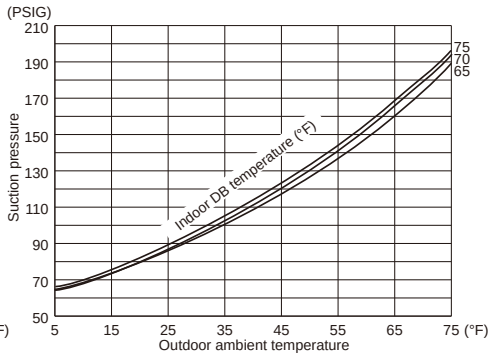


## NAXSPH12B112AA NAXSPB12B112AA

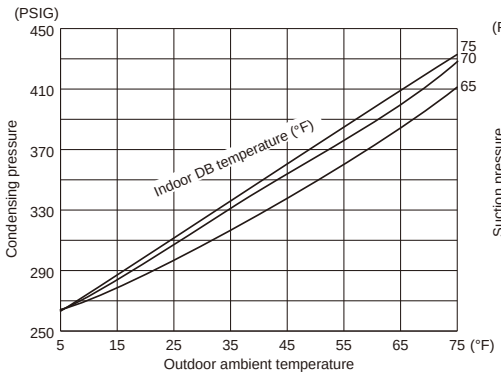


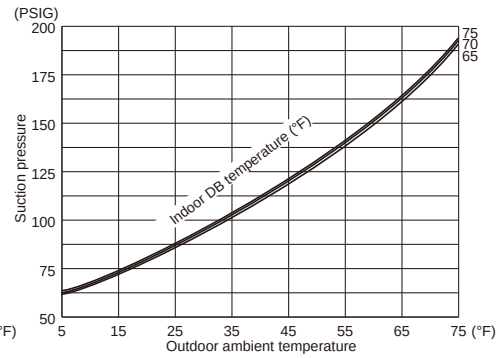

## NAXSPH15B112AA NAXSPB15B112AA

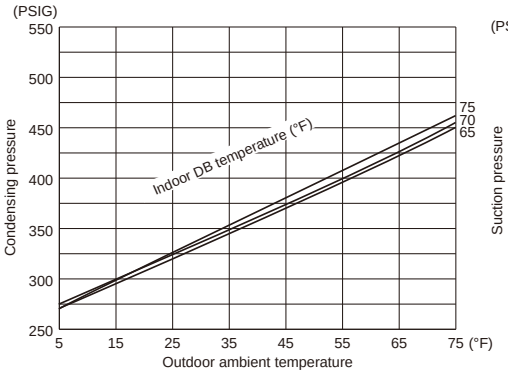


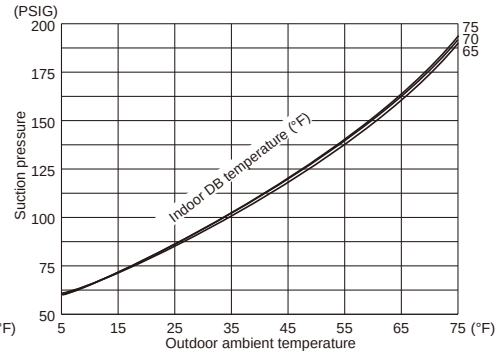


## NAXSPH18B112AA NAXSPB18B112AA

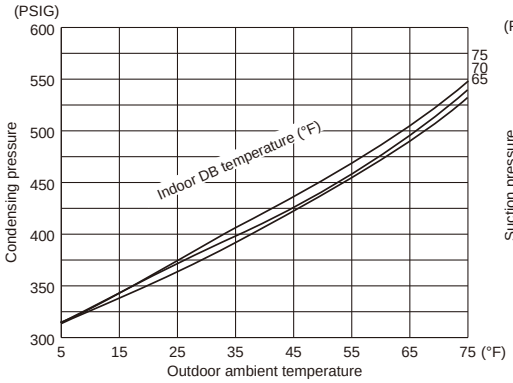


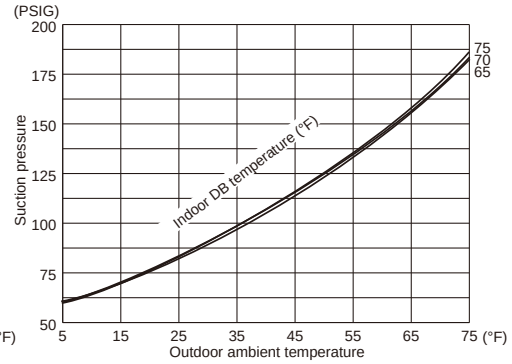

## 7-4. STANDARD OPERATION DATA

| Model | | | | NAXSPH06B112AA | | NAXSPH09B112AA | | NAXSPH12B112AA | | NAXSPH15B112AA | | NAXSPH18B112AA | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| Item | | | Unit | Cooling | Heating | Cooling | Heating | Cooling | Heating | Cooling | Heating | Cooling | Heating |
| Total | Capacity | | Btu/h | 6,000 | 8,700 | 9,000 | 9,600 | 12,000 | 12,300 | 14,000 | 16,000 | 17,200 | 19,000 |
| | SHF | | — | 0.96 | — | 0.92 | — | 0.83 | — | 0.70 | — | 0.67 | — |
| | Input | | kW | 0.315 | 0.545 | 0.560 | 0.620 | 0.870 | 0.850 | 1.000 | 1.155 | 1.375 | 1.610 |
| | Rated frequency | | Hz | 28 | 51 | 47.5 | 51 | 46 | 49 | 45 | 45 | 58 | 58 |
| Electrical circuit | Indoor unit | | | NAXSPH06B112AA | | NAXSPH09B112AA | | NAXSPH12B112AA | | NAXSPH15B112AA | | NAXSPH18B112AA | |
| | Power supply | | V, phase, Hz | 208/230, 1, 60 | | | | | | | | | |
| | Input | | kW | Cooling: 0.019<br>Heating: 0.025 | | | | Cooling: 0.025<br>Heating: 0.027 | | Cooling: 0.025<br>Heating: 0.036 | | | |
| | Fan motor current | | A | Cooling: 0.21/0.19<br>Heating: 0.27/0.24 | | | | Cooling: 0.27/0.24<br>Heating: 0.29/0.26 | | Cooling: 0.27/0.24<br>Heating: 0.36/0.33 | | | |
| | Outdoor unit | | | NAXSPH06B112AA<br>NAXSPB06B112AA | | NAXSPH09B112AA<br>NAXSPB09B112AA | | NAXSPH12B112AA<br>NAXSPB12B112AA | | NAXSPH15B112AA<br>NAXSPB15B112AA | | NAXSPH18B112AA<br>NAXSPB18B112AA | |
| | Power supply | | V, phase, Hz | 208/230, 1, 60 | | | | | | | | | |
| | Input | | kW | 0.296 | 0.520 | 0.541 | 0.595 | 0.845 | 0.823 | 0.975 | 1.119 | 1.350 | 1.574 |
| | Comp. current | | A | 1.33/1.18 | 2.25/2.01 | 2.43/2.18 | 2.55/2.31 | 3.75/3.39 | 3.63/3.28 | 3.86/3.49 | 4.32/3.91 | 5.63/5.09 | 6.54/5.91 |
| | Fan motor current | | A | 0.36/0.33 | 0.39/0.35 | 0.36/0.33 | 0.39/0.35 | 0.41/0.37 | 0.40/0.36 | 0.85/0.77 | 0.95/0.86 | 0.85/0.77 | 0.95/0.86 |
| Refrigerant circuit | Condensing pressure | | PSIG | 336 | 295 | 360 | 295 | 377 | 333 | 345 | 363 | 361 | 410 |
| | Suction pressure | | PSIG | 175 | 110 | 152 | 110 | 137 | 104 | 139 | 109 | 123 | 107 |
| | Discharge temperature | | ˚F | 133 | 139 | 146 | 139 | 163 | 150 | 143 | 163 | 153 | 178 |
| | Condensing temperature | | ˚F | 104 | 94 | 108 | 94 | 112 | 102 | 106 | 108 | 109 | 117 |
| | Suction temperature | | ˚F | 69 | 46 | 61 | 46 | 63 | 41 | 53 | 46 | 47 | 44 |
| | Comp. shell bottom temperature | | ˚F | 122 | 126 | 136 | 126 | 151 | 137 | 130 | 142 | 141 | 159 |
| | Ref. pipe length | | ft. | 25 | | | | | | | | | |
| | Refrigerant charge (R410A) | | | 2 lb. 9 oz. | | | | | | 3 lb 7 oz. | | | |
| Indoor unit | Intake air temperature | DB | ˚F | 80 | 70 | 80 | 70 | 80 | 70 | 80 | 70 | 80 | 70 |
| | | WB | ˚F | 67 | 60 | 67 | 60 | 67 | 60 | 67 | 60 | 67 | 60 |
| | Discharge air temperature | DB | ˚F | 64 | 92 | 58 | 92 | 57 | 100 | 56 | 103 | 52 | 112 |
| | | WB | ˚F | 60 | — | 55 | — | 54 | — | 54 | — | 51 | — |
| | Fan speed (High) | | rpm | 1,150 | 1,280 | 1,150 | 1,280 | 1,280 | 1,320 | 1,280 | 1,460 | 1,280 | 1,460 |
| | Airflow (High) | | CFM | 328 (Wet) | 437 | 328 (Wet) | 437 | 376 (Wet) | 454 | 376 (Wet) | 514 | 376 (Wet) | 514 |
| Outdoor unit | Intake air temperature | DB | ˚F | 95 | 47 | 95 | 47 | 95 | 47 | 95 | 47 | 95 | 47 |
| | | WB | ˚F | — | 43 | — | 43 | — | 43 | — | 43 | — | 43 |
| | Fan speed | | rpm | 860 | 890 | 860 | 890 | 910 | 900 | 740 | 800 | 740 | 800 |
| | Airflow | | CFM | 1,141 | 1,183 | 1,141 | 1,183 | 1,215 | 1,201 | 1,801 | 1,949 | 1,801 | 1,949 |

## 7-5. CAPACITY AND INPUT CORRECTION BY INVERTER OUTPUT FREQUENCY

### NAXSPH06B112AA NAXSPB06B112AA

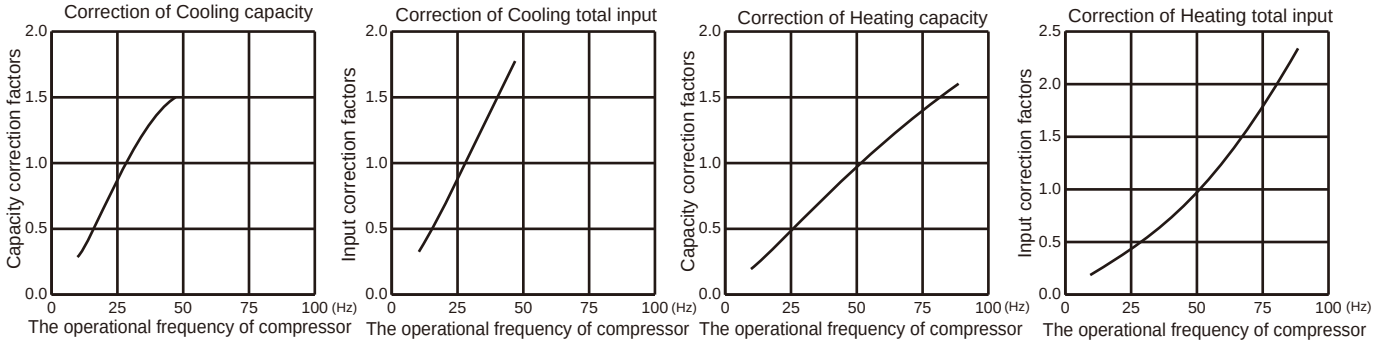


### NAXSPH09B112AA NAXSPB09B112AA

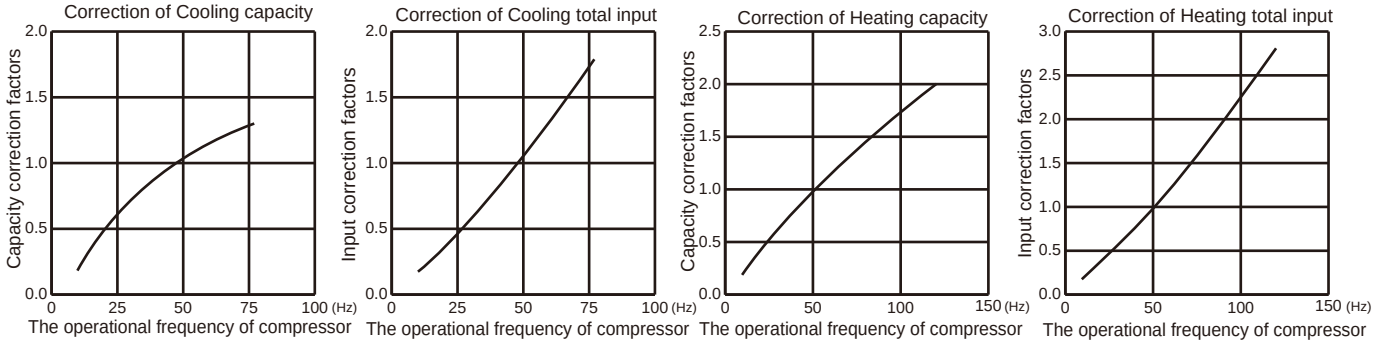


### NAXSPH12B112AA NAXSPB12B112AA

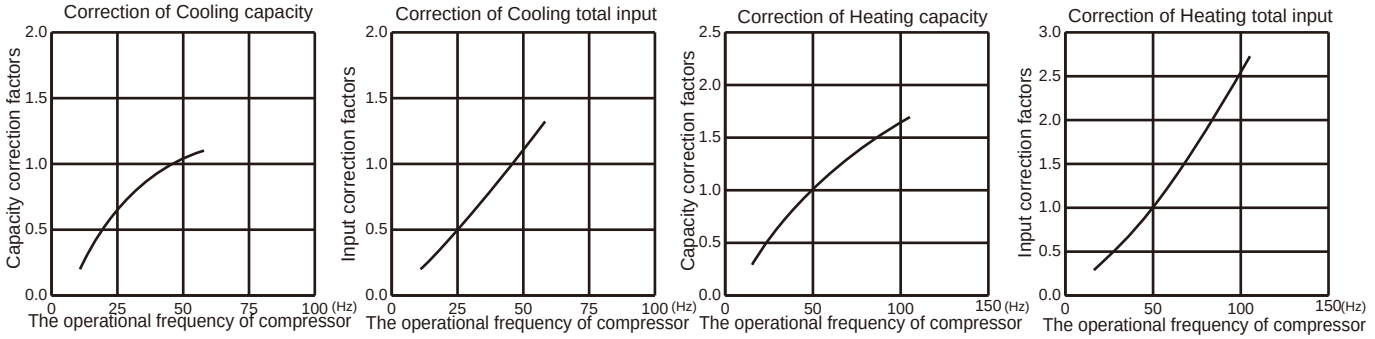


### NAXSPH15B112AA NAXSPB15B112AA

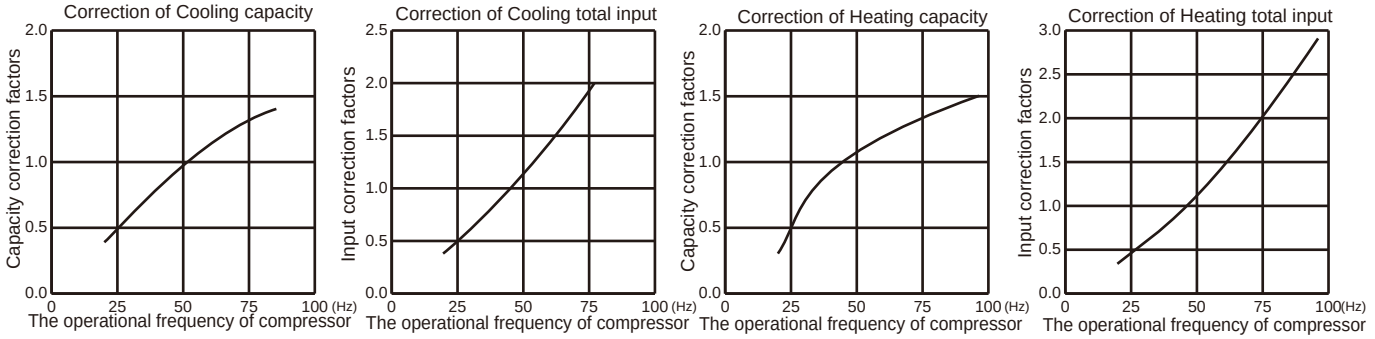

**NAXSPH18B112AA NAXSPB18B112AA**

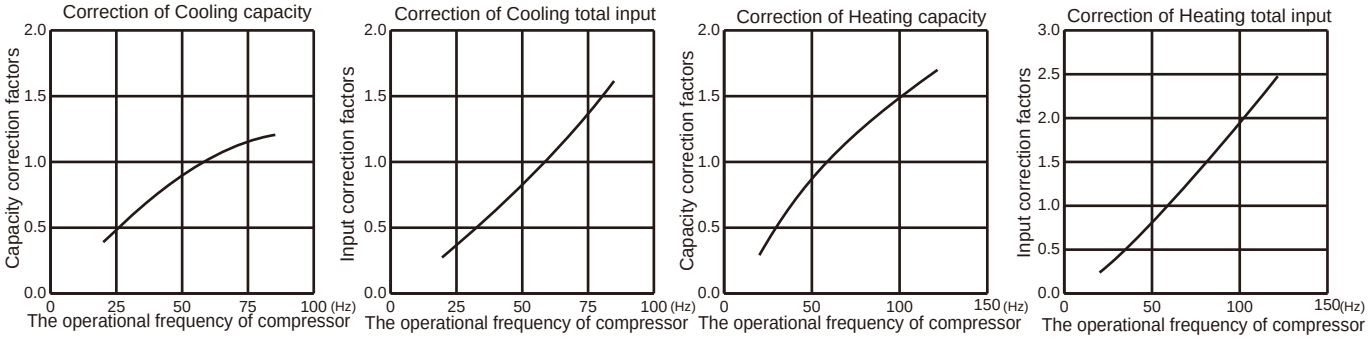


## 7-6. HOW TO OPERATE FIXED-FREQUENCY OPERATION (Test run operation)

1. Press EMERGENCY OPERATION switch to start COOL or HEAT mode (COOL: Press once, HEAT: Press twice).
2. Test run operation starts and continues to operate for 30 minutes.
3. Compressor operates at rated frequency in COOL mode or 58 Hz in HEAT mode.
4. Indoor fan operates at High speed.
5. After 30 minutes, test run operation finishes and EMERGENCY OPERATION starts (operation frequency of compressor varies).
6. To cancel test run operation (EMERGENCY OPERATION), press EMERGENCY OPERATION switch or any button on remote controller.

# 8 ACTUATOR CONTROL

**NAXSPH06B112AA NAXSPB06B112AA NAXSPH09B112AA NAXSPB09B112AA NAXSPH12B112AA NAXSPB12B112AA NAXSPH15B112AA NAXSPB15B112AA NAXSPH18B112AA NAXSPB18B112AA**

## 8-1. OUTDOOR FAN MOTOR CONTROL

The fan motor turns ON/OFF, interlocking with the compressor.
[ON] The fan motor turns ON 5 seconds before the compressor starts up.
[OFF] The fan motor turns OFF 15 seconds after the compressor has stopped running.

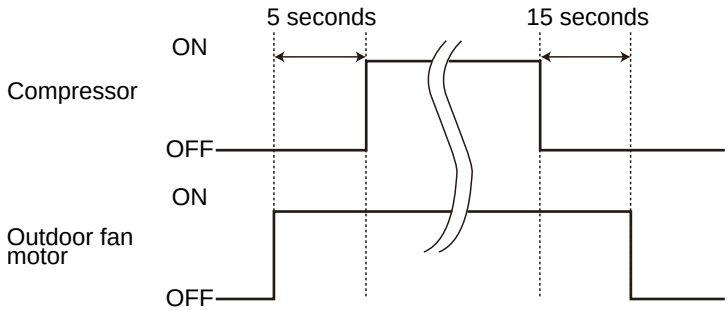


## 8-2. R.V. COIL CONTROL

Heating · · · · · · · · · · · · · · · · · ON
Cooling · · · · · · · · · · · · · · · · · OFF
Dry · · · · · · · · · · · · · · · · · · · · OFF

**NOTE**: The 4-way valve reverses for 5 seconds right before start-up of the compressor.

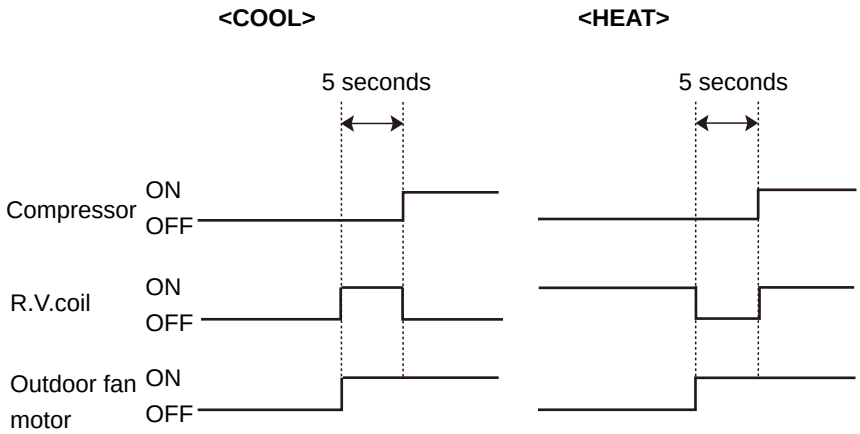


## 8-3. RELATION BETWEEN MAIN SENSOR AND ACTUATOR

| Sensor | Purpose | Actuator | | | | | |
|---|---|---|---|---|---|---|---|
| | | Compressor | LEV | Outdoor fan motor | R.V.coil | Indoor fan motor | Defrost heater * |
| Discharge temperature thermistor | Protection | ○ | ○ | | | | |
| Indoor coil temperature thermistor | Cooling: Coil frost prevention | ○ | | | | | |
| | Heating: High pressure protection | ○ | ○ | | | | |
| Defrost thermistor | Heating: Defrosting | ○ | ○ | ○ | ○ | ○ | |
| Fin temperature thermistor | Protection | ○ | | ○ | | | |
| Ambient temperature thermistor | Cooling: Low ambient temperature operation | ○ | ○ | ○ | | | |
| | Heating: Defrosting (Heater) | | | | | | ○ |
| Outdoor heat exchanger temperature thermistor | Cooling: Low ambient temperature operation | ○ | ○ | ○ | | | |
| | Cooling: High pressure protection | ○ | ○ | ○ | | | |

* **NAXSPB*B112AA** only.

# 9 SERVICE FUNCTIONS

## NAXSPH06B112AA NAXSPB06B112AA NAXSPH09B112AA NAXSPB09B112AA NAXSPH12B112AA NAXSPB12B112AA NAXSPH15B112AA NAXSPB15B112AA NAXSPH18B112AA NAXSPB18B112AA

### 9-1. CHANGE IN DEFROST SETTING

**Changing defrost finish temperature**

<JS> To change the defrost finish temperature, cut/solder the JS wire of the outdoor inverter P.C. board (Refer to 10-6.1.).

| Jumper | | Defrost finish temperature | |
|---|---|---|---|
| | | NAXSPH06/09/12B112AA<br>NAXSPB06/09/12B112AA | NAXSPH15/18B112AA<br>NAXSPB15/18B112AA |
| JS | Soldered<br>(Initial setting) | 41°F (5°C) | 50°F (10°C) |
| | None<br>(Cut) | 50°F (10°C) | 64°F (18°C) |

### 9-2. PRE-HEAT CONTROL SETTING

**NAXSPH06/09/12B112AA NAXSPB06/09/12B112AA**

When moisture gets into the refrigerant cycle, it may interfere with the start-up of the compressor at low outside temperature. The pre-heat control prevents this interference. The pre-heat control turns ON when the discharge temperature thermistor is 68°F (20°C) or below. When the pre-heat control turns ON, the compressor is energized. (About 50 W)

**NAXSPH15/18B112AA NAXSPB15/18B112AA**

Prolonged low load operation, in which the thermostat is OFF for a long time, at low outside temperature [32°F (0°C) or less] may cause the following troubles. To prevent those troubles, activate the pre-heat control.

1) If moisture gets into the refrigerant cycle and freezes, it may interfere the start-up of the compressor.
2) If liquid refrigerant collects in the compressor, a failure in the compressor may occur.

The pre-heat control turns ON when the compressor temperature is 68°F (20°C) or below. When the pre-heat control turns ON, the compressor is energized. (About 70 W)

**Pre-heat control setting**

<JK>
ON: To activate the pre-heat control, cut JK wire of the inverter P.C. board.
OFF: To deactivate the pre-heat control, solder JK wire of the inverter P.C. board.
(Refer to 10-6.1)

| Jumper | | Pre-heat control setting | |
|---|---|---|---|
| | | NAXSPH06/09/12B112AA<br>NAXSPB06/09/12B112AA | NAXSPH15/18B112AA<br>NAXSPB15/18B112AA |
| JK | Soldered | Deactivated<br>(Initial setting) | Deactivated<br>(Initial setting) |
| | Cut | Activated | Activated |

**NOTE:** When the inverter P.C. board is replaced, check the jumper wires, and cut/solder them if necessary.

# 10 TROUBLESHOOTING

## NAXSPH06B112AA NAXSPB06B112AA NAXSPH09B112AA NAXSPB09B112AA NAXSPH12B112AA NAXSPB12B112AA NAXSPH15B112AA NAXSPB15B112AA NAXSPH18B112AA NAXSPB18B112AA

### 10-1. CAUTIONS ON TROUBLESHOOTING

**1. Before troubleshooting, check the following**

1) Check the power supply voltage.
2) Check the indoor/outdoor connecting wire for miswiring.

**2. Take care of the following during servicing**

1) Before servicing the air conditioner, be sure to turn OFF the main unit first with the remote controller, then after confirming the horizontal vane is closed, turn off the breaker and/or disconnect the power plug.
2) Be sure to turn OFF the power supply before removing the front panel, the cabinet, the top panel, and the electronic control P.C. board.
3) When removing the electrical parts, be careful of the residual voltage of smoothing capacitor.
4) When removing the electronic control P.C. board, hold the edge of the board with care NOT to apply stress on the components.
5) When connecting or disconnecting the connectors, hold the connector housing. DO NOT pull the lead wires.

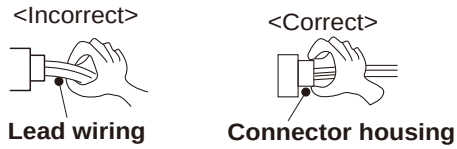


**3. Troubleshooting procedure**

1) Check if the OPERATION INDICATOR lamp on the indoor unit is blinking on and off to indicate an abnormality. To make sure, check how many times the OPERATION INDICATOR lamp is blinking on and off before starting service work.
2) Before servicing, verify that all connectors and terminals are connected properly.
3) When the electronic control P.C. board seems to be defective, check for disconnection of the copper foil pattern and burnt or discolored components.
4) Refer to 10-2 and 10-3.

## 10-2. FAILURE MODE RECALL FUNCTION

Outline of the function

This air conditioner can memorize the abnormal condition which has occurred once.

Even though LED indication listed on the troubleshooting check table (10-3.) disappears, the memorized failure details can be recalled.

### 1. Flow chart of failure mode recall function for the indoor/outdoor unit

Operational procedure

The cause of abnormality cannot be found because the abnormality does not recur.

Setting up the failure mode recall function

Turn ON the power supply.
<Preparation of the remote controller>
① While pressing Operation select button and TEMP ⊕ button on the remote controller at the same time, press RESET button.
② First, release RESET button.
Hold down the other 2 buttons for another 3 seconds. Make sure that the indicators on the LCD screen shown in the right figure are all displayed. Then release the buttons.

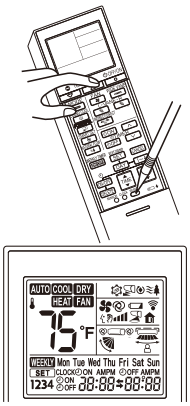


Press OFF/ON (stop/operate) button of the remote controller (the set temperature is displayed) with the remote controller headed towards the indoor unit. *1

*1. Regardless of normal or abnormal condition, a short beep is emitted once the signal is received.

Does the left lamp of the OPERATION INDICATOR lamp on the indoor unit blink at the interval of 0.5 seconds?
Blinks: Either indoor or outdoor unit is abnormal. Beep is emitted at the same timing as the blinking of the left lamp of the OPERATION INDICATOR lamp. *2

No (OFF) → Indoor unit is normal.
But the outdoor unit might be abnormal because there are some abnormalities that cannot be recalled with this way.
Check if outdoor unit is abnormal according to the detailed outdoor unit failure mode recall function. (Refer to 10-2.2)

Yes (Blinks)

Judgment of indoor/outdoor abnormality

Before blinking, does the left lamp of the OPERATION INDICATOR lamp stay ON for 3 seconds?
When it stays ON for 3 seconds (without beep): The outdoor unit is abnormal.

Yes → The outdoor unit is abnormal.
Check the blinking pattern, and identify the abnormal point by referring to the outdoor unit failure mode table. (Refer to 10-2.3)
Make sure to check at least 2 consecutive blinking cycles. *3

No → The indoor unit is abnormal.
Check the blinking pattern, and identify the abnormal point by referring to the indoor unit failure mode table. (Refer to indoor unit service manual.)
Make sure to check at least 2 consecutive blinking cycles. *2

Releasing the failure mode recall function

Release the failure mode recall function by the following procedures.
Turn OFF the power supply and turn it ON again.
Press RESET button of the remote controller.

Repair the failure parts.

Deleting the memorized abnormal condition

① After repairing the unit, recall the failure mode again according to "Setting up the failure mode recall function" mentioned above.
② Press OFF/ON (stop/operate) button of the remote controller (the set temperature is displayed) with the remote controller headed towards the indoor unit.
③ Press EMERGENCY OPERATION switch so that the memorized abnormal condition is deleted.
④ Release the failure mode recall function according to "Releasing the failure mode recall function" mentioned above.

**NOTE:** 1. Make sure to release the failure mode recall function after it is set up, otherwise the unit cannot operate properly.
2. If the abnormal condition is not deleted from the memory, the last abnormal condition is kept memorized.

*2. Blinking pattern when the indoor unit is abnormal:

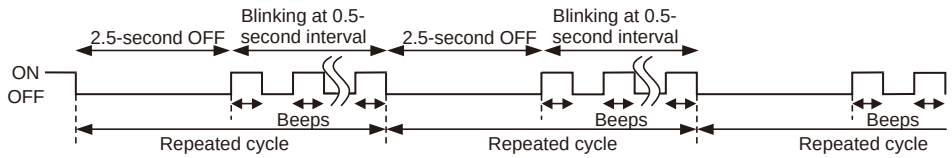


*3.Blinking pattern when the outdoor unit is abnormal:

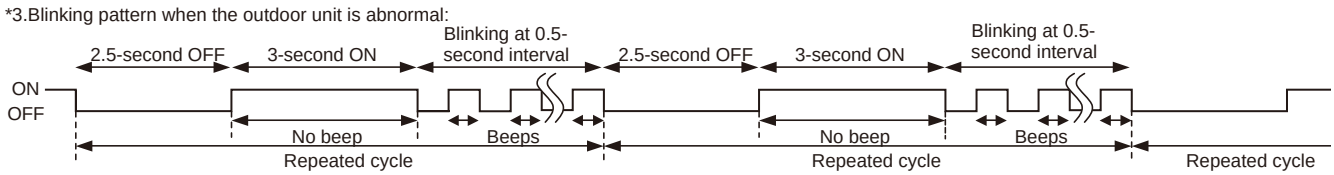

## 2. Flow chart of the detailed outdoor unit failure mode recall function

Operational procedure

The outdoor unit might be abnormal.
Check if outdoor unit is abnormal according to the following procedures.

↓

Make sure that the remote controller is set to the failure mode recall function.

↓

With the remote controller headed towards the indoor unit, press TEMP ⊕ button to adjust the set temperature to 77°F (25°C). *1

*1. Regardless of normal or abnormal condition, 2 short beeps are emitted as the signal is received.

↓

Does the left lamp of the OPERATION INDICATOR lamp on the indoor unit blink at the interval of 0.5 seconds?
Blinks: The outdoor unit is abnormal. Beep is emitted at the same timing as the blinking of the left lamp of the OPERATION INDICATOR lamp. *2

No (OFF) → The outdoor unit is normal. → Release the failure mode recall function according to the left mentioned procedure.

Yes (Blinks) ↓

The outdoor unit is abnormal.
Check the blinking pattern, and identify the abnormal point by referring to the outdoor unit failure mode table (10-2.3.).
Make sure to check at least 2 consecutive blinking cycles. *2

↓

Releasing the failure mode recall function

Release the failure mode recall function by the following procedures.
Turn OFF the power supply and turn it ON again.
Press RESET button of the remote controller.

↓

Repair the failure parts.

↓

Deleting the memorized abnormal condition

① After repairing the unit, recall the failure mode again according to "Setting up the failure mode recall function" (10-2.1.).
② Press OFF/ON (stop/operate) button of the remote controller (the set temperature is displayed) with the remote controller headed towards the indoor unit.
③ Press EMERGENCY OPERATION switch so that the memorized abnormal condition is deleted.
④ Release the failure mode recall function according to "Releasing the failure mode recall function" mentioned above.

**NOTE**: 1. Make sure to release the failure mode recall function after it is set up, otherwise the unit cannot operate properly.
2. If the abnormal condition is not deleted from the memory, the last abnormal condition is kept memorized.

*2.Blinking pattern when outdoor unit is abnormal:

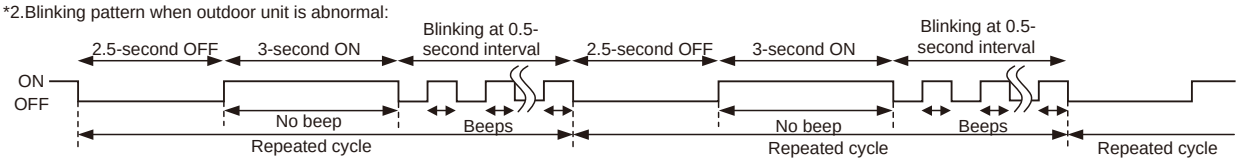

### 3. Outdoor unit failure mode table

**NOTE:** Blinking patterns of this mode differ from the ones of TROUBLESHOOTING CHECK TABLE (10-3.).

| The left lamp of the OPERATION INDICATOR lamp (Indoor unit) | Abnormal point (Failure mode/protection) | LED indication (Outdoor P.C. board) | Condition | Remedy | Indoor/outdoor unit failure mode recall function | Outdoor unit failure mode recall function |
|---|---|---|---|---|---|---|
| OFF | None (Normal) | — | — | — | — | — |
| 1-time blink 2.5 seconds OFF | Indoor/outdoor communication, receiving error | — | Any signals from the inverter P.C. board cannot be received normally for 3 minutes. | •Refer to 10-5. Ⓜ How to check miswiring and serial signal error. | ○ | ○ |
| | Indoor/outdoor communication, receiving error | — | Although the inverter P.C. board sends signal "0", signal "1" has been received 30 consecutive times. | •Refer to 10-5. Ⓜ How to check miswiring and serial signal error. | | |
| 2-time blink 2.5 seconds OFF | Outdoor power system | — | Overcurrent protection cut-out operates 3 consecutive times within 1 minute after the compressor gets started. | •Reconnect connectors.<br>•Refer to 10-5. Ⓐ"How to check inverter/ compressor".<br>•Check stop valve. | ○ | ○ |
| 3-time blink 2.5 seconds OFF | Discharge temperature thermistor | 1-time blink every 2.5 seconds | Thermistor shorts or opens during compressor running. | •Refer to 10-5.Ⓖ "Check of outdoor thermistors". Defective outdoor thermistors can be identified by checking the blinking pattern of LED. | ○ | ○ |
| | Defrost thermistor | | | | | |
| | Fin temperature thermistor | 3-time blink 2.5 seconds OFF | | | | |
| | Ambient temperature thermistor | 2-time blink 2.5 seconds OFF | | | | |
| | Outdoor heat exchanger temperature thermistor | — | | | | |
| | P.C. board temperature thermistor | 4-time blink 2.5 seconds OFF | | •Replace the inverter P.C. board. | | |
| 4-time blink 2.5 seconds OFF | Overcurrent | 11-time blink 2.5 seconds OFF | Large current flows into the power module (IC700). | •Reconnect compressor connector.<br>•Refer to 10-5.Ⓐ"How to check inverter/ compressor".<br>•Check stop valve. | — | ○ |
| | Compressor synchronous abnormality (Compressor start-up failure protection) | 12-time blink 2.5 seconds OFF | Waveform of compressor current is distorted. | •Reconnect compressor connector.<br>•Refer to 10-5.Ⓐ"How to check inverter/ compressor". | — | ○ |
| 5-time blink 2.5 seconds OFF | Discharge temperature | — | Temperature of discharge temperature thermistor exceeds 241°F (116°C), compressor stops. Compressor can restart if discharge temperature thermistor reads 212°F (100°C) or less 3 minutes later. | •Check refrigerant circuit and refrigerant amount.<br>•Refer to 10-5.Ⓚ"Check of LEV". | — | ○ |
| 6-time blink 2.5 seconds OFF | High pressure | — | Temperature indoor coil thermistor exceeds 158°F (70°C) in HEAT mode. Temperature defrost thermistor exceeds 158°F (70°C) in COOL mode. | •Check refrigerant circuit and refrigerant amount.<br>•Check stop valve. | — | ○ |
| 7-time blink 2.5 seconds OFF | Fin temperature/ P.C. board temperature | 7-time blink 2.5 seconds OFF | Temperature of the fin temperature thermistor on the inverter P.C. board exceeds 167 - 187°F (75 - 86°C) (**NAXSPH06/09/12B112AA, NAXSPB06/09/12B112AA**)/167 - 176°F (75 - 80°C) (**NAXSPH15/18B112AA, NAXSPB15/18B112AA**), or temperature of P.C. board temperature thermistor on the inverter P.C. board exceeds 162 - 185°F (72 - 85°C) (**NAXSPH06/09/12B112AA, NAXSPB06/09/12B112AA**)/158 - 167°F (70 - 75°C) (**NAXSPH15/18B112AA, NAXSPB15/18B112AA**). | •Check around outdoor unit.<br>•Check outdoor unit air passage.<br>•Refer to 10-5.Ⓘ"Check of outdoor fan motor". | — | ○ |
| 8-time blink 2.5 seconds OFF | Outdoor fan motor | — | Outdoor fan has stopped 3 times in a row within 30 seconds after outdoor fan start-up. | •Refer to 10-5.Ⓘ"Check of outdoor fan motor". Refer to 10-5.Ⓛ"Check of inverter P.C. board". | — | ○ |
| 9-time blink 2.5 seconds OFF | Nonvolatile memory data | 5-time blink 2.5 seconds OFF | Nonvolatile memory data cannot be read properly. | •Replace the inverter P.C. board. | ○ | ○ |
| | Power module (IC700) | 6-time blink 2.5 seconds OFF | The interface short circuit occurs in the output of the power module (IC700). The compressor winding shorts circuit. | •Refer to 10-5. Ⓐ"How to check inverter/ compressor". | — | |

**NOTE:** Blinking patterns of this mode differ from the ones of TROUBLESHOOTING CHECK TABLE (10-3.).

| The left lamp of the OPERATION INDICATOR lamp (Indoor unit) | Abnormal point (Failure mode/protection) | LED indication (Outdoor P.C. board) | Condition | Remedy | Indoor/outdoor unit failure mode recall function | Outdoor unit failure mode recall function |
|---|---|---|---|---|---|---|
| 10-time blink 2.5 seconds OFF | Discharge temperature | — | Temperature of discharge temperature thermistor has been 122°F (50°C) or less for 20 minutes. | •Refer to 10-5.Ⓚ"Check of LEV".<br>•Check refrigerant circuit and refrigerant amount. | — | ○ |
| 11-time blink 2.5 seconds OFF | Bus-bar voltage (DC) | 8-time blink 2.5 seconds OFF | Bus-bar voltage of inverter cannot be detected normally. | •Refer to 10-5.Ⓐ"How to check inverter/ compressor". | — | ○ |
| | Each phase current of compressor | 9-time blink 2.5 seconds OFF | Each phase current of compressor cannot be detected normally. | | | |
| 14-time blink 2.5 seconds OFF *1 | Stop valve (Closed valve) | 14-time blink 2.5 seconds OFF | •Closed valve is detected by compressor current.<br>•An abnormality of the indoor thermistors, the defrost thermistor or ambient temperature thermistor is detected. | •Check stop valve.<br>•Refer to "TEST POINT DIAGRAM AND VOLTAGE" on the service manual of indoor and outdoor unit for the characteristics of the thermistors. (Do not start the operation again without repair to prevent hazards.) | ○ | ○ |
| | 4-way valve/ Pipe temperature | 16-time blink 2.5 seconds OFF | •The 4-way valve does not work properly.<br>•The indoor coil thermistor detects an abnormal temperature.<br>•An abnormality of the indoor thermistor is detected. | •Check the 4-way valve.<br>•Replace the inverter P.C. board.<br>•Refer to "TEST POINT DIAGRAM AND VOLTAGE" on the service manual of indoor and outdoor unit for the characteristics of the thermistors. (Do not start the operation again without repair to prevent hazards.) | | |
| 16-time blink 2.5 seconds OFF *1 | Outdoor refrigerant system abnormality | 1-time blink 2.5 seconds OFF | •A closed valve and air trapped in the refrigerant circuit are detected based on the temperature sensed by the indoor and outdoor thermistors and the current of the compressor.<br>•An abnormality of the indoor thermistors, the defrost thermistor or ambient temperature thermistor is detected. | •Check for a gas leak in a connecting piping etc.<br>•Check the stop valve.<br>•Refer to 10-5. Ⓞ "Check of outdoor refrigerant circuit".<br>•Refer to "TEST POINT DIAGRAM AND VOLTAGE" on the service manual of indoor and outdoor unit for the characteristics of the thermistors. (Do not start the operation again without repair to prevent hazards.) | ○ | ○ |

*1 There is possibility that diesel explosion may occur due to the air mixed in the refrigerant circuit.
First, ensure that there are no leakage points on the valves, flare connections, etc. that allow the air to flow into the refrigerant circuit, or no blockage points (e.g. clogged or closed valves) in the refrigerant circuit that cause an increase in pressure.
If there is no abnormal point like above and the system operates cooling and heating modes normally, the indoor thermistor might have a problem, resulting in false detection.
Check both the indoor coil thermistor and the room temperature thermistor, and replace faulty thermistor(s), if any.
**NOTE:** Do not start the operation again without repair to prevent hazards.

## 10-3. TROUBLESHOOTING CHECK TABLE

| No. | Symptom | LED indication | Abnormal point/ Condition | Condition | Remedy |
|---|---|---|---|---|---|
| 1 | Outdoor unit does not operate. | 1-time blink every 2.5 seconds | Outdoor power system | Overcurrent protection cut-out operates 3 consecutive times within 1 minute after the compressor gets started. | •Reconnect connector of compressor.<br>•Refer to 10-5.Ⓐ "How to check inverter/compressor".<br>•Check stop valve. |
| 2 | | | Outdoor thermistors | Discharge temperature thermistor, fin temperature thermistor, defrost thermistor, outdoor heat exchanger temperature thermistor or ambient temperature thermistor shorts or opens during compressor running. | •Refer to 10-5.Ⓖ "Check of outdoor thermistors". |
| | | | | P.C. board temperature thermistor shorts or opens during compressor running. | •Replace inverter P.C. board. |
| 3 | | | Outdoor control system | Nonvolatile memory data cannot be read properly.<br><br>(The left lamp of the OPERATION INDICATOR lamp on the indoor unit lights up or blinks 7-time.) | •Replace inverter P.C. board. |
| 4 | | 6-time blink 2.5 seconds OFF | Serial signal | The communication fails between the indoor and outdoor unit for 3 minutes. | •Refer to 10-5.Ⓜ "How to check miswiring and serial signal error. |
| 5 | | 11-time blink 2.5 seconds OFF | Stop valve/ Closed valve | Closed valve is detected by compressor current. | •Check stop valve. |
| 6 | | 16-time blink 2.5 seconds OFF | 4-way valve/ Pipe temperature | The 4-way valve does not work properly.<br>The indoor coil thermistor detects an abnormal temperature. | •Refer to 10-5.Ⓗ "Check of R.V. coil".<br>•Replace the inverter P.C. board. |
| 7 | | 17-time blink 2.5 seconds OFF | Outdoor refrigerant system abnormality | A closed valve and air trapped in the refrigerant circuit are detected based on the temperature sensed by the indoor and outdoor thermistors and the current of the compressor. | •Check for a gas leak in a connecting piping etc.<br>•Check the stop valve.<br>•Refer to 10-5. Ⓞ "Check of outdoor refrigerant circuit". |
| 8 | 'Outdoor unit stops and restarts 3 minutes later' is repeated. | 2-time blink 2.5 seconds OFF | Overcurrent protection | Large current flows into the power module (IC700). | •Reconnect connector of compressor.<br>•Refer to 10-5.Ⓐ "How to check inverter/compressor".<br>•Check stop valve. |
| 9 | | 3-time blink 2.5 seconds OFF | Discharge temperature overheat protection | Temperature of discharge temperature thermistor exceeds 241°F (116°C), compressor stops. Compressor can restart if discharge temperature thermistor reads 212°F (100°C) or less 3 minutes later. | •Check refrigerant circuit and refrigerant amount.<br>•Refer to 10-5.Ⓚ "Check of LEV". |
| 10 | | 4-time blink 2.5 seconds OFF | Fin temperature /P.C. board temperature thermistor overheat protection | Temperature of the fin temperature thermistor on the heat sink exceeds 167 - 187°F (75 - 86°C) (**NAXSPH06/09/12B112AA, NAXSPB06/09/12B112AA**)/167 - 176°F (75 - 80°C) (**NAXSPH15/18B112AA, NAXSPB15/18B112AA**) or temperature of P.C. board temperature thermistor on the inverter P.C.board exceeds 162 - 185°F (72 - 85°C) (**NAXSPH06/09/12B112AA, NAXSPB06/09/12B112AA**)/158 - 167°F (70 - 75°C) (**NAXSPH15/18B112AA, NAXSPB15/18B112AA**). | •Check around outdoor unit.<br>•Check outdoor unit air passage.<br>•Refer to 10-5.Ⓘ "Check of outdoor fan motor". |
| 11 | | 5-time blink 2.5 seconds OFF | High pressure protection | Indoor coil thermistor exceeds 158°F (70°C) in HEAT mode. Defrost thermistor exceeds 158°F (70°C) in COOL mode. | •Check refrigerant circuit and refrigerant amount.<br>•Check stop valve. |
| 12 | | 8-time blink 2.5 seconds OFF | Compressor synchronous abnormality | The waveform of compressor current is distorted. | •Reconnect connector of compressor.<br>•Refer to 10-5.Ⓐ "How to check inverter/compressor". |
| 13 | | 10-time blink 2.5 seconds OFF | Outdoor fan motor | Outdoor fan has stopped 3 times in a row within 30 seconds after outdoor fan start-up. | •Refer to 10-5.Ⓘ "Check of outdoor fan motor.<br>•Refer to 10-5.Ⓛ "Check of inverter P.C. board. |
| 14 | | 12-time blink 2.5 seconds OFF | Each phase current of compressor | Each phase current of compressor cannot be detected normally. | •Refer to 10-5.Ⓐ "How to check inverter/compressor". |
| 15 | | 13-time blink 2.5 seconds OFF | Bus-bar voltage (DC) | Bus-bar voltage of inverter cannot be detected normally. | •It occurs with following case. Instantaneous power voltage drop. (Short time power failure) (**NAXSPH15/18B112AA, NAXSPB15/18B112AA**)<br>•Refer to 10-5. Ⓙ "Check of power supply". (**NAXSPH15/18B112AA, NAXSPB15/18B112AA**)<br>•Refer to 10-5.Ⓐ "How to check inverter/compressor". |

**NOTE:** 1. The location of LED is illustrated at the right figure. Refer to 10-6.1.
2. LED is lit during normal operation.

Inverter P.C. board

**NAXSPH06/09/12B112AA**
**NAXSPB06/09/12B112AA**

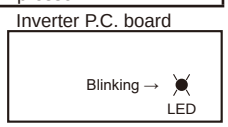


**NAXSPH15/18B112AA**
**NAXSPB15/18B112AA**




The blinking frequency shows the number of times the LED blinks after every 2.5-second OFF.
(Example) When the blinking frequency is “2”.

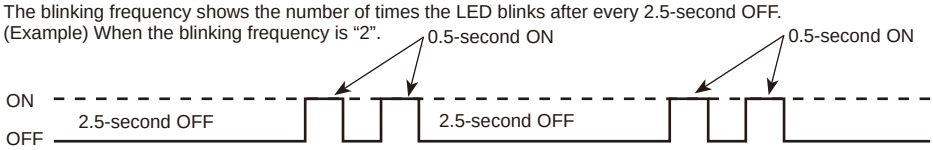

| No. | Symptom | LED indication | Abnormal point/ Condition | Condition | | Remedy |
|---|---|---|---|---|---|---|
| 16 | Outdoor unit operates. | 1-time blink<br>2.5 seconds OFF | Frequency drop by current protection | **NAXSPH06/09/12B112AA**<br>**NAXSPB06/09/12B112AA** | When the input current exceeds approximately 10A (**NAXSPH06/09B112AA, NAXSPB06/09B112AA**)/10.5A (**NAXSPH12B112AA, NAXSPB12B112AA**), compressor frequency lowers. | The unit is normal, but check the following.<br>•Check if indoor filters are clogged.<br>•Check if refrigerant is short.<br>•Check if indoor/outdoor unit air circulation is short cycled. |
| | | | | **NAXSPH15/18B112AA**<br>**NAXSPB15/18B112AA** | Current from power outlet is nearing breaker capacity. | |
| 17 | | 3-time blink<br>2.5 seconds OFF | Frequency drop by high pressure protection | Temperature of indoor coil thermistor exceeds 131 °F (55°C) in HEAT mode, compressor frequency lowers. | | |
| | | | Frequency drop by defrosting in COOL mode | Indoor coil thermistor reads 46°F (8°C) or less in COOL mode, compressor frequency lowers. | | |
| 18 | | 4-time blink<br>2.5 seconds OFF | Frequency drop by discharge temperature protection | Temperature of discharge temperature thermistor exceeds 232°F (111°C), compressor frequency lowers. | | •Check refrigerant circuit and refrigerant amount.<br>•Refer to 10-5.Ⓚ "Check of LEV".<br>•Refer to 10-5.Ⓖ "Check of outdoor thermistors". |
| 19 | | **NAXSPH06/09/12B112AA**<br>**NAXSPB06/09/12B112AA**<br>5-time blink<br>2.5 seconds OFF | Outside temperature thermistor protection | When the outside temperature thermistor shorts or opens, protective operation without that thermistor is performed. | | •Refer to 10-5. Ⓖ Check of outdoor thermistors. |
| 20 | Outdoor unit operates. | 7-time blink<br>2.5 seconds OFF | Low discharge temperature protection | Temperature of discharge temperature thermistor has been 122°F (50°C) or less for 20 minutes. | | •Refer to 10-5.Ⓚ "Check of LEV".<br>•Check refrigerant circuit and refrigerant amount. |
| 21 | | 8-time blink<br>2.5 seconds OFF | **NAXSPH06/09/12B112AA**<br>**NAXSPB06/09/12B112AA**<br>PAM protection<br>PAM: Pulse Amplitude Modulation | The overcurrent flows into PFC (Power factor correction :IC820) or the bus-bar voltage reaches 394 V or more, PAM stops and restarts. | | This is not malfunction. PAM protection will be activated in the following cases:<br>1 Instantaneous power voltage drop. (Short time power failure)<br>2 When the power supply voltage is high. |
| | | | **NAXSPH15/18B112AA**<br>**NAXSPB15/18B112AA**<br>Zero cross detecting circuit | Zero cross signal cannot be detected. | | •It occurs with following cases.<br>1 Instantaneous power voltage drop. (Short time power failure)<br>2 Distortion of primary voltage<br>•Refer to 10-5. Ⓙ "Check of power supply". |
| 22 | | 9-time blink<br>2.5 seconds OFF | Inverter check mode | The connector of compressor is disconnected, inverter check mode starts. | | •Check if the connector of the compressor is correctly connected. Refer to 10-5.Ⓐ "How to check inverter/compressor". |

**NOTE:** 1. The location of LED is illustrated at the right figure. Refer to 10-6.1.
2. LED is lit during normal operation.

The blinking frequency shows the number of times the LED blinks after every 2.5-second OFF.
(Example) When the blinking frequency is “2”.

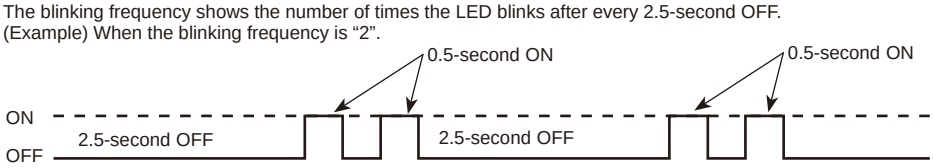


Inverter P.C. board

**NAXSPH06/09/12B112AA**
**NAXSPB06/09/12B112AA**

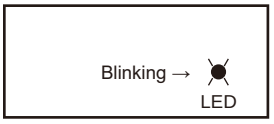


**NAXSPH15/18B112AA**
**NAXSPB15/18B112AA**

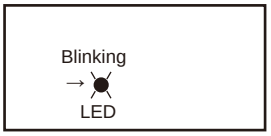

## 10-4. TROUBLESHOOTING CRITERION OF MAIN PARTS

## NAXSPH06B112AA NAXSPB06B112AA NAXSPH09B112AA NAXSPB09B112AA NAXSPH12B112AA NAXSPB12B112AA NAXSPH15B112AA NAXSPB15B112AA NAXSPH18B112AA NAXSPB18B112AA

<table>
<tr><th>Part name</th><th>Check method and criterion</th><th>Figure</th></tr>
<tr><td>Defrost thermistor (RT61)<br><br>Fin temperature thermistor (RT64)<br><br>Ambient temperature thermistor (RT65)<br><br>Outdoor heat exchanger temperature thermistor (RT68)</td><td>Measure the resistance with a tester.<br><br>Refer to 10-6. “Test point diagram and voltage”, 1. “Inverter P.C. board”, for the chart of thermistor.</td><td></td></tr>
<tr><td>Discharge temperature thermistor (RT62)</td><td>Measure the resistance with a tester. Before measurement, hold the thermistor with your hands to warm it up.<br><br>Refer to 10-6. “Test point diagram and voltage”, 1. “Inverter P.C. board”, for the chart of thermistor.</td><td></td></tr>
<tr><td>Compressor</td><td>Measure the resistance between terminals using a tester.<br>[Temperature: 14 - 104°F (-10 - 40°C)]
<table>
<tr><th></th><th colspan="3">Normal (Ω)</th></tr>
<tr><th></th><th>NAXSPH06/09B112AA<br>NAXSPB06/09B112AA</th><th>NAXSPH12B112AA<br>NAXSPB12B112AA</th><th>NAXSPH15/18B112AA<br>NAXSPB15/18B112AA</th></tr>
<tr><td>U-V<br>U-W<br>V-W</td><td>1.60 - 2.17</td><td>1.66 - 2.26</td><td>0.87 - 1.18</td></tr>
</table></td><td> 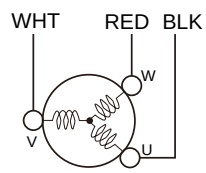
</td></tr>
<tr><td>Outdoor fan motor</td><td>Measure the resistance between lead wires using a tester.<br>[Temperature: 14 - 104°F (-10 - 40°C)]
<table>
<tr><th rowspan="2">Color of lead wire</th><th colspan="2">Normal (Ω)</th></tr>
<tr><th>NAXSPH06/09/12B112AA<br>NAXSPB06/09/12B112AA</th><th>NAXSPH15/18B112AA<br>NAXSPB15/18B112AA</th></tr>
<tr><td>RED – BLK<br>BLK – WHT<br>WHT – RED</td><td>29 - 37</td><td>8 - 10</td></tr>
</table></td><td> 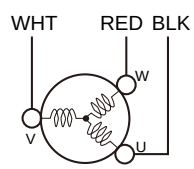
</td></tr>
<tr><td>R. V. coil (21S4)</td><td>Measure the resistance using a tester.<br>[Temperature: 14 - 104°F (-10 - 40°C)]
<table>
<tr><th>Normal (kΩ)</th></tr>
<tr><td>0.97 - 1.38</td></tr>
</table></td><td></td></tr>
<tr><td>Expansion valve coil (LEV)</td><td>Measure the resistance using a tester.<br>[Temperature: 14 - 104°F (-10 - 40°C)]
<table>
<tr><th>Color of lead wire</th><th>Normal (Ω)</th></tr>
<tr><td>RED – ORN</td><td rowspan="4">37 - 54</td></tr>
<tr><td>RED – WHT</td></tr>
<tr><td>RED – BLU</td></tr>
<tr><td>RED – YLW</td></tr>
</table></td><td> 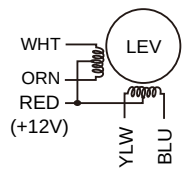
</td></tr>
<tr><td>Defrost heater</td><td>Measure the resistance using a tester.<br>[Temperature: 14 - 104°F (-10 - 40°C)]
<table>
<tr><th colspan="2">Normal (Ω)</th></tr>
<tr><th>NAXSPB06/09/12B112AA</th><th>NAXSPB15/18B112AA</th></tr>
<tr><td>349 - 428</td><td>376 - 461</td></tr>
</table></td><td></td></tr>
</table>

## 10-5. TROUBLESHOOTING FLOW

### Ⓐ How to check inverter/compressor

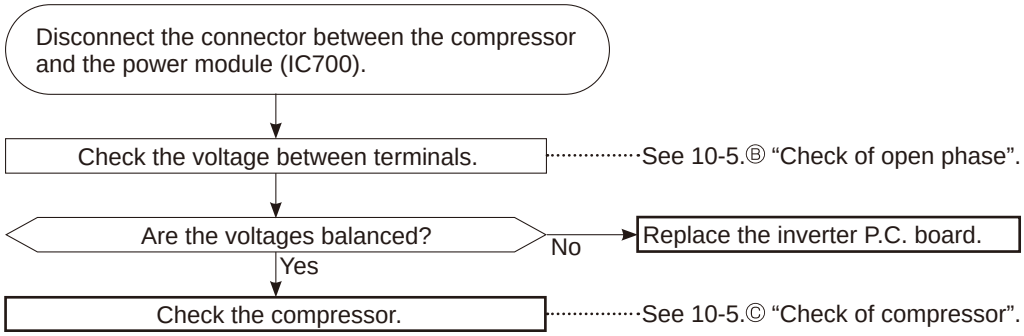


### Ⓑ Check of open phase

- With the connector between the compressor and the power module (IC700) disconnected, activate the inverter and check if the inverter is normal by measuring **the voltage balance** between the terminals.

  Output voltage is 50 - 130 V. (The voltage may differ according to the tester.)

<< Operation method>>
Start cooling or heating operation by pressing EMERGENCY OPERATION switch on the indoor unit. (TEST RUN OPERATION: Refer to 7-6.)

<<Measurement point>>
At 3 points
BLK (U)-WHT (V)
BLK (U)-RED (W)
WHT(V)-RED (W)

*Measure AC voltage between the lead wires at 3 points.

**NOTE**: 1. Output voltage varies according to power supply voltage.
2. Measure the voltage by analog type tester.
3. During this check, LED of the inverter P.C. board blinks 9 times. (Refer to 10-6.1.)

### Ⓒ Check of compressor

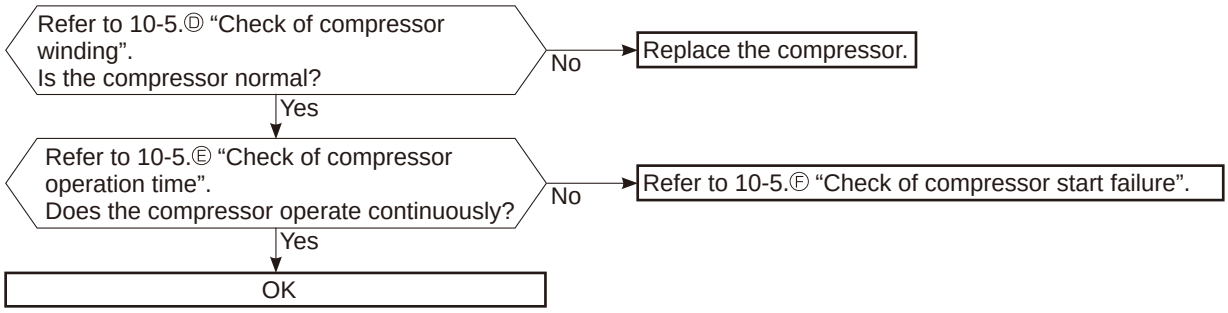

## Ⓓ Check of compressor winding

●Disconnect the connector between the compressor and the power module (IC700), and measure the resistance between the compressor terminals.

<<Measurement point>>

At 3 points
BLK-WHT
BLK-RED
WHT-RED

*Measure the resistance between the lead wires at 3 points.

<<Judgement>>

Refer to 10-4.
0 [Ω] ·····Abnormal [short]
Infinite [Ω] ·····Abnormal [open]
**NOTE**: Be sure to zero the ohmmeter before measurement.

## Ⓔ Check of compressor operation time

● Connect the compressor and activate the inverter. Then measure the time until the inverter stops due to overcurrent.
<<Operation method>>
Start heating or cooling operation by pressing EMERGENCY OPERATION switch on the indoor unit. (TEST RUN OPERATION: Refer to 7-6.)
<<Measurement>>
Measure the time from the start of compressor to the stop of compressor due to overcurrent.

<<Judgement>>

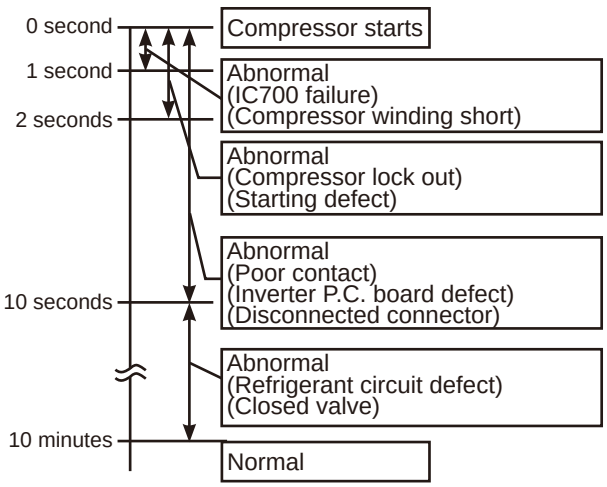


## Ⓕ Check of compressor start failure

Confirm that ①~④ is normal.
•Electrical circuit check
①. Contact of the compressor connector
②. Output voltage of inverter P.C. board and balance of them (See 10-5.Ⓑ)
③. Direct current voltage between DB61(+) and (-)
(**NAXSPH06/09/12B112AA, NAXSPB06/09/12B112AA**)/IC700(P) and (N)
(**NAXSPH15/18B112AA, NAXSPB15/18B112AA**) on the inverter P.C. board
④. Voltage between outdoor terminal block S1-S2

↓

Does the compressor run for 10 seconds or more after it starts?
- Yes → Check the refrigerant circuit. Check the stop valve.
- No ↓

After the compressor is heated with a drier, does the compressor start? *1
- No → Replace the compressor.
- Yes ↓

Compressor start failure. Activate pre-heat control. (Refer to 9-2. "PRE-HEAT CONTROL SETTING")

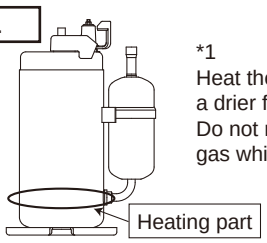


*1
Heat the compressor with a drier for about 20 minutes. Do not recover refrigerant gas while heating.

## Ⓖ Check of outdoor thermistors

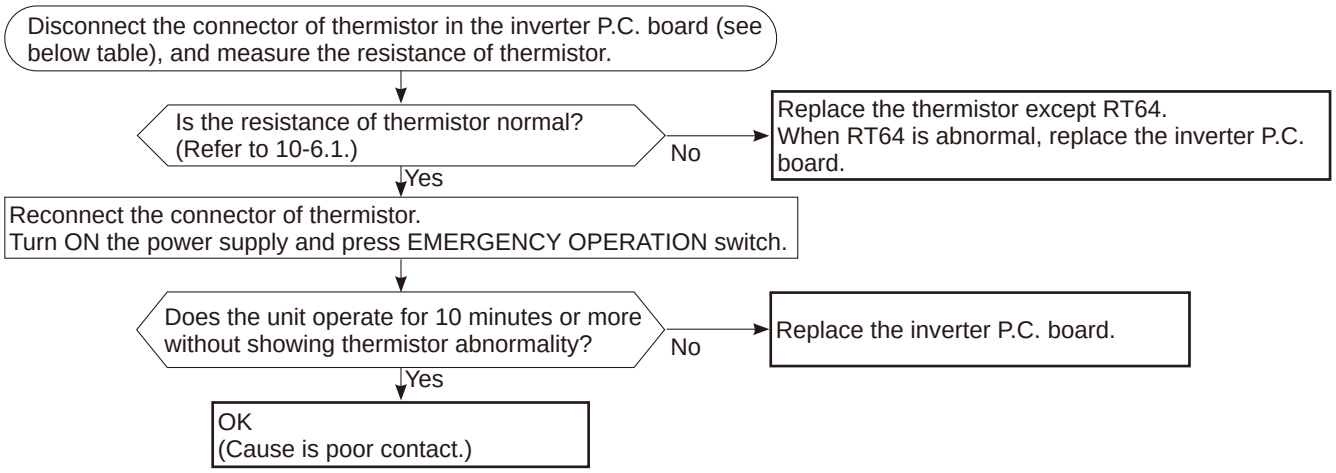


**NAXSPH06/09/12B112AA, NAXSPB06/09/12B112AA**

| Thermistor | Symbol | Connector, Pin No. | Board |
|---|---|---|---|
| Defrost | RT61 | Between CN641 pin1 and pin2 | Inverter P.C. board |
| Discharge temperature | RT62 | Between CN641 pin3 and pin4 | |
| Fin temperature | RT64 | Between CN642 pin1 and pin2 | |
| Ambient temperature | RT65 | Between CN643 pin1 and pin2 | |
| Outdoor heat exchanger temperature | RT68 | Between CN644 pin1 and pin3 | |

**NAXSPH15/18B112AA, NAXSPB15/18B112AA**

| Thermistor | Symbol | Connector, Pin No. | Board |
|---|---|---|---|
| Defrost | RT61 | Between CN671 pin1 and pin2 | Inverter P.C. board |
| Discharge temperature | RT62 | Between CN671 pin3 and pin4 | |
| Fin temperature | RT64 | Between CN673 pin1 and pin2 | |
| Ambient temperature | RT65 | Between CN672 pin1 and pin2 | |
| Outdoor heat exchanger temperature | RT68 | Between CN671 pin5 and pin6 | |

## Ⓗ Check of R.V. coil

### NAXSPH06/09/12B112AA, NAXSPB06/09/12B112AA

* First of all, measure the resistance of R.V. coil to check if the coil is defective. Refer to 10-4.
* In case CN721 is disconnected or R.V. coil is open, voltage is generated between the terminal pins of the connector although no signal is being transmitted to R.V. coil.
  Check if CN721 is connected.

**Unit operates in COOL mode even if it is set to HEAT mode.**

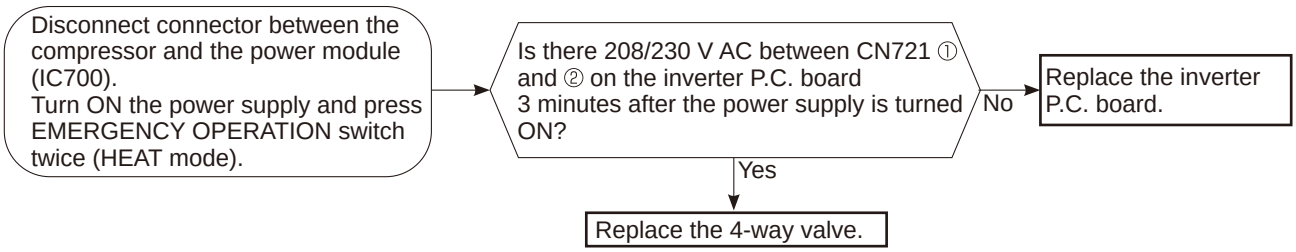


**Unit operates in HEAT mode even if it is set to COOL mode.**

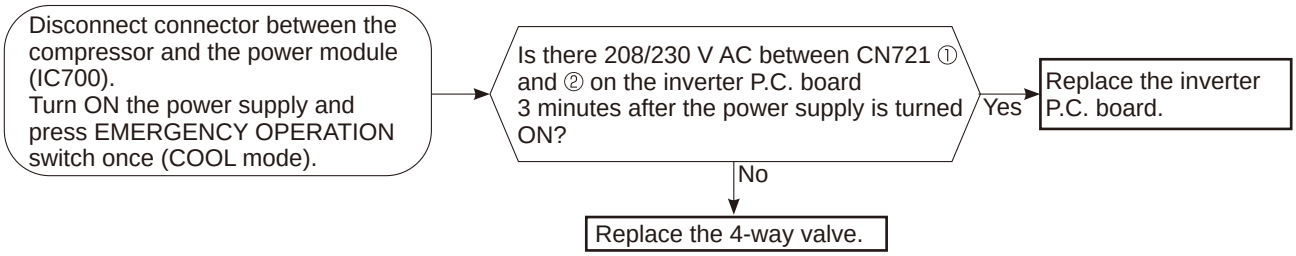


### NAXSPH15/18B112AA, NAXSPB15/18B112AA

* First of all, measure the resistance of R.V. coil to check if the coil is defective. Refer to 10-4.
* In case CN602 is disconnected or R.V. coil is open, voltage is generated between the terminal pins of the connector although no signal is being transmitted to R.V. coil.
  Check if CN602 is connected.

**Unit operates in COOL mode even if it is set to HEAT mode.**

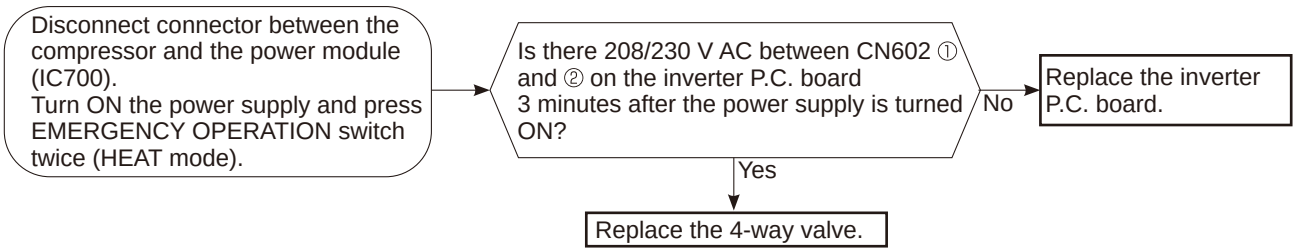


**Unit operates in HEAT mode even if it is set to COOL mode.**

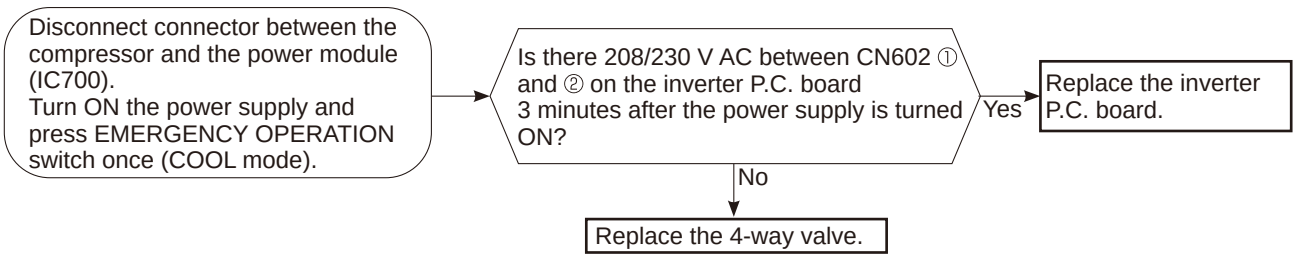

## Ⓘ Check of outdoor fan motor

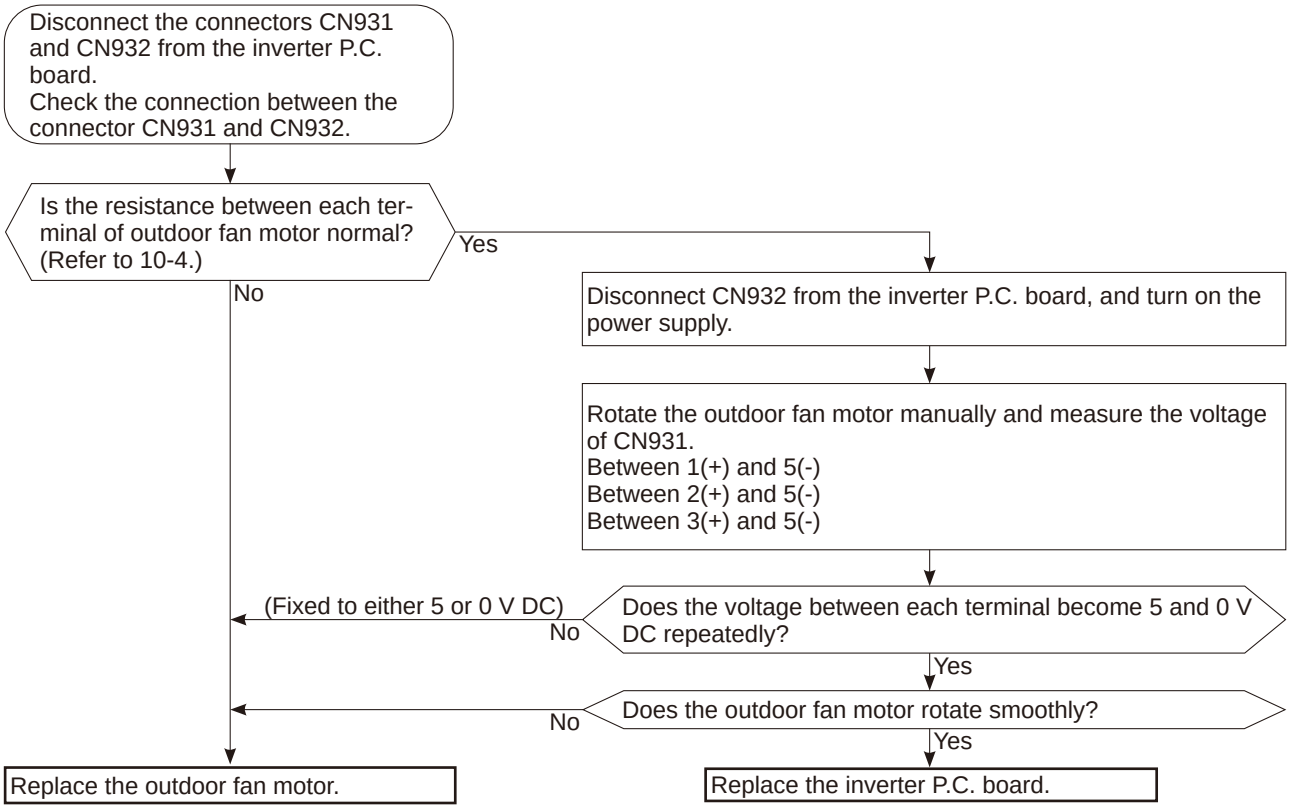

## Ⓙ Check of power supply

Disconnect the connector between the compressor and the power module (IC700).
Turn ON power supply and press EMERGENCY OPERATION switch.

Does the left lamp of the OPERATION INDICATOR lamp on the indoor unit light up?

- No → Is there voltage 208/230 V AC between the indoor terminal block S1 and S2?
  - Yes → Rectify indoor/outdoor connecting wire.
  - No → Replace the indoor electronic control P.C. board.
- Yes → Is there bus-bar voltage 260 - 370 V DC between DB61 (+) and DB61 (–) (**NAXSPH06/09/12B112AA, NAXSPB06/09/12B112AA**)/294 - 370 V DC between IC700 (P) and (N) (**NAXSPH15/18B112AA, NAXSPB15/18B112AA**) on the inverter P.C. board? (Refer to 10-6.1.)
  - Yes → Does LED on the inverter P.C. board light up or blink? (Refer to 10-6.1.)
    - No → Replace the inverter P.C. board.
    - Yes → If lights up, OK. If blinks, refer to 10-3.
  - No → Check the electric parts in main circuit.

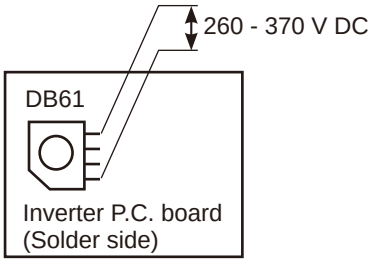


**NAXSPH06/09/12B112AA**
**NAXSPB06/09/12B112AA**

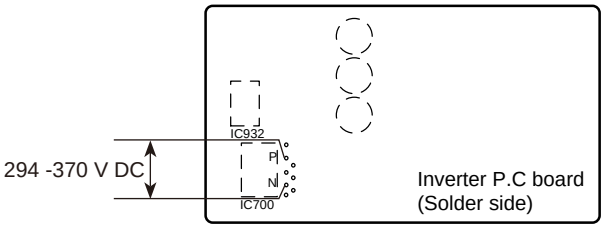


**NAXSPH15/18B112AA**
**NAXSPB15/18B112AA**

## Ⓚ Check of LEV (Expansion valve)

Turn ON the power supply.
<Preparation of the remote controller>
① While pressing both Operation select button and TEMP ⊕ button on the remote controller at the same time, press RESET button.
② First, release RESET button.
Hold down the other 2 buttons for another 3 seconds. Make sure that the indicators on the LCD screen shown in the right figure are all displayed. Then release the buttons.

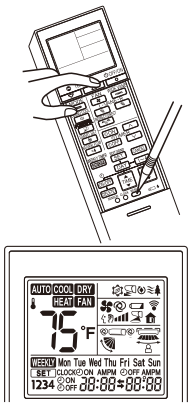


↓

Press OFF/ON (stop/operate) button of the remote controller (the set temperature is displayed) with the remote controller headed towards the indoor unit. *1

↓

Expansion valve operates in full-opening direction.

↓

Do you hear the expansion valve "click, click·····"?
Do you feel the expansion valve vibrate when touching it ?

- Yes → OK
- No ↓

Is LEV coil properly fixed to the expansion valve?

- No → Properly fix the LEV coil to the expansion valve.
- Yes ↓

Does the resistance of LEV coil have the characteristics? (Refer to 10-4.)

- No → Replace the LEV coil.
- Yes →

Measure each voltage between connector pins of CN724 on the inverter P.C. board.
1. Pin③(-) — Pin①(+)
2. Pin④(-) — Pin①(+)
3. Pin⑤(-) — Pin①(+)
4. Pin⑥(-) — Pin①(+)

Is there about 3 - 5 V AC between each?
**NOTE:** Measure the voltage by an analog tester.

- No → Replace the inverter P.C. board.
- Yes → Replace the expansion valve.

*1. Regardless of normal or abnormal condition, a short beep is emitted once the signal is received.

**NOTE**: After check of LEV, take the following steps.
1. Turn OFF the power supply and turn it ON again.
2. Press RESET button on the remote controller.

## Ⓛ Check of inverter P.C. board

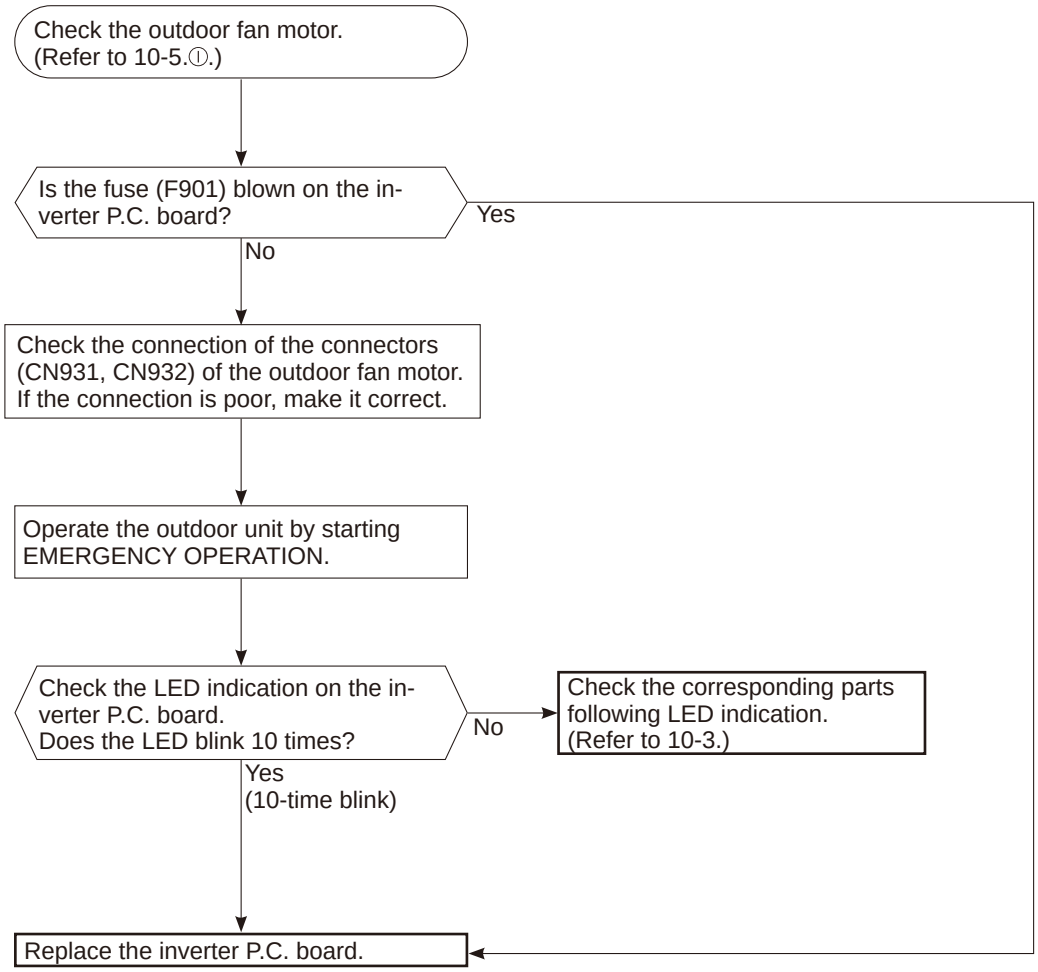

## Ⓜ How to check miswiring and serial signal error

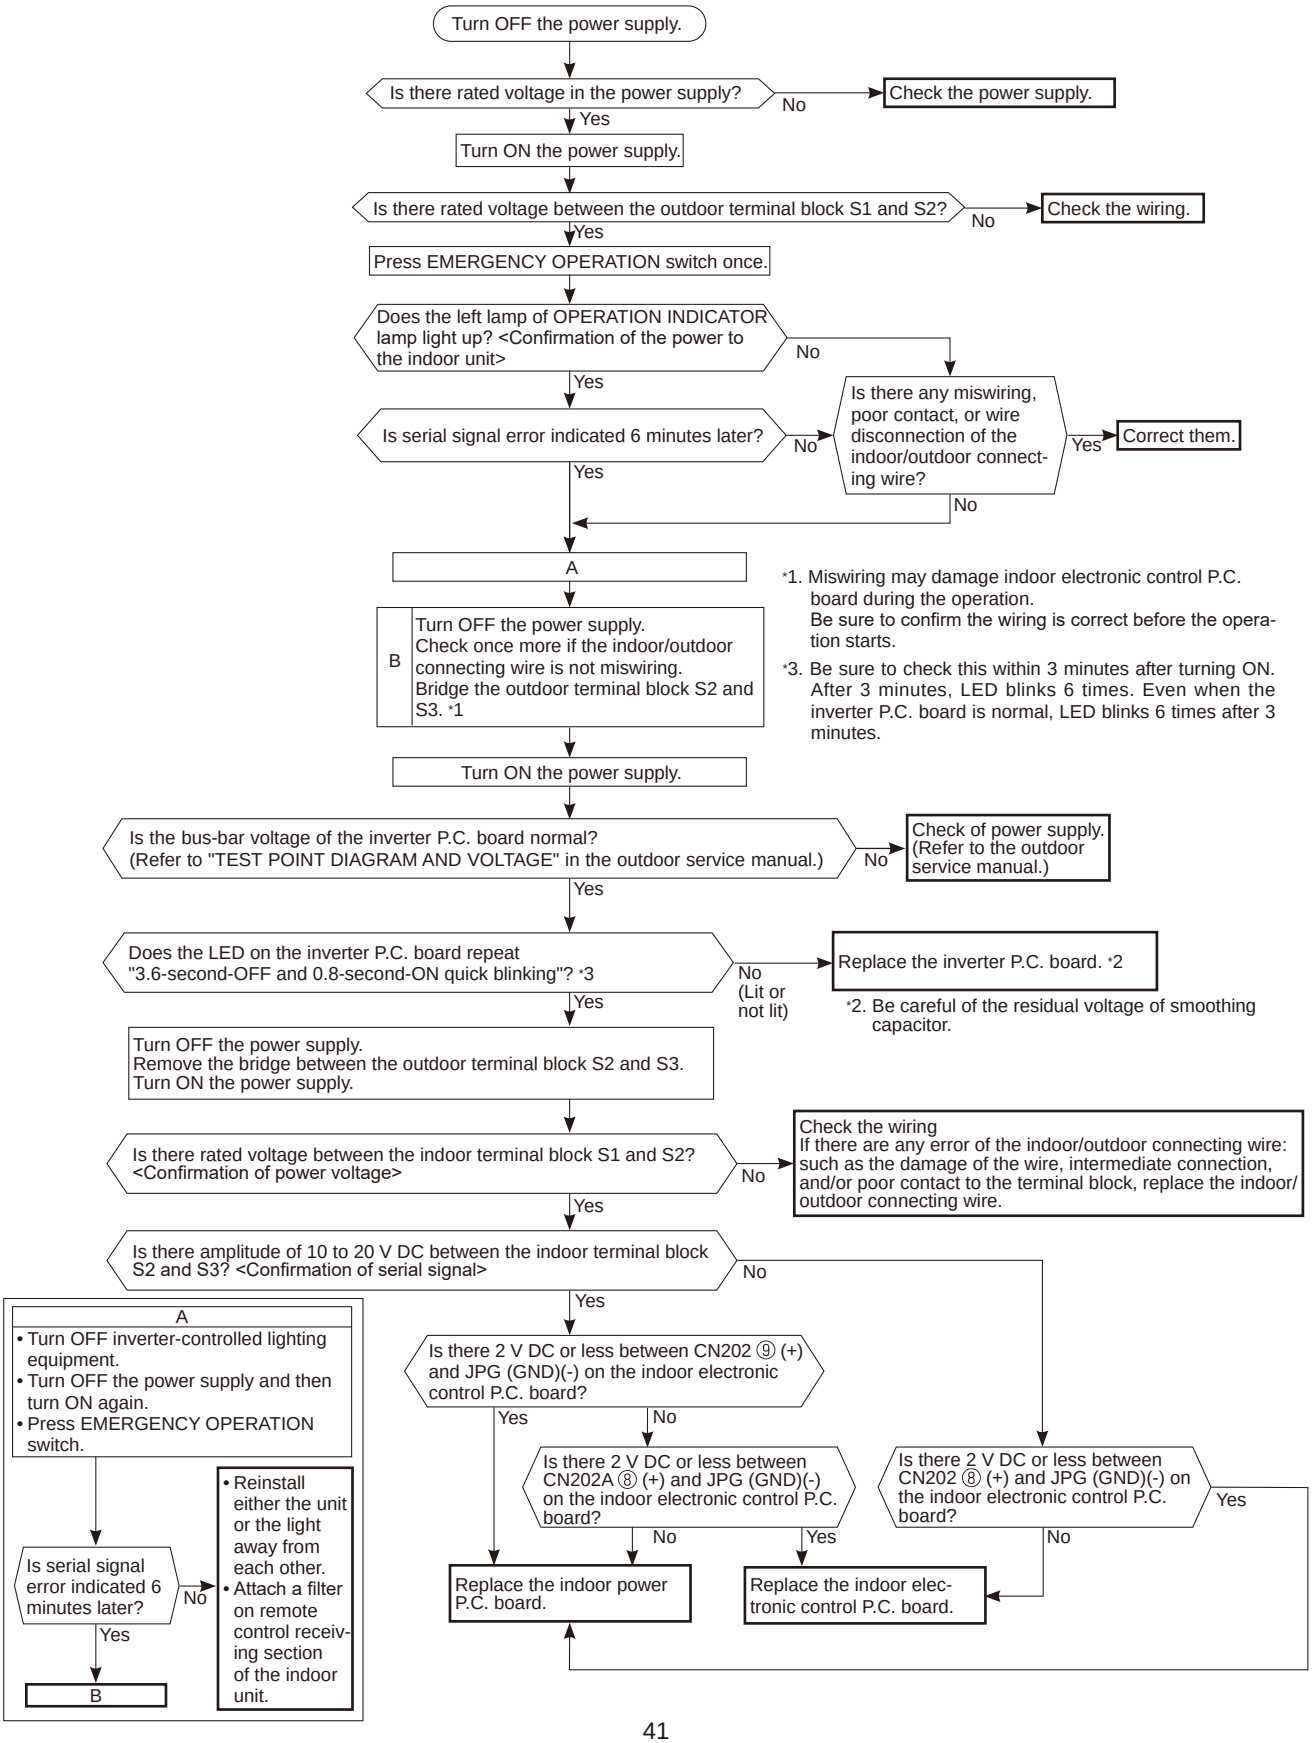


*1. Miswiring may damage indoor electronic control P.C. board during the operation.
Be sure to confirm the wiring is correct before the operation starts.

*3. Be sure to check this within 3 minutes after turning ON. After 3 minutes, LED blinks 6 times. Even when the inverter P.C. board is normal, LED blinks 6 times after 3 minutes.

*2. Be careful of the residual voltage of smoothing capacitor.

## Ⓝ Check of defrost heater

**NAXSPH06B112AA NAXSPB06B112AA NAXSPH09B112AA NAXSPB09B112AA**
**NAXSPH12B112AA NAXSPB12B112AA NAXSPH15B112AA NAXSPB15B112AA**
**NAXSPH18B112AA NAXSPB18B112AA**

Check the following points before checking electric continuity.
1. Does the resistance of ambient temperature thermistor have the characteristics? Refer to 10-6.1.
2. Is the resistance of defrost heater normal? Refer to 10-4.
3. Does the heater protector remain conducted (not open)?
4. Are both ambient temperature thermistor and circuit of defrost heater securely connected to connectors?

In HEAT mode, for more than 5 minutes, let the ambient temperature thermistor continue to read 32°F (0°C) or below, and let the defrost thermistor continue to read 30°F (-1°C) or below.

**NOTE:** In case both thermistors are more than the above temperature, cool them with cold water etc.

Is there 208/230 V AC between CN722 ① and ③ (**NAXSPH06/09/12B112AA, NAXSPB06/09/12B112AA**)/CN601 ① and ② (**NAXSPH15/18B112AA, NAXSPB15/18B112AA**) on the inverter P.C. board? Refer to 10-6.1.

Yes → Not the problem of the inverter P.C. board.

No → Replace the inverter P.C. board.

## Ⓞ Check of outdoor refrigerant circuit

Has the operation stopped during pump down?

Yes → The operation has stopped to prevent the diesel explosion caused by air trapped in the refrigerant circuit. Close the stop valve, and disconnect the power plug or turn the breaker OFF.

**CAUTION : Do not start the operation again to prevent hazards.**

No ↓

Was the operation started with the stop valve closed, and was it opened during operation?

Yes → The unit occasionally stops when the stop valve is opened or closed during operation. Open the stop valve and start the cooling operation again.

No ↓

The refrigerant gas amount may be 60% or less than the normal amount. Identify where the gas is leaking from, and fix the leak.

## Ⓟ Electromagnetic noise enters into TV sets or radios

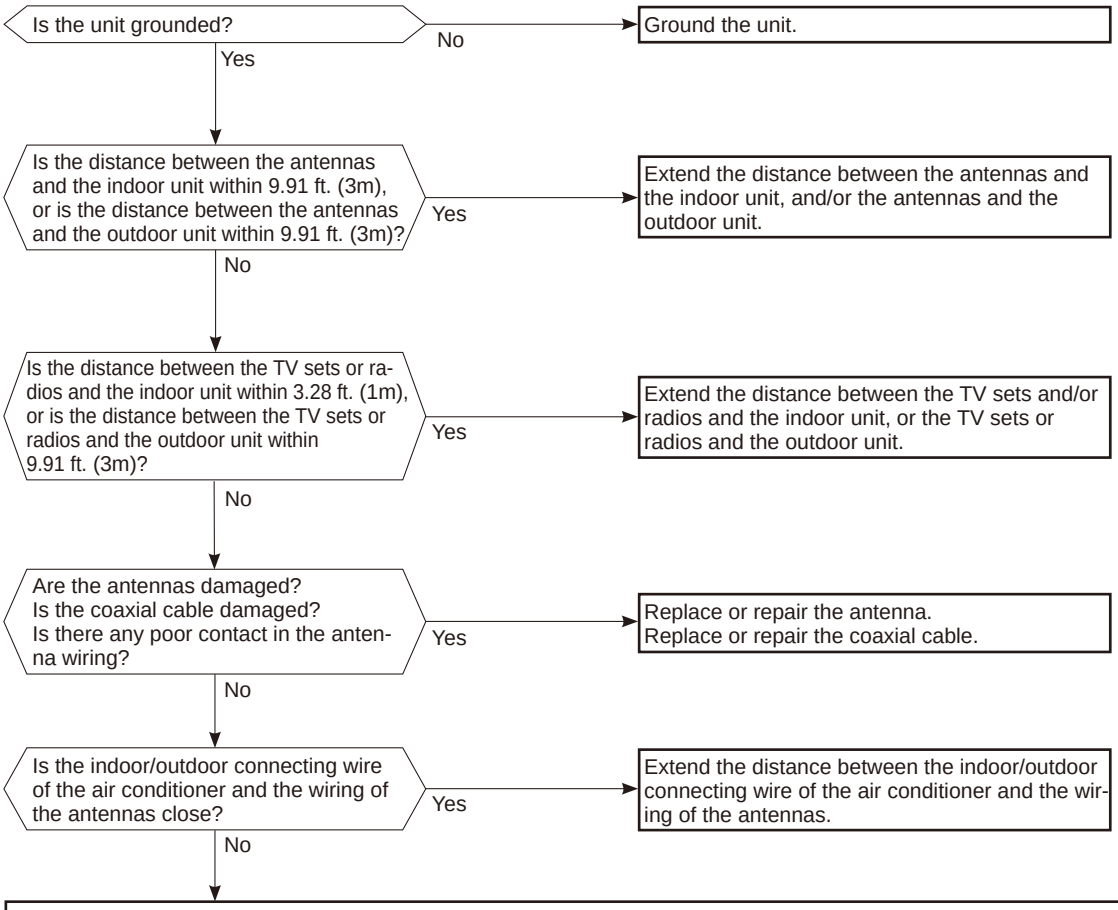


Even if all of the above conditions are fulfilled, the electromagnetic noise may enter, depending on the electric field strength or the installation condition (combination of specific conditions such as antennas or wiring).
Check the following before asking for service.

1. Devices affected by the electromagnetic noise
   TV sets, radios (FM/AM broadcast, shortwave)
2. Channel, frequency, broadcast station affected by the electromagnetic noise
3. Channel, frequency, broadcast station unaffected by the electromagnetic noise
4. Layout of:
   indoor/outdoor unit of the air conditioner, indoor/outdoor wiring, ground wire, antennas, wiring from antennas, receiver
5. Electric field intensity of the broadcast station affected by the electromagnetic noise
6. Presence or absence of amplifier such as booster
7. Operation condition of air conditioner when the electromagnetic noise enters in
   1) Turn OFF the power supply once, and then turn ON the power supply. In this situation, check for the electromagnetic noise.
   2) Within 3 minutes after turning ON the power supply, press OFF/ON (stop/operate) button on the remote controller for power ON, and check for the electromagnetic noise.
   3) After a short time (3 minutes later after turning ON), the outdoor unit starts running. During operation, check for the electromagnetic noise.
   4) Press OFF/ON (stop/operate) button on the remote controller for power OFF, when the outdoor unit stops but the indoor/outdoor communication still runs on. In this situation, check for the electromagnetic noise.

## 10-6. TEST POINT DIAGRAM AND VOLTAGE

### 1. Inverter P.C. board

### NAXSPH06B112AA NAXSPB06B112AA NAXSPH09B112AA NAXSPB09B112AA NAXSPH12B112AA NAXSPB12B112AA

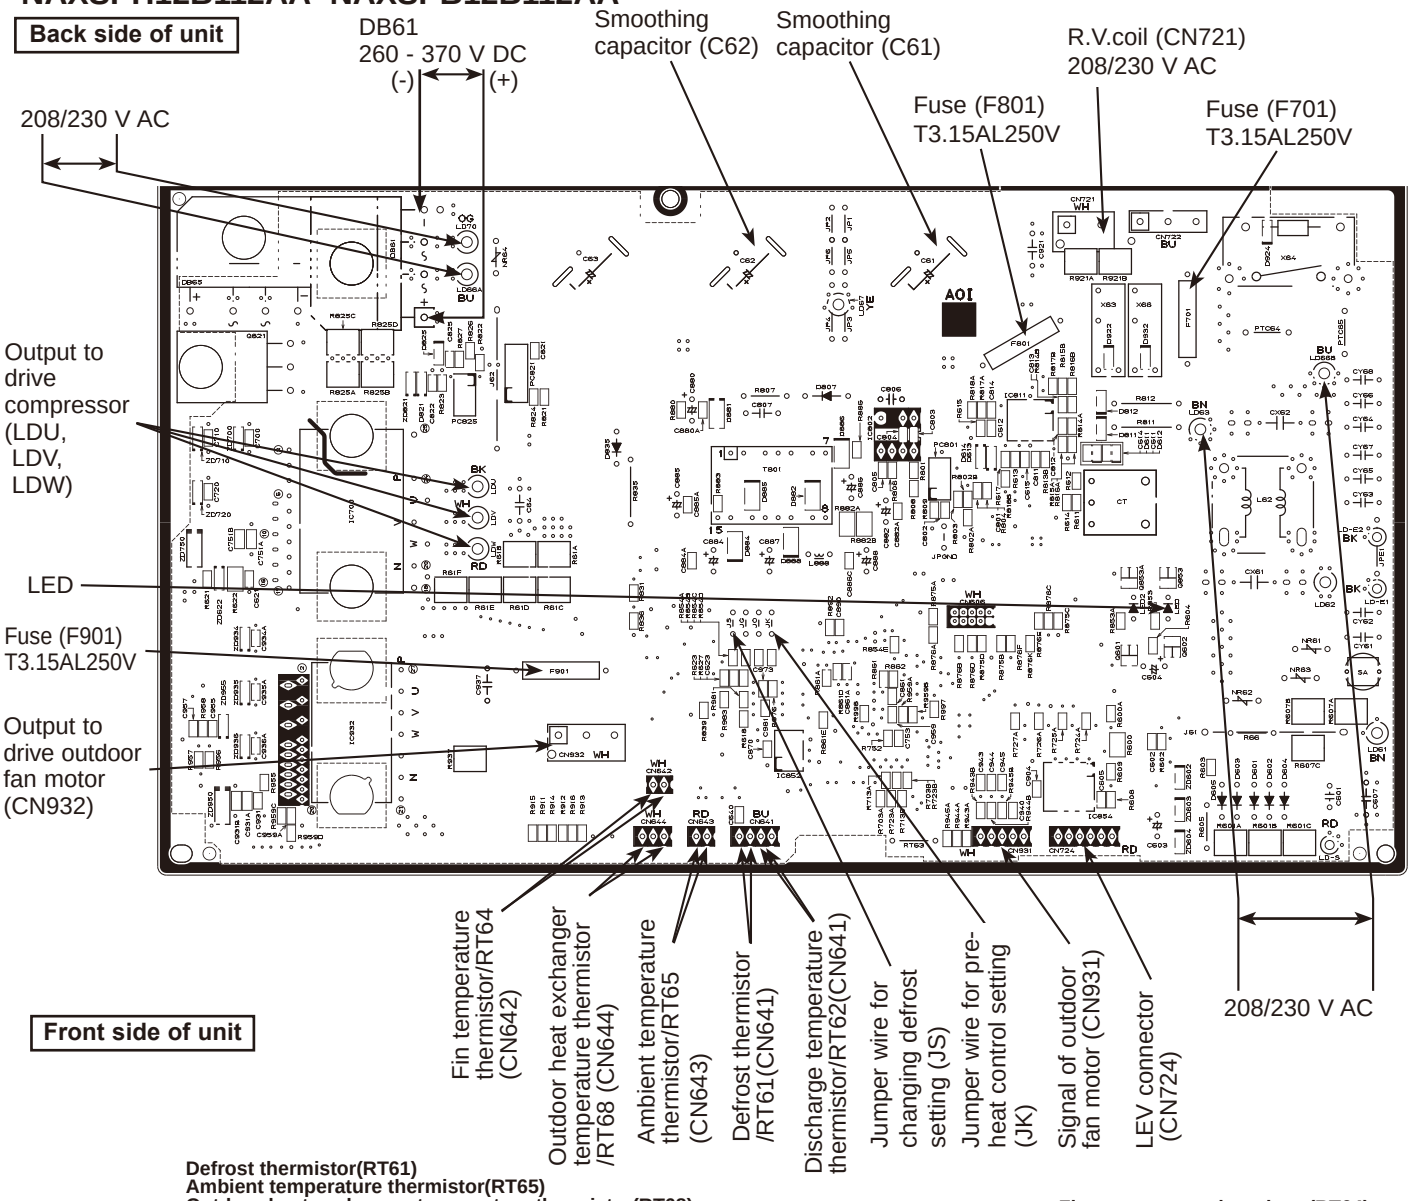


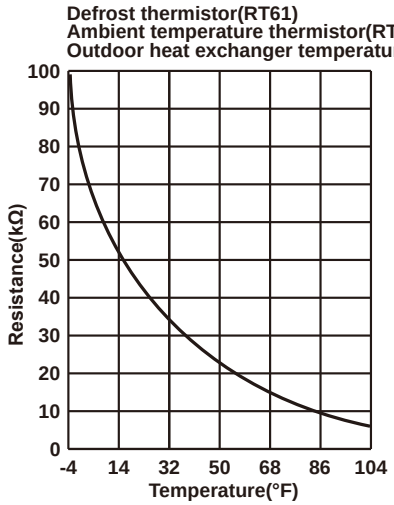


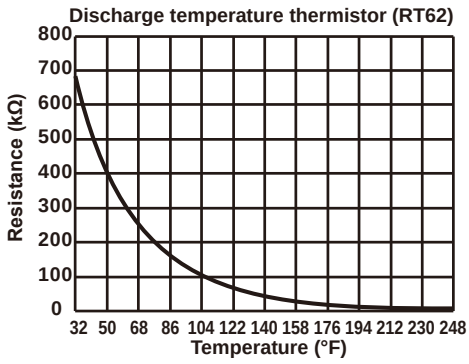


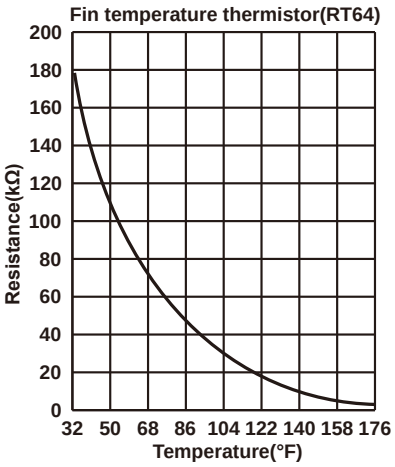




OBHA873A

## NAXSPH15B112AA NAXSPB15B112AA NAXSPH18B112AA NAXSPB18B112AA

**Back side of unit**

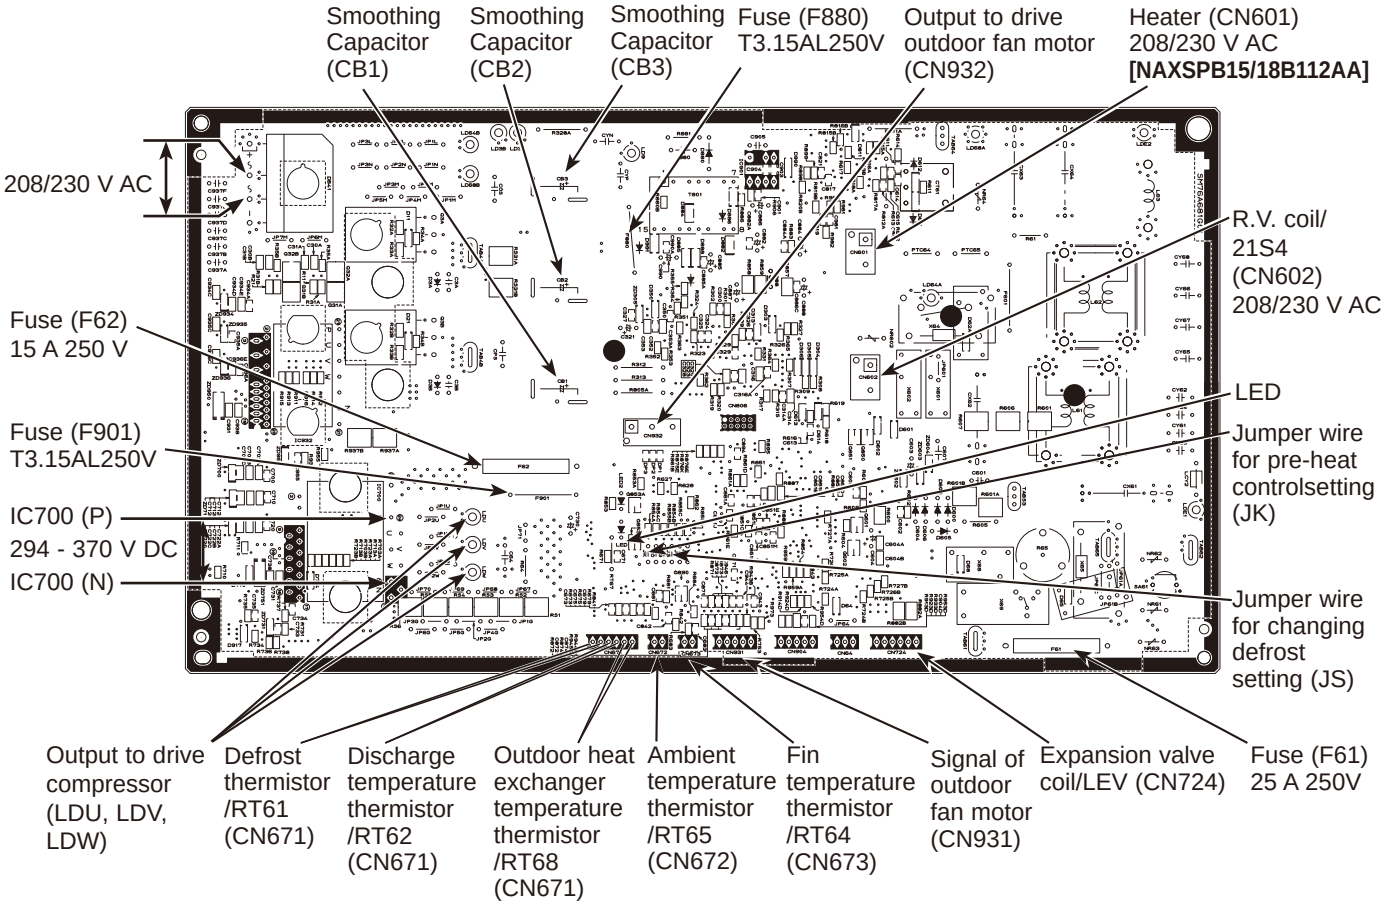


**Front side of unit**

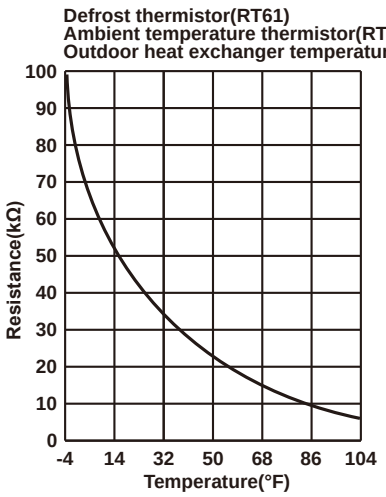


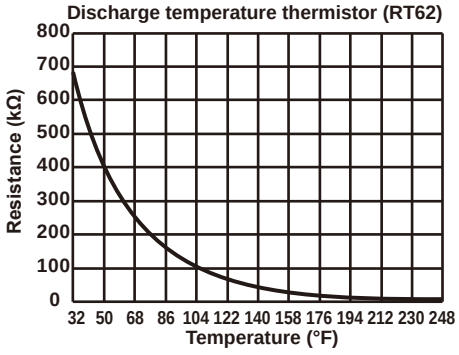


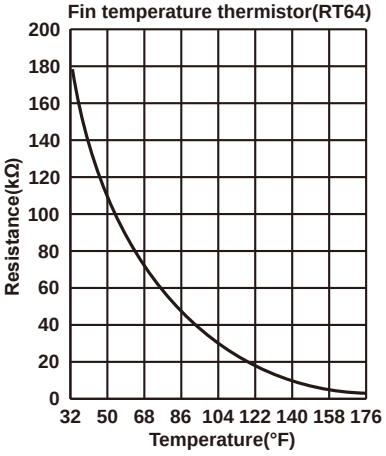

# 11 DISASSEMBLY INSTRUCTIONS

<Detaching method of the terminal with locking mechanism>

The terminal which has the locking mechanism can be detached as shown below.
There are 2 types of the terminal with locking mechanism.
The terminal without locking mechanism can be detached by pulling it out.
Check the shape of the terminal before detaching.

(1) Slide the sleeve and check if there is a locking lever or not.

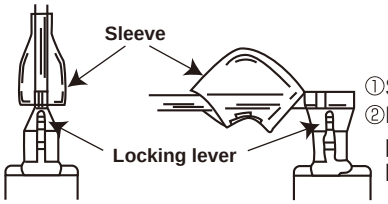


①Slide the sleeve.
②Pull the terminal while pushing the locking lever.

(2) The terminal with the connector has the locking mechanism.

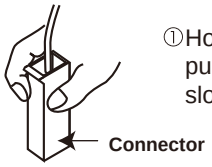


①Hold the sleeve, and pull out the terminal slowly.

## 11-1. NAXSPH06B112AA NAXSPB06B112AA NAXSPH09B112AA NAXSPB09B112AA NAXSPH12B112AA NAXSPB12B112AA

**NOTE**: Turn OFF the power supply before disassembly.

→: Indicates the visible parts in the photos/figures.
--→: Indicates the invisible parts in the photos/figures.

| OPERATING PROCEDURE | PHOTOS/FIGURES |
|---|---|
| **1. Removing the cabinet**<br>(1) Remove the screw fixing the service panel.<br>(2) Pull down the service panel and remove it.<br>(3) Remove the screws fixing the conduit cover.<br>(4) Remove the conduit cover. (Photo 4)<br>(5) Remove the screw fixing the conduit plate. (Photo 5)<br>(6) Remove the conduit plate.<br>(7) Disconnect the power supply wire and indoor/outdoor connecting wire.<br>(8) Remove the screws fixing the top panel.<br>(9) Remove the top panel.<br>(10) Remove the screws fixing the cabinet.<br>(11) Remove the cabinet.<br>(12) Remove the screws fixing the back panel.<br>(13) Remove the back panel. | **Photo 1**<br> 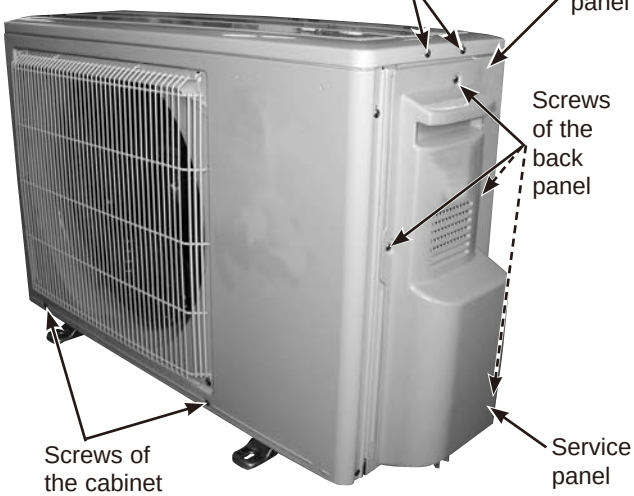 <br> |
| **Photo 2**<br> <br> | **Photo 3**<br> 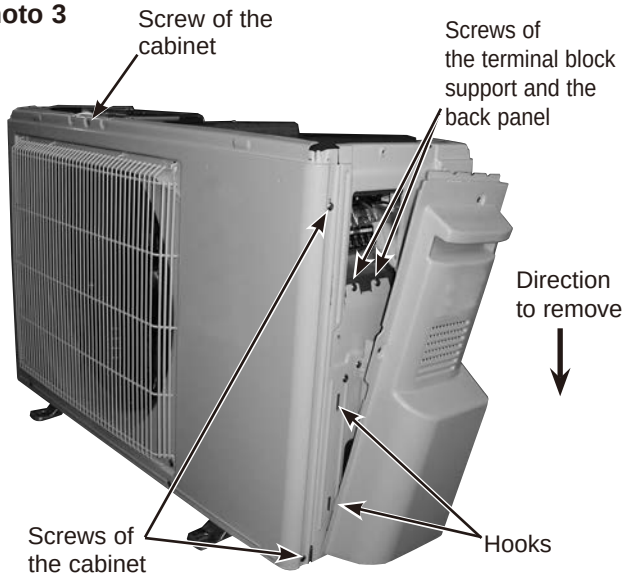 <br> |

| OPERATING PROCEDURE | PHOTOS/FIGURES |
|---|---|
| **Photo 4**<br> 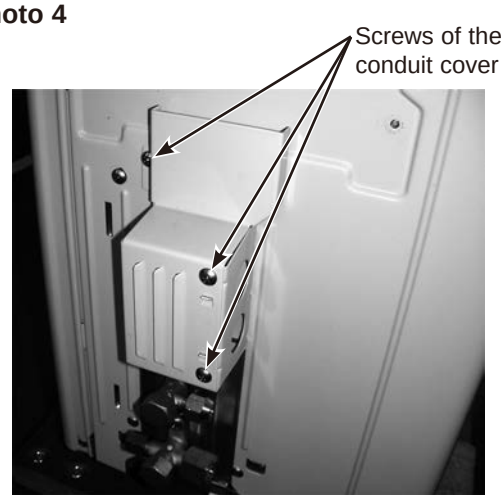 <br> | **Photo 5**<br> <br> |
| **2. Removing the inverter assembly, inverter P.C. board**<br>(1) Remove the cabinet and panels. (Refer to section 1.)<br>(2) Disconnect the lead wire to the reactor and the following connectors:<br><Inverter P.C. board><br>CN721 (R.V. coil)<br>CN722 (Defrost heater and heater protector) (**NAXSPB06/09/12B112AA**)<br>CN931, CN932 (Fan motor)<br>CN641 (Defrost thermistor and discharge temperature thermistor)<br>CN643 (Ambient temperature thermistor)<br>CN644 (Outdoor heat exchanger temperature thermistor)<br>CN724 (LEV)<br>(3) Remove the compressor connector (CN61).<br>(4) Remove the screws fixing the heat sink support and the separator.<br>(5) Remove the fixing screws of the terminal block support and the back panel.<br>(6) Remove the inverter assembly.<br>(7) Remove the screw of the ground wire and screw of the terminal block support.<br>(8) Remove the heat sink support from the P.C. board support.<br>(9) Remove the screw of the inverter P.C. board and remove the inverter P.C. board from the P.C. board support. | **Photo 6**<br> 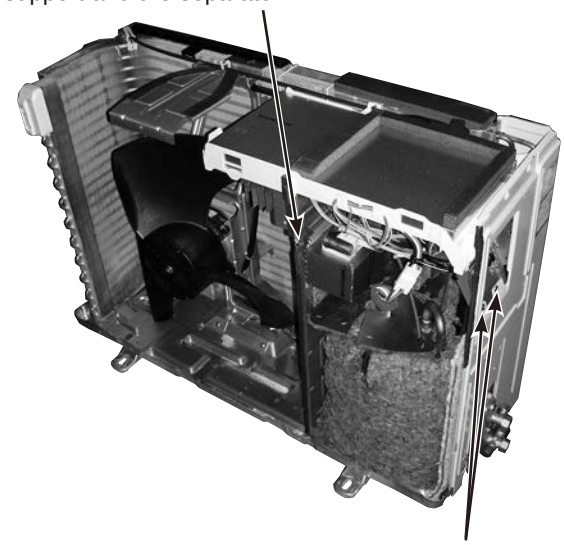 <br> |
| **3. Removing R.V. coil**<br>(1) Remove the cabinet and panels. (Refer to section 1.)<br>(2) Disconnect the following connectors:<br><Inverter P.C. board><br>CN721 (R.V. coil)<br>(3) Remove the R.V. coil. | **Photo 7**<br> 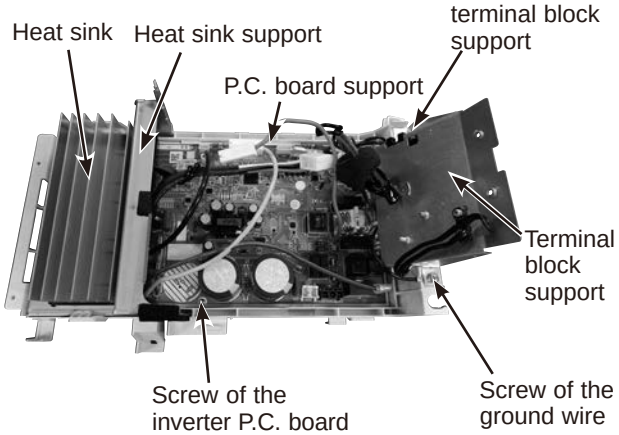 <br> |

| OPERATING PROCEDURE | PHOTOS/FIGURES |
|---|---|
| **4. Removing the discharge temperature thermistor, defrost thermistor, outdoor heat exchanger temperature thermistor and ambient temperature thermistor**<br>(1) Remove the cabinet and panels. (Refer to section 1.)<br>(2) Disconnect the lead wire to the reactor and the following connectors:<br><Inverter P.C. board><br>CN641 (Defrost thermistor and discharge temperature thermistor)<br>CN643 (Ambient temperature thermistor)<br>CN644 (Outdoor heat exchanger temperature thermistor)<br>(3) Pull out the discharge temperature thermistor from its holder.<br>(4) Pull out the defrost thermistor from its holder. (Photo 9)<br>(5) Pull out the outdoor heat exchanger temperature thermistor from its holder. (Photo 9)<br>(6) Pull out the ambient temperature thermistor from its holder. | **Photo 8**<br> 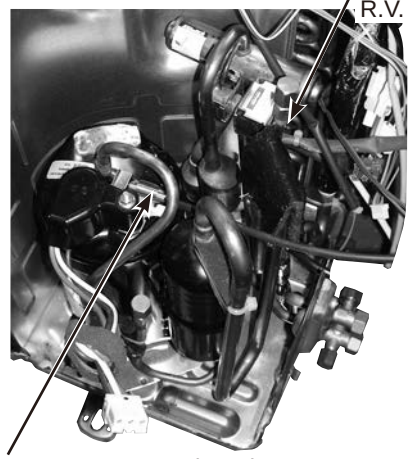 <br><br>**Photo 9**<br> 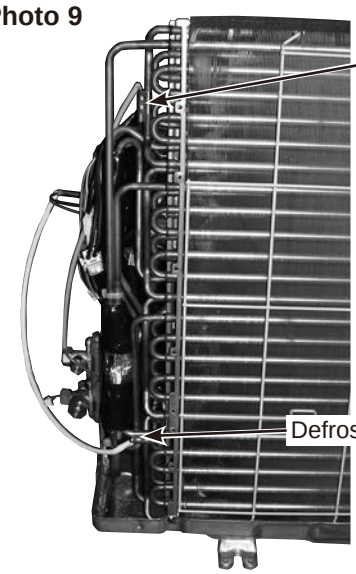 <br><br>**Photo 10**<br> 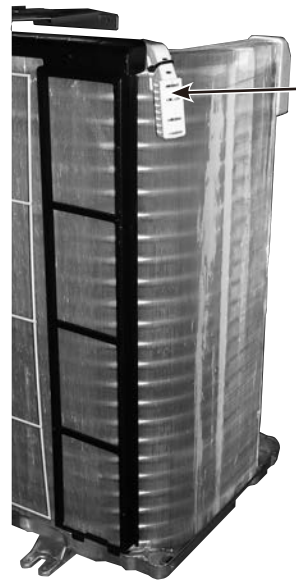 <br> |

| OPERATING PROCEDURE | PHOTOS/FIGURES |
|---|---|
| **5. Removing outdoor fan motor**<br>(1) Remove the cabinet and panels. (Refer to section 1.)<br>(2) Disconnect the following connectors:<br><Inverter P.C. board><br>CN931, CN932 (Fan motor)<br>(3) Remove the propeller fan nut.<br>(4) Remove the propeller fan.<br>(5) Remove the screws fixing the fan motor.<br>(6) Remove the fan motor. | **Photo 11**<br> 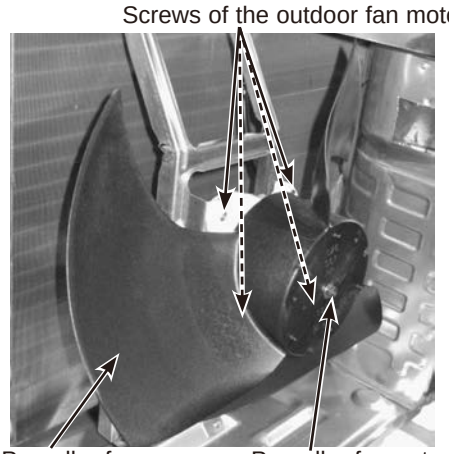 <br> |
| **6. Removing the compressor and 4-way valve**<br>(1) Remove the cabinet and panels. (Refer to section 1.)<br>(2) Remove the inverter assembly. (Refer to section 2.)<br>(3) Remove the screws fixing the reactor.<br>(4) Remove the reactor.<br>(5) Remove the soundproof felt.<br>(6) Recover gas from the refrigerant circuit.<br>**NOTE:** Recover gas from the pipes until the pressure gauge shows 0 PSIG.<br>(7) Detach the brazed part of the suction and the discharge pipe connected with compressor.<br>(8) Remove the nuts fixing the compressor.<br>(9) Remove the compressor.<br>(10) Detach the brazed part of pipes connected with 4-way valve.<br><br>**Photo 13**<br> 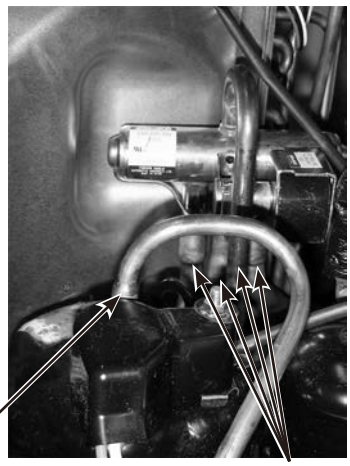 <br> | **Photo 12**<br> <br> |

## 11-2. NAXSPH15B112AA NAXSPB15B112AA NAXSPH18B112AA NAXSPB18B112AA

**NOTE:** Turn OFF the power supply before disassembly.

| OPERATING PROCEDURE | PHOTOS/FIGURES |
|---|---|

**1. Removing the cabinet**

(1) Remove the screws of the service panel.
(2) Remove the screws of the top panel.
(3) Remove the screw of the valve cover.
(4) Remove the service panel.
(5) Remove the top panel.
(6) Remove the valve cover.
(7) Disconnect the power supply and indoor/outdoor connecting wire.
(8) Remove the screws of the cabinet.
(9) Remove the cabinet.
(10) Remove the screws of the back panel.
(11) Remove the back panel.

**Photo 2**

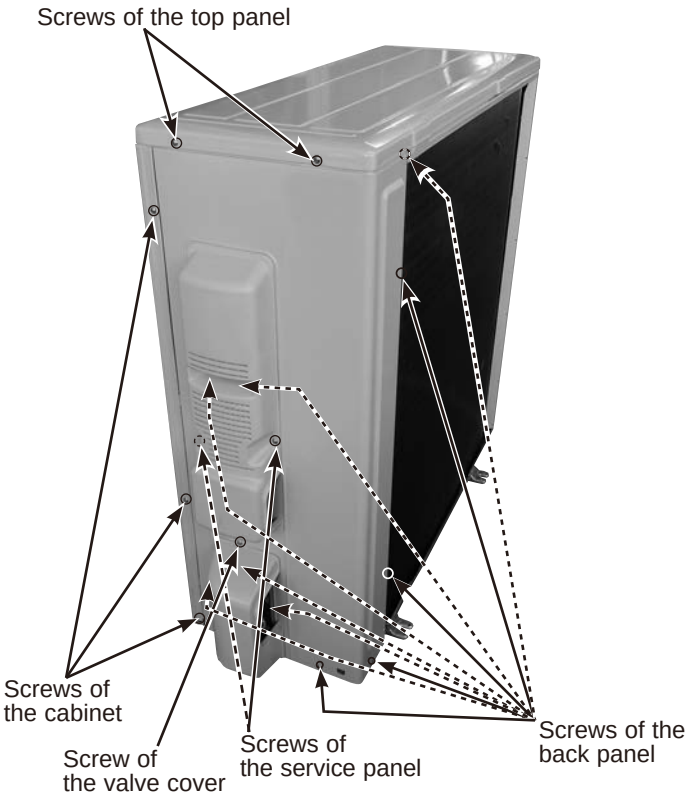


**Photo 1**

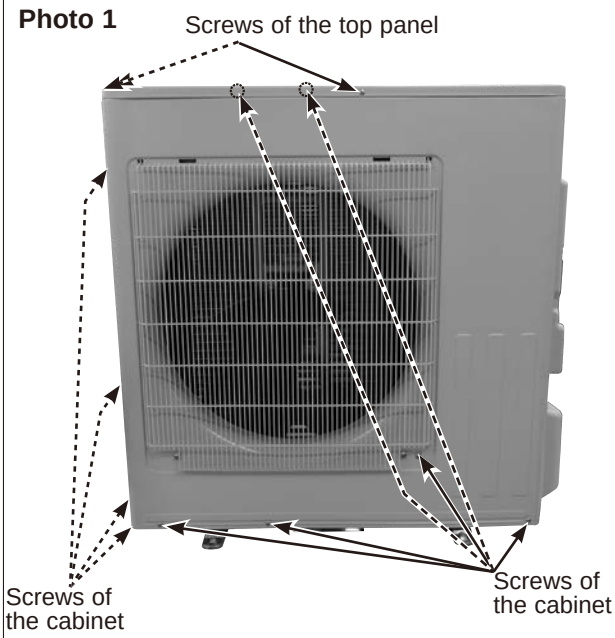


**Photo 3**

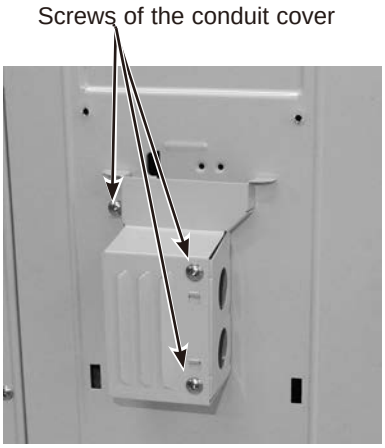


**Photo 4**

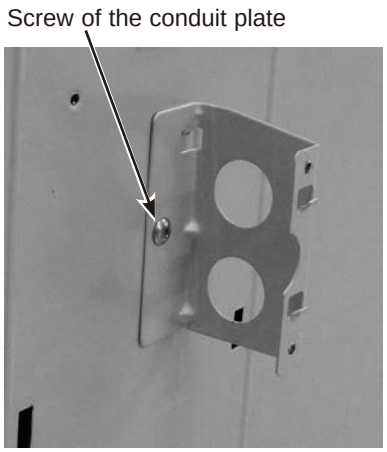

| OPERATING PROCEDURE | PHOTOS/FIGURES |
|---|---|

**2. Removing the inverter assembly and inverter P.C. board**

(1) Remove the cabinet and panels. (Refer to section 1.)
(2) Disconnect the lead wire to the reactor and the following connectors:
<Inverter P.C. board>
CN602 (R.V. coil)
CN931, CN932 (Fan motor)
CN671 (Defrost thermistor, discharge temperature thermistor and outdoor heat exchanger temperature thermistor)
CN672 (Ambient temperature thermistor)
CN724 (LEV)
CN601 (Defrost heater and heater protector)
**(NAXSPB15/18B112AA)**
(3) Remove the compressor connector (CN61).
(4) Remove the screws fixing the heat sink support and the separator.
(5) Remove the screws fixing the P.C. board support and the motor support.
(6) Remove the fixing screws of the terminal block support and the back panel.
(7) Remove the inverter assembly.
(8) Remove the screws of the ground wires.
(9) Remove the screw of the heat sink support, and the heat sink support from the P.C. board support.
(10) Remove the screws of the terminal block support, and the screws of the ground wires. (Photo 7)
(11) Remove the terminal block support.

**Photo 5**

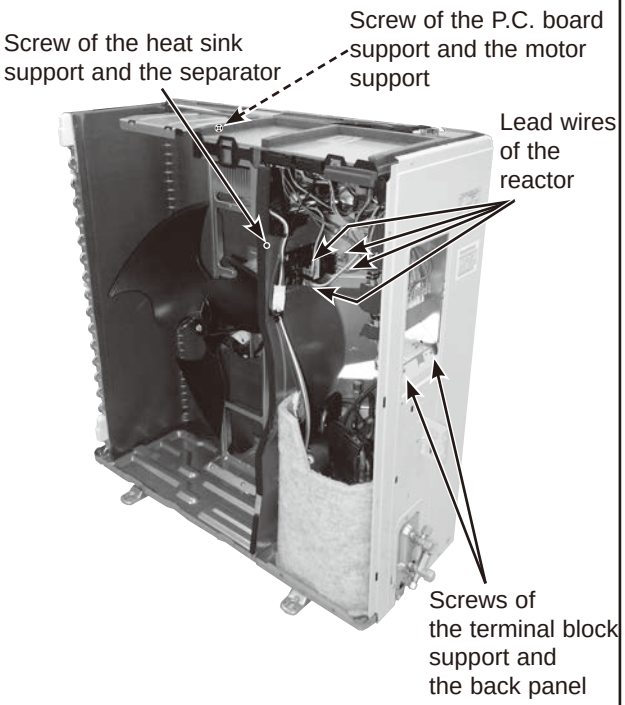


**Photo 6 (Inverter assembly)**

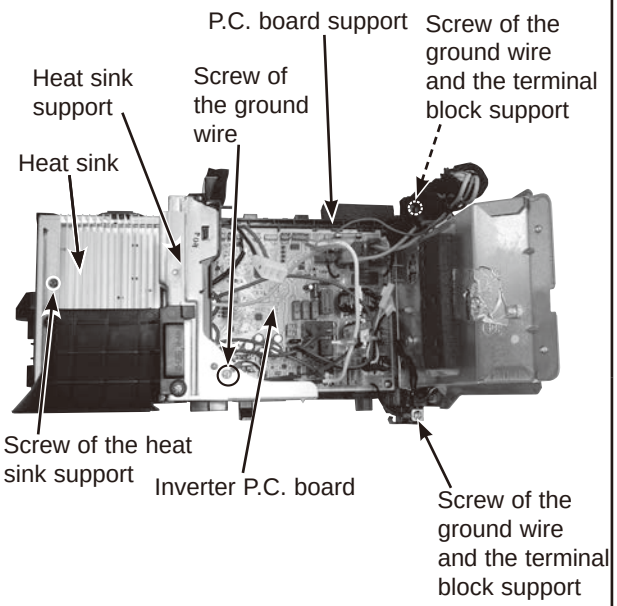

| OPERATING PROCEDURE | PHOTOS/FIGURES |
|---|---|

**∗ Connection procedure when attaching the inverter P.C. board (Photo 8, 9)**

1. Attach the heat sink support to the P.C. board support.
2. Hook the lead wires of the compressor, the reactor and the P.C. board to each hooks on the heat sink support as shown Photo 8.
3. Connect the lead wires of the expansion valve coil to the connector on the inverter P.C. board. Pull the lead wires of the expansion valve coil toward you and put them on the left hook on the P.C. board support as shown in Photo 9.

**Photo 7**

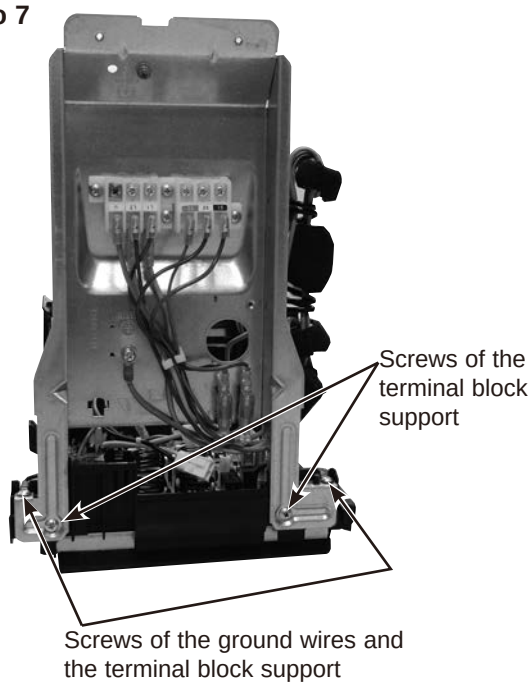


**Photo 8**

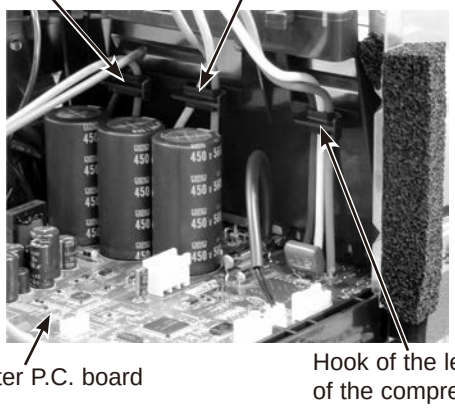


**Photo 9**

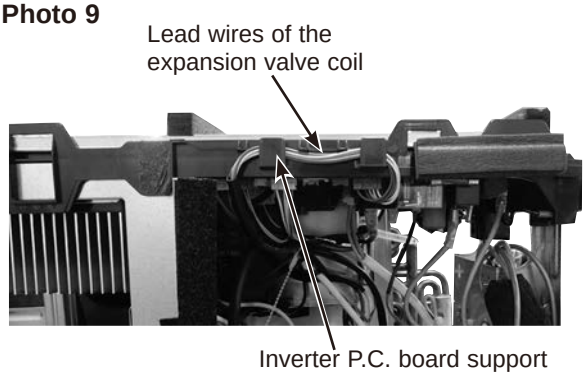

| OPERATING PROCEDURE | PHOTOS/FIGURES |
|---|---|
| **3. Removing the discharge temperature thermistor, defrost thermistor, outdoor heat exchanger temperature thermistor and ambient temperature thermistor**<br>(1) Remove the cabinet and panels. (Refer to section 1.)<br>(2) Disconnect the lead wire to the reactor and the following connectors:<br><Inverter P.C. board><br>CN671 (Defrost thermistor, discharge temperature thermistor and outdoor heart exchanger temperature thermistor)<br>CN672 (Ambient temperature thermistor)<br>(3) Pull out the discharge temperature thermistor from its holder. (Photo 12)<br>(4) Pull out the defrost thermistor from its holder.<br>(5) Pull out the outdoor heat exchanger temperature thermistor from its holder. (Photo 10)<br>(6) Pull out the ambient temperature thermistor from its holder. | **Photo 10**<br> 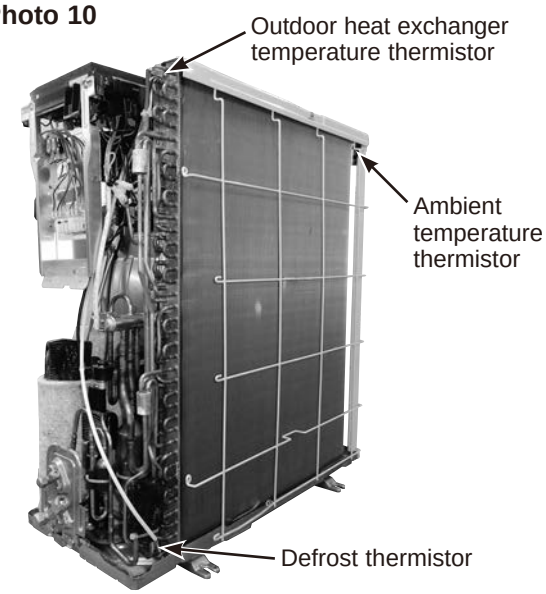 <br> |
| **4. Removing outdoor fan motor**<br>(1) Remove the top panel, cabinet and service panel. (Refer to section 1.)<br>(2) Disconnect the following connectors:<br><Inverter P.C. board><br>CN931, CN932 (Fan motor)<br>(3) Remove the propeller fan nut.<br>(4) Remove the propeller fan.<br>(5) Remove the screws fixing the fan motor.<br>(6) Remove the fan motor. | **Photo 11**<br> 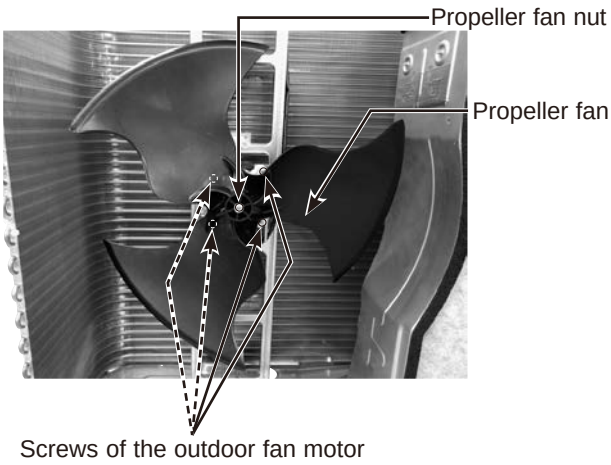 <br> |

| OPERATING PROCEDURE | PHOTOS/FIGURES |
|---|---|
| **5. Removing the compressor and 4-way valve**<br>(1) Remove the top panel, cabinet and service panel. (Refer to section 1.)<br>(2) Remove the back panel. (Refer to section 1.)<br>(3) Remove the inverter assembly. (Refer to section 2.)<br>(4) Recover gas from the refrigerant circuit.<br>**NOTE:** Recover gas from the pipes until the pressure gauge shows 0 PSIG.<br>(5) Detach the brazed part of the suction and the discharge pipe connected with compressor.<br>(6) Remove the compressor nuts.<br>(7) Remove the compressor.<br>(8) Detach the brazed parts of 4-way valve and pipe. (Photo 13) | **Photo 12**<br> 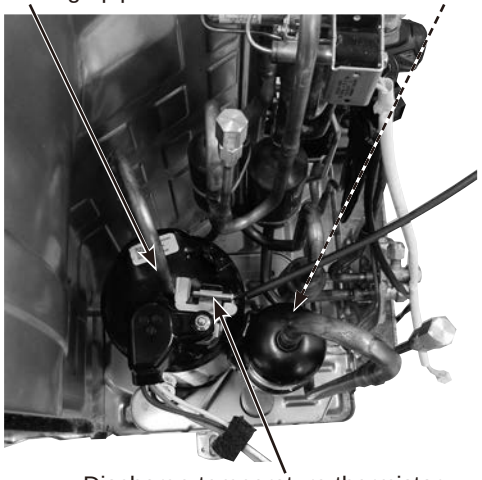 <br><br>**Photo 13**<br> 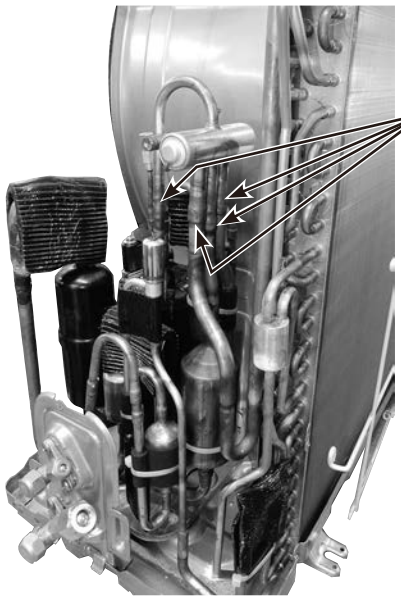 <br> |


# MITSUBISHI ELECTRIC TRANE HVAC US LLC

HEAD OFFICE: 1340 SATELLITE BOULEVARD, SUWANEE, GA 30024, USA



**© Copyright 2020 MITSUBISHI ELECTRIC CORPORATION**



**Issued: Aug. 2021. No. OBHA873 REVISED EDITION-A**
**Published: Nov. 2020. No. OBHA873**
**Made in Japan**



Specifications are subject to change without notice.