

# 400 - S

RADIUS CORNERS

## PARTS LIST

- A. 1 - CURB
- B. 2 - SETTING BLOCK
- C. 4 - INSTALLATION SCREWS
- D. 4 - HORIZONTAL GLAZING
- E. 1 - PLASTIC PANEL

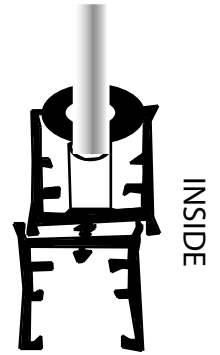


Fig #1

- STEP #1 Place curb -A- onto header of the shower door (see Fig #1)
- STEP #2 Place setting block into curb -A- with concave surface facing up.
- STEP #3 Slide glass panel -E- down into curb -A-.
- STEP #4 Inspect the glazing vinyl -G- and install horizontally. Cut the vinyl slightly longer than the opening (this prevents shrinkage) and trim the ends. Press the interior vinyl into place. Use a wood block to tap or press exterior vinyl into place at both ends and work into the middle.
- STEP #5 Caulk around inside perimeter of panel. Check caulking tube for drying time.

