

Sway Bars


Improve Handling & Performance



THE BENEFITS OF A HELLWIG SWAY BAR

- Reduces body roll so you benefit from better vehicle control
- Greatly improved cornering traction for safer driving and cornering capabilities
- Distributes weight evenly
- Every Hellwig sway bar is engineered and developed for your specific application
- Fast, easy "bolt-on" installation with simple hand tools (some kits may require drilling)
- High quality 4140 chrome moly spring steel
- High tech polyurethane bushings

**Powder Coated
HAMMERTONE
finish**

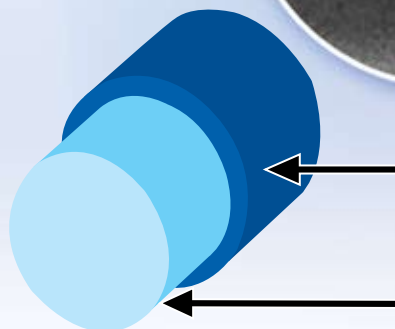

HELLWIG
1 1/8" Bar has greater surface area which means greater roll resistance.

Typical Factory 1" Bar

SWAY BAR APPLICATION TABLE

YEAR	MAKE	FRONT SWAY BAR	BAR DIAMETER	REAR SWAY BAR	BAR DIAMETER
CHEVROLET/GMC 2X4 PICKUPS & SUV					
82-03	S10, S15 Pickup	7509	1 1/4"	7619	7/8"
82-93	S10 Blazer, Jimmy & Bravada (2 Door)	7509	1 1/4"	7520	3/4"
90-93	S10 Blazer, Jimmy & Bravada (4 Door)	7509	1 1/4"	7571	3/4"
94-01	S10, S15 Blazer, Jimmy & Bravada (4 Door)	7509	1 1/4"	7645	1"
04-08	Colorado, Canyon	7679	1 5/16"	7680	1"
63-72	C10, C20 Rear Coil Springs	7423 (5)	1 1/8"	7401	1 1/8"
63-72	C10 - C20 Rear Leaf Springs	7423 (5)	1 1/8"	7402	1 1/8"
73-83	C10 - C20	7448 (5)	1 1/8"	7437	1 1/8"
84-87	C10 - C20	7546	1 1/8"	7549	1 1/8"
88-00	C1500-C2500-C3500	7576	1 5/16"	7555	1 1/8"
88-00	C3500 Dually Pickup	7576	1 5/16"	7609	1 1/8"
99-06	C1500 Pickup	7632 (4)	1 7/16"	7634 (3)	1 1/8"
2007	1500 Silverado Classic Pickup	7632 (4)	1 7/16"	7634 (3)	1 1/8"
07-08	1500 Silverado, Sierra Pickup	7685 (9)	1 1/2"	7800	1 1/8"

SWAY BAR APPLICATION TABLE (continued)

YEAR	MAKE	FRONT SWAY BAR	BAR DIAMETER	REAR SWAY BAR	BAR DIAMETER
CHEVROLET/GMC 2WD PICKUPS & SUV (continued)					
01-06	C1500 Heavy Duty Pickup	7654	1½"	7634 (3)	1⅝"
01-06	C2500 Light Duty Pickup	7654	1½"	7634 (3)	1⅝"
01-06	2500HD-3500HD 2WD (incl. dually)	7654	1½"	7652	1¼"
2007	2500HD-3500HD Classic 2WD (incl. dually)	7654	1½"	7652	1¼"
07-08	2500HD-3500HD Pickup	7654	1½"	7664	1¼" (7,8)
95-00	Tahoe, Yukon, & Denali	7576	1 ⁵ / ₁₆ "	7608 (1)	1⅝"
73-83	Suburban	7448 (5)	1⅝"	7437	1⅝"
84-85	Suburban	7546	1⅝"	7437	1⅝"
86-91	Suburban	7546	1⅝"	7533	1⅝"
92-99	Suburban	7576	1 ⁵ / ₁₆ "	7608 (1)	1⅝"
01-06	Suburban XL 1500, Tahoe, Yukon, Escalade, Denali, Avalanche with Rear Coil Springs	7633	1 ⁵ / ₁₆ "	7650	1¼"
00-06	2500 Suburban & Avalanche w/ 6.1 Liter Engine	7654	1½"	7653	1¼"
00-06	2500 Suburban & Avalanche w/ 8.1 Liter Engine	7654	1½"	7649	1¼"
07-08	1500 Tahoe, Yukon, Denali, Avalanche, Suburban	7685	1½"	7686	1¼"
07-08	2500 Suburban	7654	1½"	7653	1¼"
CHEVROLET/GMC 4WD PICKUPS & SUV					
82-03	S10 - S15 Pickup	N/A	N/A	7619	7/8"
82-93	S10 Blazer, Jimmy & Bravada (2 Door)	N/A	N/A	7520	¾"
90-93	S10 Blazer, Jimmy & Bravada (4 Door)	N/A	N/A	7571	¾"
94-01	S10 Blazer, Jimmy & Bravada (4 Door)	N/A	N/A	7645	1"
04-08	Colorado, Canyon	N/A	N/A	7680	1"
67-72	K10 - K20	7431	1⅝"	7413	1⅝"
73-83	K10 - K20	N/A	N/A	7437	1⅝"
84-87	K10 - K20	N/A	N/A	7549	1⅝"
88-00	K1500-K2500-K3500 Single Wheel	7575	1⅝"	7555	1⅝"
90-00	K3500 Dually Pickup	7575	1⅝"	7609	1⅝"
99-06	K1500-K2500 Pickup (not HD)	7633	1 ⁵ / ₁₆ "	7634 (3)	1⅝"
2007	1500 Silverado Classic Pickup	7633	1 ⁵ / ₁₆ "	7634 (3)	1⅝"
07-08	1500 Silverado, Sierra Pickup	7685 (9)	1½"	7800	1⅝"
02-06	1500 HD Pickup	7633	1 ⁵ / ₁₆ "	7634 (3)	1⅝"
01-06	2500 HD-3500HD 4WD (incl. dually)	7654	1½"	7652	1¼"
2007	2500 HD-3500 HD Classic, 4WD (incl. dually)	7654	1½"	7652	1¼"
07-08	2500HD-3500HD Pickup	7654	1½"	7664	1¼" (7,8)
78-83	Blazer Full Size	N/A	N/A	7471	1⅝"
84-91	Blazer Full Size	N/A	N/A	7524	1⅝"
92-00	Tahoe, Yukon - old body style	7575	1⅝"	7608 (1)	1⅝"
73-85	Suburban	N/A	N/A	7437	1⅝"
86-91	Suburban	N/A	N/A	7535	1⅝"
92-99	Suburban	7575	1⅝"	7608 (1)	1⅝"
00-06	Suburban 1500XL, Tahoe, Yukon, Escalade, & Avalanche	7633	1 ⁵ / ₁₆ "	7650	1¼"
00-06	2500 Suburban, & Avalanche with 6.0 Liter Engine	7654	1½"	7653	1¼"
00-06	2500 Suburban, & Avalanche with 8.1 Liter Engine	7654	1½"	7649	1¼"
07-08	1500 Tahoe, Yukon, Denali, Avalanche, Suburban	7685	1½"	7686	1¼"
07-08	2500 Suburban	7654	1½"	7653	1¼"
CHEVROLET/GMC VANS					
86-05	Astro, Safari Van	7556 (2)	1⅝"	7534	¾"
72-82	G10, G20 Van	N/A	N/A	7447	1⅝"
83-96	G10 - G20 Van	7519	1⅝"	7615 (1)	1⅝"
97-07	G1500, Savana, Express Van	N/A	N/A	7623	1⅝"
97-08	G2500-G3500 Express Van	N/A	N/A	7635 (1)	1 3/8"
83-96	G30 Commercial & Motorhome Chassis	N/A	N/A	7178	1¼"
97-02	G3500 Cutaway RV Chassis	N/A	N/A	7181 (1)	1¼"
75-99	P30 Commercial & Class A Motorhome Chassis	7162 (6)	1 ⁵ / ₈ "	N/A	N/A
00-04	W20-22 Workhorse Motorhome Chassis	7218	1½"	7219	1 3/4"
04-06	W20-22 Workhorse Motorhome Chassis	7218	1½"	7227	1 3/4"
03-08	Kodiak 4500, 5500	7243	1 ⁵ / ₈ "	N/A	N/A

FOOTNOTES

- | | | |
|-------------------------------------|---|---|
| 1] Drilling May Be Required | 4] With Coil Spring Front Suspension. If Vehicle Has Torsion Bars, Use 7633 | 7] Duramax Diesel Only, use 7698 for 6.0 gas engine |
| 2] Does Not Fit All-Wheel Drive | 5] If equipped with Factory Front Sway bar, use 7546 | 8] Adjustable Sway Bar |
| 3] Optional Adjustable Bar P/N 7800 | 6] Includes rear poly bushings | 9] 6 Speed Trans. Requires 7799 Install Kit |
| | | N/A = No Current Application Available |

SWAY BAR APPLICATION TABLE (continued)



*Now it's time
to make it handle great!*

YEAR	MAKE	FRONT SWAY BAR	BAR DIAMETER	REAR SWAY BAR	BAR DIAMETER
FORD 2X4 PICKUPS & SUV					
83-89	Ranger, Bronco II	7512	1¼"	7511	7⁄8"
90-97	Ranger	7574 (1, 10)	1⅝"	7511	7⁄8"
98-08	Ranger	7673	1⅝"	7511	7⁄8"
90-94	Explorer	7574 (1)	1⅝"	7569	7⁄8"
95-01	Explorer	N/A	N/A	7648	1"
2001	Explorer Sport / Sport Trak	N/A	N/A	7648	1"
02-05	Explorer with Rear Coil Spring	N/A	N/A	1920 (3)	N/A
68-72	F100-F250 Pickup	7422	1⅝"	7403	1⅝"
73-76	F100-F250 Pickup	7422	1⅝"	7436	1⅝"
77-79	F150 Pickup	7470	1⅝"	7436	1⅝"
80-86	F150 Pickup	7489	1⅝"	7490	1⅝"
87-91	F150 Pickup with factory curved crossmember	7553	1⅝"	7552	1"
92-96	F150 Pickup with factory curved crossmember	7599	1⅝"	7552	1"
87-96	F150 Pickup without factory curved crossmember	7550	1⅝"	7552	1"
97-03	F150-F250 Pickup Light Duty	7646	1⅞"	7621	1⅝"
99-03	F150 Lightning Pickup	7646	1⅞"	7821	1⅝"
00-03	F150 Super Crew Pickup	7646	1⅞"	7621	1⅝"
04-08	F150 (6)	7662	1⅞"	7663	1"
77-79	F250 Pickup	7470	1⅝"	7436	1⅝"
80-86	F250-F350 Pickup with Dana 70 Rear Axle	7499 (2)	1⅝"	7561	1"
80-86	F250-F350 Pickup with Sterling Rear Axle	7499 (2)	1⅝"	7521	1⅝"
87-97	F250-F350 Single Wheel	7499 (2)	1⅝"	7551	1"
87-97	F250-F350 Dually Pickup	7550 (2)	1⅝"	N/A	N/A
99-04	F250-F350 Super Duty Single Wheel Pickup	7674 (9)	1½"	7677	1¼"
05-07	F250-F350 Super Duty Single Wheel Pickup	7674 (9)	1½"	7677	1¼"
99-08	F250 SD (Adjustable RSB)	See Model Year		7693	1¼"
2008	F250-F350 Super Duty Pickup Single Wheel	N/A	N/A	7677	1¼"
99-04	F350 Super Duty Dually Pickup Only	7674 (9)	1½"	7678	1⅝"
05-07	F350 Super Duty Dually Pickup Only	7674 (9)	1½"	7678	1⅝"
2008	F450 Dually Pickup	7249	1½"	7245	1½"
00-08	F450 Cab & Chassis	7640	1½"	7230	1½"
00-08	F550 Cab & Chassis	N/A	N/A	7223	1½"
97-02	Expedition	7646	1⅞"	7624	1"
03-06	Expedition, Navigator w/Rear Coils (7)	7689	1½"	7660	19mm
2007	Expedition, Navigator w/Rear Coils	7689	1½"	7688	22mm
2008	Expedition	7696	1½"	7688	22mm
00-05	Excursion	7674	1½"	7643	1¼"
FORD 4X4 PICKUPS & SUV					
83-89	Ranger, Bronco II	7512	1¼"	7511	7⁄8"
90-97	Ranger	7574 (1)	1⅝"	7511	7⁄8"
98-08	Ranger	7675	1⅝"	7511	7⁄8"
90-94	Explorer	7574 (1)	1⅝"	7569	7⁄8"
95-01	Explorer, Explorer Sport & Sport Trak	N/A	N/A	7648	1"
02-05	Explorer with Rear Coil Spring	N/A	N/A	1920 (3)	N/A
73-79	F100-F150 Pickup	7455	1⅝"	7436	1⅝"
80-86	F150 Pickup	N/A	N/A	7490	1⅝"
87-91	F150 Pickup with factory curved crossmember	7572	1⅝"	7552	1"
92-96	F150 Pickup with factory curved crossmember	7597	1⅝"	7552	1"
87-96	F150 Pickup without factory curved crossmember	7589	1⅝"	7552	1"
97-03	F150-F250 Pickup Light Duty & Super Crew	N/A	N/A	7621	1⅝"
04-08	F150 (6)	7662	1⅞"	7663	1"
67-77	F250 Pickup	N/A	N/A	7446	1⅝"

SWAY BAR APPLICATION TABLE (continued)

YEAR	MAKE	FRONT SWAY BAR	BAR DIAMETER	REAR SWAY BAR	BAR DIAMETER
FORD 4X4 PICKUPS & SUV					
78-79	F250 Pickup	N/A	N/A	7482	1 1/8"
80-86	F250-F350 Pickup with Dana 70 Rear Axle	N/A	N/A	7561	1"
80-86	F250-F350 Pickup with Sterling Rear Axle	N/A	N/A	7521	1 1/4"
87-89	F250-F350 Pickup	N/A	N/A	7565	1"
90-97	F250-F350 Pickup	N/A	N/A	7596	1"
99-04	F250 Super Duty Pickup	7640 (9)	1 1/2"	7677	1 1/4"
99-04	F350 Super Duty Pickup Single Wheel Pickup	7640 (9)	1 1/2"	7687	1 1/4"
05-07	F250 Super Duty Pickup	7676 (9)	1 1/8"	7677	1 1/4"
2008	F250 Super Duty Pickup	7690 (9)	1 1/4"	7677	1 1/4"
99-08	F250 Super Duty (adjustable RSB)	See Model Year		7693	1 1/4"
05-07	F350 Super Duty Pickup Single Wheel Pickup	7676 (9)	1 1/8"	7687	1 1/4"
99-04	F350 Super Duty Dually Pickup Only	7640 (9)	1 1/2"	7678	1 1/8"
05-07	F350 Super Duty Dually Pickup Only	7676 (9)	1 1/8"	7678	1 1/8"
2008	F350 Single Wheel Pickup	7690 (9)	1 1/4"	7687	1 1/4"
2008	F450 Dually Pickup Only	7249 (9)	1 1/2"	7245	1 1/2"
78-79	Bronco Full Size	N/A	N/A	7436	1 1/8"
80-86	Bronco Full Size	N/A	N/A	7490	1 1/8"
87-96	Bronco Full Size	N/A	N/A	7558	1"
97-02	Expedition & Navigator	N/A	N/A	7624	1"
03-06	Expedition, Navigator w/Rear Coils (7)	7689	1 1/2"	7660	19mm
2007	Expedition, Navigator w/Rear Coils	7689	1 1/2"	7688	22mm
2008	Expedition, Navigator w/Rear Coils	7696	1 1/2"	7688	22mm
00-05	Excursion	7640	1 1/2"	7643	1 1/4"
FORD VANS & RV					
86-96	Aerostar Van	N/A	N/A	7529	7/8"
75-86	E100-E150 Van	7466	1 1/8"	7457	1 1/8"
87-88	E150 Van	7466	1 1/8"	7563	1"
89-91	E150 Van	7583	1 1/8"	7563	1"
92-08	E150 Van	7604	1 1/8"	7642	1 1/8"
76-88	E250 Van	7158	1 1/8"	7457	1 1/8"
89-91	E250-E350 Van	7158	1 1/8"	7183	1 1/4"
92-08	E250-E350 Single Wheel	7604	1 1/8"	7183	1 1/4"
89-08	E350 Cutaway	7008	1 3/8"	7229 (8)	1 1/2"
76-08	E350 Cutaway	7008	1 3/8"	7085	1 1/2"

FOOTNOTES

1] Factory Mount Brackets Required
 2] Except Diesel or Extra H/D Radiator
 3] See Sport Series Page 7 for Details

4] Auxillary Bar Installs in Addition to Factory Bar
 6] New Design - Not Heritage Edition
 7] Includes Front Bushing Upgrade

8] Improved Ground Clearance Rear Sway Bar
 9] Uses Factory End Links
 10] 2wd W/O Factory Sway Bar Use 7974 End Link Kit
 N/A = No Current Application Available

Lifting your truck?

Use Hellwig's
adjustable end-links!

LENGTHS:

6" - 8" 7960

8" - 11" 7961

11" - 14" 7962

Clevis Mount Kit . 7964



Converts Bayonet/Stem Style End Links to
Heavy Duty Bushings



SWAY BAR APPLICATION TABLE (continued)

YEAR	MAKE	FRONT SWAY BAR	BAR DIAMETER	REAR SWAY BAR	BAR DIAMETER
DODGE 2X4 PICKUPS & SUV					
87-96	Dakota	N/A	N/A	7548 (1)	¾"
97-04	Dakota	N/A	N/A	7622 (2)	7/8"
97-03	Durango	N/A	N/A	7630	7/8"
73-84	D150-D250 Pickup	N/A	N/A	7453	1 1/8"
85-93	D150-D250-D350 Pickup	N/A	N/A	7587	1 1/8"
94-02	1500-2500-3500 Pickup & Dually (9)	N/A	N/A	7625 (2)	1 1/8"
03-08	1500 Pickup (8)	7668 (10)	1 1/2"	7651	1 1/8"
03-08	2500 Pickup	7672	1 3/8"	7651 (6)	1 1/8"
03-08	3500 Pickup & Dually	7672	1 3/8"	7658	1 1/8"
DODGE 4X4 PICKUPS & SUV					
87-96	Dakota	N/A	N/A	7585 (1)	7/8"
97-04	Dakota	N/A	N/A	7622	7/8"
97-03	Durango	N/A	N/A	7630	7/8"
73-86	W150 Pickup	N/A	N/A	7453	1 1/8"
87-93	W150-W250-W350 Pickup	N/A	N/A	7587	1 1/8"
94-02	1500-2500-3500 Pickup & Dually (9)	N/A	N/A	7626 (2)	1 1/8"
03-08	W1500 Pickup	N/A	N/A	7651	1 1/8"
03-08	2500 Pickup	N/A	N/A	7651 (6)	1 1/8"
03-08	3500 Pickup & Dually	N/A	N/A	7658	1 1/8"
DODGE VANS & RV					
84-91	Caravan, Voyager	N/A	N/A	7559 (3)	¾"
92-03	Caravan, Voyager(5)	N/A	N/A	7629 (3)	¾"
03-06	Caravan, Voyager (7)	N/A	N/A	7665 (3)	¾"
70-02	B100-B250-B350 Van	N/A	N/A	7513 (4)	1 1/8"
04-06	Sprinter 2500	7250	1 1/8"	7239	1 1/8"
07-08	Sprinter 2500	N/A	N/A	7253	1 1/8"
70-78	B350 RV Cutaway Chassis	7168	1 1/8"	7166	1 1/4"
79-95	B350 RV Cutaway Chassis	N/A	N/A	7166	1 1/4"

FOOTNOTES

- | | | |
|---|--|---|
| 1] Except R/T with V8 Engine | 5] Round Rear Axle Tube Only | 9] 2002 with new body style use 2003 applications |
| 2] Drilling May Be Required | 6] Will not fit 11.50 Rear Axle - use 7658 | 10] Will not fit vehicles with steering rack behind crossmember |
| 3] Does Not Fit All-Wheel Drive | 7] Square Rear Axle Tube Only | |
| 4] Does not fit vehicles with Large Fuel Tank | 8] Except SRT-10 | |

**For Ultimate Towing & Handling
Upgrade the Factory Bar to a
Hellwig Sway Bar**



SWAY BAR APPLICATION TABLE (continued)



YEAR	MAKE	FRONT SWAY BAR	BAR DIAMETER	REAR SWAY BAR	BAR DIAMETER
HUMMER 4X4					
02-07	Hummer H2	8654	1½"	8661	1¼"
06-08	Hummer H3	7682 Front Bushing upgrade and Rear Sway bar Kit			
ISUZU 2X4 SUV					
96-01	Hombre	N/A	N/A	7619	7/8"
JEEP 4X4 PICKUPS & SUV					
76-85	CJ5-CJ8, Scrambler	7616	1"	7463 (1)	1½"
90-96	Wrangler	N/A	N/A	7614	¾"
97-06	Wrangler TJ	N/A	N/A	7684 (3)	¾"
87-01	Cherokee Mini Wagon	N/A	N/A	7568	¾"
93-98	Grand Cherokee	N/A	N/A	7613	7/8"
99-04	Grand Cherokee	N/A	N/A	7644	7/8"
MAZDA PICKUP & SUV					
94-97	B2300-B4000	7574	1½"	7511	7/8"
98-06	B2300-B4000 2WD	7673	1½"	7511	7/8"
98-06	B2300-B4000 4WD	7675	1½"	7511	7/8"
90-94	Navajo	7574	1½"	7569	7/8"
95-01	Navajo	N/A	N/A	7648	7/8"
NISSAN PICKUP & SUV					
87-04	Hardbody, Frontier 2X4	N/A	N/A	7531	¾"
87-04	Hardbody, Frontier 4X4	N/A	N/A	7528	¾"
05-08	Frontier	N/A	N/A	7694 (4,5)	7/8"
04-08	Titan	N/A	N/A	7669	1"
TOYOTA PICKUP & SUV					
79-94	Pickup	N/A	N/A	7539	¾"
95-03	Tacoma 2x4 (2)	N/A	N/A	7620	¾"
95-03	Tacoma 4x4 Prerunner 2X4 (2)	N/A	N/A	7628	¾"
2004	Tacoma 2x4	N/A	N/A	7666	¾"
2004	Tacoma 4x4 Prerunner 2X4	N/A	N/A	7667	¾"
05-08	Tacoma 2x4	N/A	N/A	7670	¾"
05-08	Tacoma 4x4 Prerunner 2X4	N/A	N/A	7671	¾"
00-06	Tundra Pickup	7697	1¼"	7700 (3)	1½"
07-08	Tundra Pickup (3)	N/A	N/A	7692 (3,5)	1½"

FOOTNOTES

- 1] Manual Transmission Only
 - 2] 2003 models with emergency brake located on center of axle use 7666, 7667.
 - 3] Adjustable sway bar
 - 4] Requires Drilling
 - 5] If not equipped w/ factory trailer hitch, order 7699 mounting kit
- N/A = No Current Application Available

PERFORMANCE & MUSCLE CAR SWAY BAR APPLICATIONS

YEAR	MAKE	FRONT SWAY BAR	BAR DIAMETER	REAR SWAY BAR	BAR DIAMETER
CHEVROLET/GMC					
55-57	Bel Air,210,150, Nomad, Wagon	5711 (1,9)	1 1/8"	5823 (1,5,11,12,14)	7/8"
55-57	Bel Air, 210,150, Nomad, Wagon Factory Style	5721 (1,7,10)	1 1/8" or 1 1/4" (13)	5823 (1,5,11,12,14)	7/8"
55-57	Bel Air, 210,150, Nomad, Wagon (Adjustable Performance)	5722 (1,7,10)	1 1/4"	5822 (1,5,11,12,14)	1"
58-64	Bel Air,Impala, Impala SS	5712	1" (1,7)	5812 (1)	7/8" (1,6)
65-70	Bel Air,Impala, Impala SS	5713	1 1/8" (1,7)	5813 (1)	1" (1,6)
77-96	Impala, Caprice, Caprice Classic	5720	1 5/16"	5803 (8)	1 1/8"
94-96	Impala SS	5720	1 5/16"	5820 (8)	1 1/8"
64-72	A-Body (See Notes for Applic.)	5703	1 5/16" or 1 1/4" (4)	5800	1"
64-72	El Camino, Sprint	5703	1 5/16" or 1 1/4" (4)	5800	1"
73-77	A-Body (See Notes for Applic.)	5703	1 5/16" or 1 1/4" (4)	5803 (1)	1 1/8"
78-87	A/G-Body (See Notes for Applic.)	5700	1 5/16"	5815	1"
78-88	El Camino, Sprint	5700	1 5/16"	5815	1"
67-69	Camaro, Firebird	5705 (2)	1" or 1 1/8" (2)	5814 (1,3)	1"
67-69	Camaro, Firebird (Adjustable Performance)	5795	1 1/8"	5824 (1,5,14,15)	3/4"
70-81	Camaro, Firebird	5703	1 5/16" or 1 1/4" (4)	5802 (1)	1"
70-81	Camaro, Firebird (Adjustable Performance)	5703	1 5/16" or 1 1/4" (4)	5816 (1, 14)	TBA
82-92	Camaro, Firebird	5704	1 5/16"	5801	1"
82-92	Camaro, Firebird (Adjustable Performance)	5704	1 5/16"	5817 (14)	7/8"
93-02	Camaro, Firebird	5701	1 5/16"	5801	1"
93-02	Camaro, Firebird (Adjustable Performance)	5701	1 5/16"	5817 (14)	7/8"
62-67	Nova, Chevy II	5710	1 1/8"	5818 (14)	3/4"
68-74	X-Body Nova, Ventura, Apollo, Omega	5705 (2)	1" or 1 1/8" (2)	5814 (1,3)	1"
75-79	X-Body Nova, Ventura, Apollo, Skylark, Omega	5703	1 5/16" or 1 1/4" (4)	5814 (1,3)	1"

CHEVROLET/GMC FOOTNOTES

- | | | |
|---|---------------------------------------|--|
| 1) Installation may require drilling | 6) Mounts to lower control arm | 11) Vehicles w/pocket kit use 8296 |
| 2) For 1 1/8" Diameter Order # 5795 | 7) Factory style front sway bar | 12) Fits all models including Nomad & Wagon |
| 3) For Multi-Leaf Springs only | 8) Rear Bar will not fit Wagon | 13) For 1 1/4" Diameter Order # 5722 |
| 4) For 1 1/4" Diameter Order # 5706 | 9) Use with front mounted Disc Brakes | 14) Adjustable Sway Bar |
| 5) Mounts under axle for improved exhaust clearance | 10) Use with rear mounted Disc Brakes | 15) Must use with 1 1/8" front sway bar 5795 |

64-72 GM A-Body Models: Regal, Century, Chevelle, Malibu, Monte Carlo, Cutlass, F85, LeMans, GTO, El Camino, Skylark

73-77 GM A-Body Models: Regal, Century, Chevelle, Malibu, Monte Carlo, Cutlass, LeMans, El Camino, F85, Grand Prix, Grand Am, Sprint

78-87 GM A/G-Body Models: Regal, Century, Grand National, Malibu, Monte Carlo, Cutlass, LeMans, Grand Am, Grand Prix

FORD					
80-88	Thunderbird, Cougar	6701	1 5/16"	6800	1"
05-08	Mustang (Adjustable)	6705 (5)	1 3/8"	6805 (1,5)	1"
94-04	Mustang	6704	1 5/16"	6801 (2)	1"
79-93	Mustang	6701	1 5/16"	6801	1"
71-73	Mustang (Adjustable Rear Sway Bar)	6708	1 1/8"	6806 (4,5)	3/4"
67-70	Mustang (Adjustable Rear Sway Bar)	6707 (3)	1 1/8"	6806 (4,5)	3/4"
65-66	Mustang (Adjustable Rear Sway Bar)	6706	1 1/8"	6806 (4,5)	3/4"

FORD FOOTNOTES

- | | |
|-------------------------------|--------------------------------------|
| 1) Fits coupe and convertible | 4) Installation may require drilling |
| 2) Will not fit IRS | 5) Adjustable Sway Bar |
| 3) Will fit Big Block | |

DODGE					
09	Challenger	5910 (3,4)	1 1/4"	N/A	N/A
05-08	Chrysler 300C (Adjustable)	5910 (3,4)	1 1/4"	N/A	N/A
05-08	Dodge Charger (Adjustable)	5910 (3,4)	1 1/4"	N/A	N/A
05-08	Dodge Magnum (Adjustable)	5910 (3,4)	1 1/4"	N/A	N/A
99-08	PT Cruiser	7656	1"	7657 (1)	3/4"
71-72	Charger, Super Bee, R/T, GTX, Road Runner & Satellite	5904	1 1/8"	6911 (4,5)	7/8"
70	Charger, Super Bee, R/T, GTX, Road Runner & Satellite	5904	1 1/8"	6909 (4,5)	7/8"
64-69	Charger, Super Bee, R/T, GTX, Road Runner & Satellite	5903	1 1/8"	6909 (4,5)	7/8"
73-76	Dart, Duster, & Scamp	5905 (2)	1 1/8"	6907 (4,5)	3/4"
67-72	Dart, Duster, & Scamp	5906	1 1/8"	6907 (4,5)	3/4"
70-74	Challenger, Barracuda (Adjustable Rear Sway Bar)	5904	1 1/8"	6908 (4,5)	7/8"
67-69	Barracuda	5906	1 1/8"	6907 (4,5)	3/4"

DODGE FOOTNOTES

- | | |
|---|--------------------------------------|
| 1) Must have factory rear sway bar | 4) Adjustable sway bar |
| 2) Vehicles w/o stock sway bar order 5999 mount kit | 5) Installation may require drilling |
| 3) Will not fit AWD models | |

LOWERED TRUCK SWAY BAR APPLICATIONS

Sway Bars for your Lowered Sport Truck



YEAR	MAKE	FRONT DROP	FRONT SWAY BAR	BAR DIAMETER	REAR DROP	REAR SWAY BAR	BAR DIAMETER
CHEVROLET/GMC 2X4 PICKUPS							
63-72	C10 Pickup (1)	2"	7423	1 1/8"	2" Drop	7803	1 1/8"
63-72	C10 Pickup (2)	2"	7423	1 1/8"	2" Shackle	7804	1 1/8"
		4"	7423	1 1/8"	6" Flip Kit	N/A	N/A
73-83	C10 Pickup	2"	7448	1 1/8"	2" Shackle	7437	1 1/8"
		3"	7448	1 1/8"	4" Shackle	N/A	N/A
		4"	7546	1 1/8"	6" Flip Kit	N/A	N/A
83-03	S10 Pickup	2"	7509	1 1/4"	1" Block	7619	7/8"
		3"	7805	1 1/4"	2" Block	7807	7/8"
		4"	7805	1 1/4"	3" Block	7807	7/8"
88-00	C1500 Pickup (3)	2"	7576	1 5/16"	2" Shackle	7555	1 1/8"
		3"	7801	1 5/16"	4" Shackle	7802	1"
		4"	7801	1 5/16"	6" Flip Kit	7802	1"
90-00	C3500Dually	3"	7576	1 5/16"	2" Shackle	7609	1 1/8"
		4"	7801	1 5/16"	4" Shackle	7810	1 1/8"
		5"	7801	1 5/16"	7" Flip Kit	7810	1 1/8"
00-06	C1500 Pickup Silverado & Sierra	2"	7632	1 7/16"	2" Shackle	7634 (4)	1 1/8"
		3"	7632	1 7/16"	4" Shackle	7634 (4)	1 1/8"
2007	C1500 Pickup	2"	7632	1 7/16"	2" Shackle	7634 (4)	1 1/8"
	Silverado Classic & Sierra Classic	3"	7632	1 7/16"	4" Shackle	7634 (4)	1 1/8"
99-06	Tahoe, Escalade	2"	7633	1 5/16"	3" Drop	7850	1 1/4"
		3"	7633	1 5/16"	5" Drop	7850	1 1/4"
86-05	Astro Van	2"	N/A	N/A	4" Flip Kit	7811	7/8"
FORD 2X4 PICKUPS							
97-03	F150 Pickup	2"	7646	1 7/16"	2" Shackle	7621	1 1/8"
		3"	7646	1 7/16"	4" Shackle	7856	1 1/8"
		4"	7646	1 7/16"	6" Flip Kit	7856	1 1/8"
DODGE 2X4 PICKUPS							
97-04	Dakota Pickup	2"	N/A	N/A	2" Block	7622	7/8"
		3"	N/A	N/A	3" Block	7825	7/8"
94-02	1500 Pickup	2"	N/A	N/A	2" Shackle	7625	1 1/8"
		2"	N/A	N/A	3" Shackle	7822	1 1/8"
03-08	1500 Pickup	2"	7668 (5)	1 1/2"	4" Drop	7851	1 1/8"

FOOTNOTES

- 1] Rear Coil Springs 2] Rear Leaf Springs 3] Old Body Style 4] Optional Adjustable Bar #7800
 5] Will not fit vehicles with steering rack behind crossmember



Adjustable Sway Bars

Designed for the performance enthusiast

