

ROUGH COUNTRY

SUSPENSION SYSTEMS®

09-12 Dodge 1500 (All Models)

Thank you for choosing Rough Country for all your lighting needs.

▲ NOTICE

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go. If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning the design, function, and correct use of our products.

Tools Needed:



11/64" Drill
10mm Socket
7mm Socket/Wrench
Flat Screwdriver
Drill Motor
Die Grinder
Reciprocating Saw




By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable Federal, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.




1. Park the vehicle on a smooth level surface.
2. Remove the 6 plastic clips holding the upper radiator shroud. Remove the shroud. **See Photo 1.**
3. Using a 10mm socket, remove the (4) bolts securing the upper grille. **See Photo 2.**

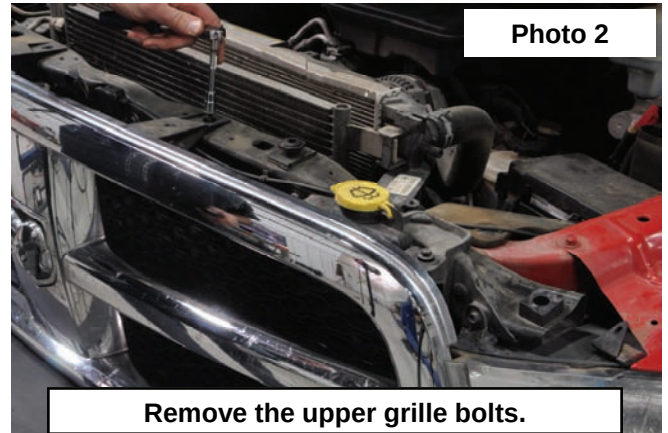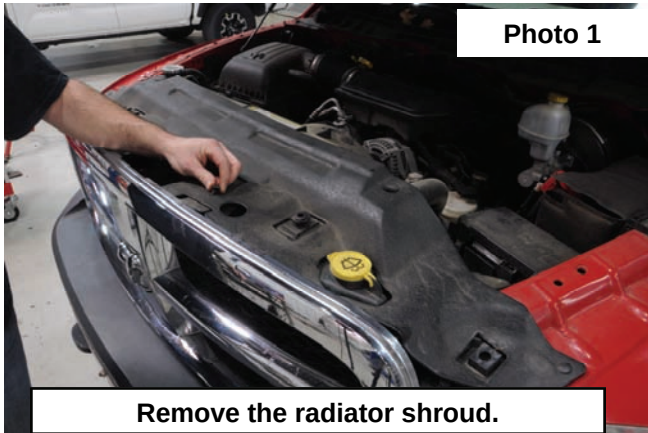


4. Remove the grille by pulling out from the truck. **See Photo 3.**
5. Pull the inner grille section out of the clips. **See Photo 4.**

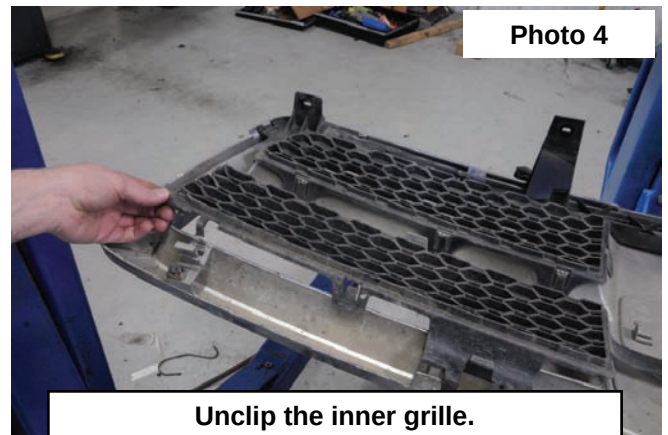


6. Using a reciprocating saw, cut the upper grille mount from the inner portion of the grille. **See Photo 5.**
7. Remove the inner grille from the outer shell. **See Photo 6.**

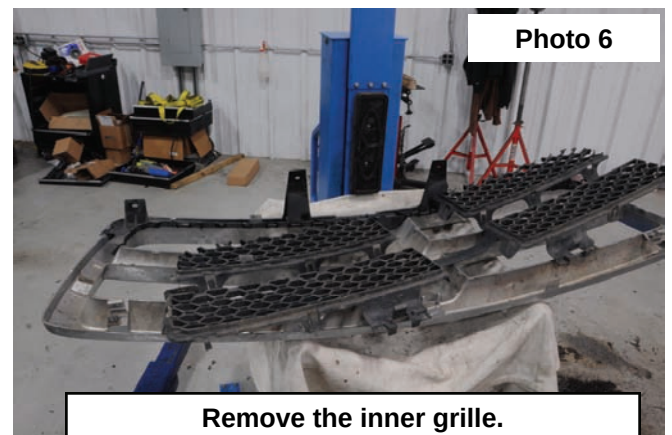


8. Using a reciprocating saw, cut the vertical and horizontal bars from the inside of the grille shell. **See Photo 7.**
9. Remove the upper grille mount and set aside for reuse. **See Photo 8.**

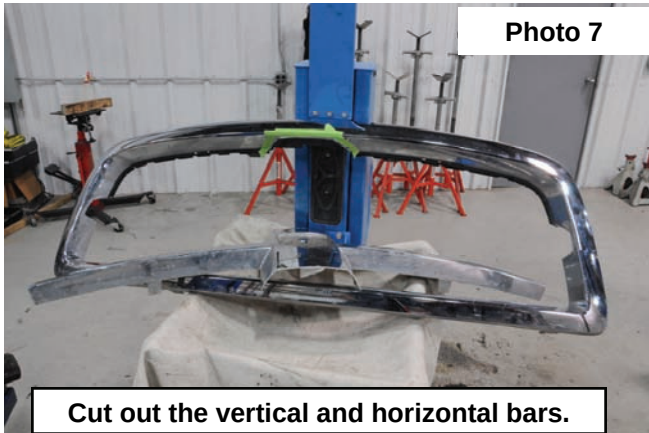



10. Install the supplied grille mounts, on the studs using the supplied flange nuts. **See Photo 9. **Do not tighten.****
11. Place the Rough Country grille into the factory grille shell. Mark and drill using an 11/64" drill. **See Photo 10.**

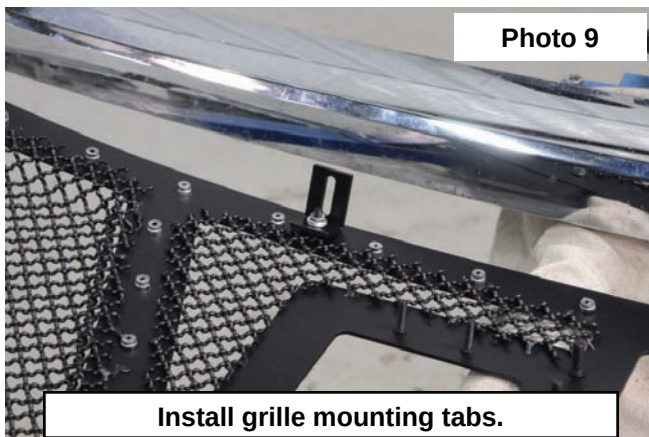

12. Attach the Rough Country grille to the outer grille shell using the supplied hardware.
13. Using a die grinder, clearance the upper grille mounting bracket. **See Photo 11.**
13. Using a 7mm wrench tighten all hardware. **See Photo 12.**

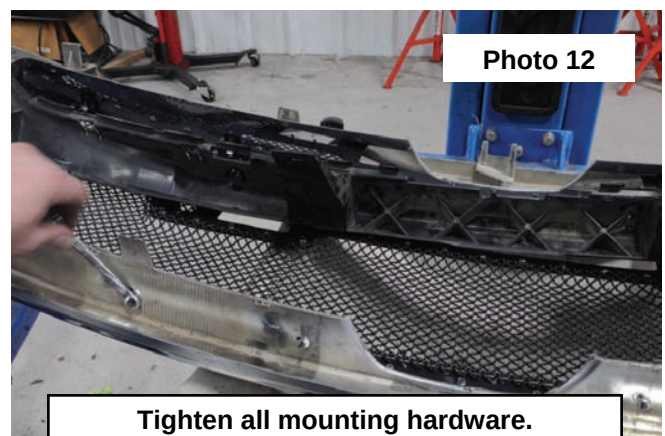

15. Install lights in to grille using supplied hardware. **See Photos 13.**
16. Wire lights according to instructions included with the lights. **See Photo 14.**

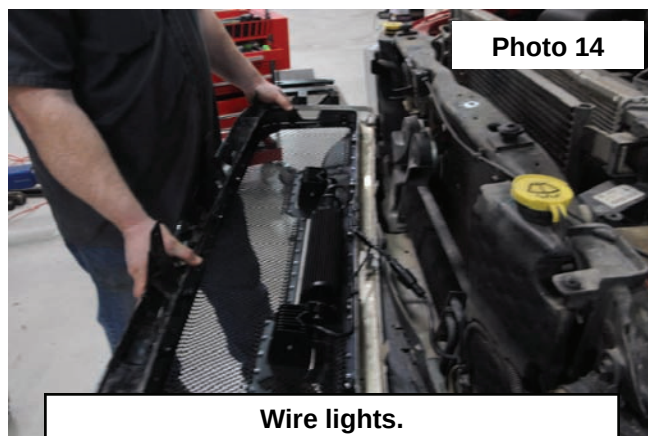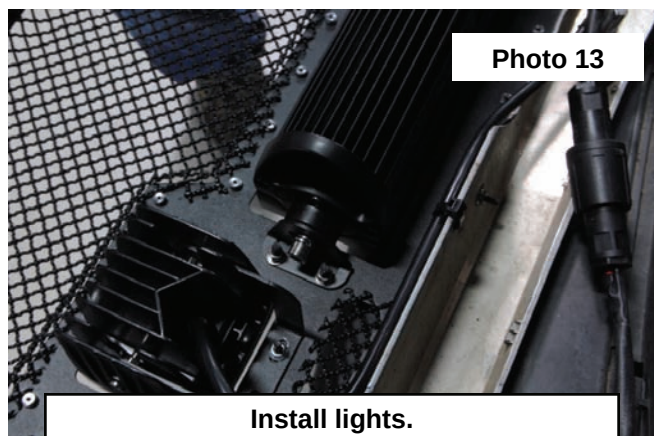

17. Install grille and upper radiator shroud in reverse order from steps 2-5. **See Photo 15.**

