

Revell


KIT 4228

85422800200

'32 FORD 5-WINDOW COUPE

The 1932 Ford 5 Window Coupe (two door windows, two quarter panel windows and a rear window) is one of the most popular subjects to become a street rod. The '32 Ford, commonly called the "Deuce", is an ideal hot rod because the original car was quite popular and had large production numbers and were readily available from the 1940's to the 1960's. Now, because of the rising demand these cars have become highly collectible and very expensive to own.

Your Revell '32 Ford kit can be made as a full fendered street rod or high boy style custom with steel wheels or five spoke mags. An optional 5.0 liter Mustang engine or custom duel carb V8 and colorfull decal graphics for four different versions is also included.

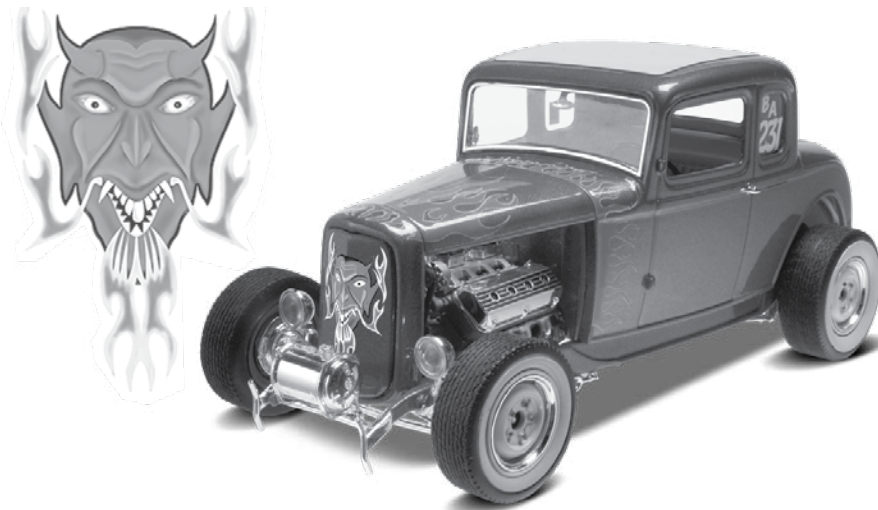

* REPEAT SEVERAL TIMES
* A REPETER PLUSIEURS FOIS



* OPTIONAL PARTS
* PIECES EN OPTION



* DECAL
* DECAL COMANIE



* ALTERNATIVE ASSEMBLY
* ENSEMBLAGE ALTERNATIVE



* CEMENT TOGETHER
* A COLLER



* REMOVE AND THROW AWAY
* A RETIRER ET JETER



* DO NOT CEMENT
* NE PAS COLLER

READ THIS BEFORE YOU BEGIN

- * Study the assembly drawings.
- * Each plastic part is identified by a number.
- * In the assembly drawings, some parts will be marked by a star (★) to indicate chrome plated plastic.
- * For better paint and decal adhesion, wash the plastic parts in a mild detergent solution. Rinse and let air dry.
- * Check the fit of each piece before cementing in place.
- * Use only cement for polystyrene plastic.
- * Scrape plating and paint from areas to be cemented.
- * Allow paint to dry thoroughly before handling parts.
- * Any unused parts may be discarded.

DECAL APPLICATION INSTRUCTIONS

1. Cut desired decal from sheet.
2. Dip decal in water for a few seconds.
3. Place wet decal on paper towel.
4. Wait until decal is movable on paper backing.
5. Place decal in position on model, face up and slide backing away.
6. Press out air bubbles with a soft damp cloth.
7. Milkiness that may appear is for better decal adhesion and will dry clear. Wipe away any excess adhesive.
8. Do not touch decal until fully dry.
9. Allow the decals 48 hours to dry before applying clear coat.

NOTE: Decals are compatible with setting solutions or solvents.

LIRE CE QUI SUIT AVANT DE COMMENCER

- * Etudier les schémas de montage.
- * Chaque pièce en plastique est identifiée par un numéro.
- * Sur les schémas de montage, certaines pièces sont marquées d'une étoile (★) pour indiquer qu'elles sont en plastique chromé.
- * Pour une meilleure prise de la peinture et des autocollants, laver les pièces en plastique avec une solution détergente peu concentrée. Les rincer et les laisser sécher à l'air.
- * Vérifier que chaque pièce s'ajuste bien avant de la coller en place.
- * N'utiliser que de la colle pour polystyrène.
- * Gratter les parties à coller pour enlever le chrome et la peinture.
- * Laisser la peinture bien sécher avant de manipuler les pièces.
- * Toute pièce inutilisée peut être jetée.

DIRECTIVES D'APPLICATION DES AUTOCOLLANTS

1. Découper l'autocollant désiré de la feuille.
2. Tremper l'autocollant dans de l'eau pendant quelques secondes.
3. Placer l'autocollant mouillé sur une serviette en papier.
4. Attendez que l'autocollant puisse être déplacé sur son support en papier.
5. Mettre l'autocollant en position sur le modèle face sur le dessus et faire glisser le support pour l'enlever.
6. Appuyer avec un chiffon doux humide pour éliminer les bulles d'air.
7. La substance laiteuse qui peut apparaître est destinée à améliorer l'adhésion de l'autocollant et devient incolore au séchage. Essuyer pour enlever tout excédent d'adhésif.
8. Ne pas toucher l'autocollant tant qu'il n'est pas bien sec.
9. Laisser l'autocollant sécher pendant 48 heures avant d'appliquer une couche transparente.

REMARQUE: Les autocollants sont compatibles avec les solutions de fixation ou les solvants.

This paint guide is provided to complete this kit as shown on the box.

Ce guide de peintures est fourni pour reproduire le modèle réduit qui apparaît sur la boîte.


Bronze Metallic	Métallique En bronze
Semi Gloss Black	Noir satiné
Gloss Black	Noir brillant
Flat Black	Noir mat
Gloss Red	Rouge brillant
Gloss Yellow	Jaune brillant
Gloss Blue Metallic	Bleu brillant métallisé
Ford Engine Blue	Bleu De moteur Ford
Flat White	Blanc mat
Flat Tan	Havane mat
Aluminum	Aluminum
Silver	Argent
Steel	Acier

If you have any questions or comments, call our hotline at: **(800) 833-3570**
or, please write to:

Revell Inc Consumer Service Department, 1850 Howard Street Unit A, Elk Grove Village, Illinois 60007


Be sure to include the plan number (85422800200), part number, description, your return address and phone number.

Visit our website: www.revell.com

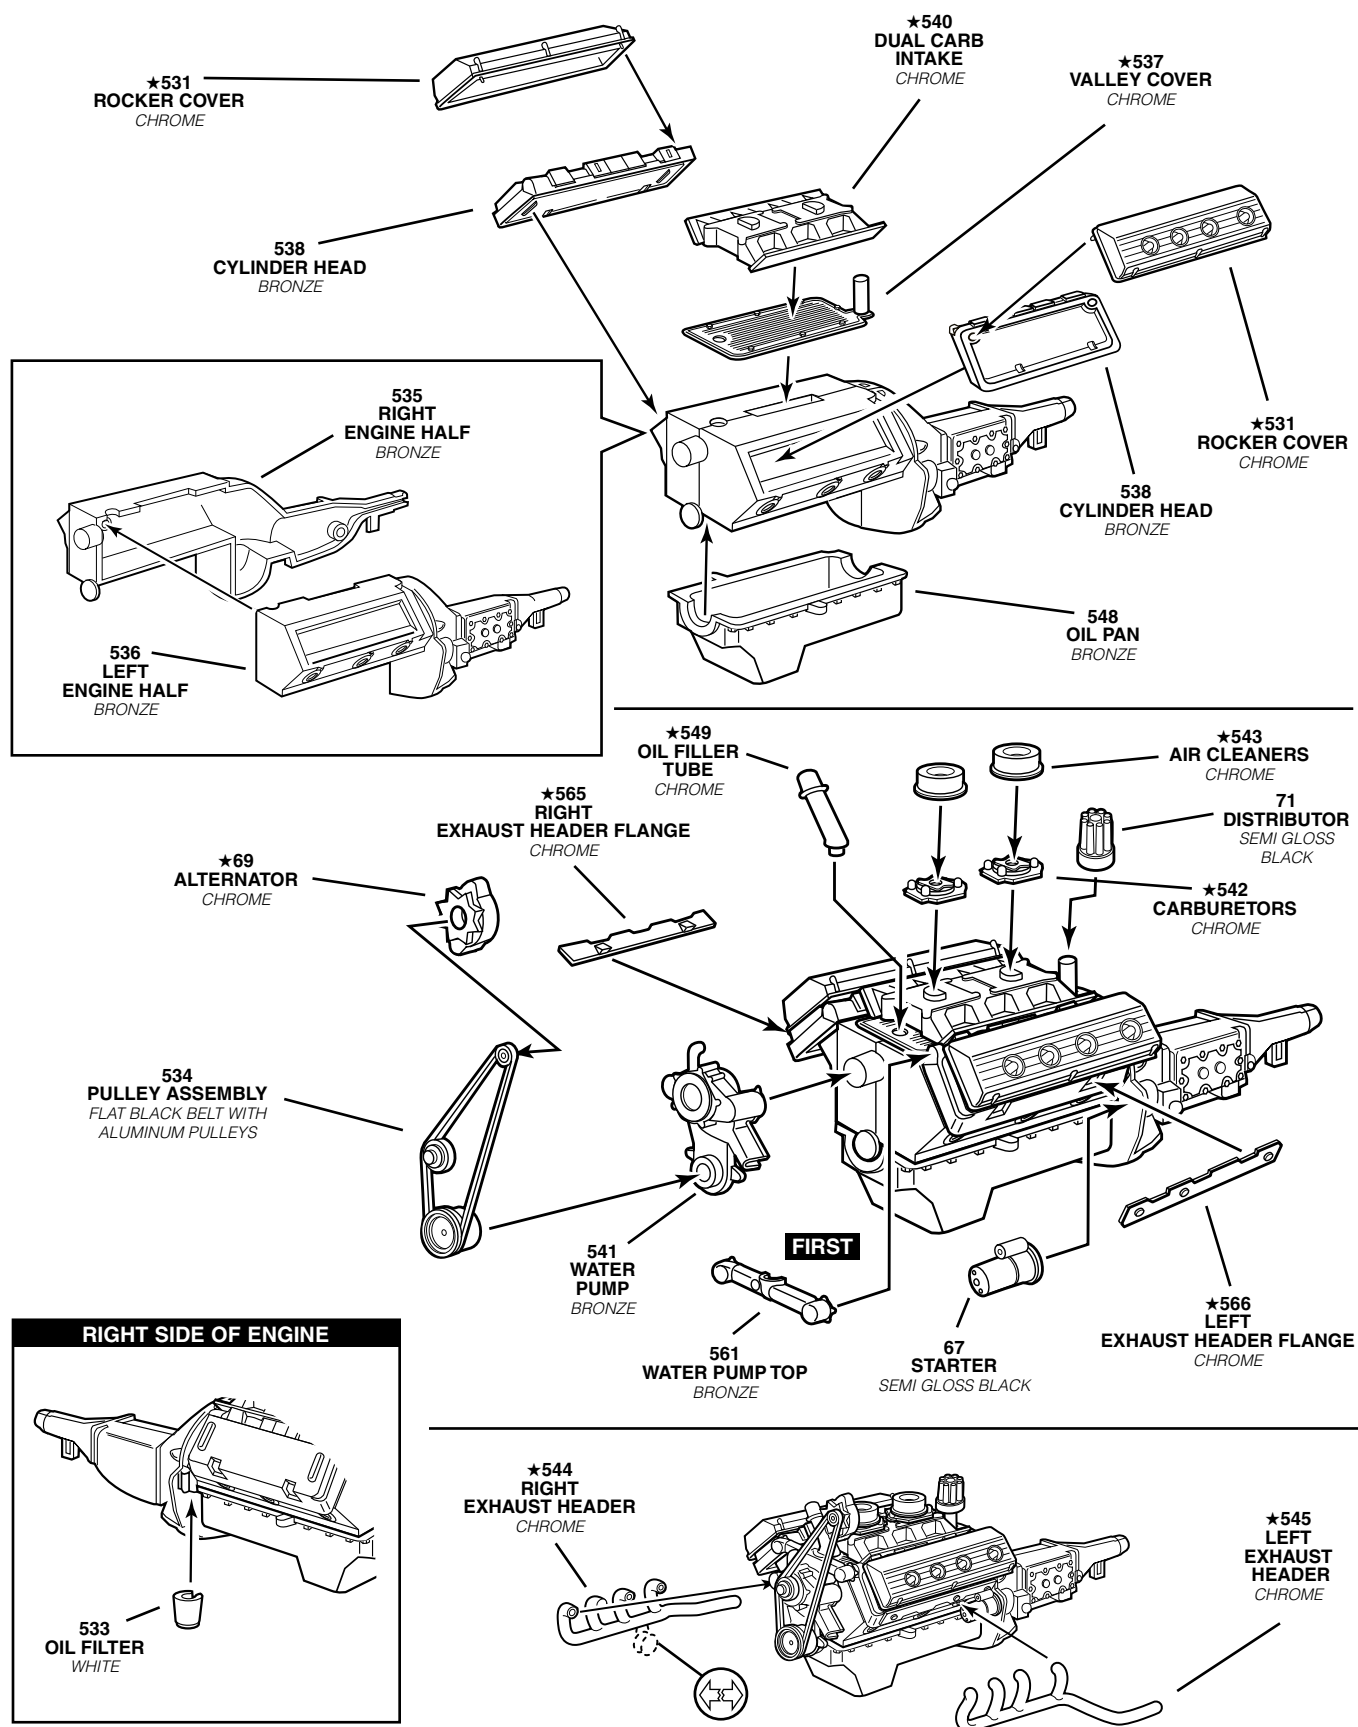

2

COUPE ENGINE ASSEMBLY

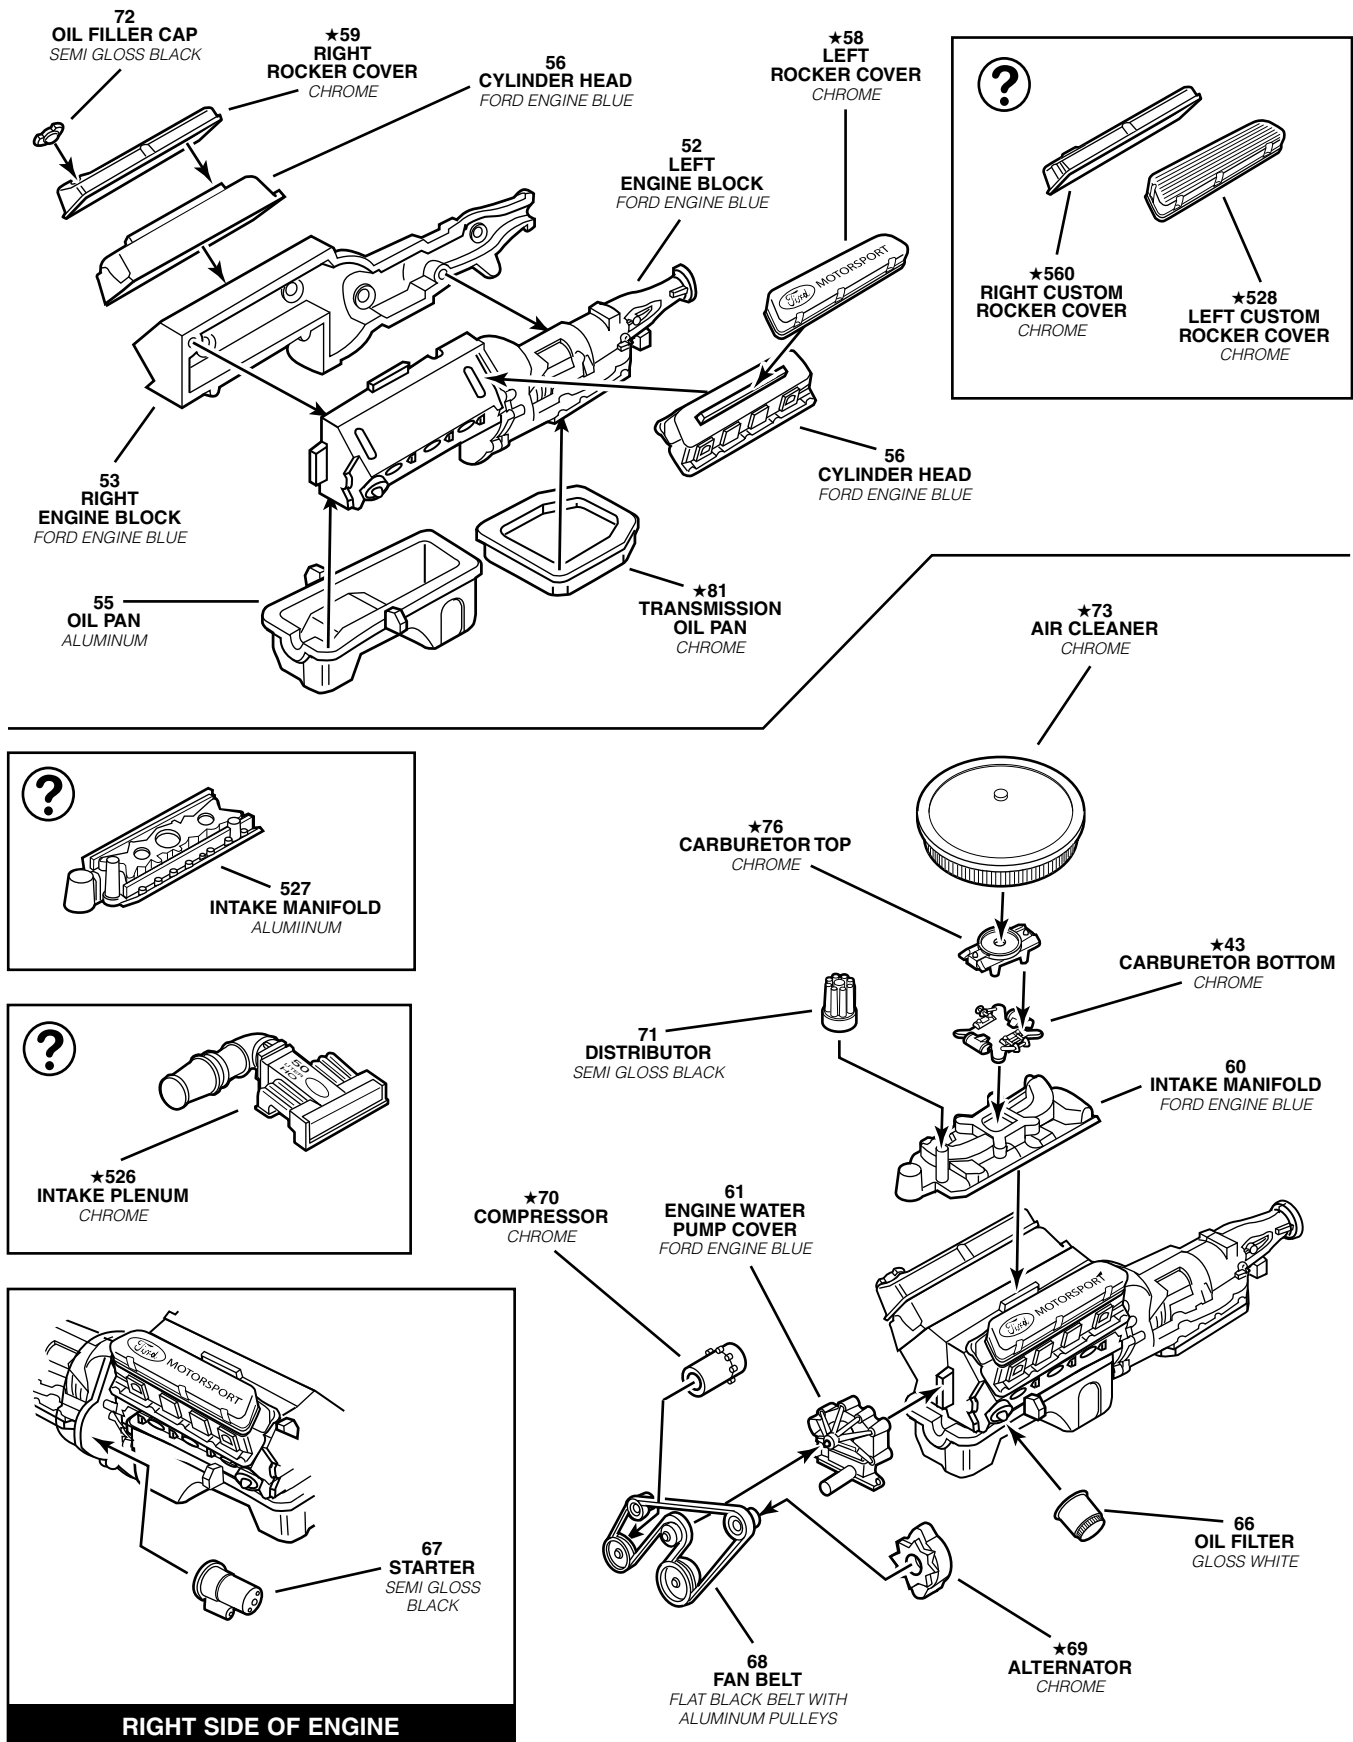

3

COUPE WHEEL ASSEMBLY

FRONT

?

2X

317
FRONT
INNER WHEEL
ALUMINUM

SMALL TIRE

★304
OUTER
FRONT WHEEL
CHROME

REAR

?

2X

318
REAR
INNER WHEEL
ALUMINUM

LARGE TIRE

★316
OUTER
REAR WHEEL
CHROME

4

HIGHBOY WHEEL ASSEMBLY

FRONT

2X

★38
DISK BRAKE
CHROME

(CALIPER)
STEEL

512
FRONT INNER
STEEL WHEEL
BODY COLOR

SMALL TIRE

★519
WHEEL
TRIM RING
CHROME

511
FRONT OUTER
STEEL WHEEL
BODY COLOR

★516
HUB CAP
CHROME

REAR

★28
FRONT AXLE
CHROME

★38
DISK BRAKE
CHROME

(CALIPER)
STEEL

34
REAR COVER
SEMI GLOSS BLACK

★40
DISK BRAKE
CHROME

(CALIPER)
STEEL

33
REAR AXLE
SEMI GLOSS BLACK

(CALIPER)
STEEL

LARGE TIRE

514
REAR INNER
STEEL WHEEL
BODY COLOR

513
REAR OUTER
STEEL WHEEL
BODY COLOR


★519
WHEEL
TRIM RING
CHROME

★516
HUB CAP
CHROME

★40
DISK BRAKE
CHROME


5

CHASSIS ASSEMBLY

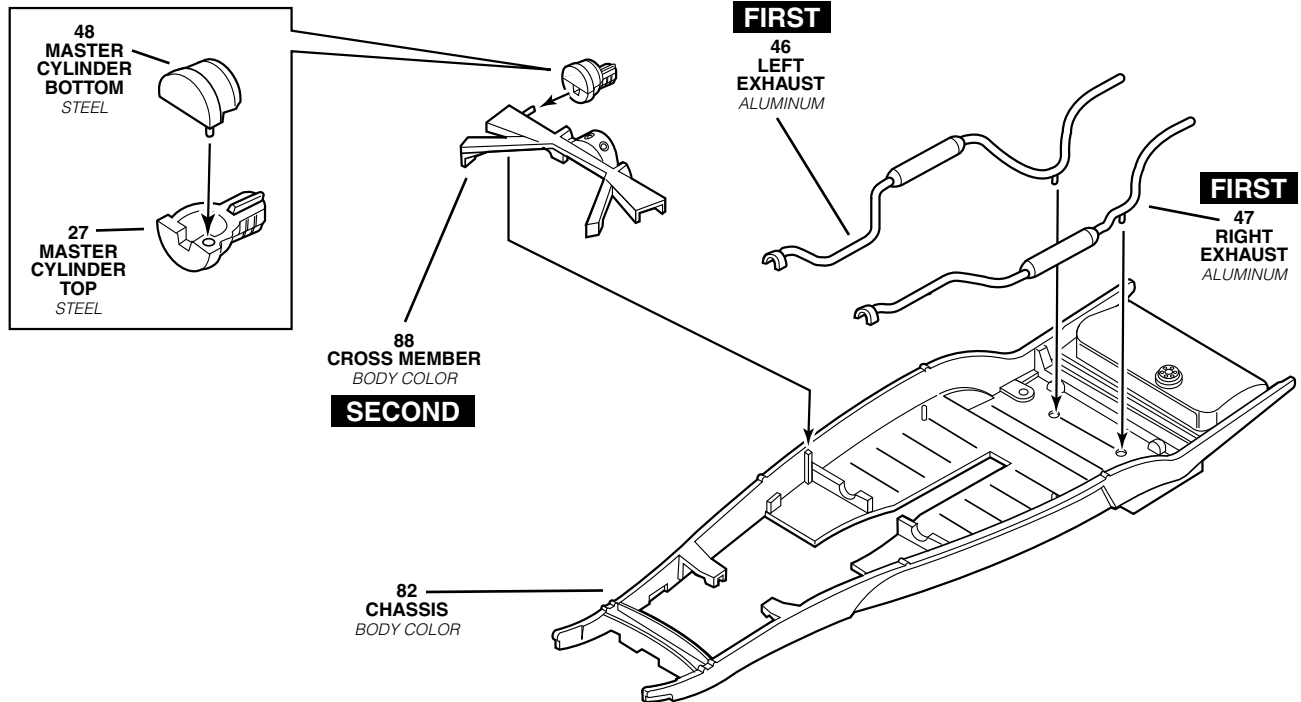

6


WHEELS TO CHASSIS ASSEMBLY

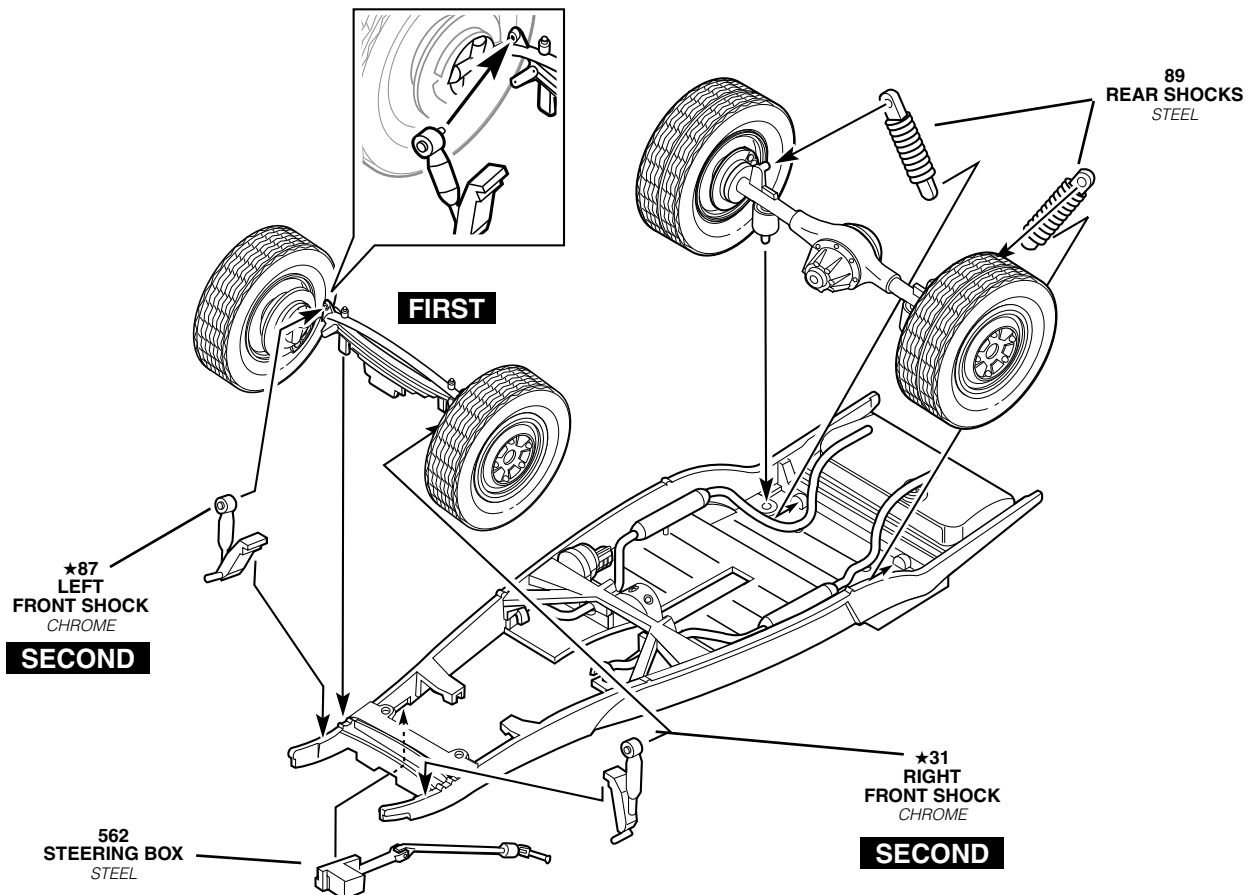



7

TIE ROD ASSEMBLY

HIGHBOY

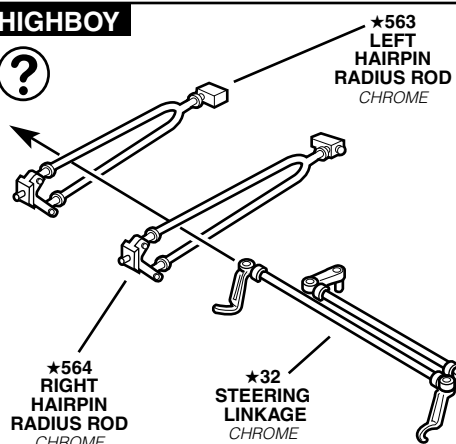


COUPE

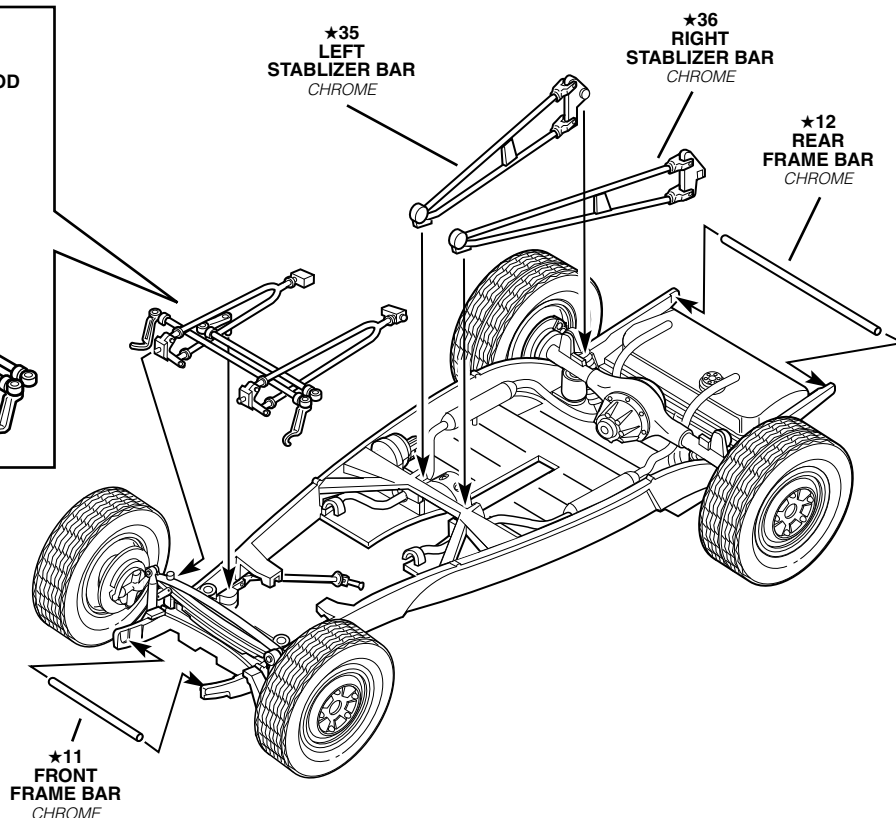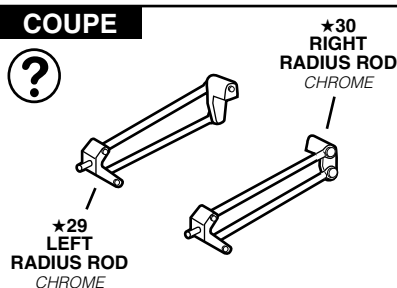


8

ENGINE TO FRAME ASSEMBLY

COUPE ENGINE

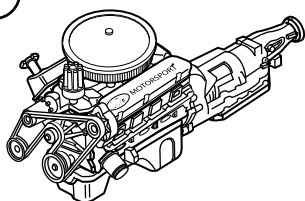

HIGHBOY ENGINE

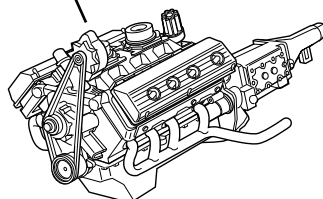

37 DRIVESHAFT ALUMINUM

86 GASTANK BODY COLOR

★15 GAS CAP CHROME


★62 RIGHT EXHAUST HEADER CHROME





COUPE



★63 LEFT EXHAUST HEADER CHROME



COUPE

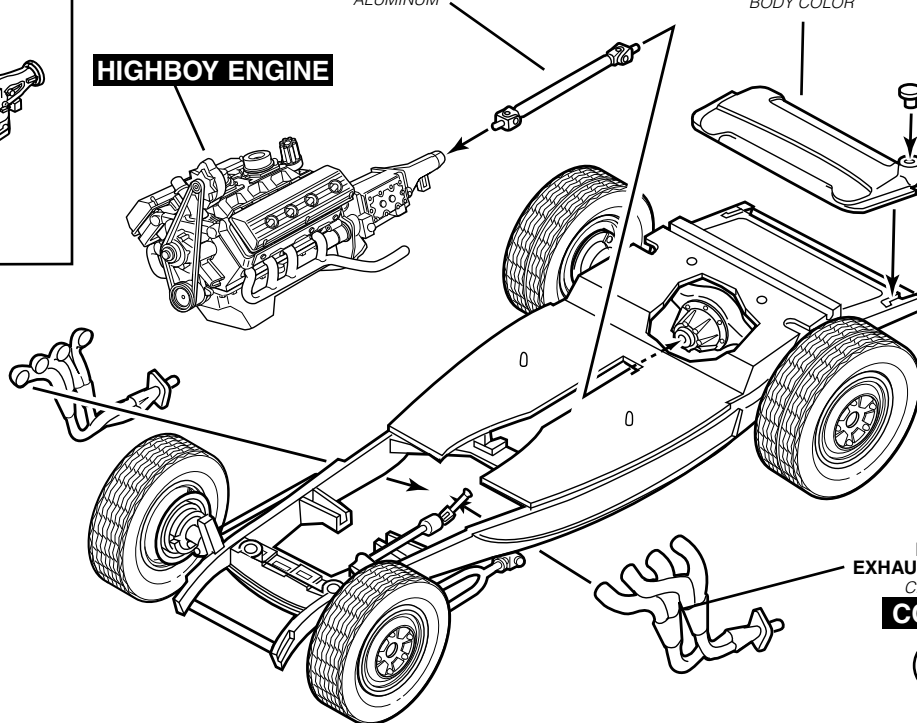

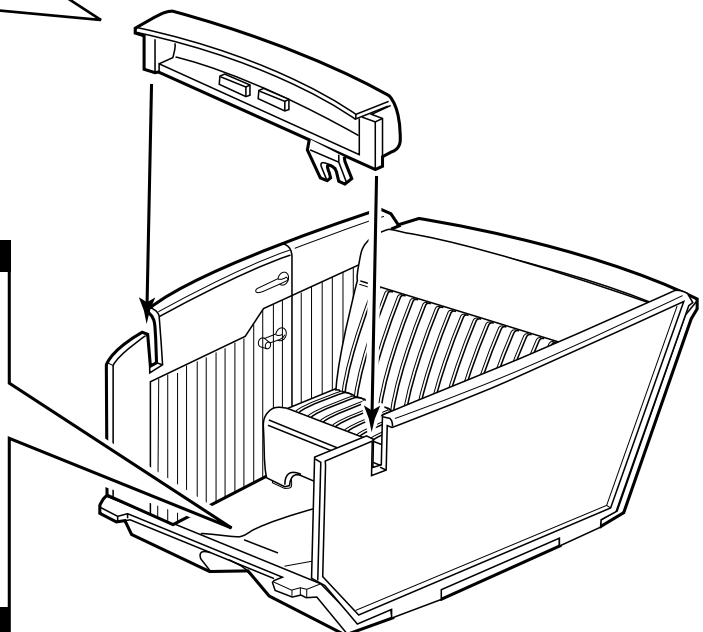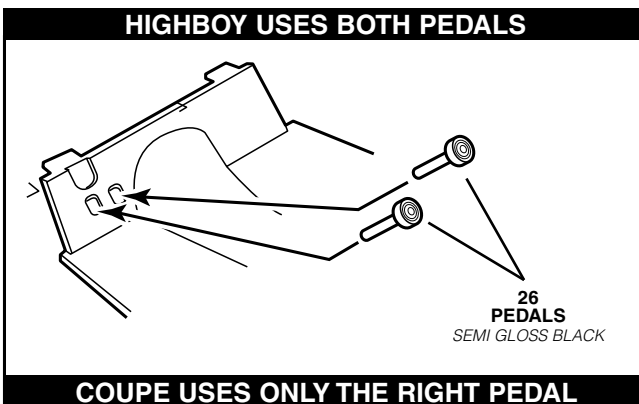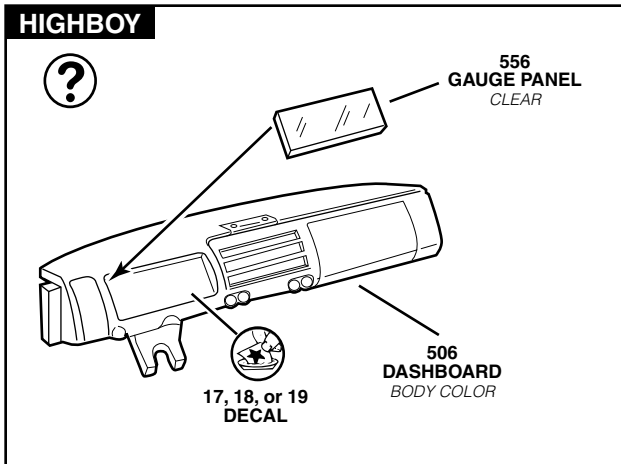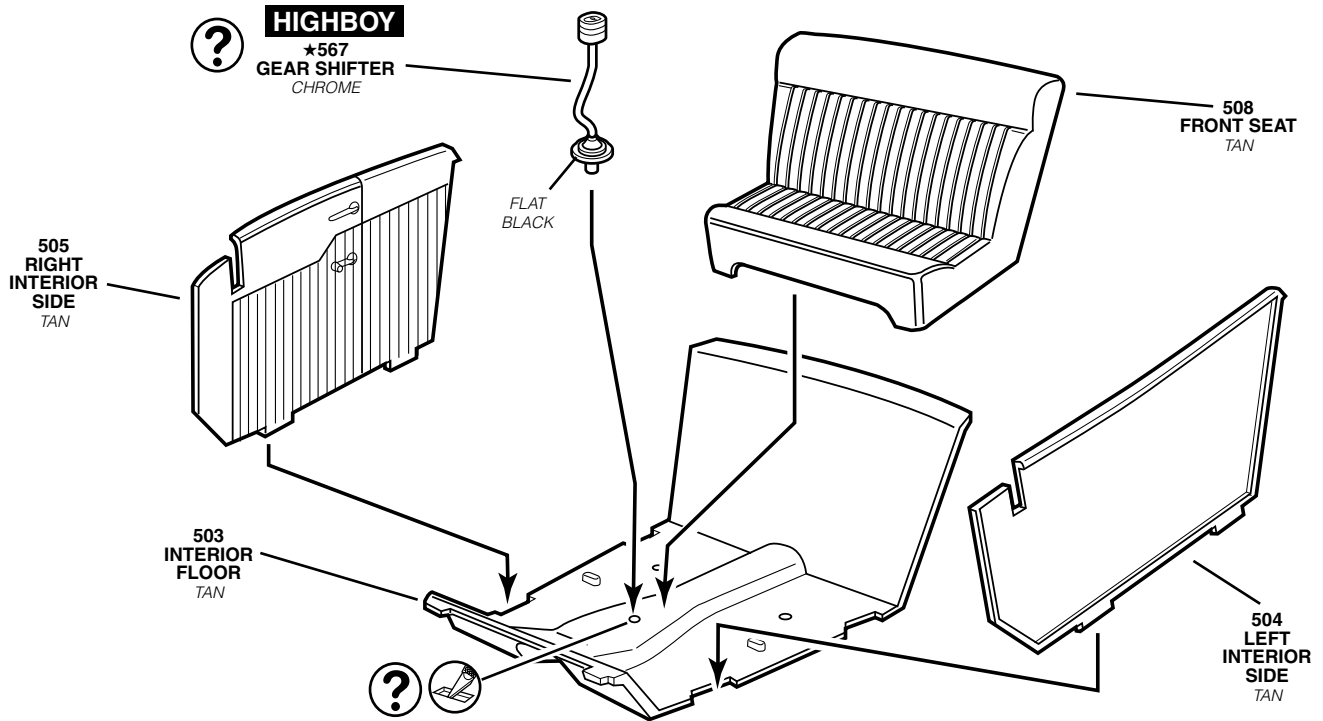

10


COUPE DASHBOARD ASSEMBLY

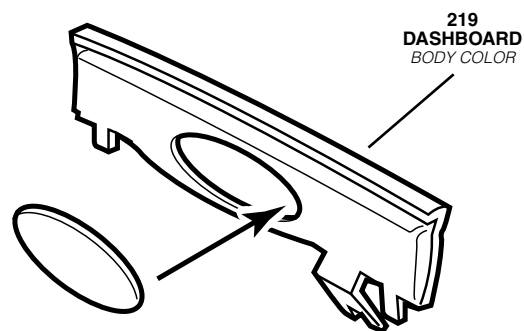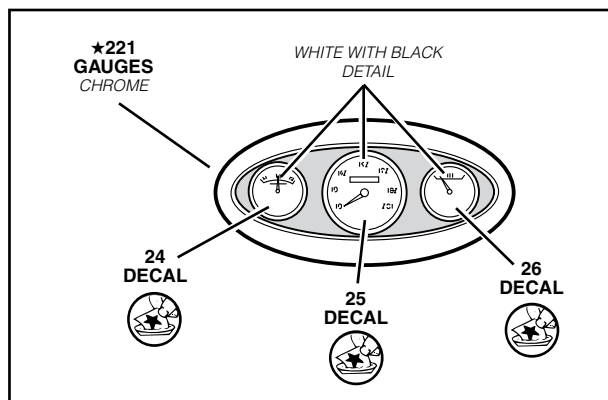

11



STEERING WHEEL ASSEMBLY


HIGHBOY

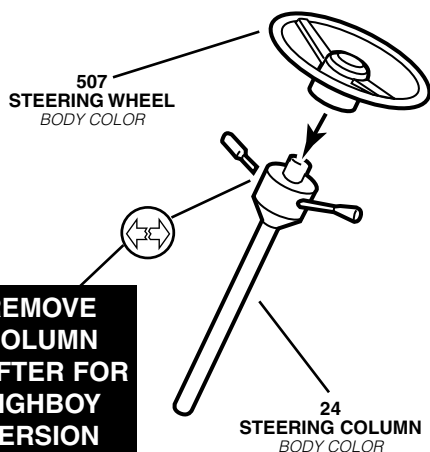


REMOVE
COLUMN
SHIFTER FOR
HIGHBOY
VERSION

COUPE

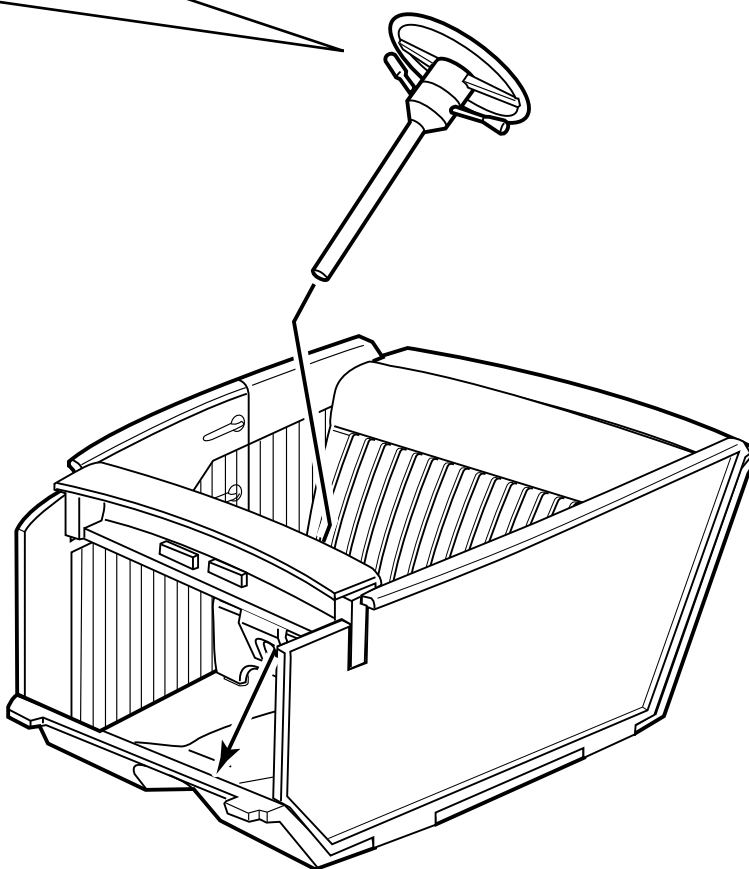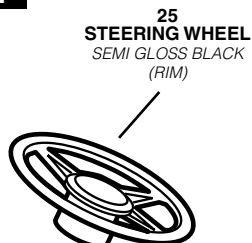


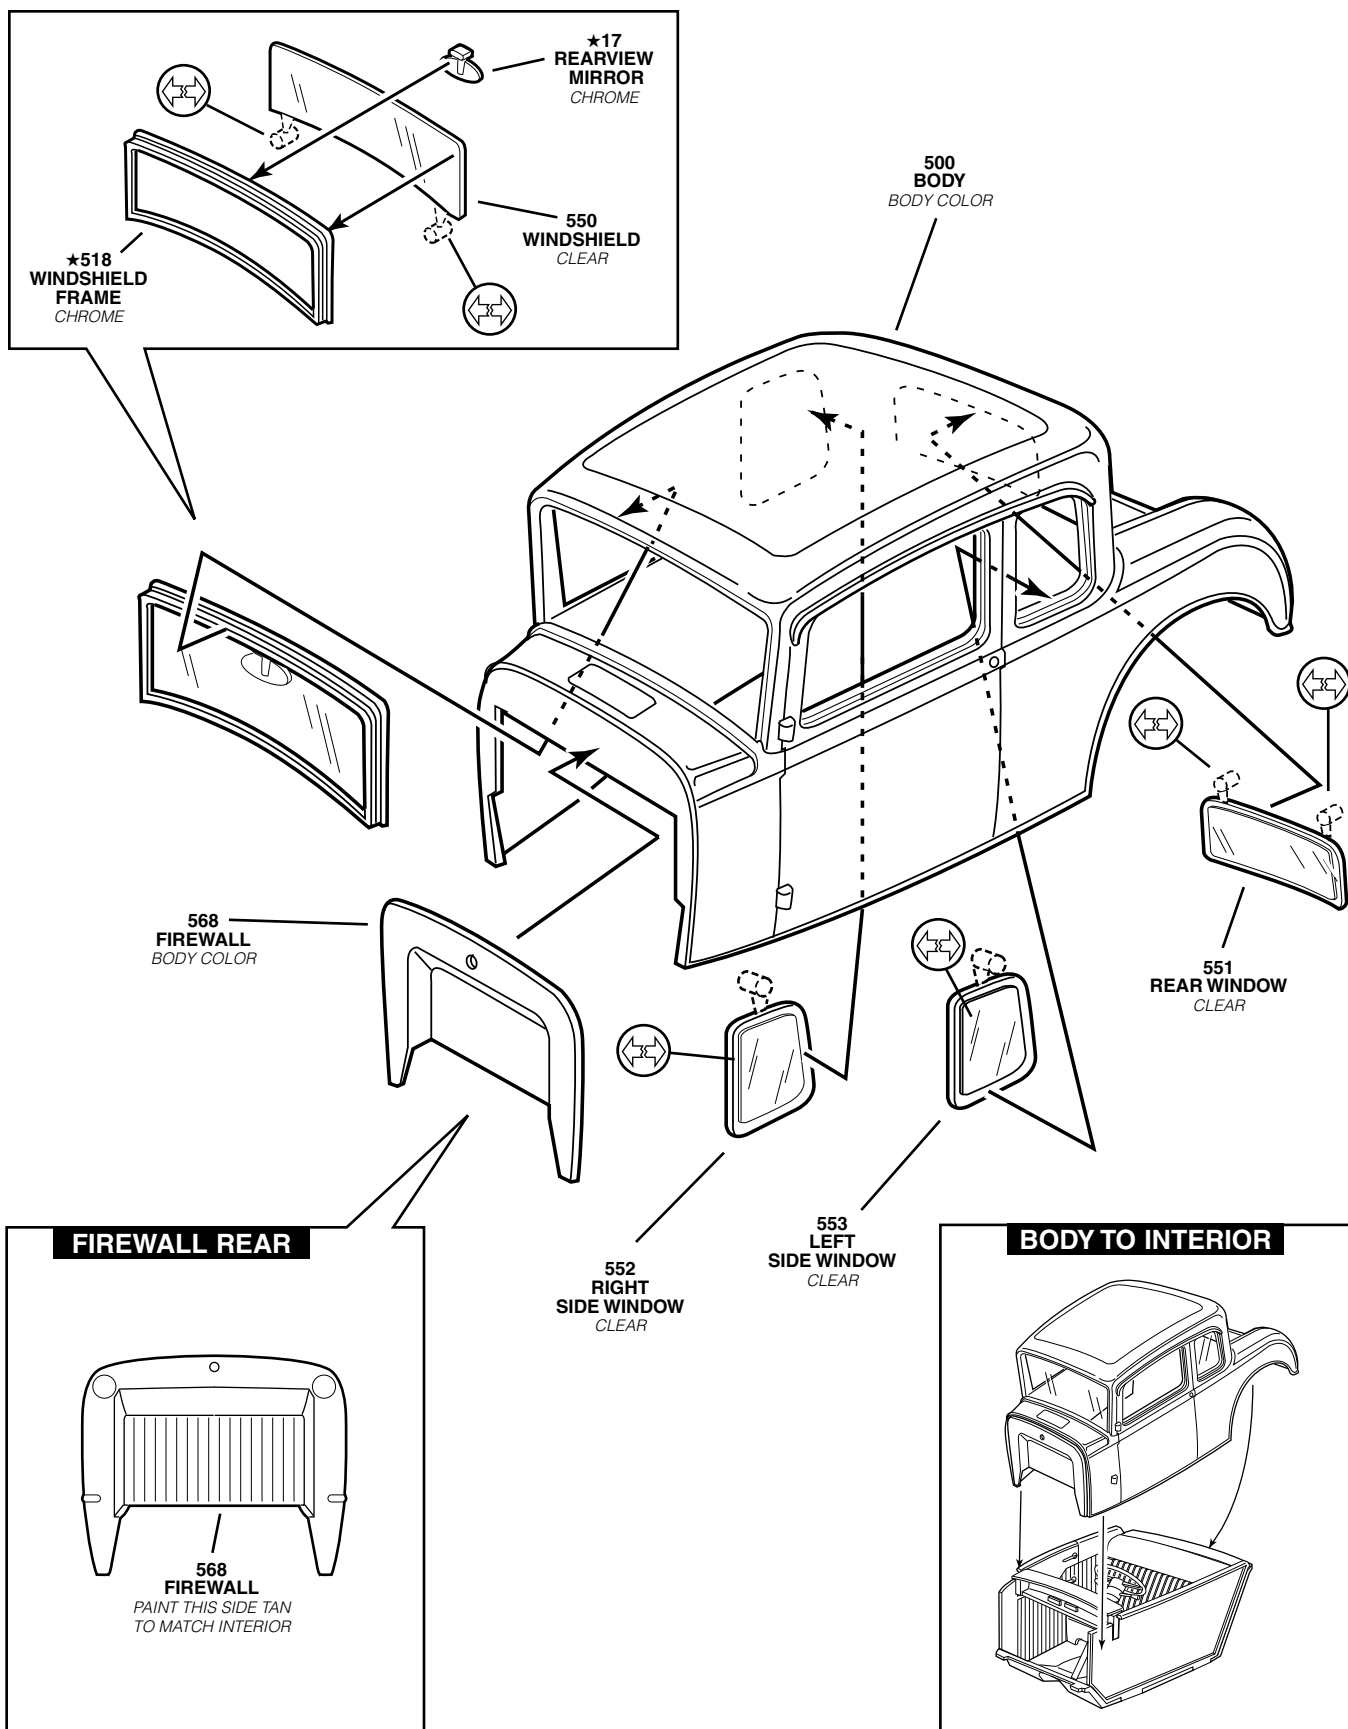

?
 510
 RIGHT REAR
 INNER FENDER
 BODY COLOR
HIGHBOY

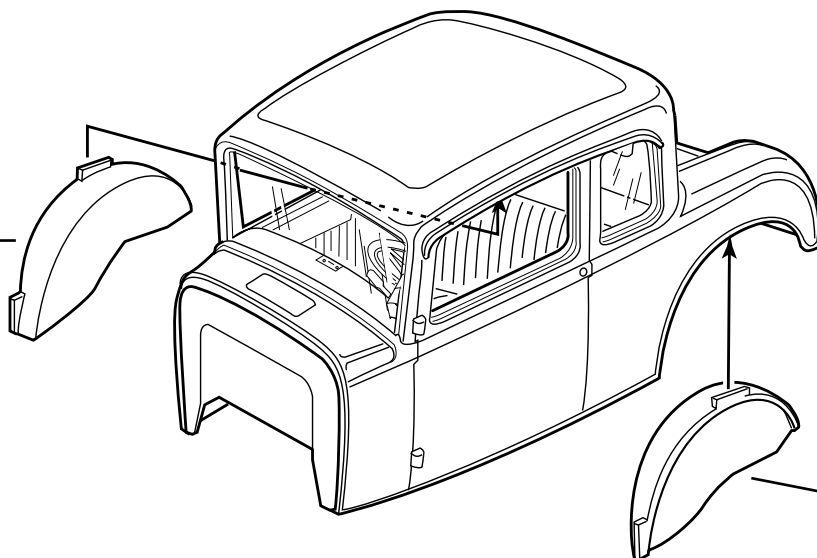


?
 509
 LEFT REAR
 INNER FENDER
 BODY COLOR
HIGHBOY

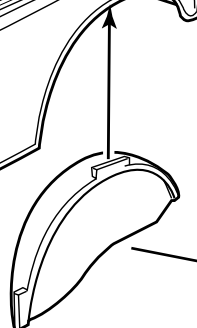



HIGHBOY


?

5
 GRILLE SHELL
 BODY COLOR

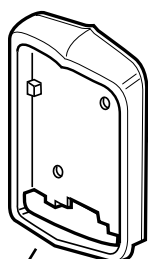


49
 RADIATOR
 SEMI GLOSS BLACK

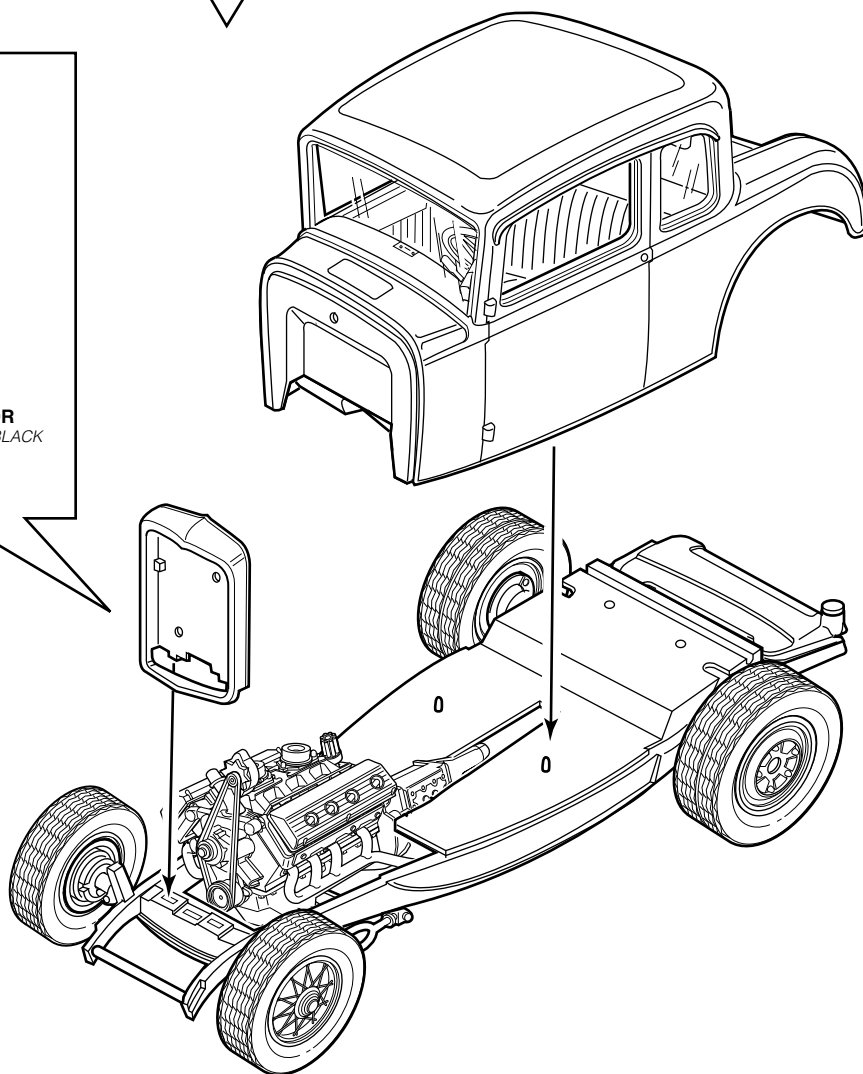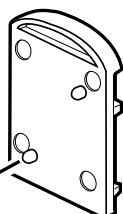

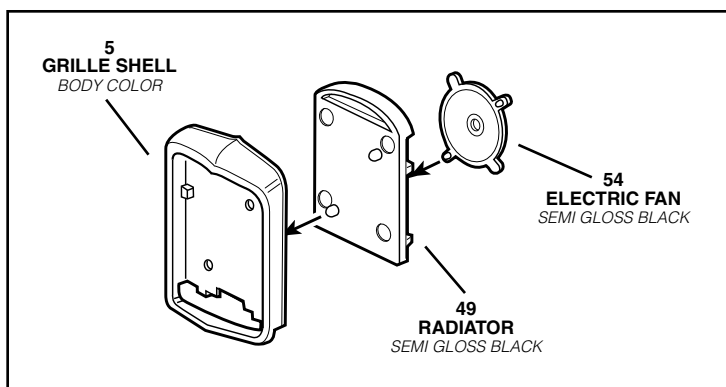


COMPLETED INTERIOR AND
BODY GOES ON SECOND

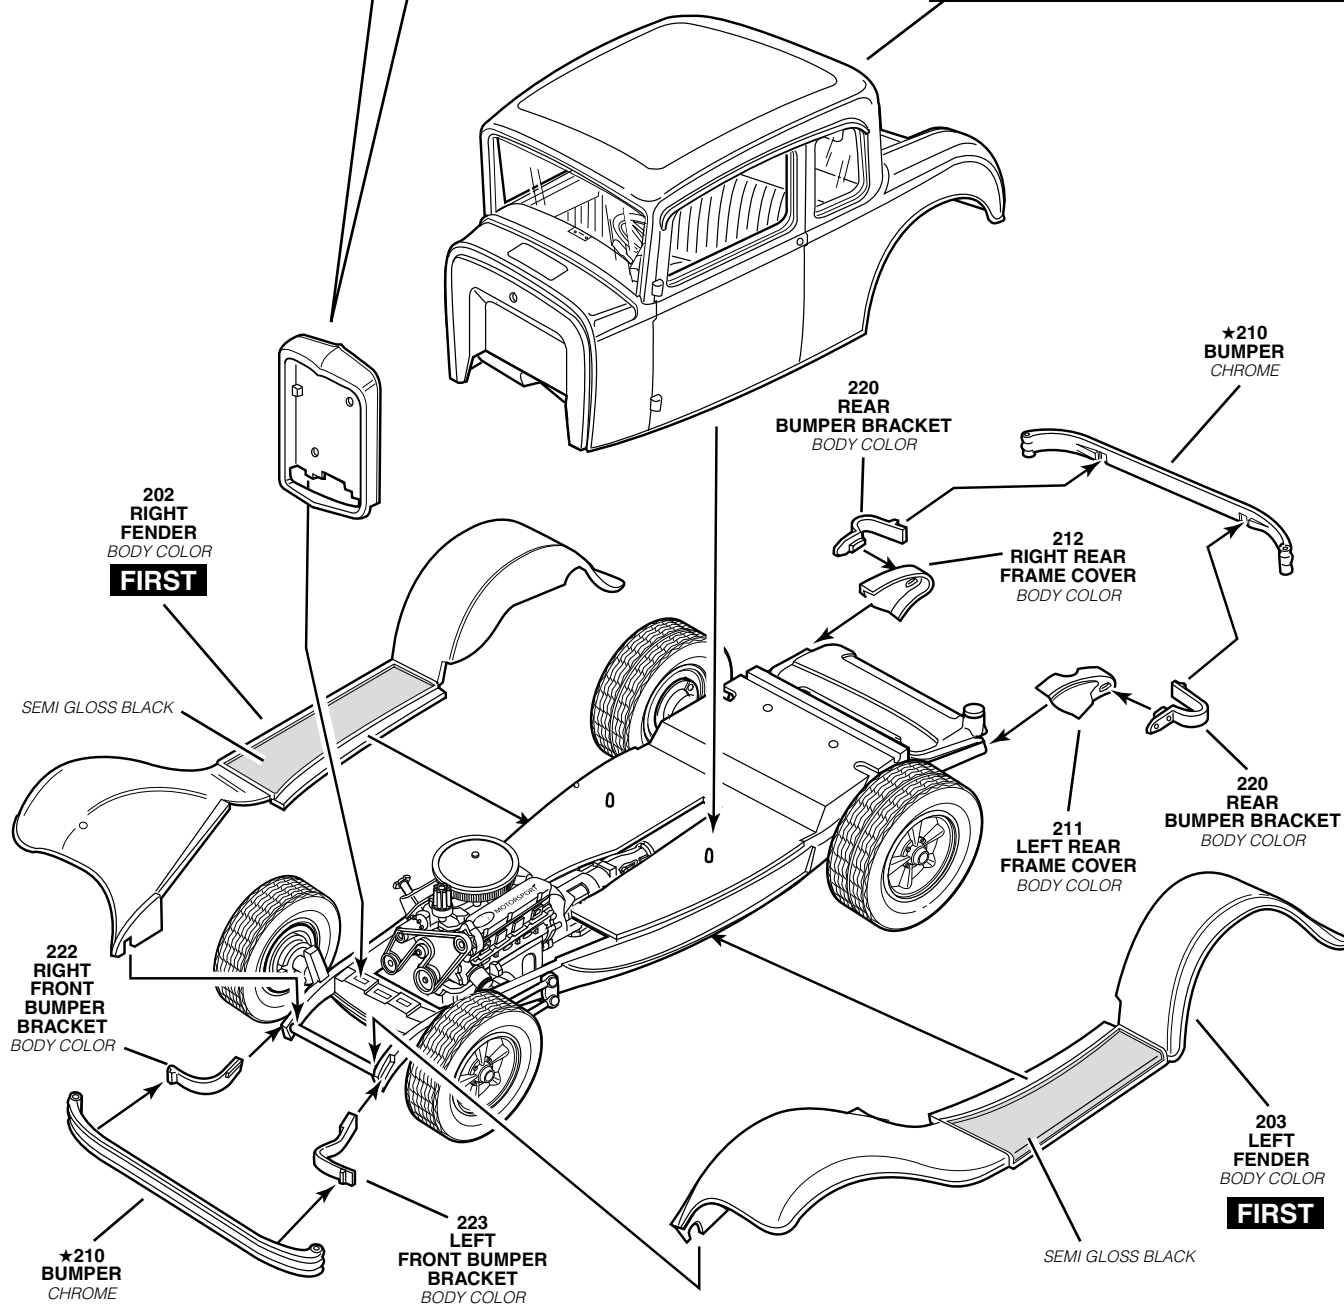


15

RADIATOR ASSEMBLY

HIGHBOY

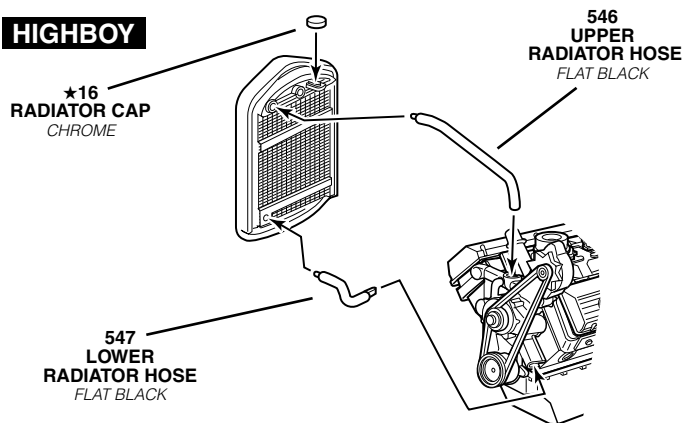


COUPE

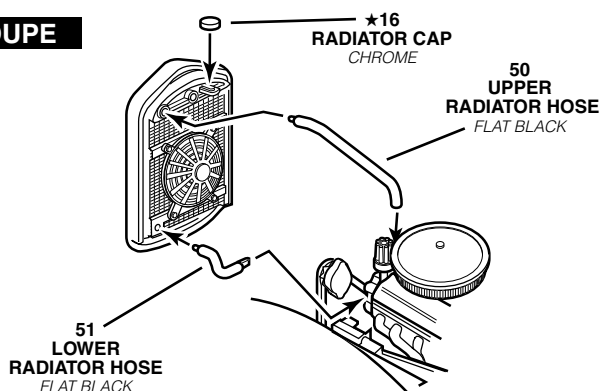


16

HOOD / GRILLE ASSEMBLY


COUPE

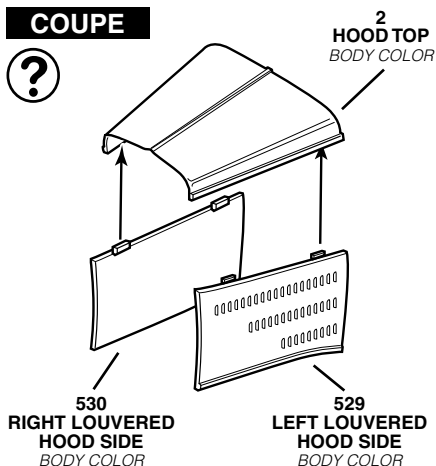

COUPE


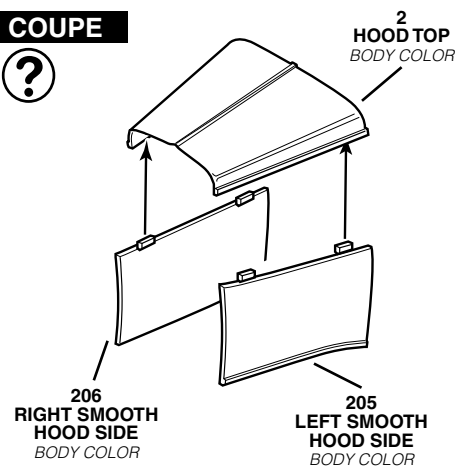


COUPE

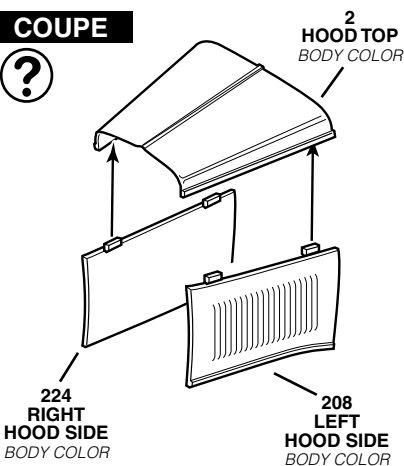

NOTE:
AS IN FULL SIZE HOTROD BUILDING, HOOD SIDES MAY HAVE TO BE FITTED TO GRILLE SHELL, HOOD TOP AND BODY

COUPE

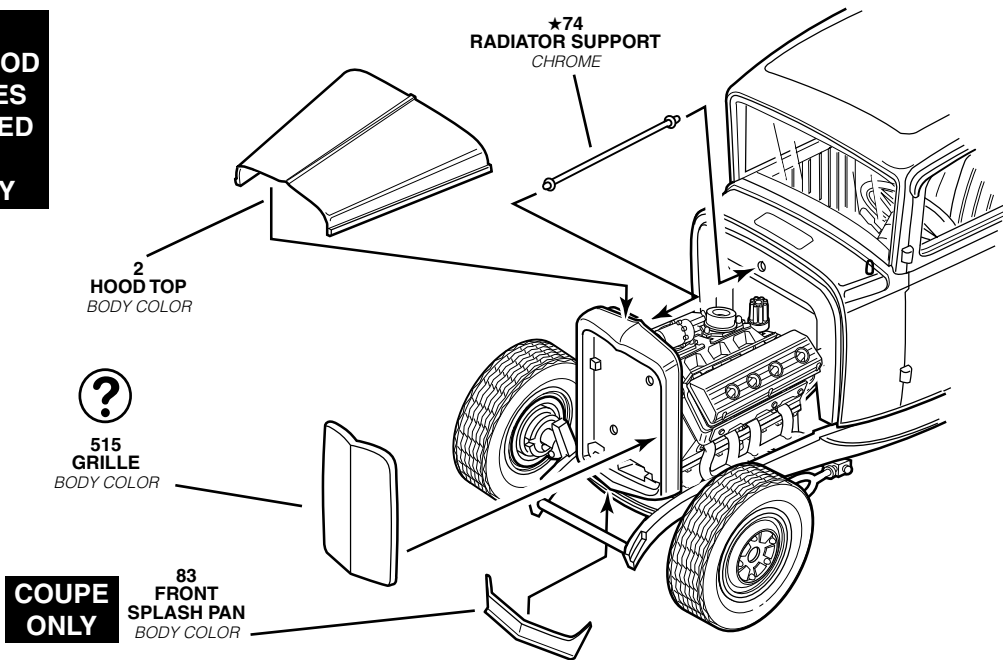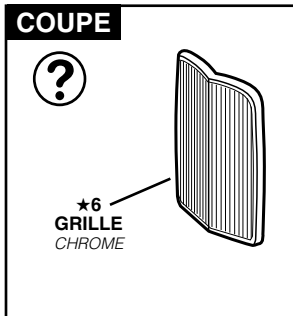

17


HEADLIGHT ASSEMBLY

HIGHBOY

(?) (2X)

★314
SMALL
HEADLIGHT
BUCKET
CHROME

555
HEADLIGHT LENS
CLEAR

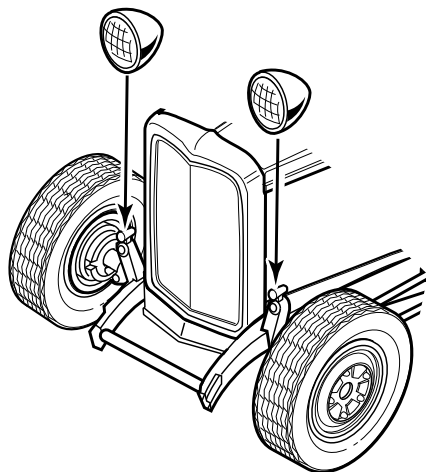


COUPE

(?) (2X)

554
HEADLIGHT LENS
CLEAR

★7
LARGE
HEADLIGHT
BUCKET
CHROME


★204
CROSSBAR
CHROME

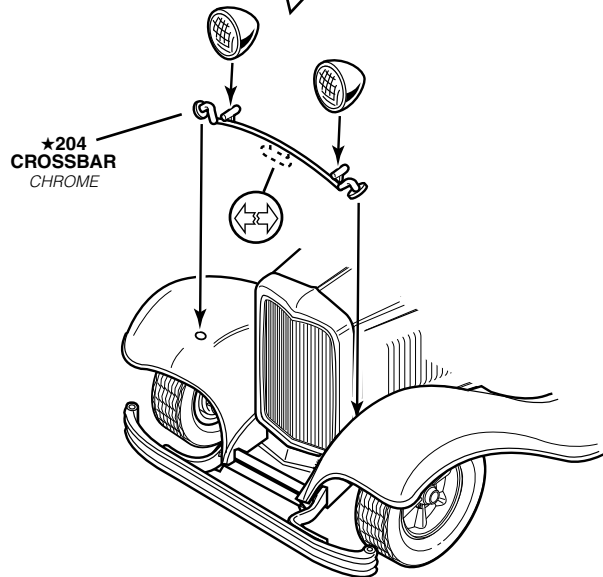


18




COUPE REAR ASSEMBLY


(?)

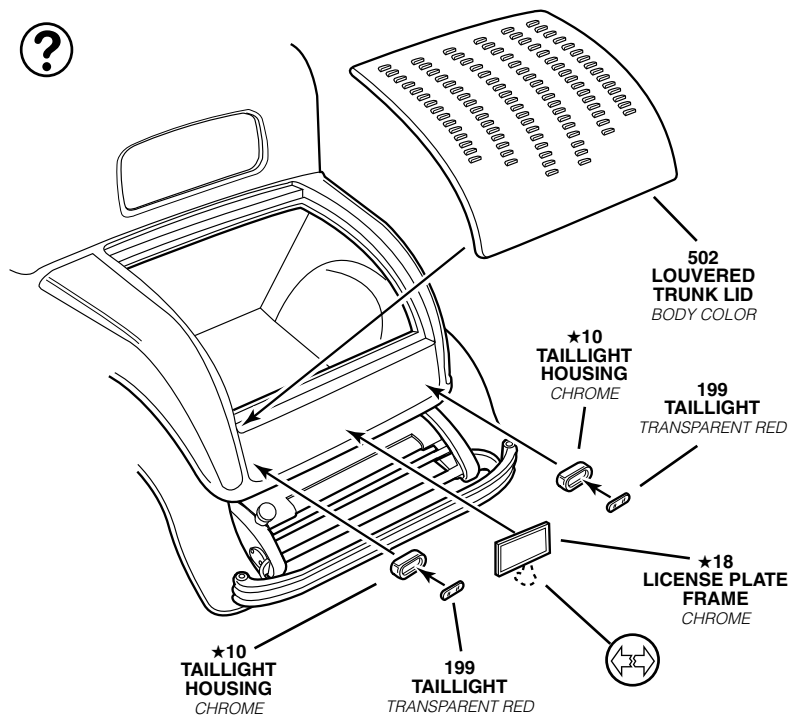


(?)

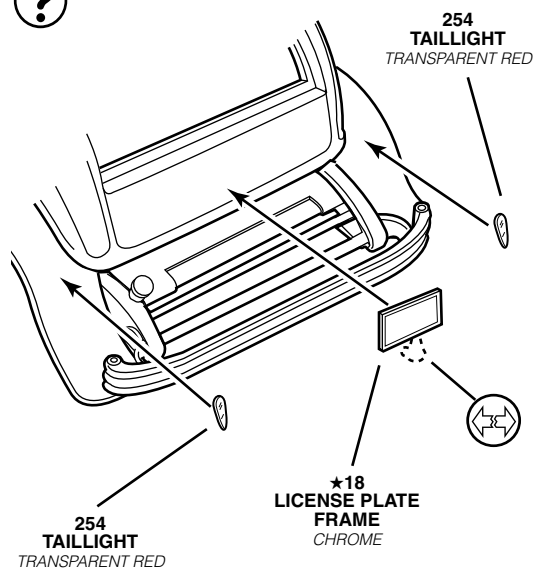

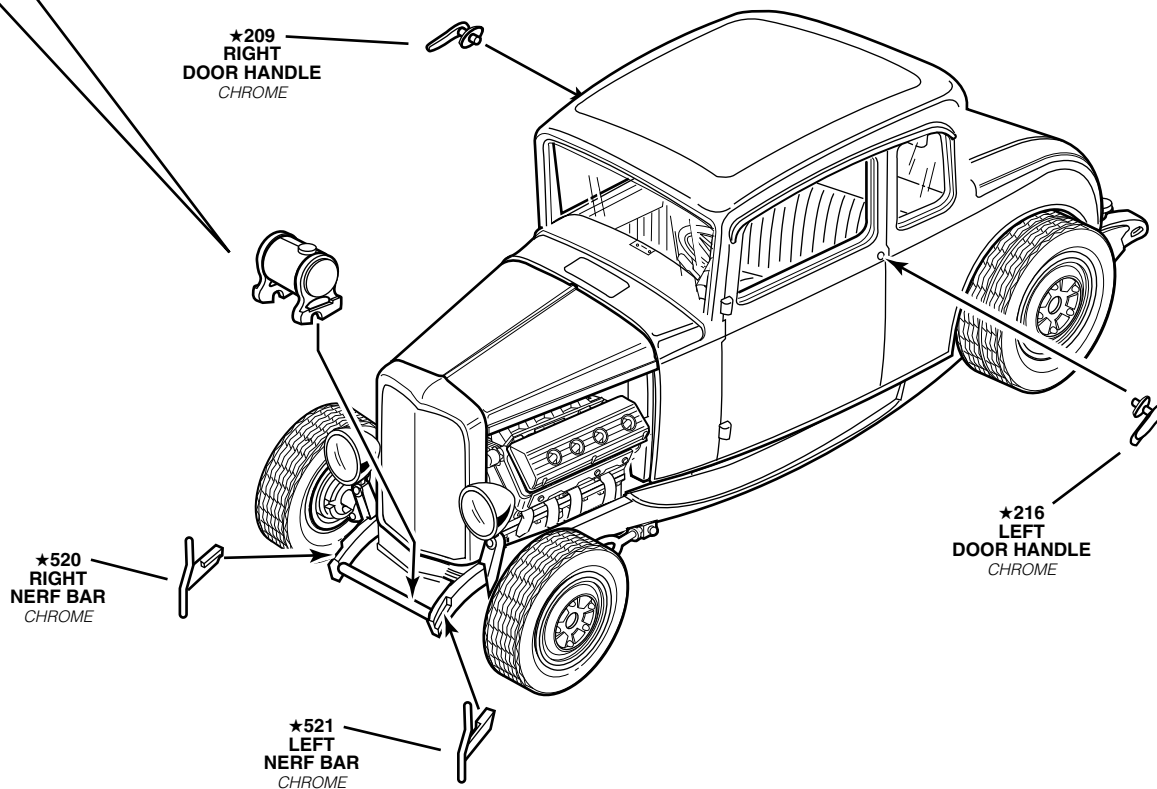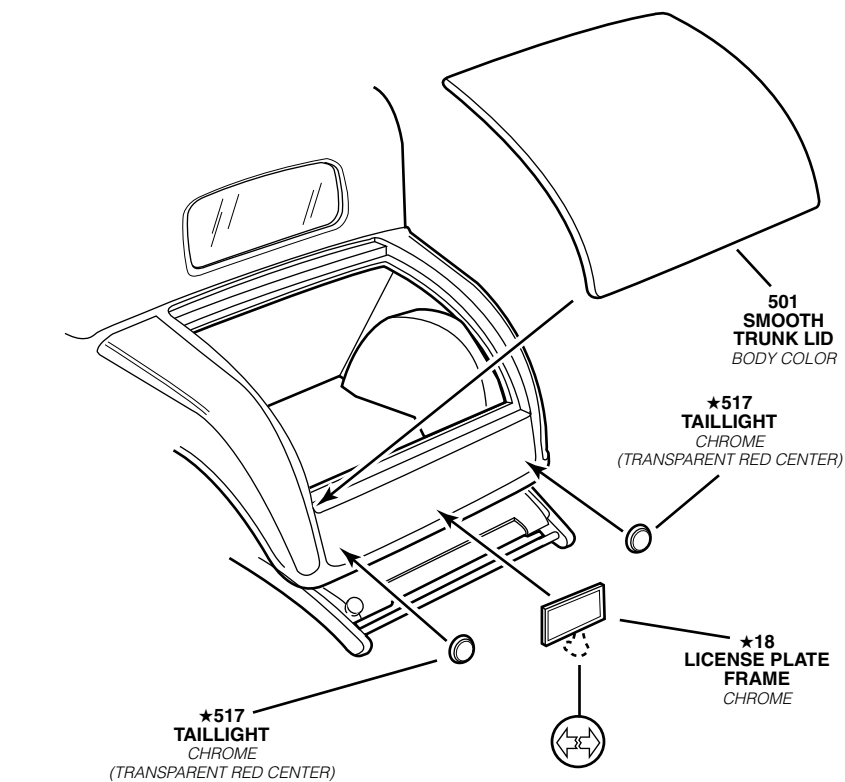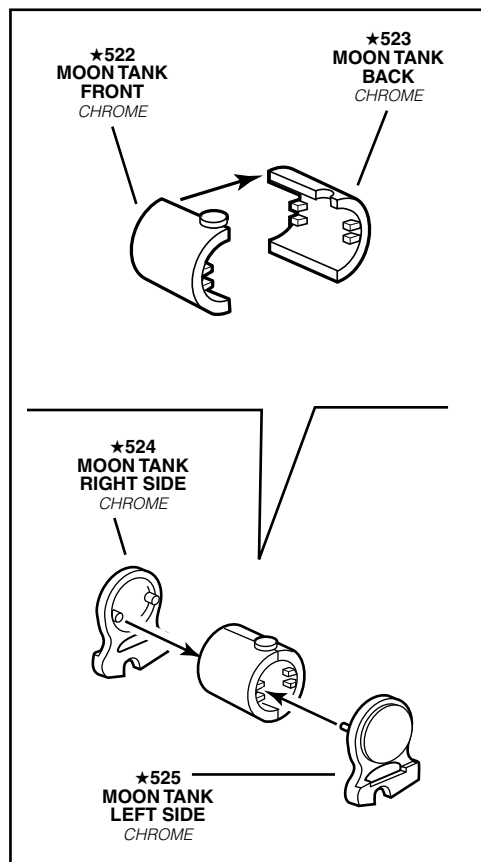

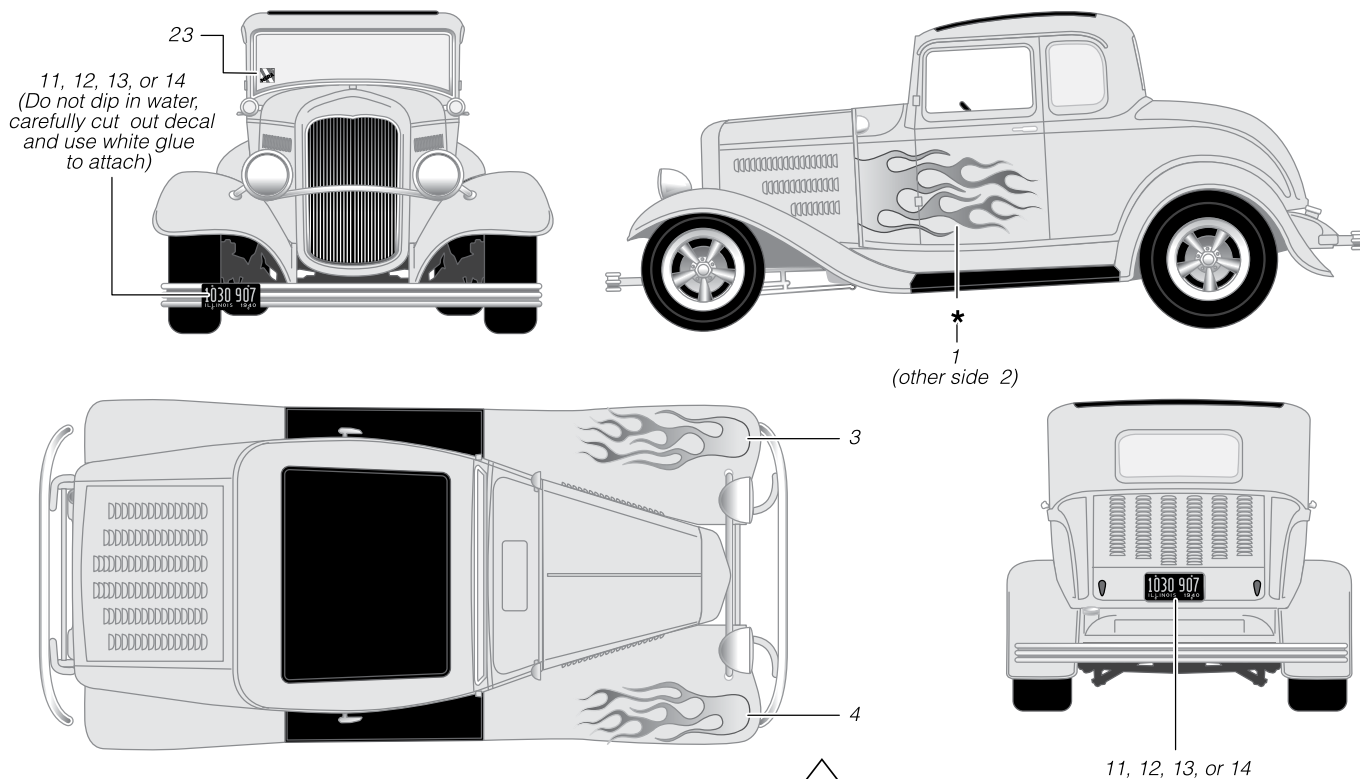Version A
 GLOSS YELLOW BODY COLOR
**Version B**
 GLOSS RED BODY COLOR


11, 12, 13, or 14
(Do not dip in water, carefully cut out decal and use white glue to attach)



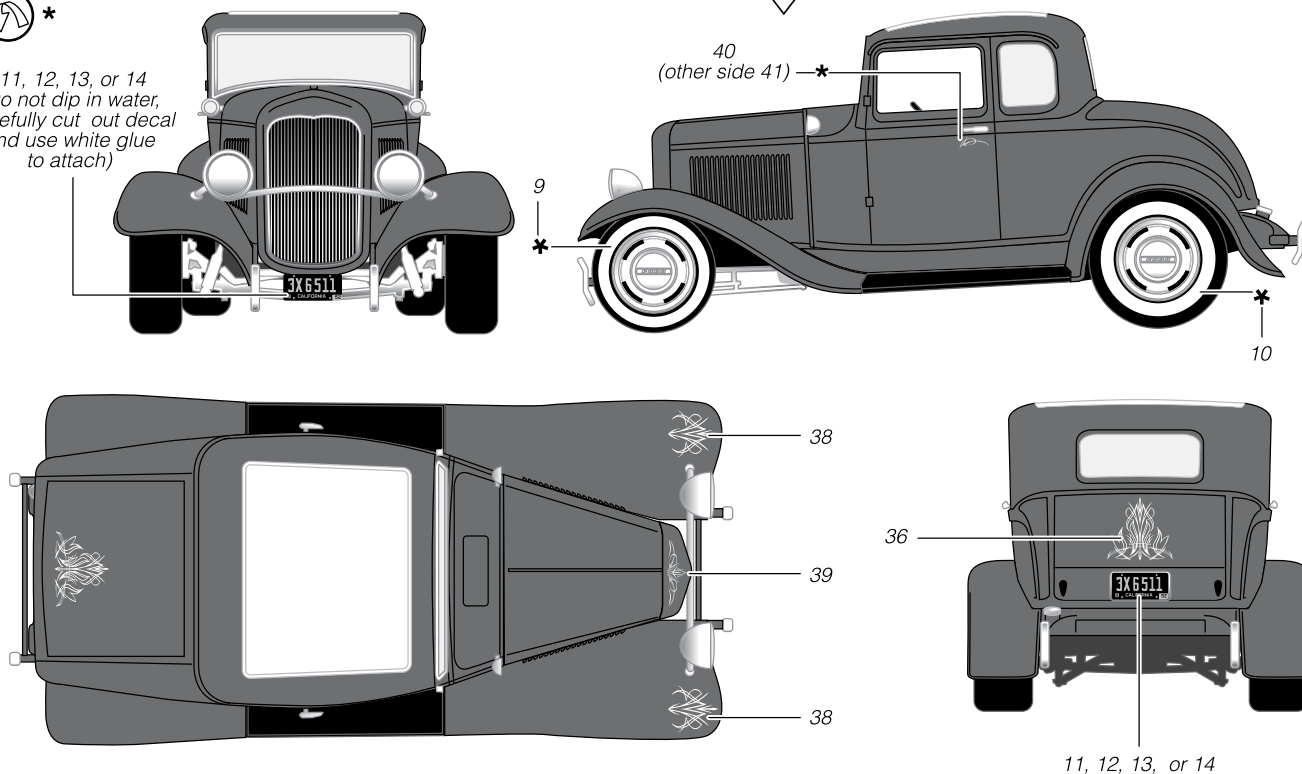


Version C

GLOSS BLACK BODY COLOR



11, 12, 13, or 14
(Do not dip in water,
carefully cut out decal
and use white glue
to attach)

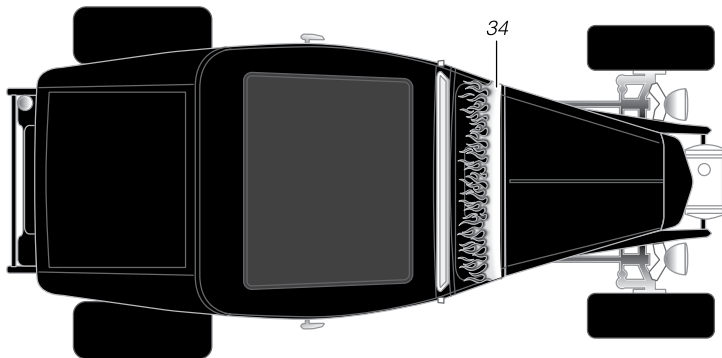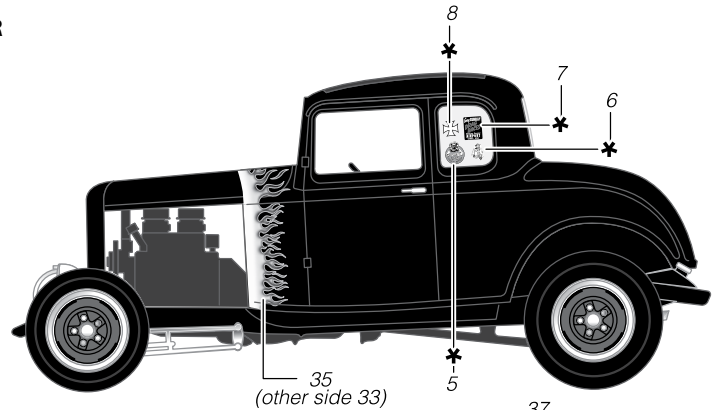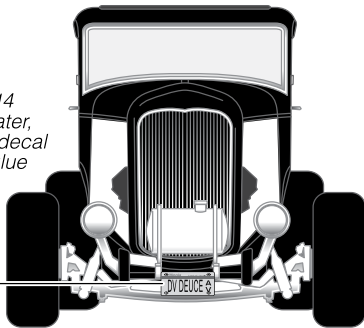**Version D**

GLOSS DARK BLUE BODY COLOR



14
(Do not dip in water,
carefully cut out decal
and use white glue
to attach)

