



**Authentic Adventure Gear®**

# INSTRUCTIONS

**Item 01109**

## Brookwood Internal Frame Tent

Thank you for purchasing this Texsport tent. Please read and understand each step of the set-up instructions. We encourage you to set-up this tent at least once prior to your camping trip, ensuring that you have a satisfactory understanding of the set-up process. We hope you enjoy your new tent and that it will give you many years of camping pleasure.

**Do not apply excessive force to this product.**


### PARTS LIST:

**A .....1 Tent Skin**

**B .....2 Long Shock-corded  
Fiberglass Poles**

**C .....1 Short Rainfly Pole**

**D .....Stakes**

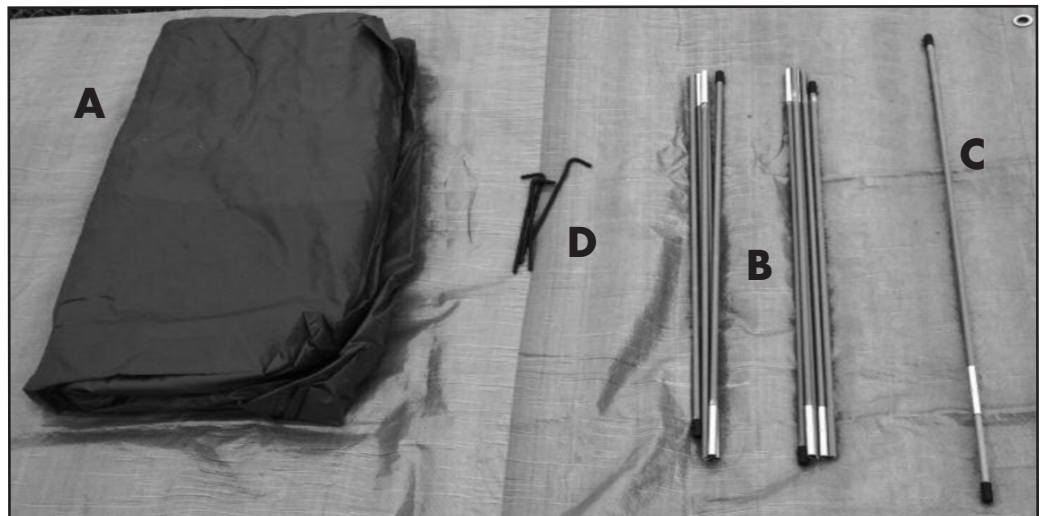

### NOTE:

Prepare your camp site by removing all sharp stones, twigs, etc. The site should be flat and have no depressions that could collect rain water.



**STEP 1 - Spread the tent skin and assemble the 2 long tent poles.**



**STEP 2 - Take one long pole and slide it inside the tent making sure to put the tip of the pole into the back left corner and the other end of the pole into the right front corner.**



**STEP 3 - Repeat step 2 for the remaining pole. Put the tip into the back right corner and the other end into the front left corner.**



**STEP 4 - Climb inside the tent and secure all poles to the attached ties.**



**STEP 5 - Slide rainfly pole under the rainfly BUT over the mesh screen.**



**STEP 6 - Secure the rainfly pole by inserting the ends into the small pockets.**



**STEP 7 - Stretch and stake the tent at all corners.**



**STEP 8 - Your assembled tent is now ready.**