

Windshield

Installation

1. Scrape the old adhesive smooth with a knife, to a thickness of about 2 mm (0.08 in) on the bonding surface around the entire windshield opening flange.

NOTE:

- Do not scrape down to the painted surface of the body; damaged paint will interfere with proper bonding.
- Remove the rubber dam and lower spacer from the body.
- Mask off surrounding surfaces before painting.


2. Clean the body bonding surface with a sponge dampened in alcohol.

NOTE: After cleaning, keep oil, grease and water from getting on the surface.

3. If the old windshield is to be reinstalled, use a putty knife to scrape off all traces of old adhesive, then clean the windshield surface with alcohol where new adhesive is to be applied.


NOTE: Make sure the bonding surface is kept free of water, oil and grease.

CAUTION: Avoid setting the windshield on its edges; small chips may later develop into cracks.

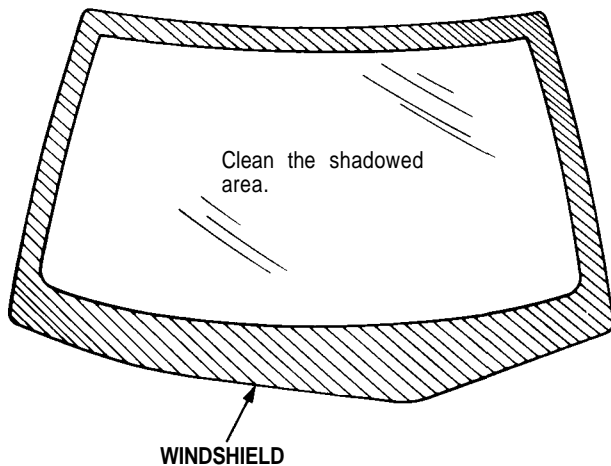


4. Glue the dashboard seal and rubber dam to the inside face of the windshield as shown to contain the adhesive during installation.

NOTE: Be careful not to touch the windshield where adhesive will be applied.

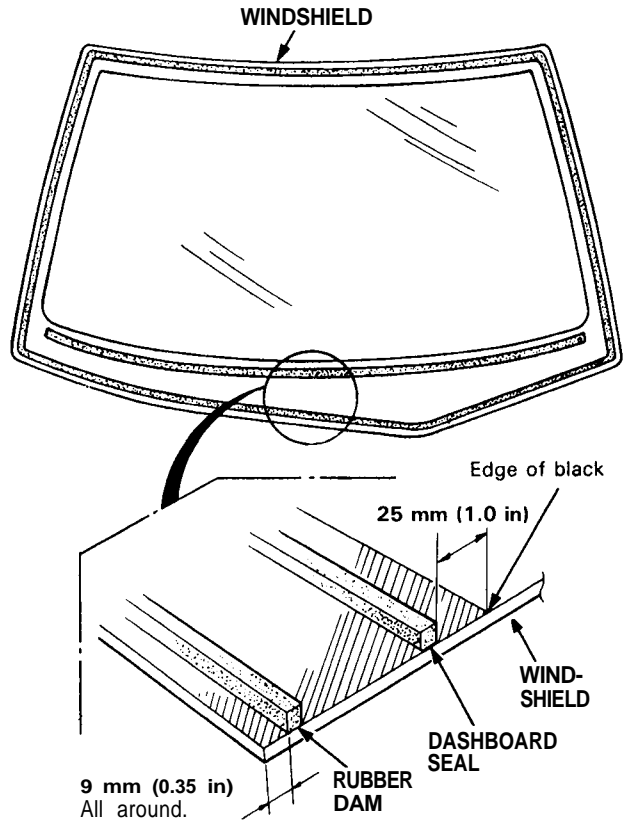


5. Install the clips and retainers as shown. Glue the lower spacers to the body.

NOTE: The numbers after the part names show the quantities of the parts used.

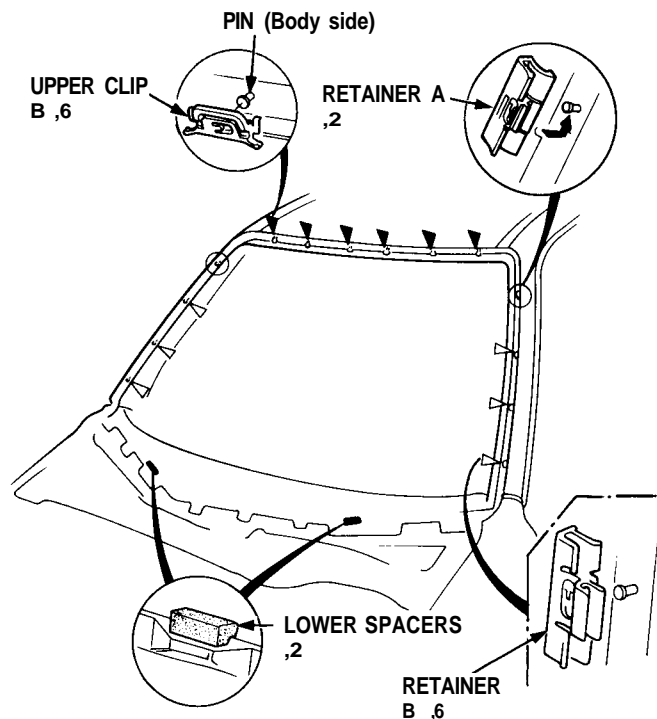



6. Set the windshield upright on the lower spacers, then center it in the windshield opening. Make alignment marks across the windshield and body with a grease pencil at the four points shown.

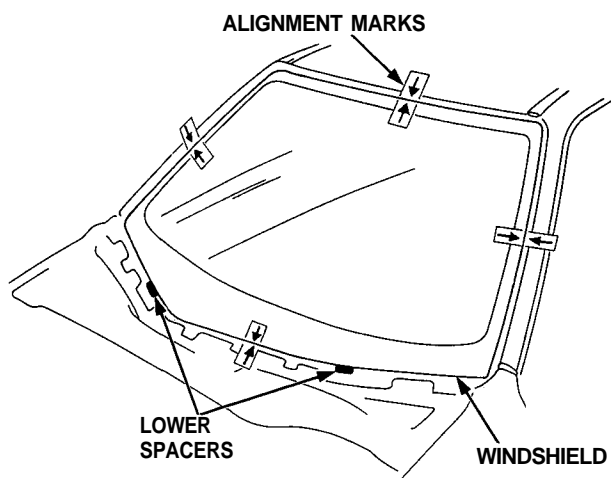


7. With a sponge, apply a light coat of glass primer around the edge of the windshield as shown, then lightly wipe it off with gauze or cheesecloth.

NOTE:

- Do not apply body primer to the windshield, and do not get body and glass primer sponges mixed up.
- Never touch the primed surfaces with your hands.
If you do, the adhesive may not bond to the windshield properly, causing a leak after the windshield is installed.
- Keep water, dust, and abrasive materials away from the primed surface.

//// : Apply glass primer here.

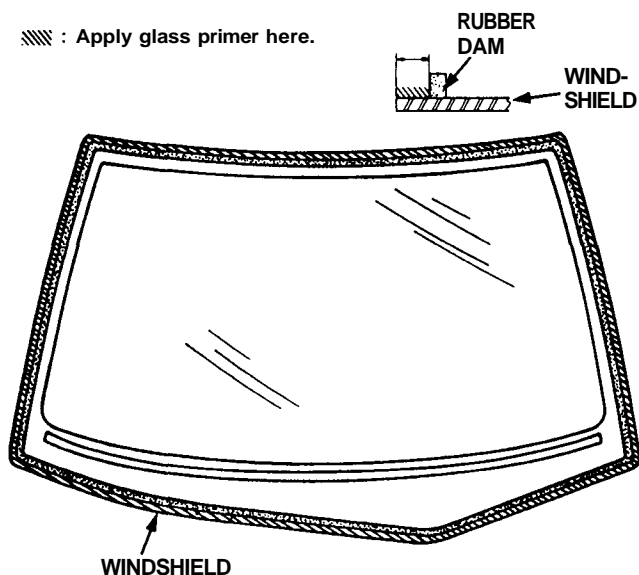


8. With a sponge, apply a light coat of body primer to the original adhesive remaining around the windshield opening flange. The windshield should be installed 10 minutes after you apply the primer.

NOTE:

- Do not apply glass primer to the body, and be careful not to mix up glass and body primer sponges.
- Never touch the primed surfaces with your hands.
- Mask off the dashboard before painting the flange.

//////// : Apply body primer here.

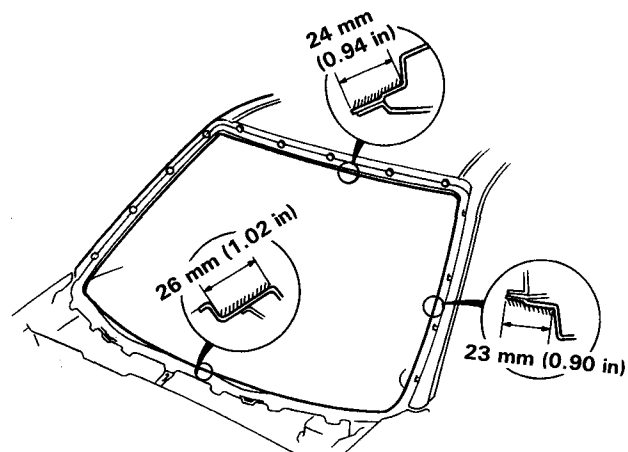


9. Thoroughly mix the adhesive and hardener together on a glass or metal plate with a putty knife.

NOTE:

- Clean the plate with a sponge and alcohol before mixing.
- Follow the instructions that come with the adhesive.

10. Before filling a cartridge, cut the end of the nozzle as shown.

Cut nozzle end as shown.

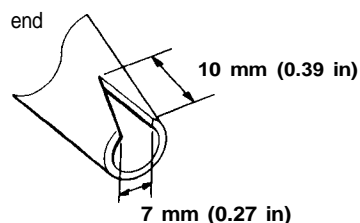


(cont'd)

Windshield

Installation(cont'd)


11. Pack adhesive into the cartridge without air pockets to ensure continuous delivery. Put the cartridge in a caulking gun and run a bead of adhesive around the edge of the windshield as shown.

NOTE: Apply the adhesive within 30 minutes after applying the glass primer.

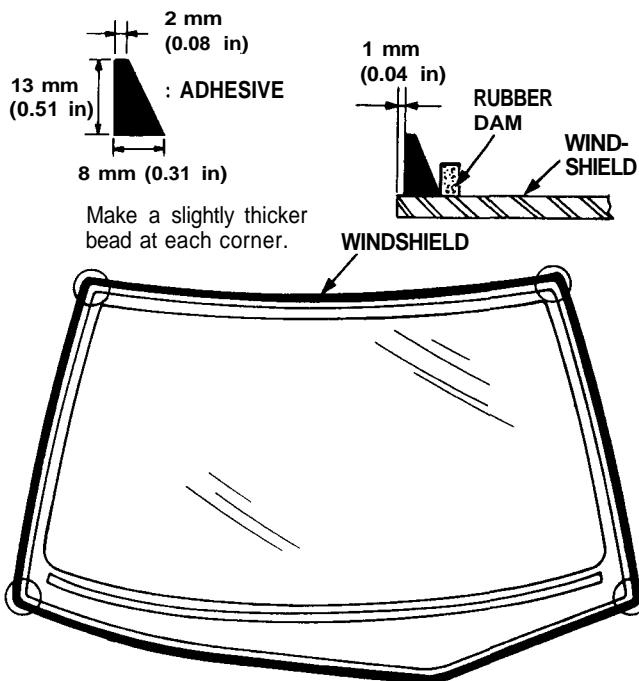


12. Use suction cups to hold the windshield over the opening, align it with the alignment marks made in step 6 and set it down on the adhesive. Lightly push on the windshield until its edge is fully seated on the adhesive all the way around.

NOTE: Do not close or open the doors until adhesive is dry.

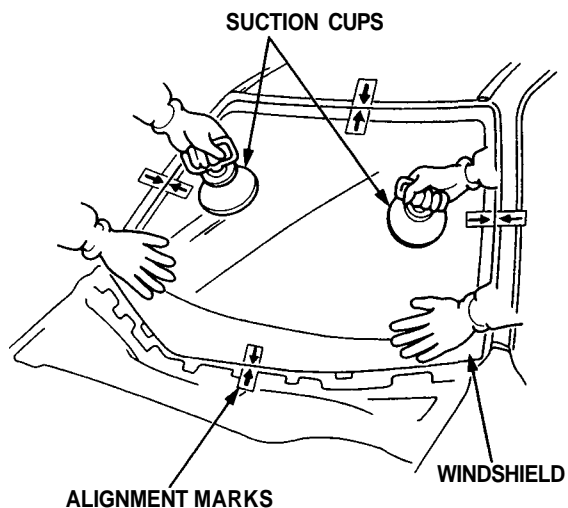

13. Install the clips on the lower molding, upper molding and side molding.

NOTE: The numbers after the part names shown the quantities of the parts used.

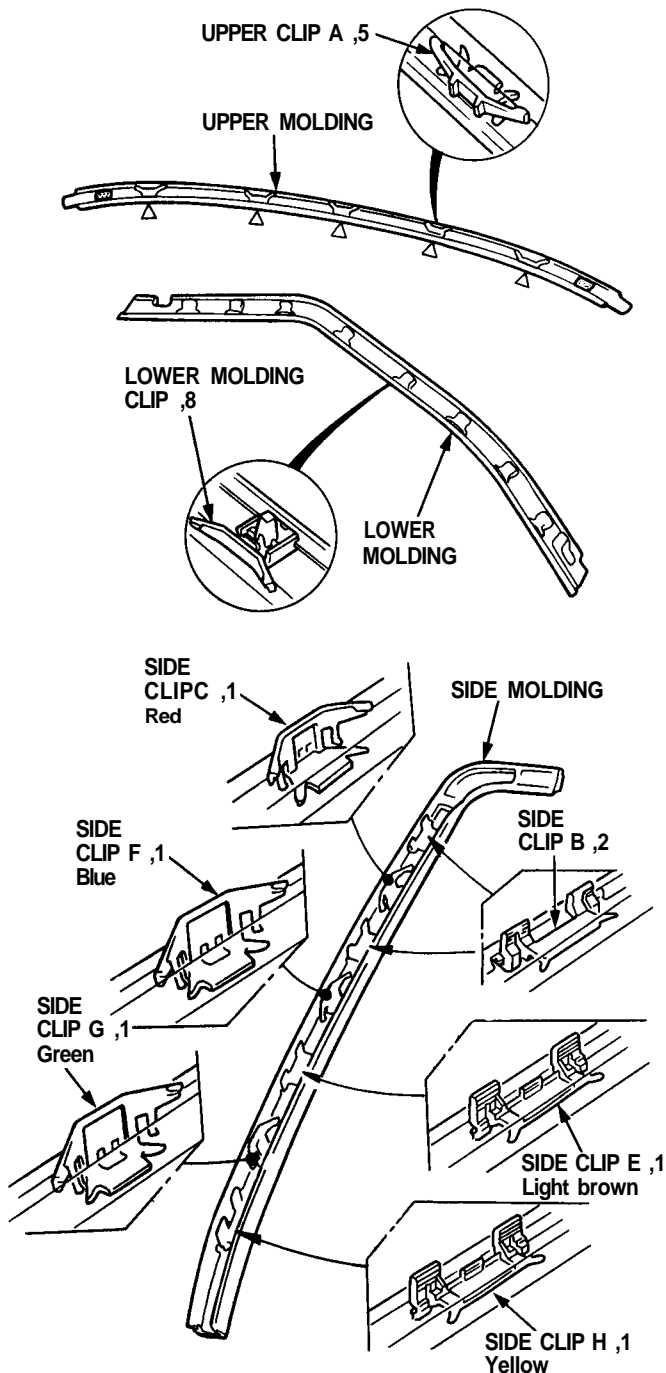

NOTE: Make sure the side clips are installed properly.





14. Scrape or wipe the excess adhesive off with a putty knife or towel.

NOTE: To remove adhesive from a painted surface or the windshield, wipe with a soft shop towel dampened with alcohol.


15. Install the upper molding and lower molding.

NOTE: The numbers after the part names shown the quantities of the parts used.

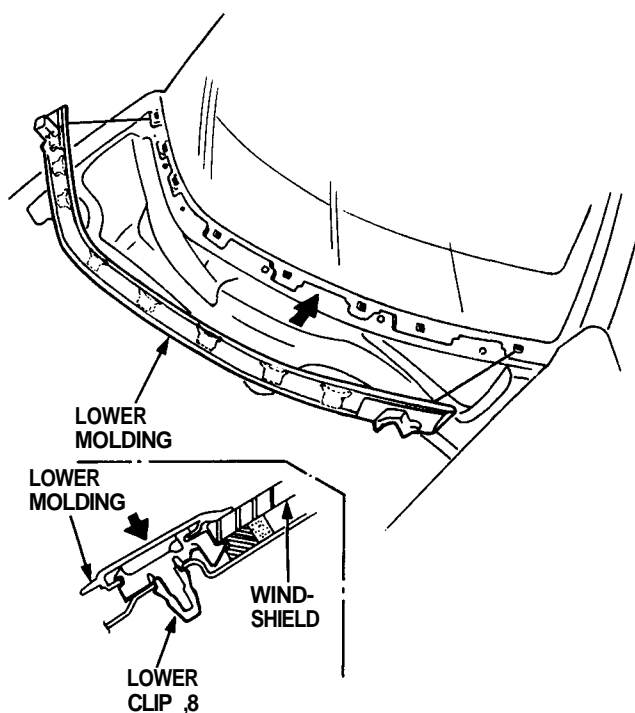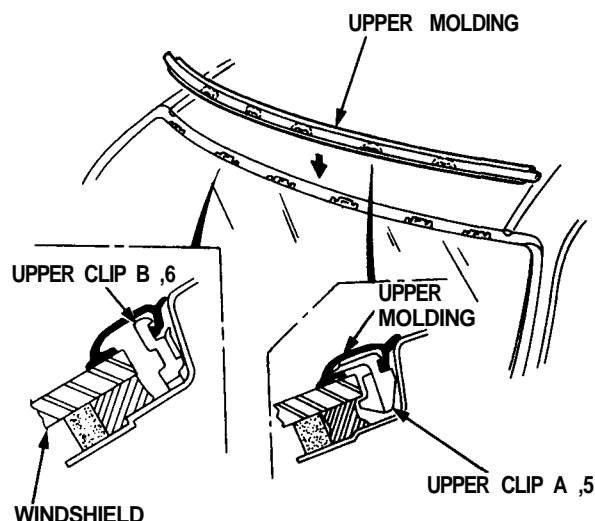

16. Install the both side moldings.

NOTE: The numbers after the part names shown the quantities of the parts used.

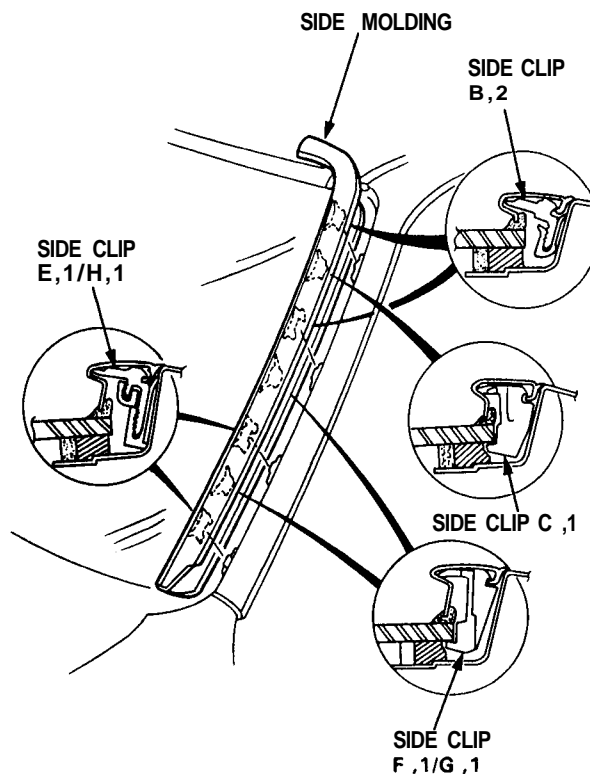

17. Let the adhesive dry for at least one hour, then spray water over the windshield and check for leaks. Mark leaking areas and let the windshield dry, then seal with sealant.

NOTE:

- Let the car stand for at least four hours after windshield installation. If the car has to be used within the first four hours, it must be driven slowly.
- Keep the windshield dry for the first hour after installation.
- Check that the ends of the side molding are set under the air scoop.

18. Reassemble all removed parts.

NOTE: Install the rearview mirror after the adhesive has dried thoroughly.