


Moonroof

Opening Drag Check (Motor Removed)

Before installing the motor, measure the effort required to open the glass using a spring scale as shown.

CAUTION: When using a spring scale, protect the leading edge of the glass with a shop towel.

If load is over 100 N (10 kg, 22 lbs), check side clearance and glass height adjustment (see page 20-36).

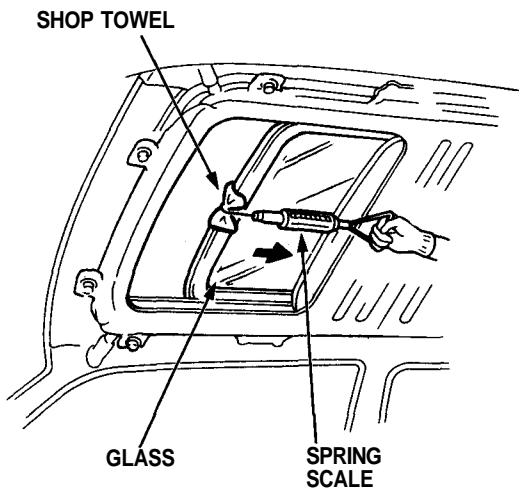


Closing Force Check (Motor Installed)

1. After installing all removed parts, have a helper hold the switch to close the glass while you measure force required to stop it. Attach a spring scale as shown. Read the force as soon as the glass stops moving, then immediately release the switch and spring scale.

CAUTION: When using a spring scale, protect the leading edge of the glass with a shop towel.

Closing Force: 200 – 300 N
(20–30 kg, 44–55 lbs)

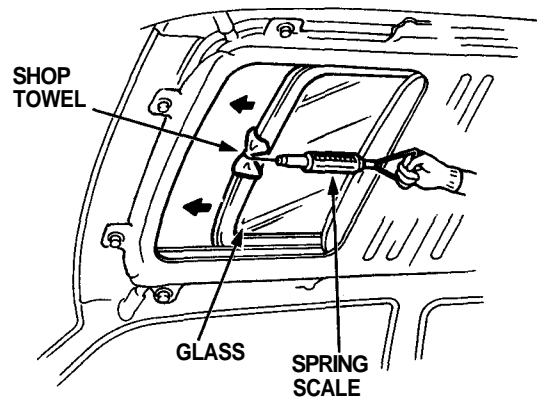

2. If the force is not within specification, install a new lock washer, adjust the tension by turning the motor clutch adjusting nut, then bend the lock washer against the motor clutch adjusting nut.

