


Side Moldings

Replacement (cont'd)

Installation:

15. Install the clips on the molding.
16. Glue the new adhesive tape to the moldings as shown.

 : Adhesive tape locations

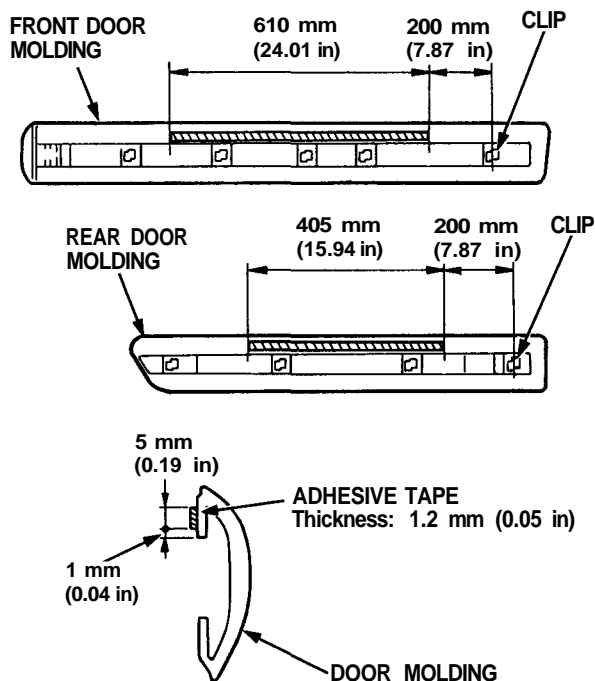

17. Heat the bonding surface of the door and molding with an infrared dryer.

Door: 104–140°F (40–60°C)

Molding: 68–86°F (20–30°C)

NOTE: Use care when heating to prevent deformation of the molding.

18. Align the molding with the clip locations and set the molding. Lightly push on the molding until its edge is fully seated on the adhesive tape.

NOTE: Do not spray water on the molding within the first 24 hours after installation.

19. Reassemble all removed parts.

Rear Emblems

Installation



Apply the emblems where shown.

NOTE:

- Before applying, clean the trunk lid surface with a sponge dampened in alcohol.
- After cleaning, keep oil, grease or water from getting on the surface.
- When applying, make sure there are no wrinkles in the emblems.

Attachment Points:

Unit: mm (in)

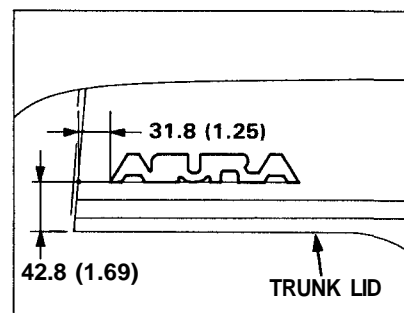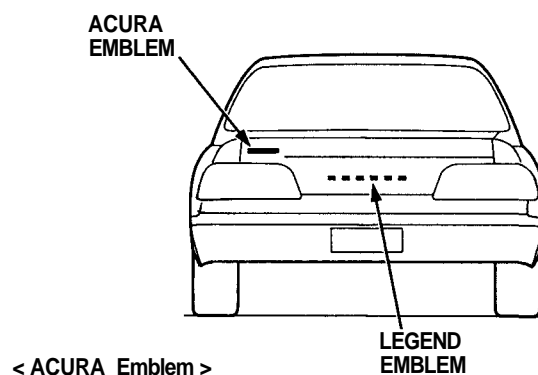

< LEGEND Emblem >

