

# mitreForma™



The MITREFORMA™ is a fabrication tool designed specifically for creating mitred fascias in a quick, precise and fool proof way.

- | Features:   | Benefits:                         |
|---|-----------------------------------|
| Fast  | → Cuts preparation time by 75%    |
| Simple to use   | → Saves labour costs              |
| Built-in square                                       | → Creates high-quality 90° seams  |
| Fascia clamping rod                                   | → Ensures tight seams             |
| Fascia retaining arm                                  | → Ensures accurate alignment      |
| Disposable glue-catcher                               | → Protects tool from glue overrun |
| High-quality aluminium & stainless steel construction | → Long lasting investment         |
| White rubber plate                                    | → Protects surface of stone       |
| Quick release mechanism                               | → Fast operation                  |

Available in two sizes: Up to 130mm fascias  
120 – 320mm fascias

**ACCEPT NO IMITATION, INSIST ON THE GENUINE MITREFORMA™**



Mitreforma™ is proudly endorsed by Caesarstone®  
This product is protected by all relevant patent & registered design applications




Quick Release




Fascia Retaining Arm



Disposable Glue Catcher

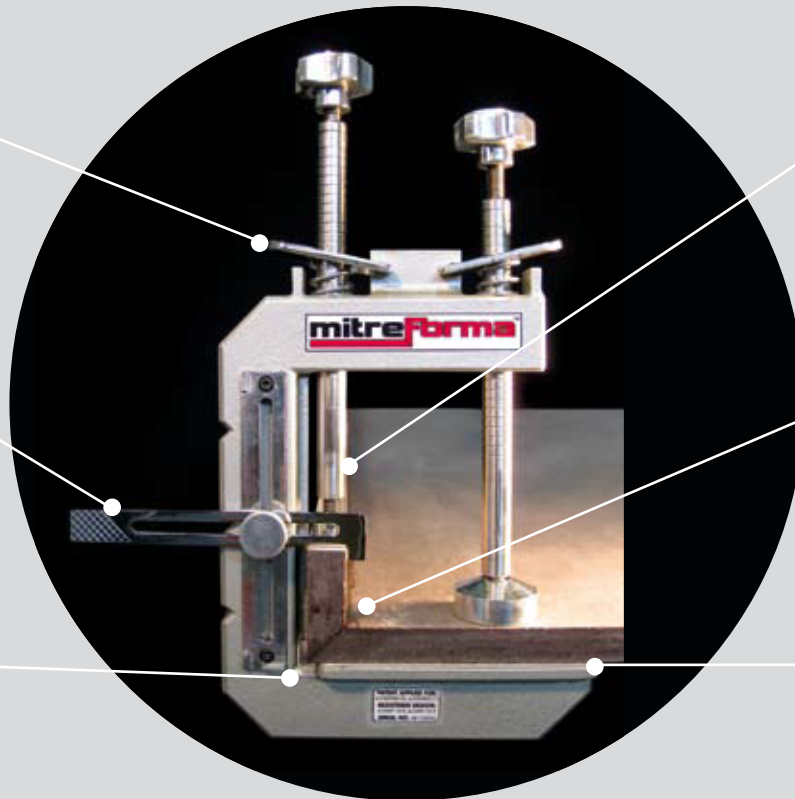

Fascia Clamping Rod

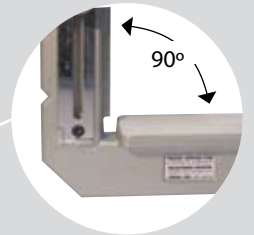

Built In Square



White Rubber Base Plate

**Integra**  
**Adhesives**

4-33759 Morey Avenue  
Abbotsford, British Columbia  
Canada  
V2S 2W5

North America Toll Free: (888) 862-6665  
contact@integra-adhesives.com

## STEP BY STEP INSTRUCTIONS FOR USE



Insert glue-catcher in the rebate of the mitreForma™



Place mitreForma™ in position using the quick-release rod, then screw until finger-tight



Place the fascia in position and ensure it is correctly aligned




Use the retaining arms to ensure fascia is held firmly against the back guide



Use the fascia clamping rods to press the fascia into place. **DO NOT** over-tighten!



Check that all main clamping rods are firm and all the seams are correctly aligned

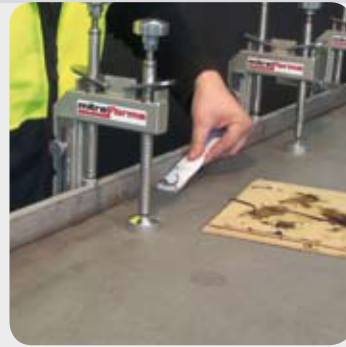

Excess glue can be easily removed once it is sufficiently firm



Once the glue has set, release the retaining arms



Unscrew the fascia clamping rods, then press the quick-release tab and retract the rod



Unscrew the main clamping rod, then press the quick-release tab to lower and remove the mitreForma™

### Tips:

- Glue can be applied to the stone before the mitreForma is placed in position
- A dry-run can be useful for complicated jobs to ensure all pieces align correctly
- **DO NOT** press quick-release tabs while clamping rods are under pressure
- **DO NOT** over-tighten either of the clamping rods
- Glue-catcher should be replaced after each use