



Beautiful Made Easy



WAVES

3.0 mm LVP Herringbone Collection

UNIQUE FEATURES



Stain & Scratch
Resistant



Light Commercial
Foot Traffic



Easy
Installation



Zero
Maintenance




Natural Looking
Design




Easy Clean

INSTALLATION PATTERN

Herringbone

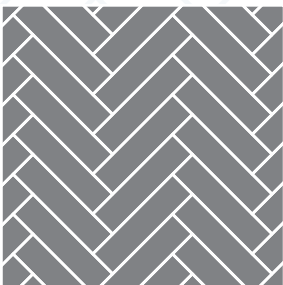


Double Herringbone

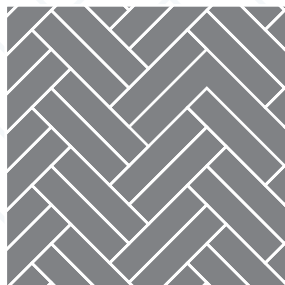


Basket Wave




Diagonal Basket Wave

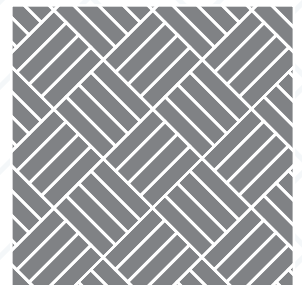

Diagonal Herringbone

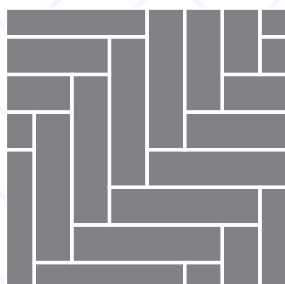

Brick

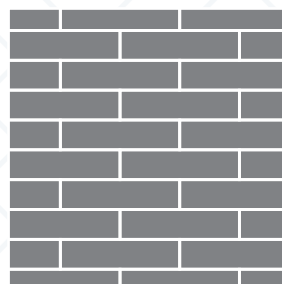



RUSTIC ALMOND
WA - 1140
48 Pcs per box / 24 Sqft



BERRY CRIMSON
WA - 1190
48 Pcs per box / 24 Sqft



GRAPHITE GLAM
WA - 2060
48 Pcs per box / 24 Sqft



LUNAR DRIFT
WA - 3110
48 Pcs per box / 24 Sqft



SILVER WHISPER
WA - 3020
48 Pcs per box / 24 Sqft



SMOKE VEIL
WA - 3130
48 Pcs per box / 24 Sqft



NUDE NOUVEAU | SILVER WHISPER
WA - 1100 | 3020
48 Pcs per box / 24 Sqft



CHOCO LAVA | NUDE NOUVEAU
WA - 2110 | 1100
48 Pcs per box / 24 Sqft

SPECIFICATION

DESCRIPTION			
Total Thickness	EN428	mm	3.0mm
Thickness of Wear layer	EN429	mm	0.3
Weight	EN430	g/m ²	2741
Plank Size	EN427	inch	4x18
Number of floor per package	-	-	48 PCS
CLASSIFICATION			
Norm/Product specification	-	-	EN 649
European classification	EN 685	class	34-43
Fire rating	EN 13 501-1	class	Bf-1
Static electrical propensity	EN 1815	kv	< 2.0
Slip resistance wet: ramp test with oil	DIN 51 130	class	R10
PERFORMANCE			
Wear resistance	EN 660.2	mm ³	≤2.0
Wear group	EN 649	-	T
Dimensional stability	EN 434	%	≤0.15
Residual indentation	EN 433	mm	0.10
Thermal conductivity	EN 12524	W/(m.K)	0.21
Sound Reduction	DIN 52210	db	4.00
Color fastness	EN 20 105-B02	degree	≥6
Chemical products resistance	EN 423	-	Pass
Surface treatment	-	-	UV

*Actual color of the product may vary due to batch difference

STANDARD INSTALLATION GUIDELINE

- 1. Measurement:** Check the room dimension by getting it measured by a professional installer.
- 2. Prepare Subfloor:** Ensure the subfloor is clean, dry, and level. Repair any imperfections and remove debris.
- 3. Acclimate Planks:** Let the luxury vinyl planks acclimate to the room for at least 48 hours before installation.
- 4. Cutting Planks:** Use a utility knife or saw to cut planks. Measure and mark accurately.
- 5. Layout Planning:** Plan the layout, ensuring the first row is straight. Avoid narrow plank widths at walls.
- 6. Adhesive Application:** Use the recommended trowel size adhesive and apply to the floor and expose some adhesive across the back of the sheet. The adhesive should be allowed to dry before fixing the flooring sheet by applying pressure evenly on the floor.
- 7. Cleaning:** Clean excess adhesive immediately and mop the floor with clean water. Avoid using adhesive cleaners, ammonia-based products and harsh chemical as they can damage the Vinyl's surface.



Beautiful Made Easy

WAVES

3.0 mm LVP Herringbone Collection



www.excelwallpapers.com