



Surface Mount Box

Quick Instruction Guide


Models 100601, 100632, 408301, 408394, 408332 and 408417

Follow the steps on this guide for easy, reliable connections. Use for a variety of Intellinet Network Solutions products: shielded (FTP) or unshielded (UTP); Cat5e or Cat6; and 1-, 2- or 8-port versions.



T568A		T568B	
Pin 5	White/Blue	Pin 5	White/Blue
Pin 4	Blue	Pin 4	Blue
Pin 1	White/Green	Pin 1	White/Orange
Pin 2	Green	Pin 2	Orange
Pin 3	White/Orange	Pin 3	White/Green
Pin 6	Orange	Pin 6	Green
Pin 7	White/Brown	Pin 7	White/Brown
Pin 8	Brown	Pin 8	Brown

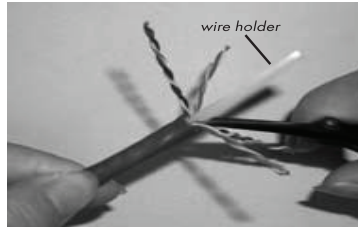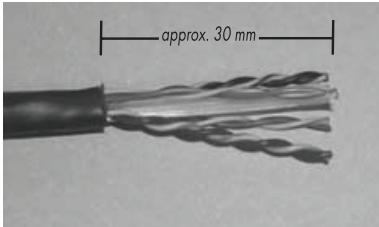


Carefully strip away approximately 30 mm of the cable jacket(s) (left) to be connected to the Box, separating the wires into four pairs. Use a wire cutter to cut the wire holder (right) flush with the cable jacket.

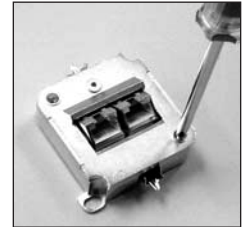


Remove cover plate (left) from the box; then, remove the inner cover (right) to reveal the color-coded pins inside the unit.

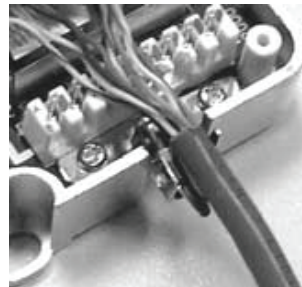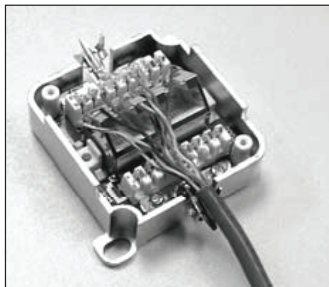


Place the end of the cable jacket onto the cable clamp, so that the wire pairs can easily be positioned as needed inside the box.

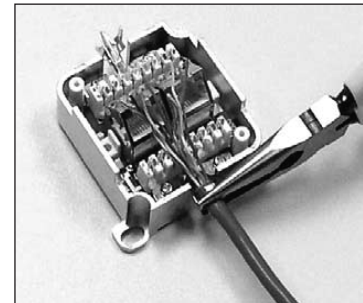

Using pliers, tighten the cable clamp to secure the cable to the Box.

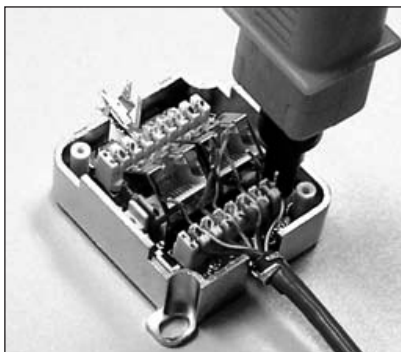

Use a Krone punch-down tool to crimp each pair of wires and connect them to their corresponding color-coded pairs.

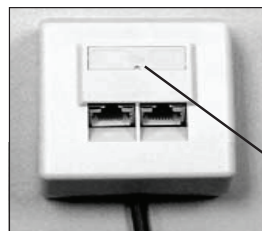

nameplate

Re-attach the inner cover and the cover plate. Insert the nameplate components in the cover plate slot above the port(s).



intellinet-network.com