



French Door Shade Measuring Instructions

Measuring for Windows without Trim:

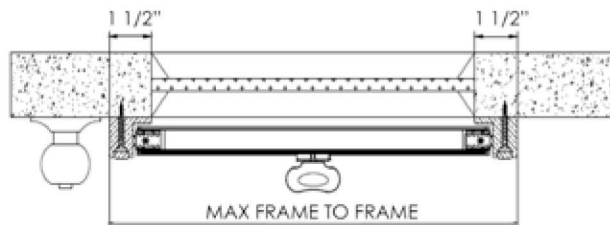

Add 1½" on each side of window opening for max frame-to-frame measurement

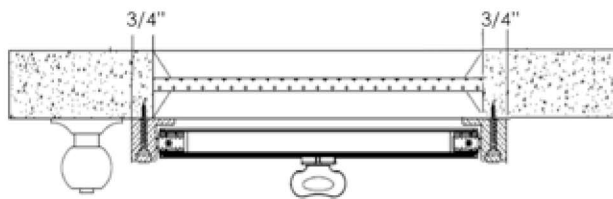

The L-frame design requires a minimum of ¾" to avoid hitting the glass

Measuring for Windows with Trim:

- For windows with trim, add 1 9/16" on each side from the outside trim for max frame-to-frame measurement

NOTES:

- French Door Shade works especially well on doors with knobbed handles
- Minimum 1 5/16" from door surface to door handle is needed to leave room for the frame

