


DASH MOUNT PHONE HOLDER CHARGER

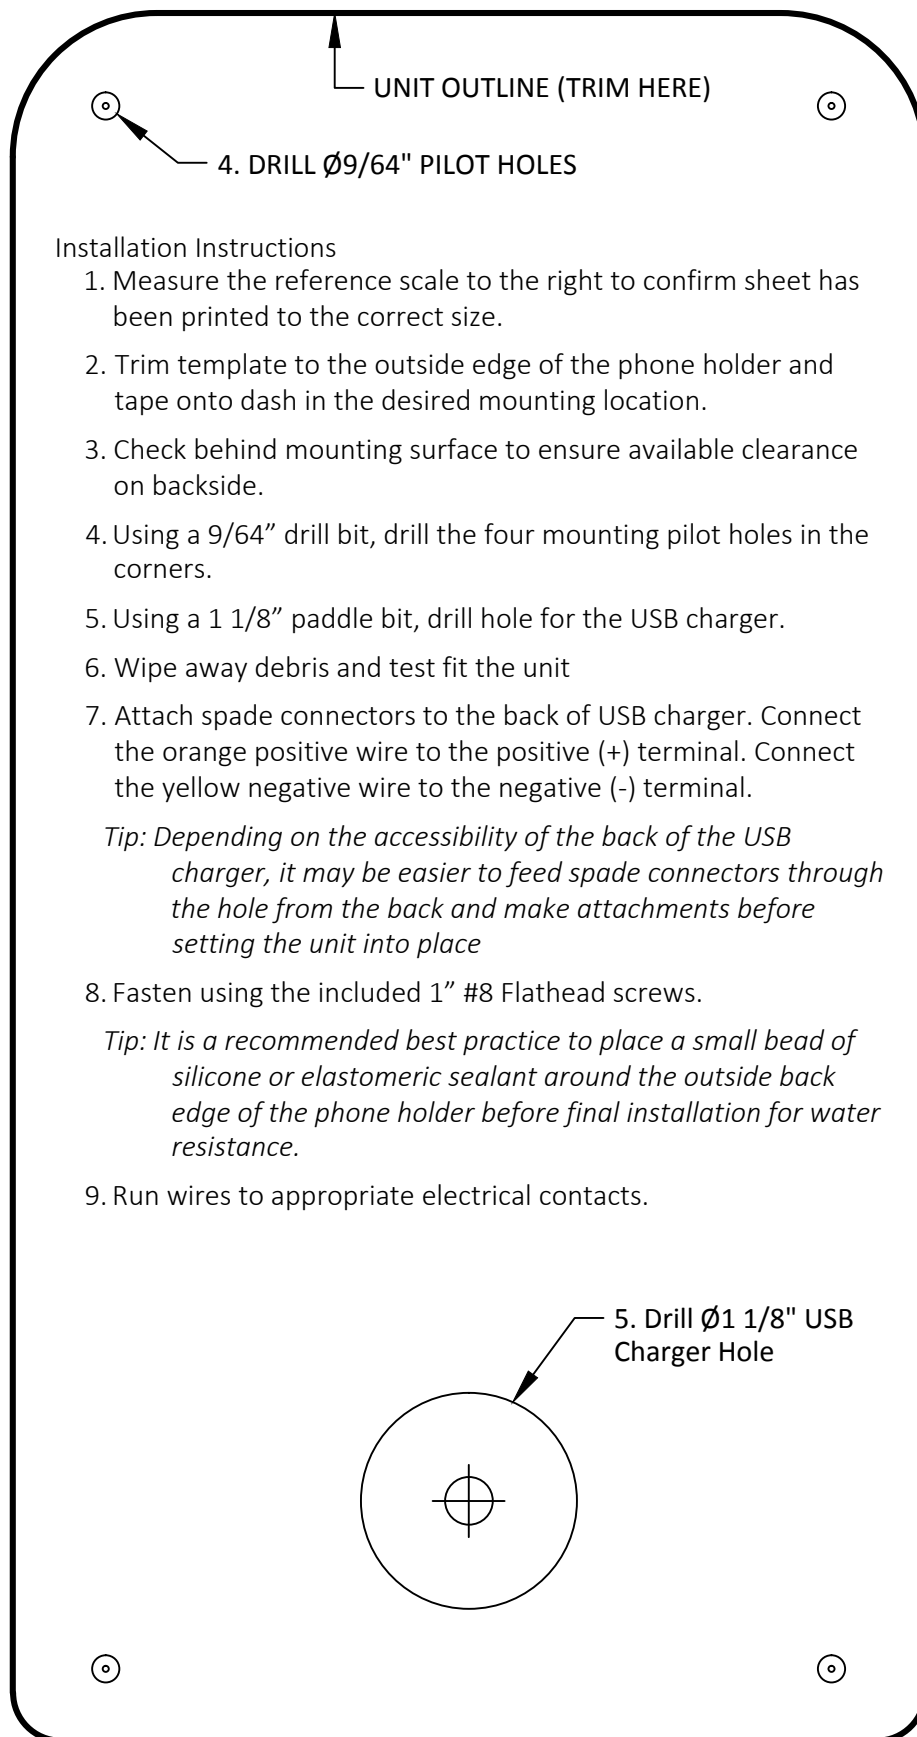

Installation Instructions


1. Measure the reference scale to the right to confirm sheet has been printed to the correct size.
2. Trim template to the outside edge of the phone holder and tape onto dash in the desired mounting location.
3. Check behind mounting surface to ensure available clearance on backside.
4. Using a 9/64" drill bit, drill the four mounting pilot holes in the corners.
5. Using a 1 1/8" paddle bit, drill hole for the USB charger.
6. Wipe away debris and test fit the unit
7. Attach spade connectors to the back of USB charger. Connect the orange positive wire to the positive (+) terminal. Connect the yellow negative wire to the negative (-) terminal.

Tip: Depending on the accessibility of the back of the USB charger, it may be easier to feed spade connectors through the hole from the back and make attachments before setting the unit into place

8. Fasten using the included 1" #8 Flathead screws.

Tip: It is a recommended best practice to place a small bead of silicone or elastomeric sealant around the outside back edge of the phone holder before final installation for water resistance.

9. Run wires to appropriate electrical contacts.

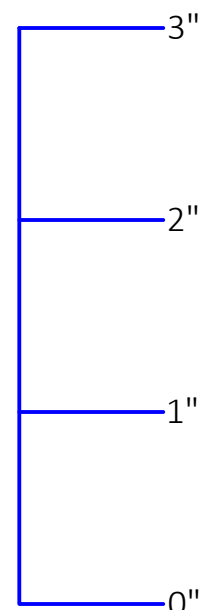

REFERENCE
SCALE