



Flip Your Empty
Cooler Upside Down.

1. Flip Cooler

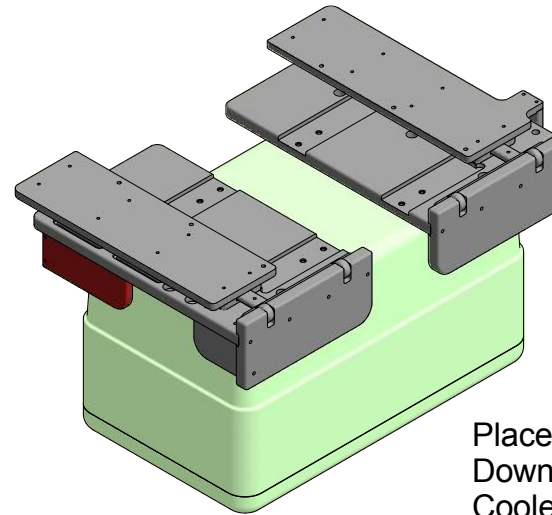


Place Slides Upside
Down on Bottom Of
Cooler.

2. Place Slides

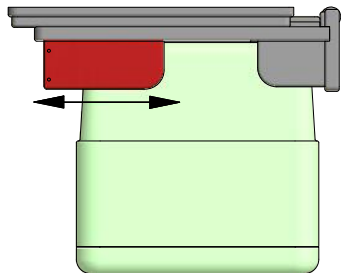


3. Adjust Retainer

Slide Back Retainer Until
Tight Against Cooler.

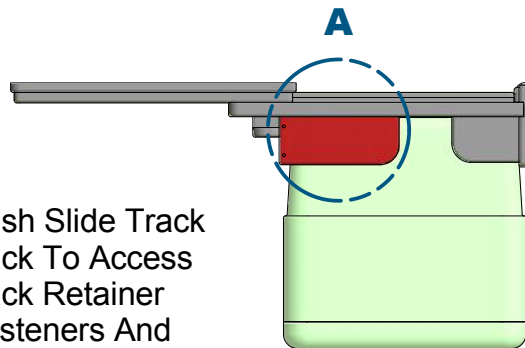


Push Slide Track
Back To Access
Back Retainer
Fasteners And
Tighten Accordingly.

4. Tighten Retainer Fasteners

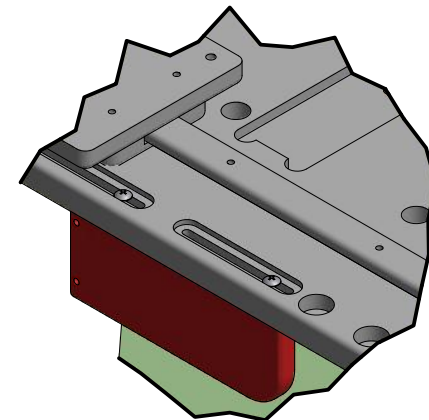


Detail A

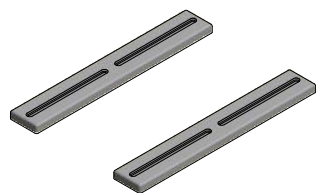

Multiple Spanner Kits Supplied To Accomodate Varying Cooler Widths.


Note: Only One Pair Of Spanners Will Be Used. Others Can Be Discarded.

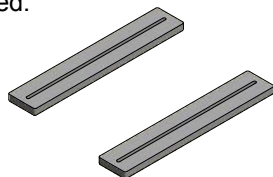


5. Spanners

Choose Among Available Spanners For Appropriate Size That Allows You To Fasten Into The Threaded Inserts.

Tighten Accordingly.

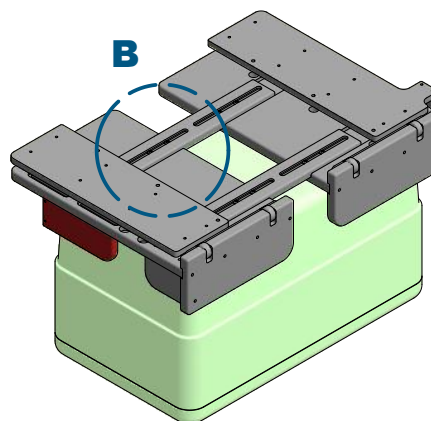


Spanner Set Screws

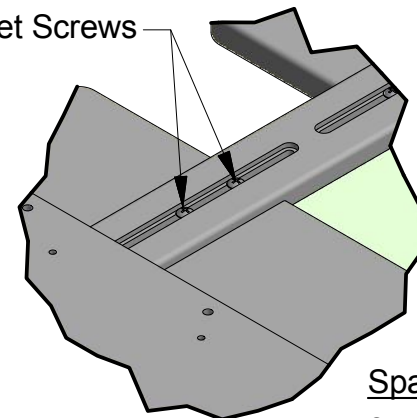

Spanner Set Screw
8 pcs. 8-32 x $\frac{3}{4}$ "


Detail B

6. Fastening Spanners

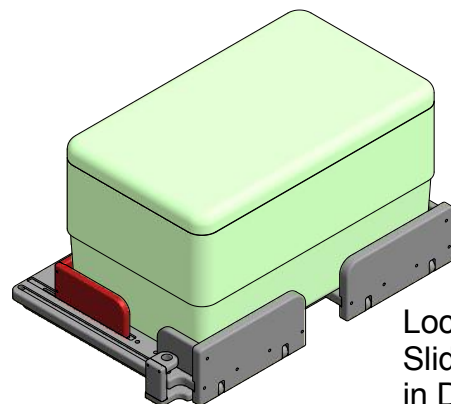

Locate Assembled Slides And Cooler in Desired Location

7. Location

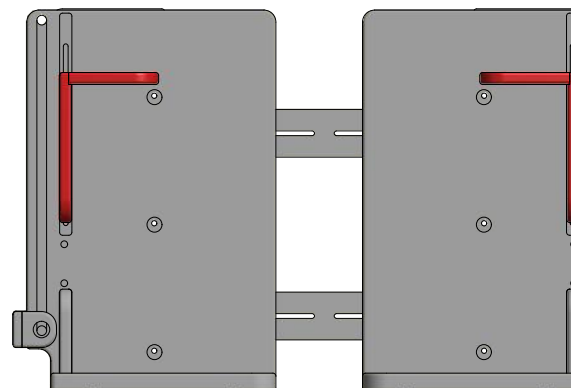

Remove Cooler And Fasten Slides To Deck Using Supplied Fasteners.

Deck Fasteners
6 pcs. #10 x $1\frac{1}{4}$ "

8. Mounting