



DIY MASTER BED ACCENT WALL



HISTORYMAKER

H O M E S

est 1949

DIY MASTER BED ACCENT WALL AT SIERRA VISTA

Designed By: Sarah Ciesla for HistoryMaker Homes

Supplies:

- Latex Wall Paint - we used Sherwin William's 7006 Extra White
- Clear Wood Finish
- 1x2 Paint Grade Clear Flat Trim
- Finish Nails
- Putty (to match wood stain)

Tools:

- Tape Measure
- Pencil
- 4-ft and 2-ft levels
- Miter Saw
- Paint brushes
- Hammer / Nail Gun
- Nail Set
- 220-grit Sandpaper
- 320-grit Sandpaper
- Tack Cloth

Step by Step:

Preliminary Work - Wood Trim

- Use 220-grit sandpaper and sand all surfaces of 1x2 wood trim. Then use 320-grit sandpaper and sand all visible surfaces and edges of wood trim. Use sanding block, sand with grain, and be careful not to round off edges.
- Remove all sanding dust and wipe down with tack cloth.
- Follow clear wood finish manufacturer's instructions and pre-coat all visible surfaces and edges of 1x2 wood trim. Let dry 24-hours.

1. Prepare Area for Work

- Lay plastic or fabric drop cloth on floor. Tape or tack as required to keep covering in place to protect adjacent surfaces.
- Follow latex wall paint manufacturer's instruction and paint wall.

2. Mark Outline of Feature on Wall

- Use drawings (Figure A) as reference. Note where dimensions are to faces or centerlines of wood trim. **Work slowly - measure 3-times, and draw lines once.** Use 4-ft and 2-ft levels to be sure that lines are perfectly level, plumb, or angled, as required.


3. Install Wood Trim

- Use drawing (Figure A) as reference. Use miter saw and cut wood trim to length. **Work slowly - measure 3 times and cut once.**
- Apply clear finish to cut ends of trim. Let dry 24-hours.
- Install wood trim with finish nails. Use level to insure trim is perfectly level or plumb. Set nail heads 1/16" below surface of wall trim and fill with putty to match wood color.

4. Final Coat Clear Finish Wood Trim

- Follow clear finish manufacturer's instructions and apply final coat to wood trim features. Let dry 24-hours.
- Touch up wall paint where required to cover pencil marks or blemishes.

Figure A

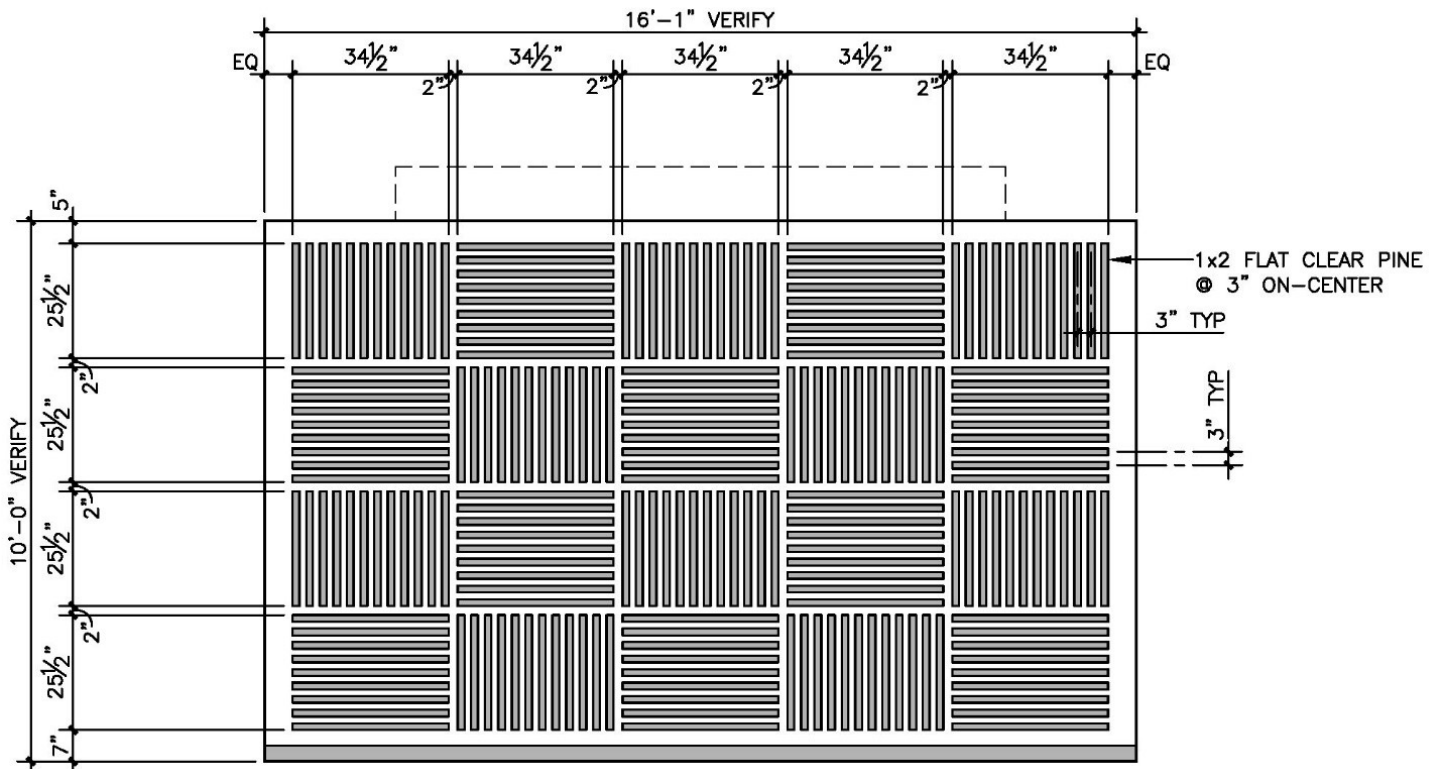

Stand Back and Enjoy Your Work - You're Finished!



You Did It!