

DIY BEDROOM GRID WOOD WALL



HISTORYMAKER
HOMES

est. 1949

DIY BEDROOM GRID WOOD WALL AT CLOVERLEAF CROSSING

SUPPLIES:

- 1x2 Flat trim (actual dimensions are typically 3/4" x 1-1/2")
- Latex Primer
- Latex wall paint accent color – we used Sherwin Williams 9163 Tin Lizzie
- Latex trim paint – we used Sherwin Williams 6991 Black Magic semi-gloss
- Finish nails
- Wood putty
- Sandpaper
- Plastic or fabric drop cloth

TOOLS:

- Tape measure
- 2-ft level
- 4-ft Level
- Miter saw
- Hammer or nail gun
- Nail set
- Putty Knife
- Sanding Block
- Tack Cloth
- Paint brushes/roller

PRELIMINARY WORK:

- Sand 1x2 trim with 320-grit sandpaper. Use sanding block to avoid rounding off edges. Clean sanding dust from 1x3 flat trim and wipe with tack cloth.
- Apply latex primer to 1x2 flat trim.
- Apply 1-coat of latex trim paint to 1x2 flat trim.

**All finishes, primers, fillers, putty, glue etc. are to be applied and allowed to dry per product manufacturer's specifications.*



STEP BY STEP:

1. PREPARE AREA FOR WORK


- Lay plastic or fabric drop-cloth on floor. Tape or tack as required to keep covering in place to protect adjacent surfaces and/or areas.

2. PAINT WALL ACCENT COLOR

3. INSTALL 1X2 FLAT TRIM

- Refer to Figure A.
- Use miter saw to cut 1x2 flat trim to length and install using finish nails. Use level where require and insure that vertical members are perfectly plumb.
- Use nail set to set nail heads $\frac{1}{16}$ " below surface of trim, fill nail holes and any join imperfections with putty, let dry and sand smooth.
- Apply final coat of latex trim paint to 1x2 flat trim.
- Apply latex wall paint where required for touch-up.
- Remove plastic and/or drop cloth used to protect floor and/or other surfaces.

(FIGURE A)

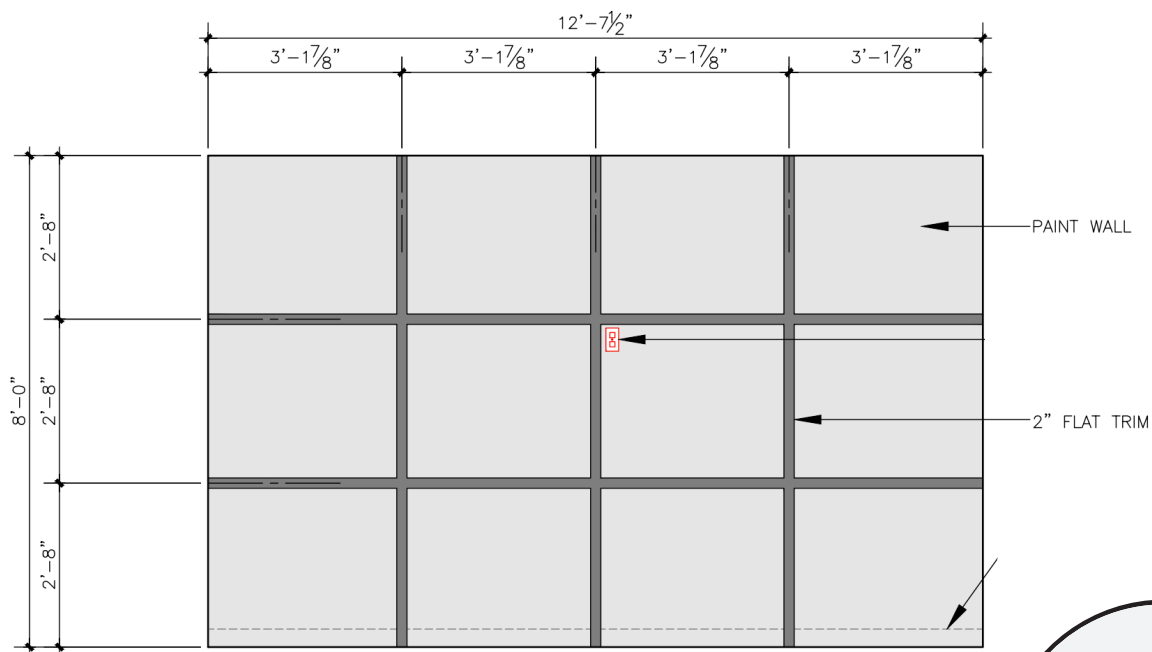

**STAND BACK & ENJOY YOUR WORK.
YOU DID IT!**



Now post a picture of your finished product on Facebook or Instagram and tag HistoryMaker Homes to show off your work!

