

8 DRAWER LOWBOY

ITEM CODE : JCD1438-8

2.0 HR

APPROXIMATE ASSEMBLY TIME




**2 PERSON
ASSEMBLY**

**FLOOR AREA
2.0M X 2.0M**




REQUIRED ASSEMBLY SPACE


REQUIRED ASSEMBLY TOOLS



POZI SCREWDRIVER

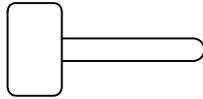

HAMMER

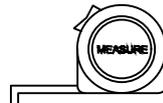


MEASURING TAPE



DRILL

ASSEMBLED DIMENSIONS

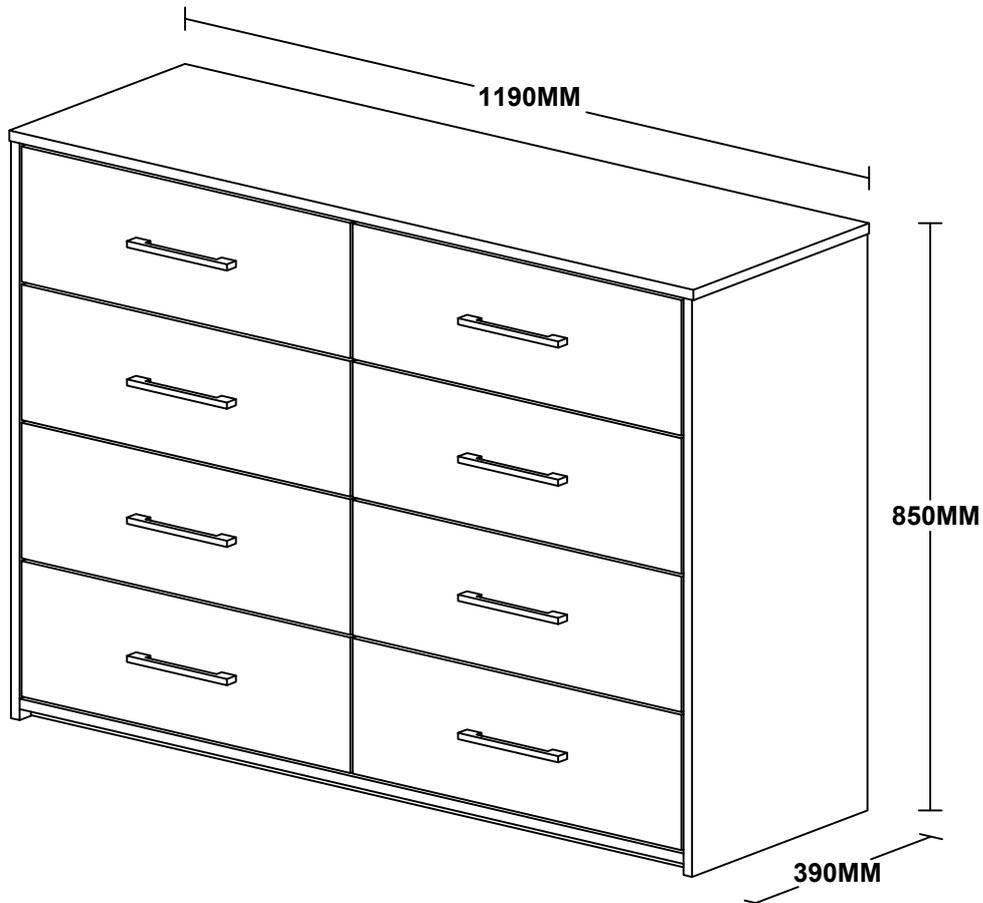

8 DRAWER LOWBOY

ITEM CODE : JCD1438-8

Tips before you start :

1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people (as Indicated on page 1) to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessary once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is non industrial product.

Care and Maintenance of your Furniture




- Please periodically check all fittings and re-tighten as necessary.
- To clean your item, please use a damp cloth and wipe clean.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- Please do not place hot item (e.g. hot drinks) directly on to the wood surface.
- Please do not drag or pull your furniture.

8 DRAWER LOWBOY

ITEM CODE : JCD1438-8


Tips before you start :

QUICKFIT

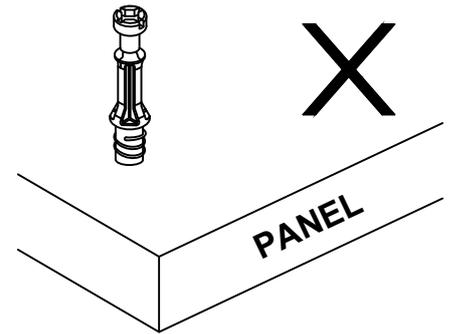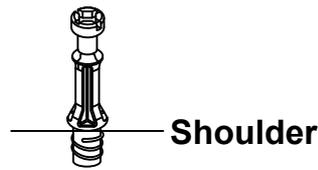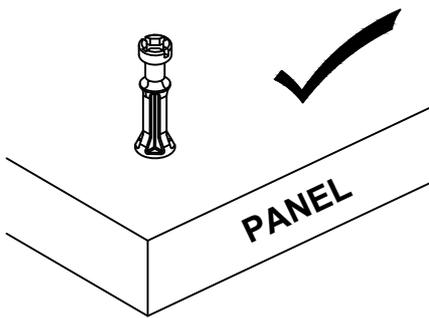

Tighten quickfit until shoulder is flush with panel . Do not overtighten or undertighten.


CAM LOCK

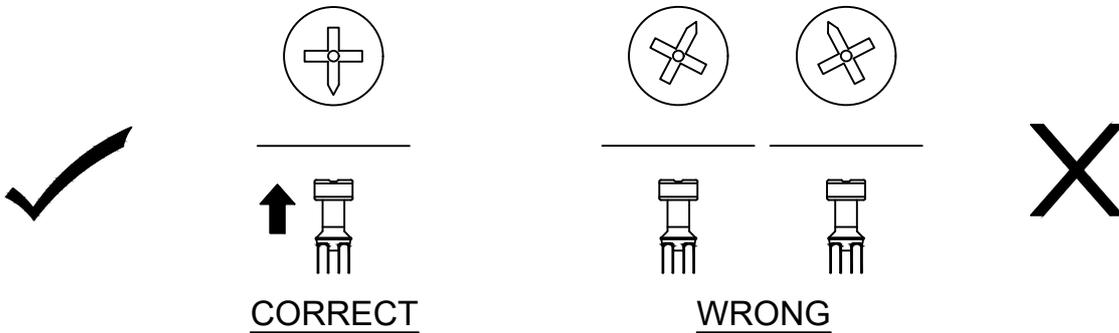

When fitting cam lock , ensure starting position is correct before you insert connecting quickfit.

Quickfit head should be in the center of the cam lock when the two panels are joined .

Cam lock should be inserted before quickfit

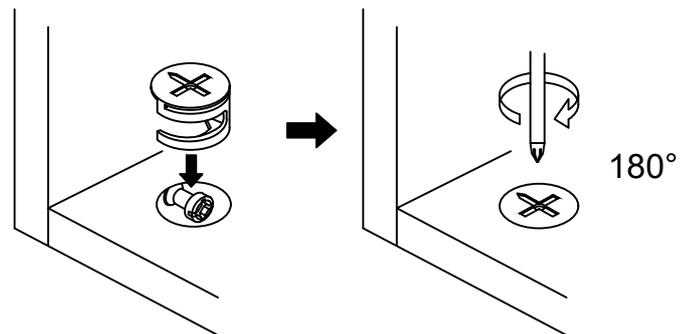


Turn cam lock clockwise to tighten.

8 DRAWER LOWBOY

ITEM CODE : JCD1438-8

PART LIST:

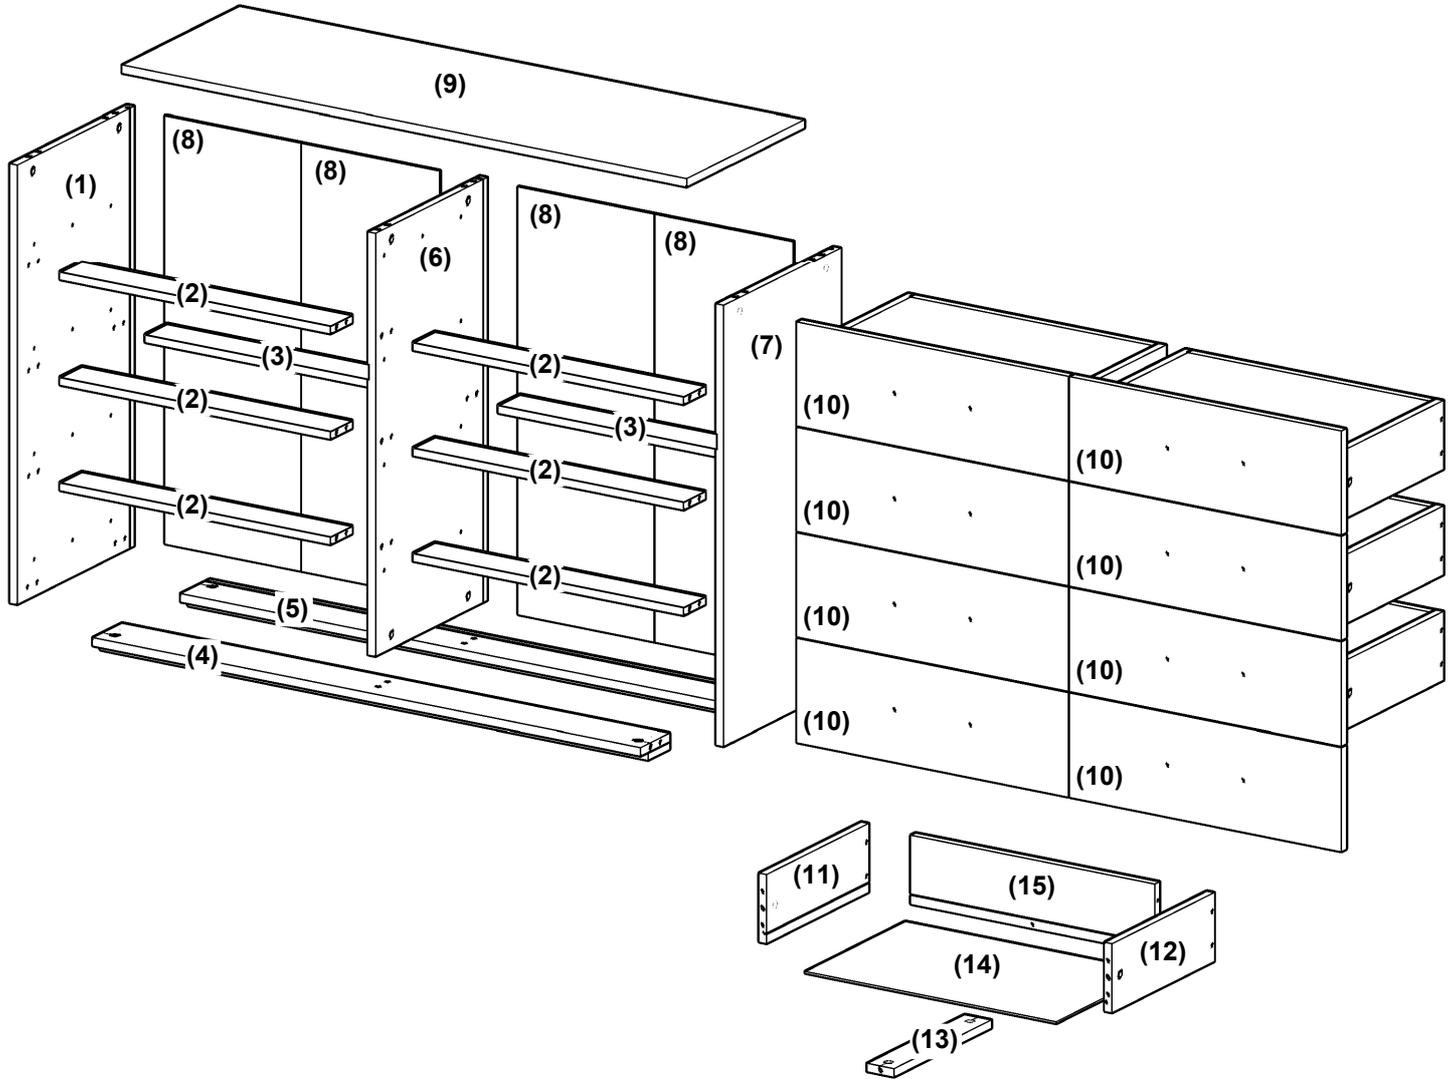

NO.	PART NAME	QTY
1	SIDE PANEL (LEFT)	1
2	SLATS (FRONT)	6
3	SLATS (BACK)	2
4	BOTTOM SLATS (FRONT)	1
5	BOTTOM SLATS (BACK)	1
6	MIDDLE PANEL	1
7	SIDE PANEL (RIGHT)	1

8	BACK PANEL	4
9	TOP PANEL	1
10	DRAWER PANEL (FRONT)	8
11	DRAWER SIDE PANEL (LEFT)	8
12	DRAWER SIDE PANEL (RIGHT)	8
13	DRAWER BOTTOM SLATS	8
14	DRAWER BOTTOM PANEL	8
15	DRAWER PANEL (BACK)	8

8 DRAWER LOWBOY

ITEM CODE : JCD1438-8

HARDWARE LIST

A x 96



SCREW M3.5 x 16MM

B x 18



SCREW M3.5 x 20MM

C x 16



SCREW M4 x 28MM

D x 32



SCREW M4 x 38MM

E x 60



DOWEL Ø6 x 25 MM

F x 52




CAM BOLT

G x 60




CAM NUT

H x 4




DOUBLE END
BOLT 7MM

I x 8




PVC HANDLE

J1 x 8 PAIR



J2 x 8 PAIR



14" DRAWER SLIDE

K x 10



GLIDER NAIL

L x 18



BACK PANEL
CONNECTOR

Tips before you start :


- Please check that all parts are present before you start the assembly of your furniture. Please do not start to build your item if any parts are damaged as this may void your warranty. Please contact the retailer immediately so they can advise what you should do.
- For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.

8 DRAWER LOWBOY

ITEM CODE : JCD1438-8

STEP 1

Insert the Dowel (E) into the designated hole as shown.

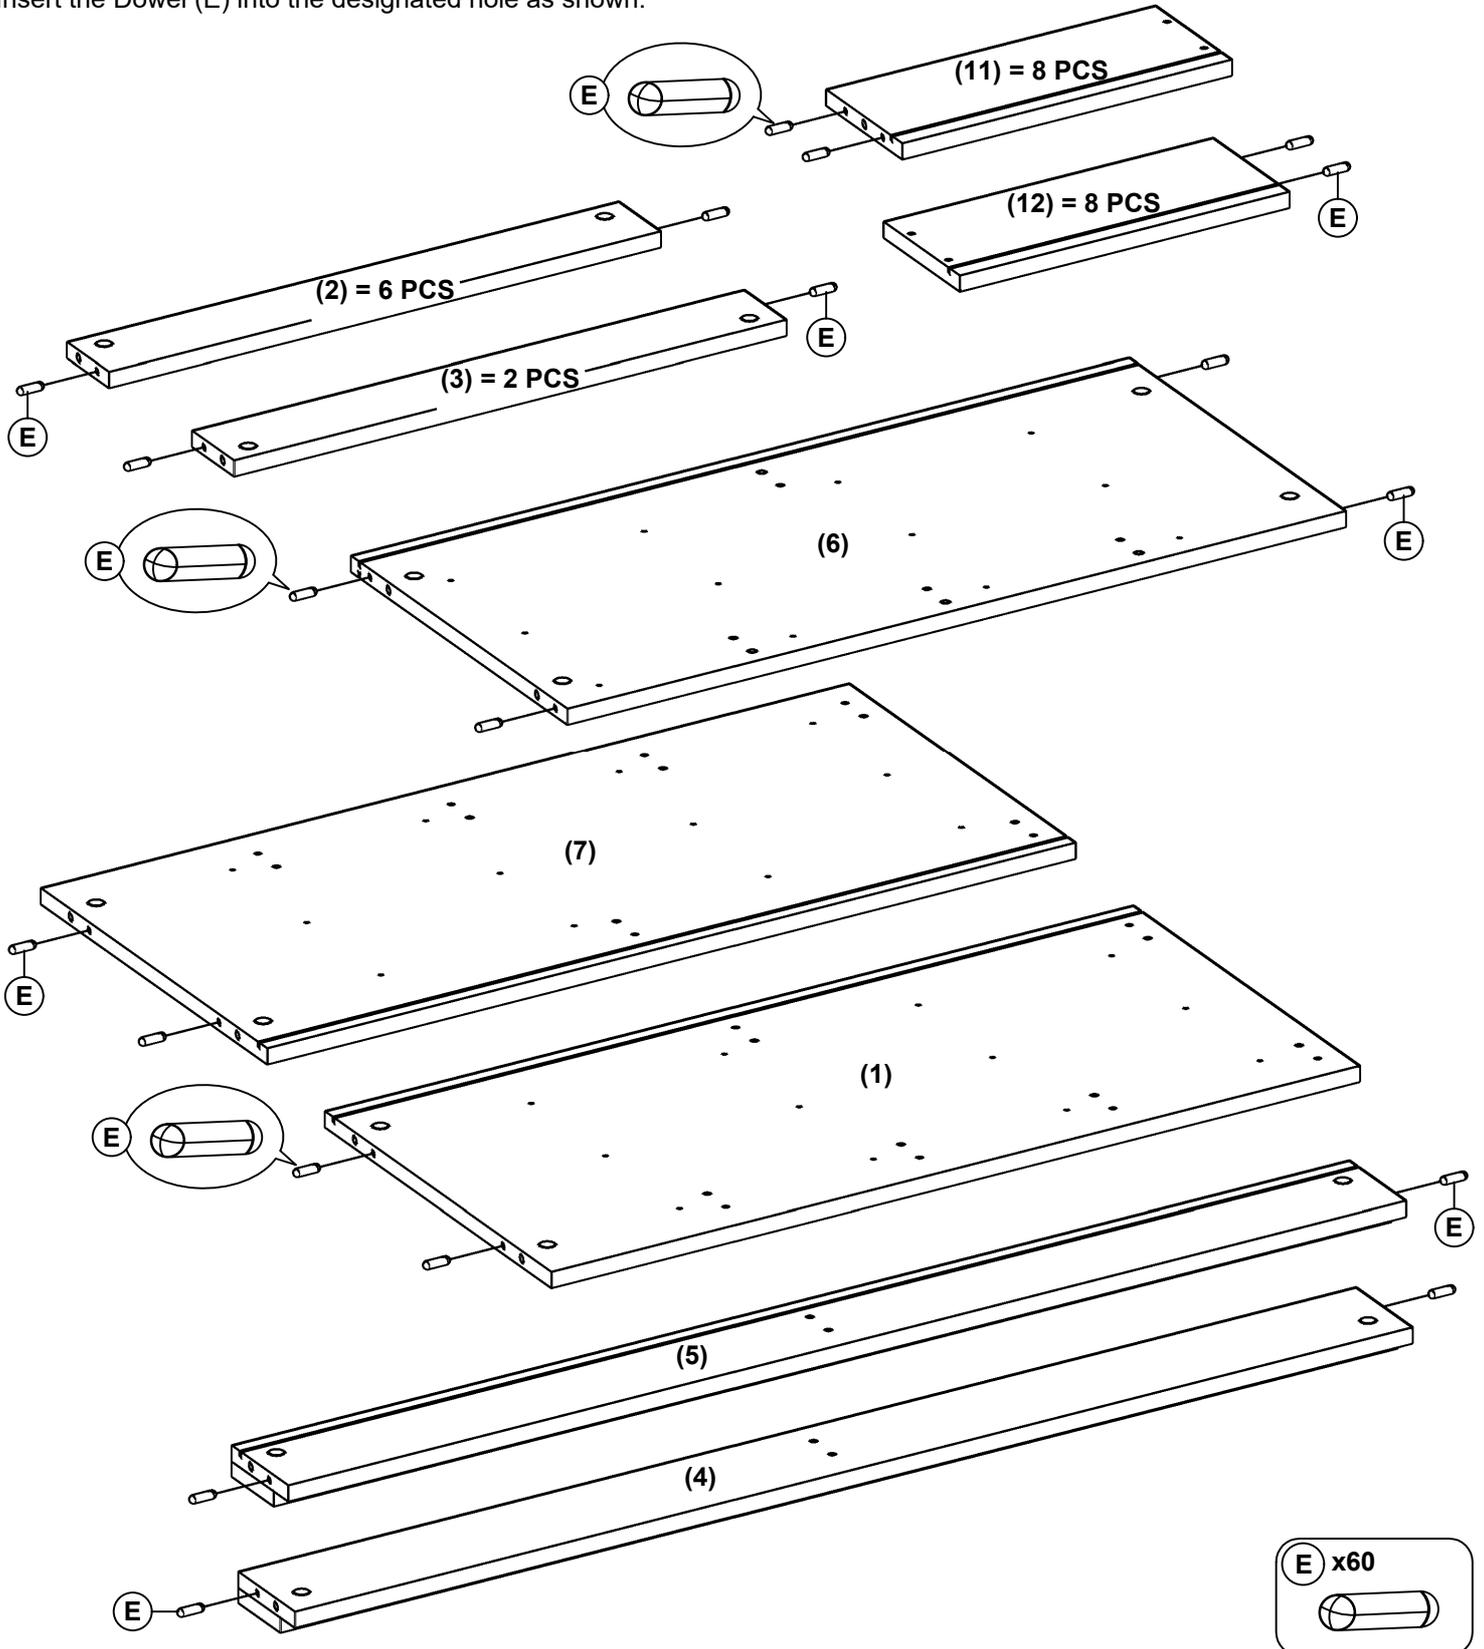


8 DRAWER LOWBOY

ITEM CODE : JCD1438-8


STEP 2

Insert the Cam bolt (F) into the designated hole as shown.

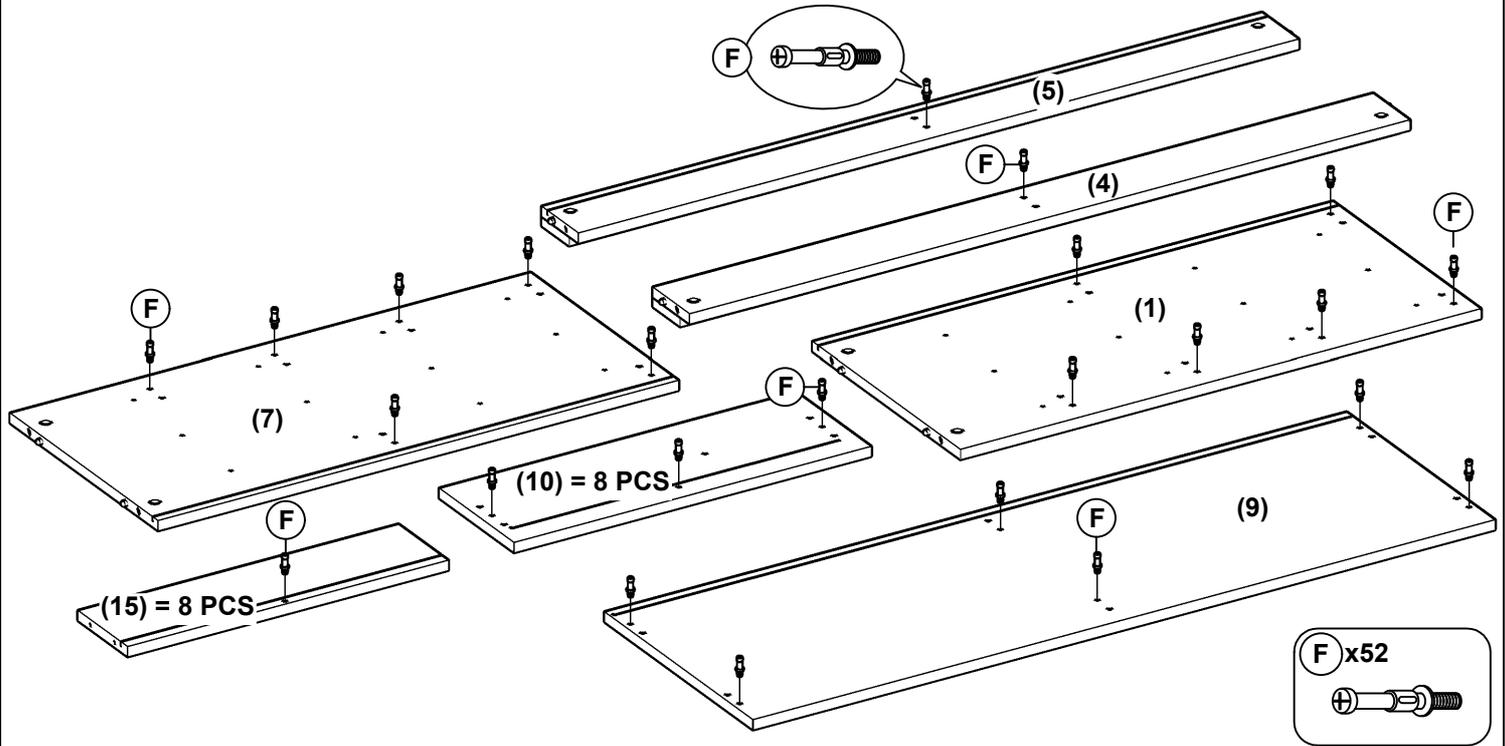

STEP 3

Make sure the holes in the drawer slides (J1) line up with the holes shown in the picture and are positioned correctly, then tighten the screws (A).

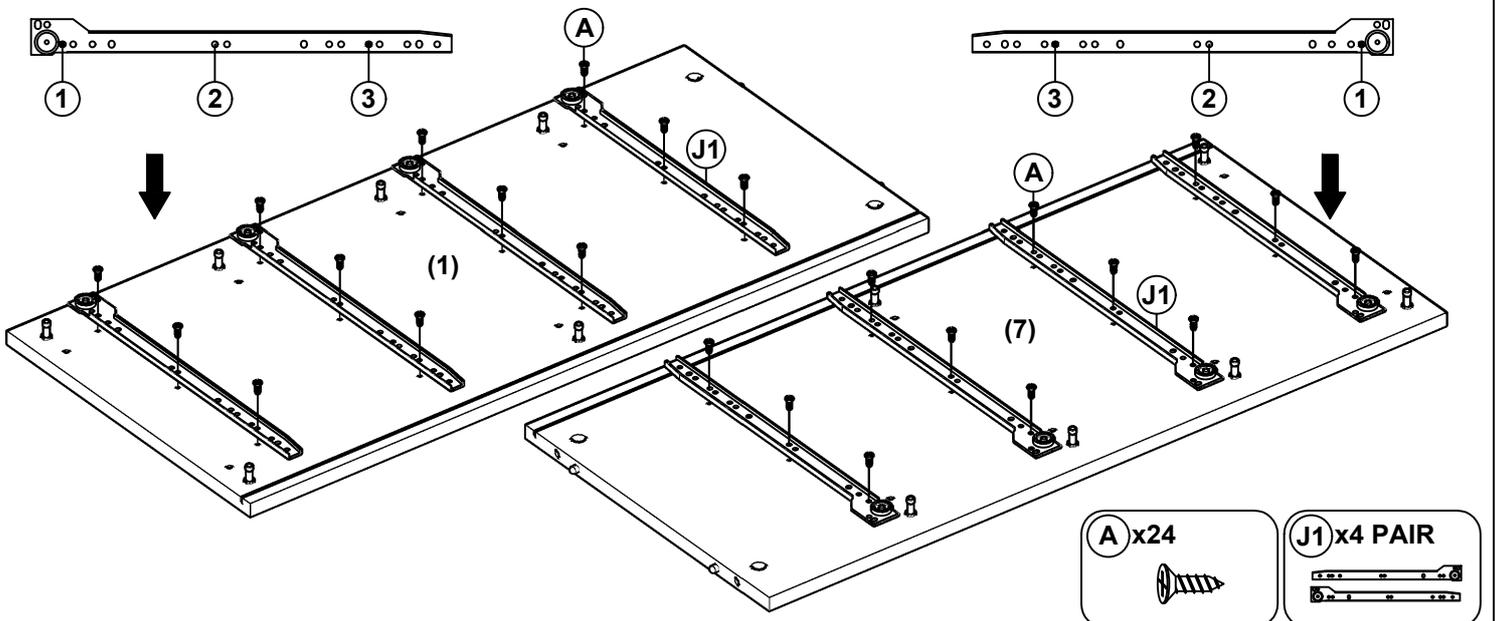


8 DRAWER LOWBOY

ITEM CODE : JCD1438-8

STEP 4

Make sure the holes in the drawer slides (J1) line up with the holes shown in the picture and are positioned correctly, then tighten the screws (A).

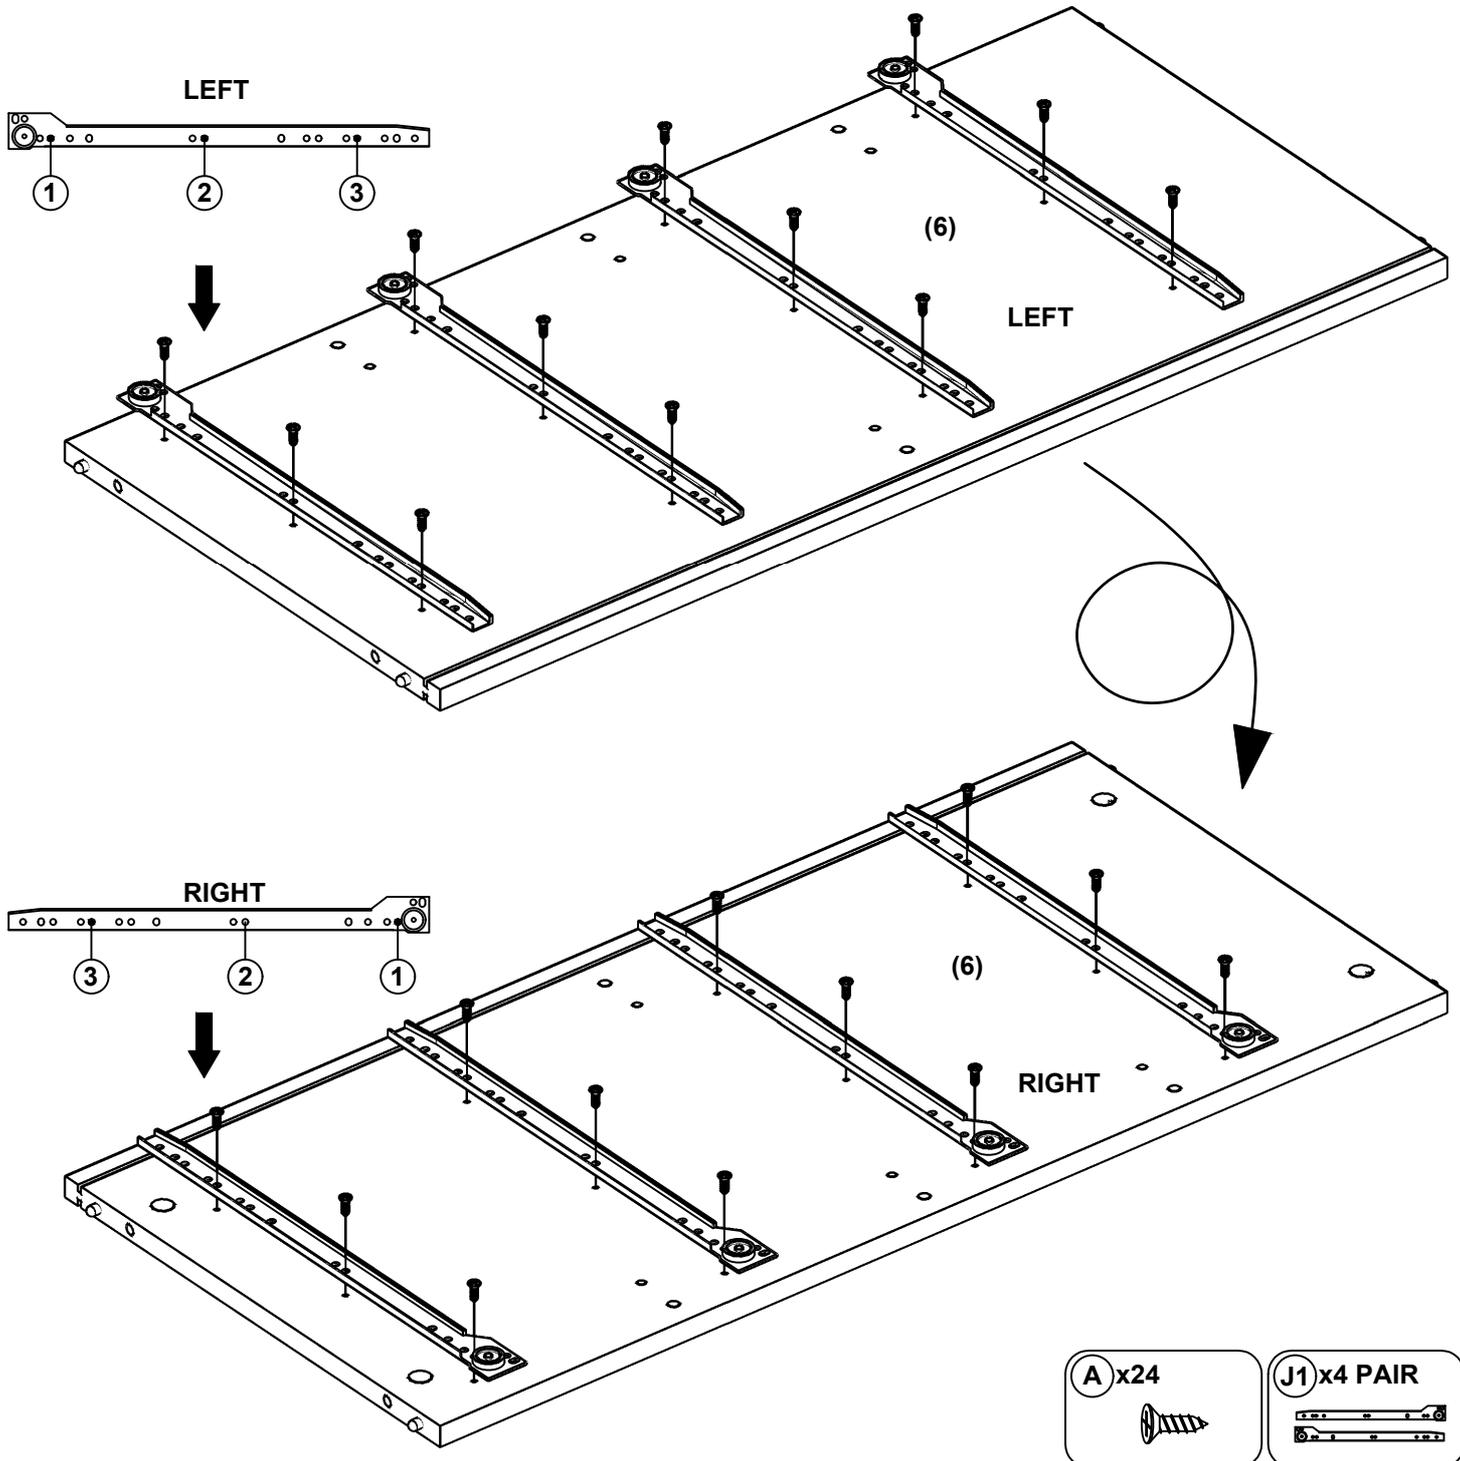


8 DRAWER LOWBOY

ITEM CODE : JCD1438-8


STEP 5

As shown in the figure, align the panels 11,12&13 to the designated holes on the panels 10 insert and fix them, then tighten the cam nuts (G) to the designated holes 180°.

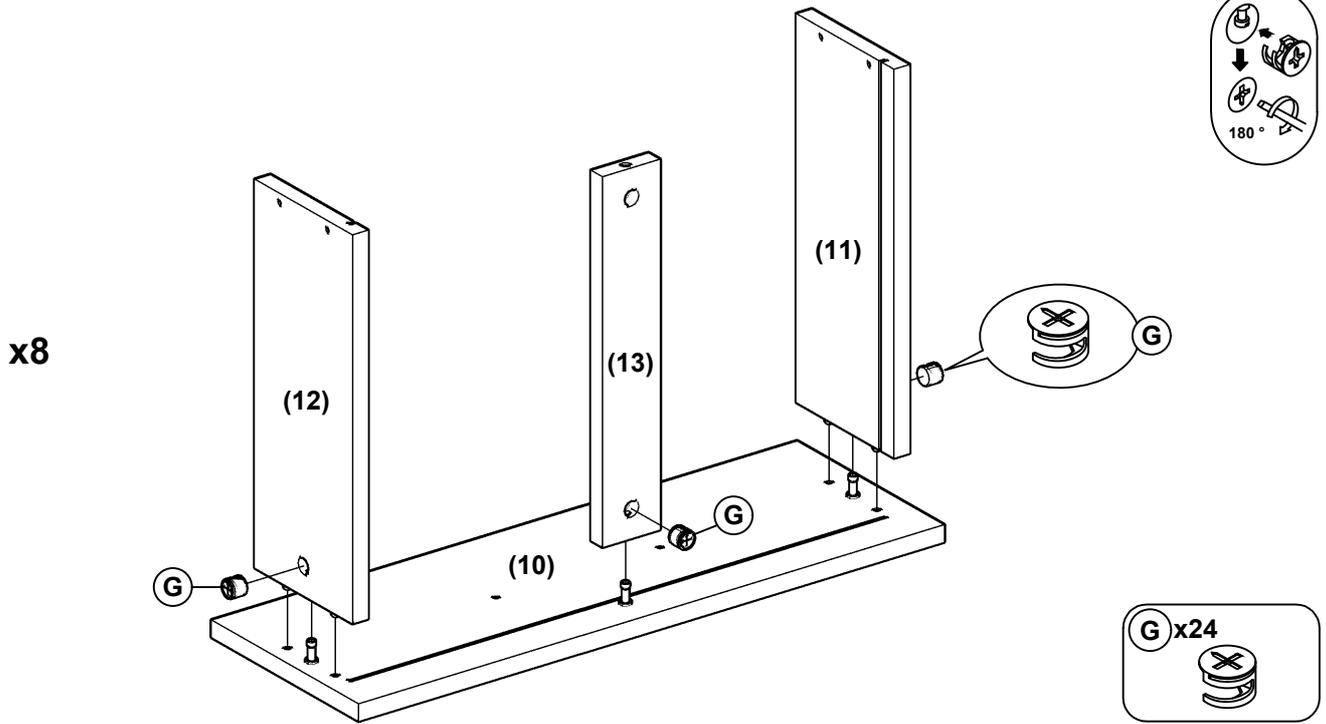

STEP 6

Align panel No.14 with the slot and insert.

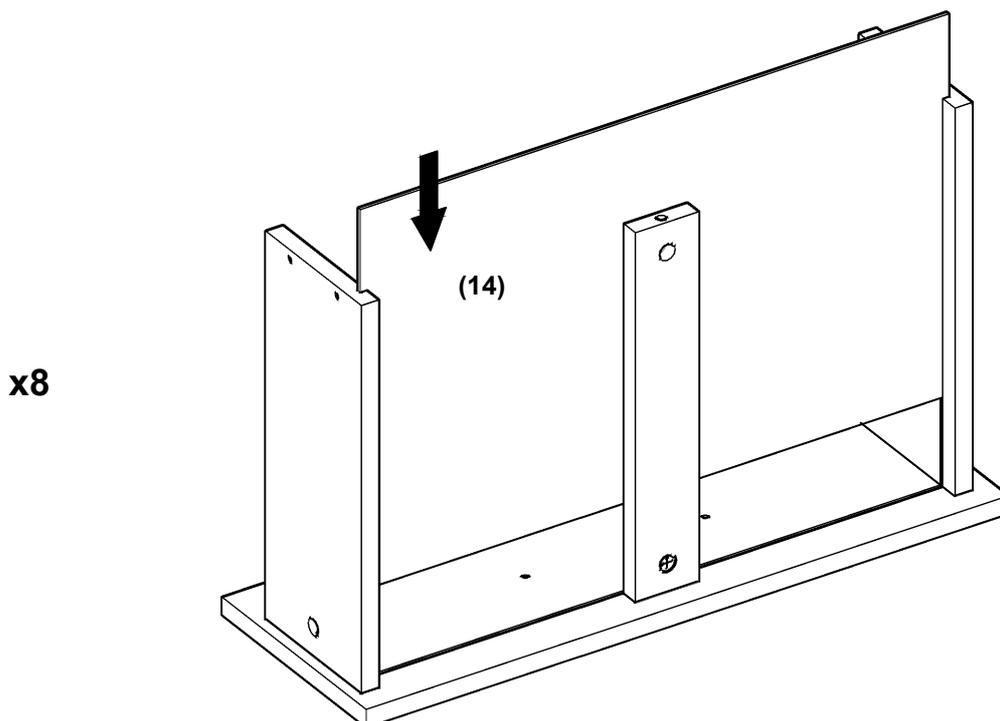



8 DRAWER LOWBOY

ITEM CODE : JCD1438-8

STEP 7

As shown in Figure 11, 12, 15, fix and tighten the panel with screws (D). Then place the cam nut (G) into the designated hole in panel No. 13 and tighten 180°.



x8

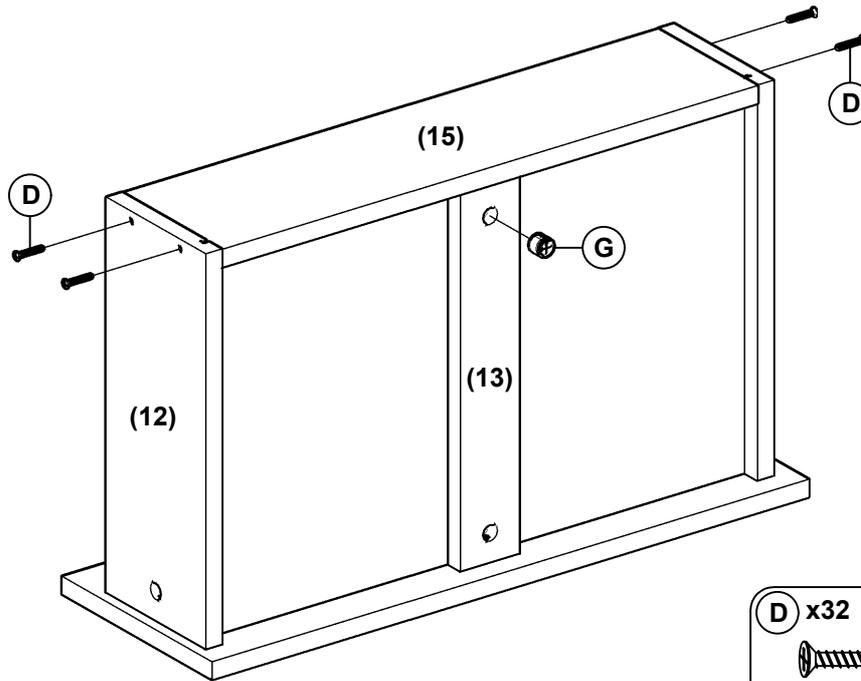

STEP 8

Secure the drawer slides (J2) to the bottom of panels 11, 12 with screws (A) as shown.

x8


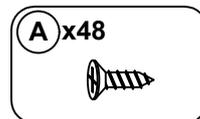
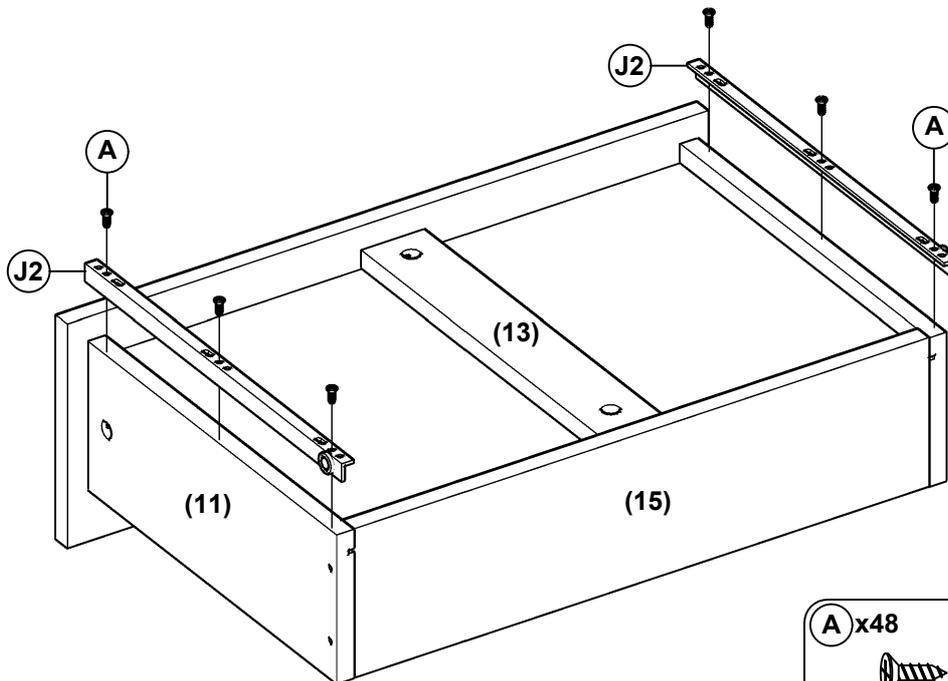


8 DRAWER LOWBOY

ITEM CODE : JCD1438-8

STEP 9







Secure handle (I) to panel 10 with screws (C).

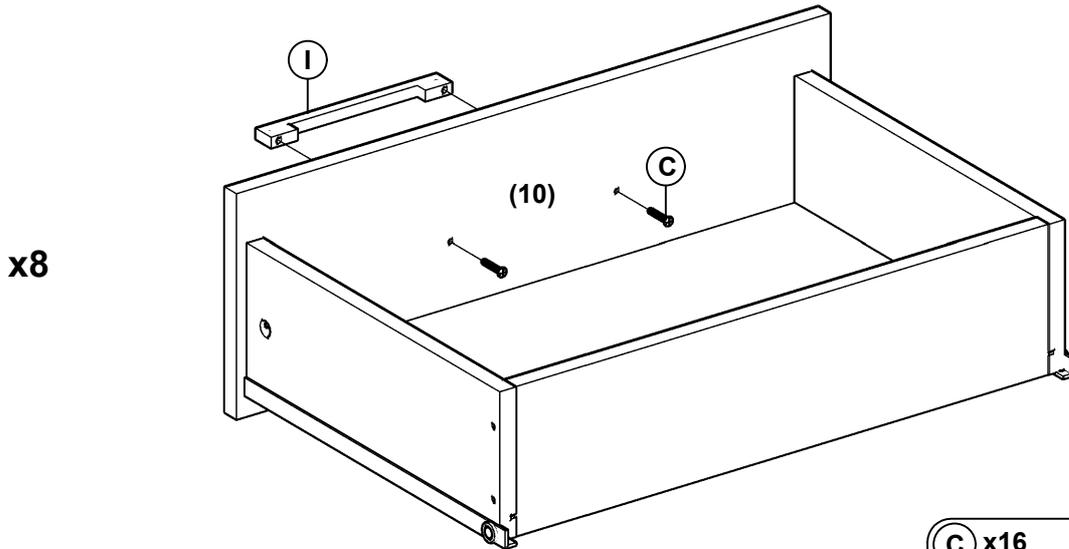

STEP 10

As shown in the picture, first prepare 3 No. 2 boards and 1 No. 3 board, and then install them according to the steps in the drawing. Put the cam nut (G) into the designated hole first, then put the stud bolt (H) into the designated hole and tighten it at 180°.

Note: Be careful when putting the cam nuts in the holes, make sure the studs can also be put in the holes from the side and tightened.

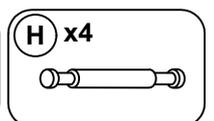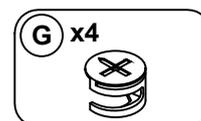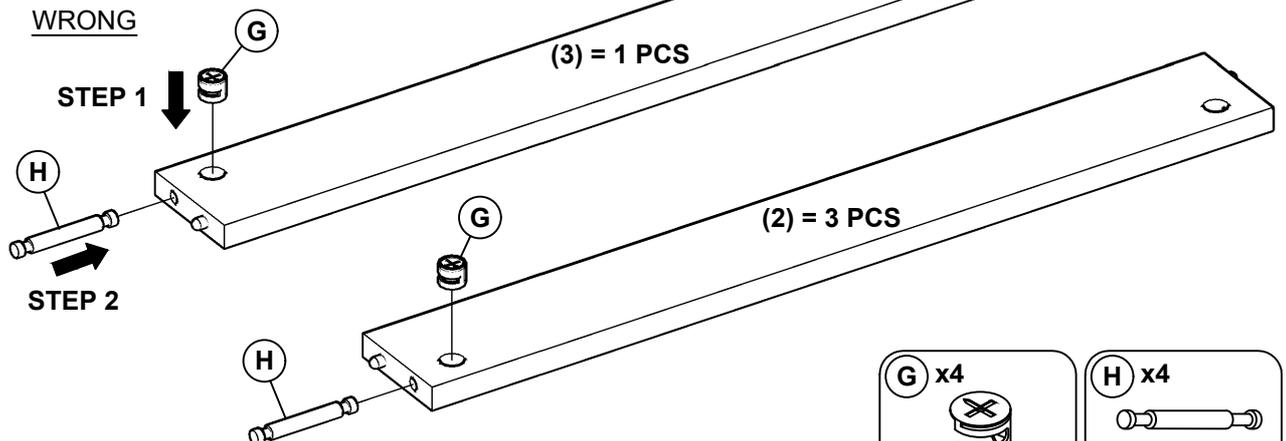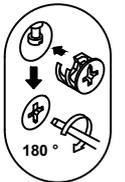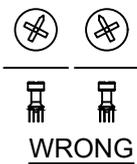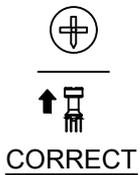


8 DRAWER LOWBOY

ITEM CODE : JCD1438-8



STEP 11

As shown in the picture, align the positioning pins at the bottom of panel No. 6 with the designated holes on the top of panels No. 4 and 5 for assembly, and then put the cam nut (G) into the designated position. hole and tighten 180°.

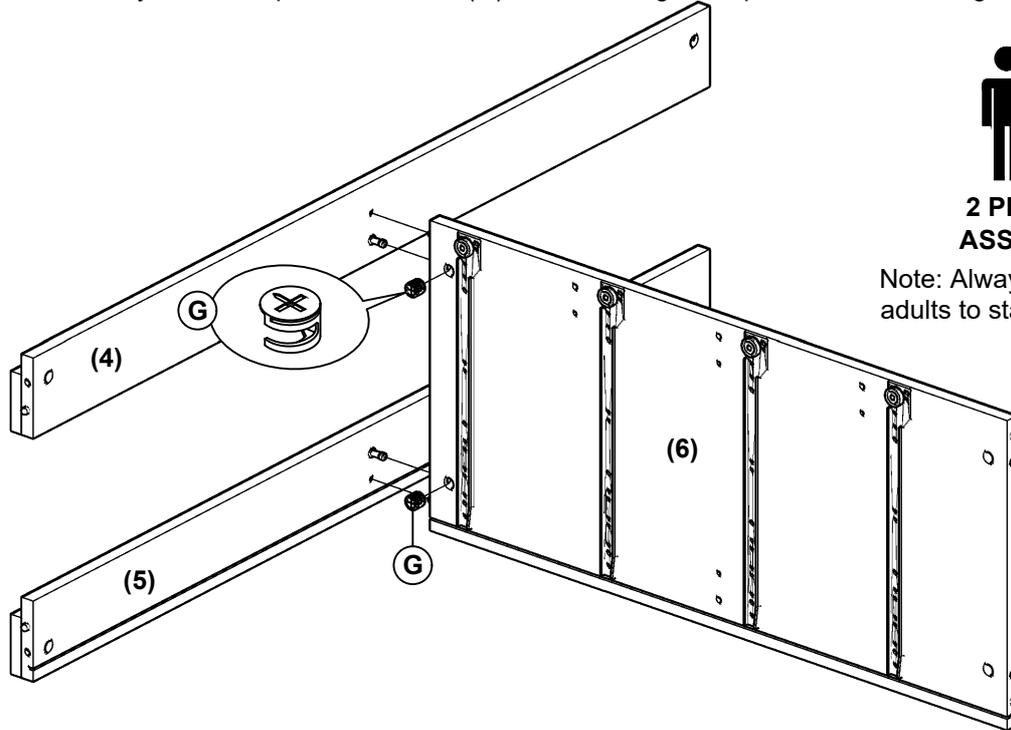


**2 PERSON
ASSEMBLY**

Note: Always use atleast 2
adults to stand the item upright

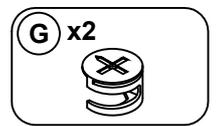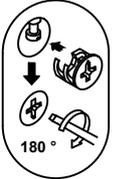


STEP 12

As shown in the picture, first align the hardware on the right side of panels No. 2 and 3 with the designated holes in panel No. 6 for assembly. Then align the hardware on panel No. 1 with the holes on the left side of panels No. 2, 3, 4, and 5 for installation. Finally, put the cam nut (G) into the designated hole and tighten it 180°

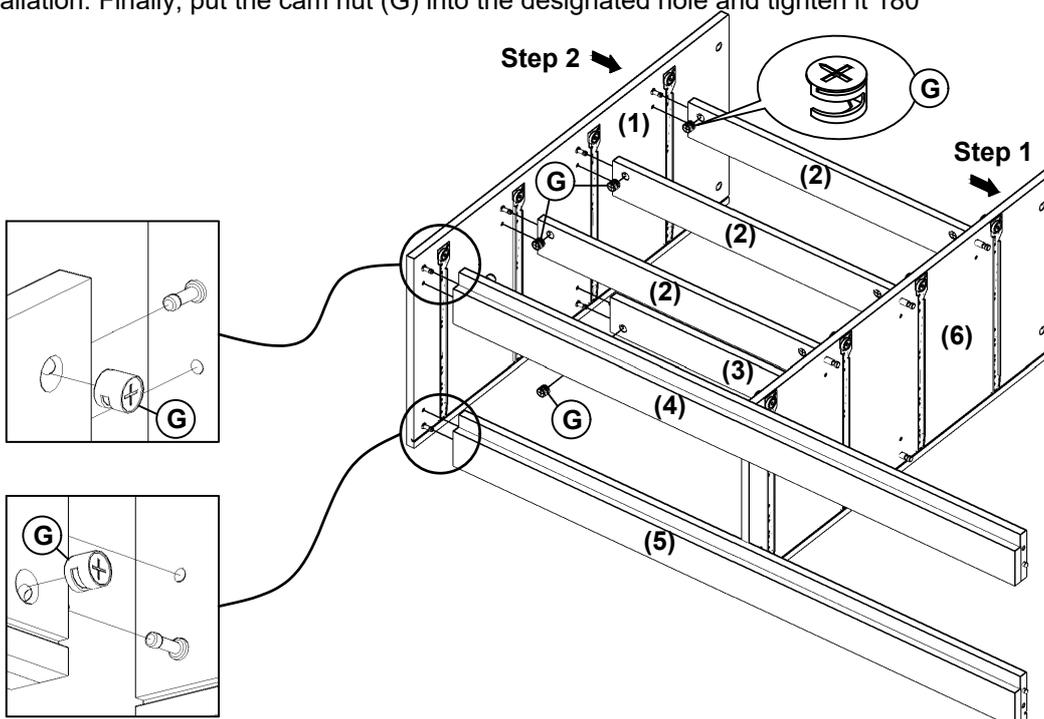

**2 PERSON
ASSEMBLY**

Note: Always use atleast 2
adults to stand the item upright

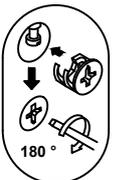


8 DRAWER LOWBOY

ITEM CODE : JCD1438-8

STEP 13

As shown in the picture, align the left positioning pins of No. 2 and No. 3 panels with no hardware installed to the designated holes of No. 6 panel for assembly, then put CAMNUT (G) into the designated holes and tighten 180°.

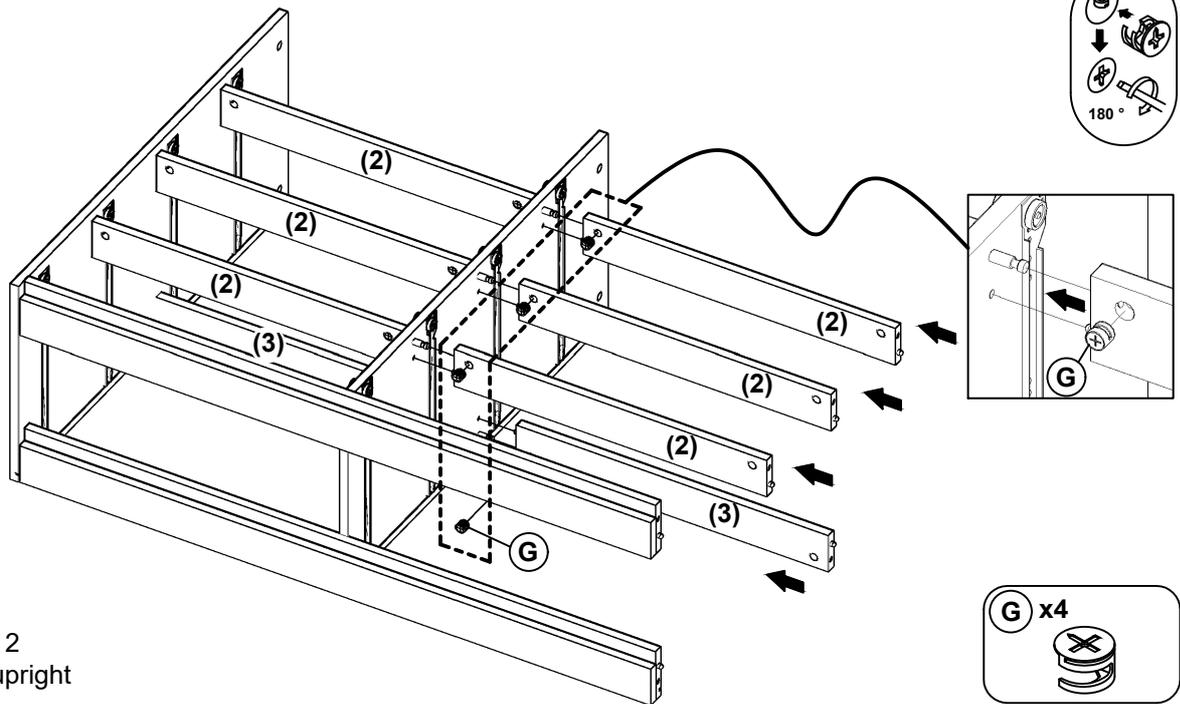

**2 PERSON
ASSEMBLY**

Note: Always use atleast 2
adults to stand the item upright


STEP 14

Then install by aligning the hardware on panel No. 7 with the holes on the right side of panels No. 2, 3, 4, and 5 as shown in the picture. Finally, put the cam nut (G) into the designated hole and tighten it 180°



**2 PERSON
ASSEMBLY**

Note: Always use atleast 2
adults to stand the item upright

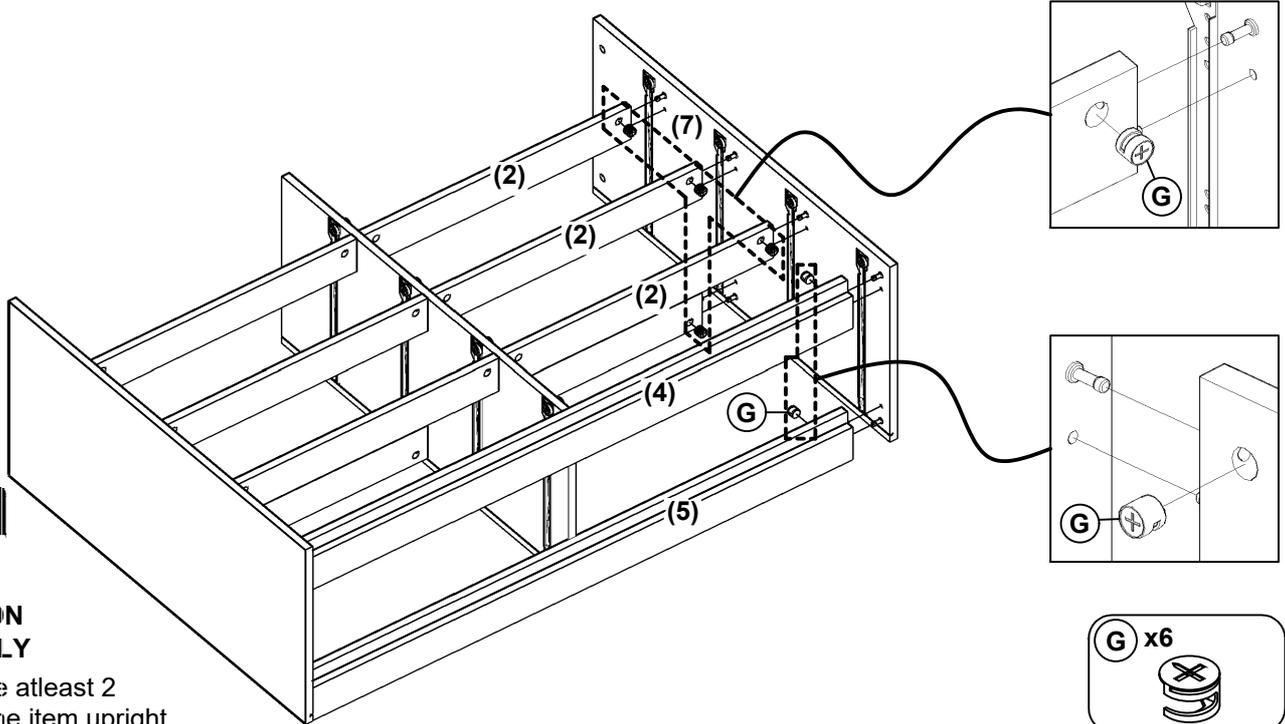


8 DRAWER LOWBOY

ITEM CODE : JCD1438-8


STEP 15

No. 8 panel is aligned with the slot and inserted. Install the Glider Nail (K) on the bottom of panel 1,4,5&7.

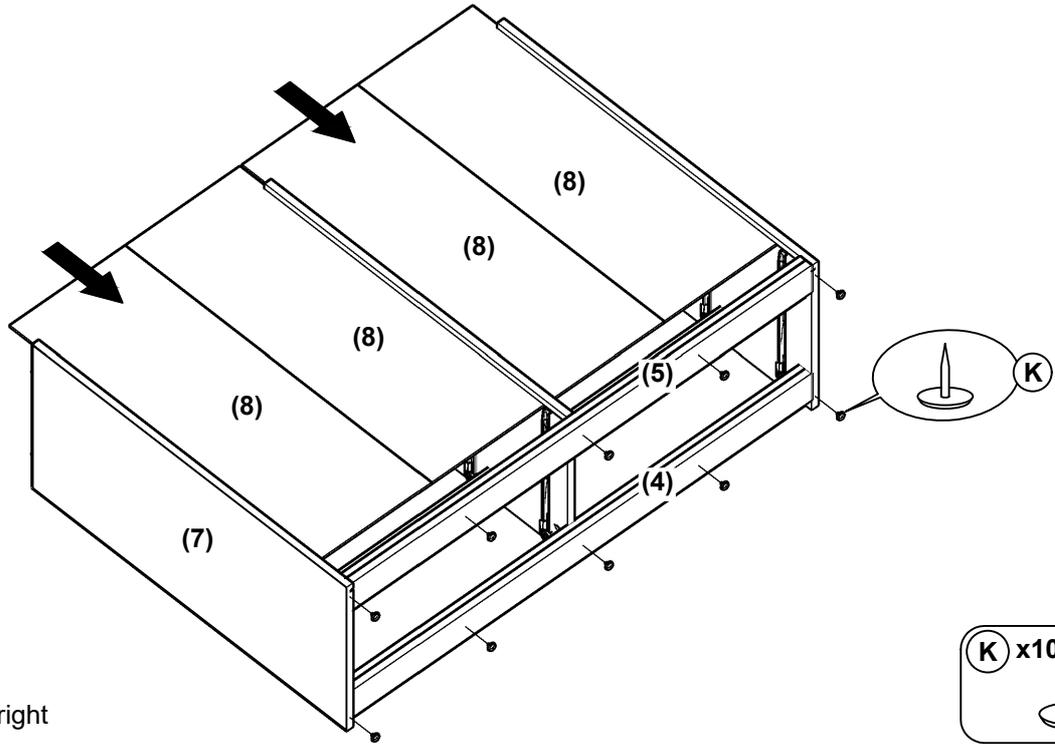

**2 PERSON
ASSEMBLY**

Note: Always use atleast 2 adults to stand the item upright

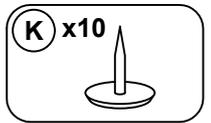


STEP 16

Install by aligning the bottom hardware of Panel 9 with the top holes of Panels 1,6 and 7 as shown, then place the CAM NUT (G) into the designated holes and tighten 180°.


Note:

Please always ensure cams are correctly locked to secure and support your item. Refer to cam lock guidelines at the beginning of this manual for future information.

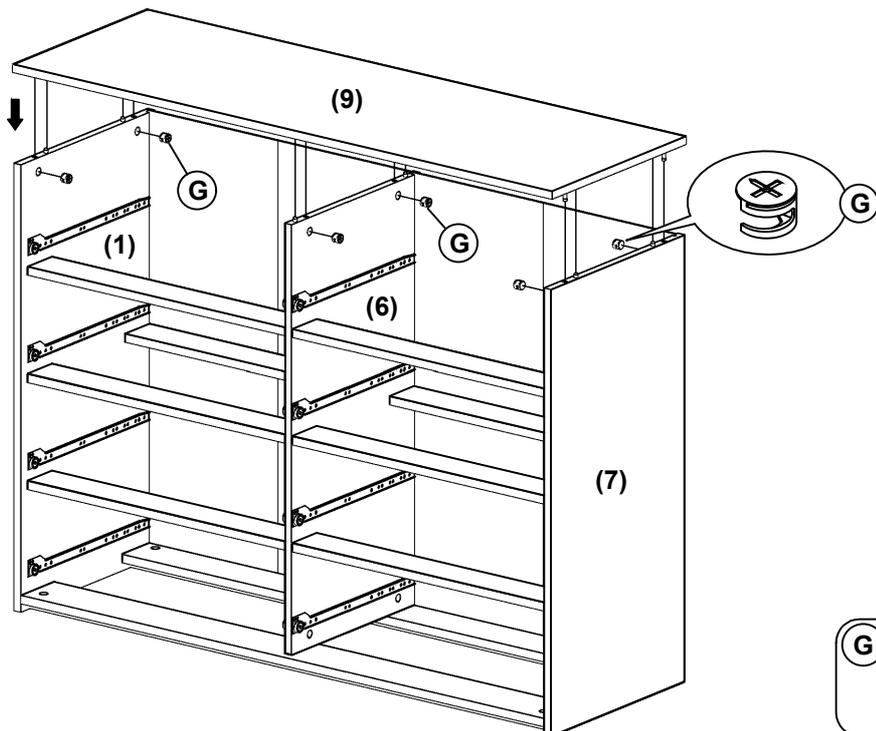

**2 PERSON
ASSEMBLY**

Note: Always use atleast 2 adults to stand the item upright

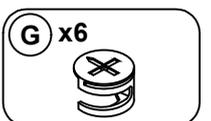


8 DRAWER LOWBOY

ITEM CODE : JCD1438-8


STEP 17

Insert the rear panel connector (L) into the slot on the edge of the rear panel as shown and secure with the screw (B).
NOTE : It is important to attach the rear tier stop correctly as this will help support and stabilize your items.

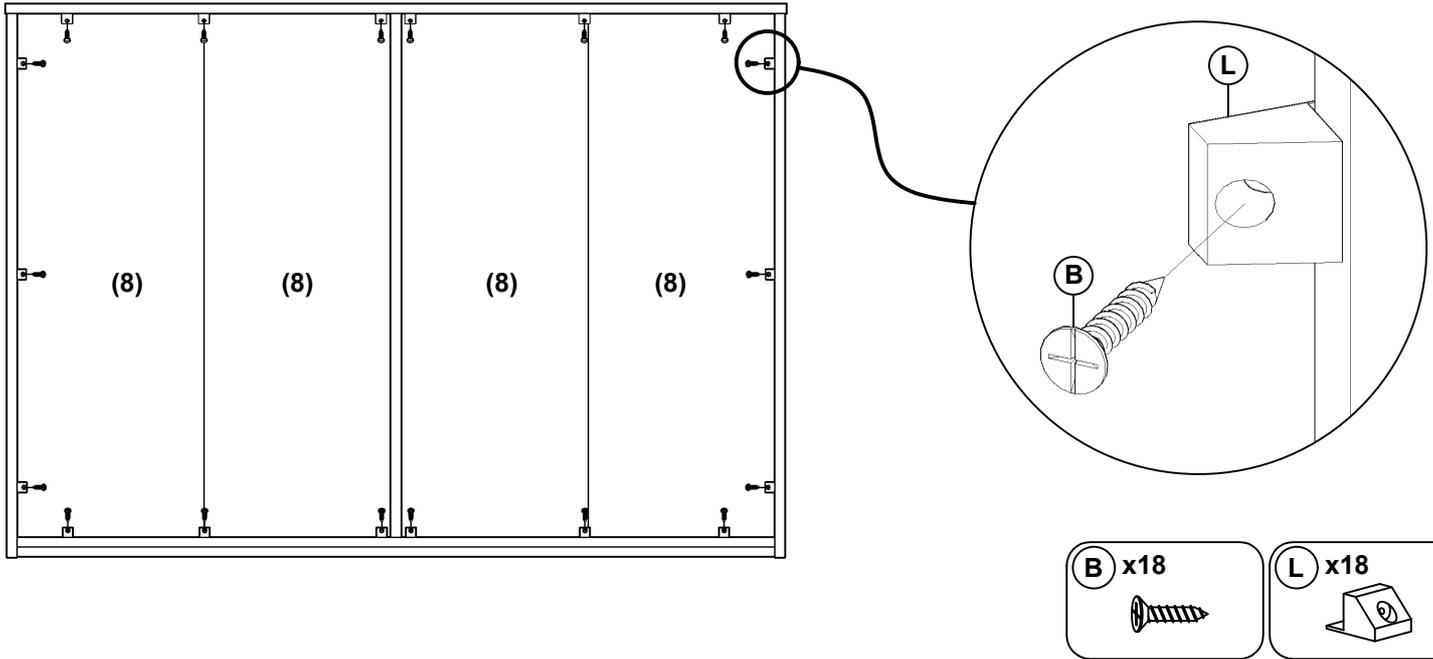

STEP 18

Simply align the drawer with the side drawer slides and place the drawer in.

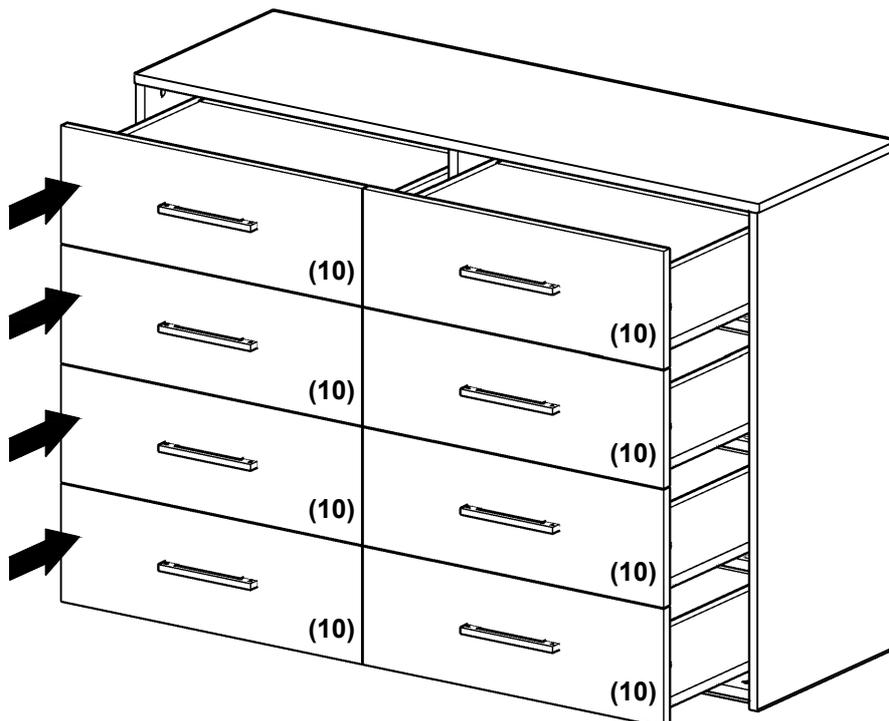

8 DRAWER LOWBOY

ITEM CODE : JCD1438-8

STEP 19

