

COMO 5 TALLBOY

ITEM CODE : CD 790

1.5 HR

APPROXIMATE ASSEMBLY TIME




**2 PERSON
ASSEMBLY**

**FLOOR AREA
2.0M X 2.0M**




REQUIRED ASSEMBLY SPACE


REQUIRED ASSEMBLY TOOLS



POZI SCREWDRIVER



HAMMER

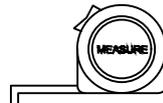


MEASURING TAPE



DRILL

ASSEMBLED DIMENSIONS

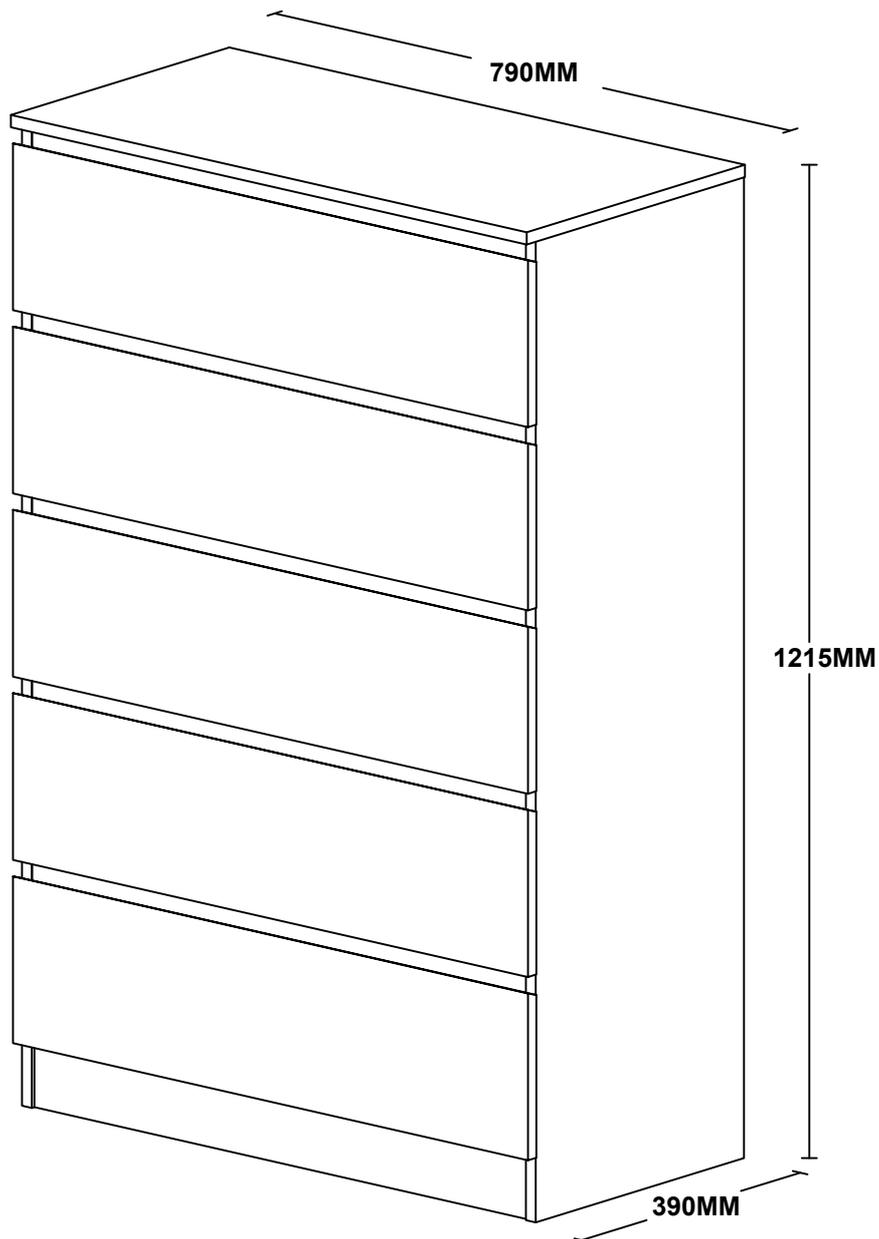

COMO 5 TALLBOY

ITEM CODE : CD 790

Tips before you start :

1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people (as Indicated on page 1) to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessary once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is non industrial product.

Care and Maintenance of your Furniture




- Please periodically check all fittings and re-tighten as necessary.
- To clean your item, please use a damp cloth and wipe clean.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- Please do not place hot item (e.g. hot drinks) directly on to the wood surface.
- Please do not drag or pull your furniture.

COMO 5 TALLBOY

ITEM CODE : CD 790


Tips before you start :

QUICKFIT

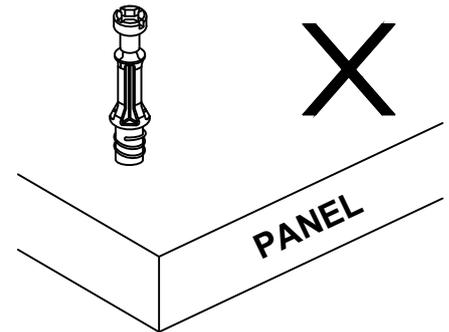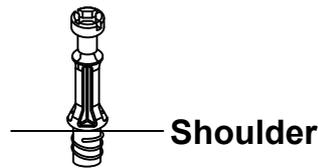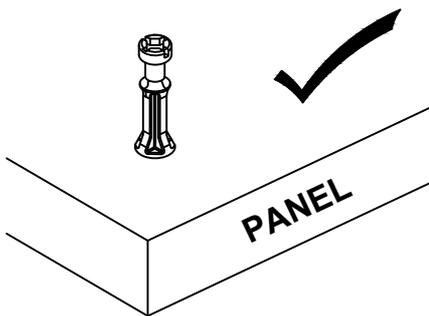

Tighten quickfit until shoulder is flush with panel . Do not overtighten or undertighten.


CAM LOCK

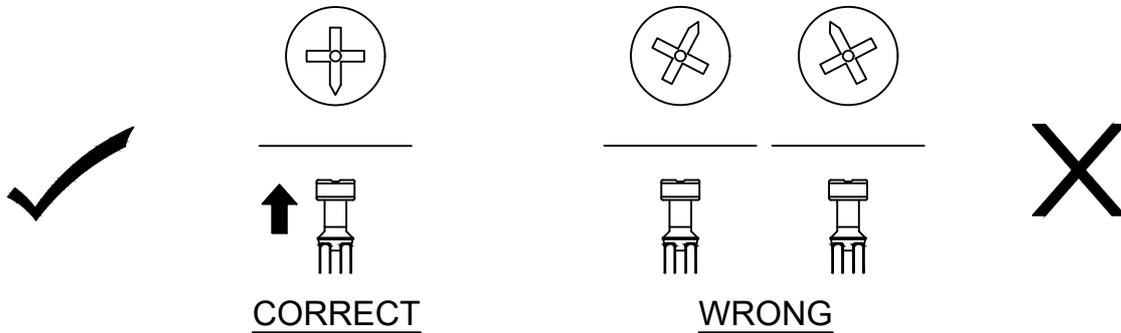

When fitting cam lock , ensure starting position is correct before you insert connecting quickfit.

Quickfit head should be in the center of the cam lock when the two panels are joined .

Cam lock should be inserted before quickfit

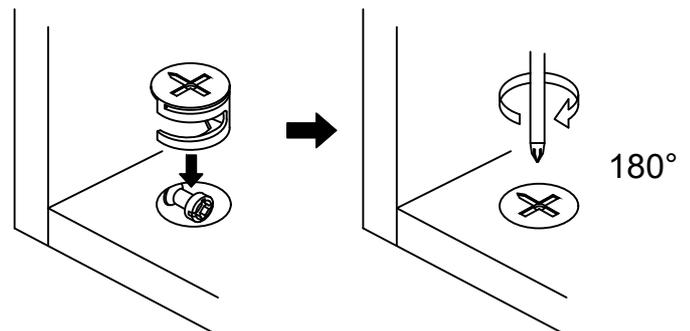


Turn cam lock clockwise to tighten.

COMO 5 TALLBOY

ITEM CODE : CD 790

PART LIST:

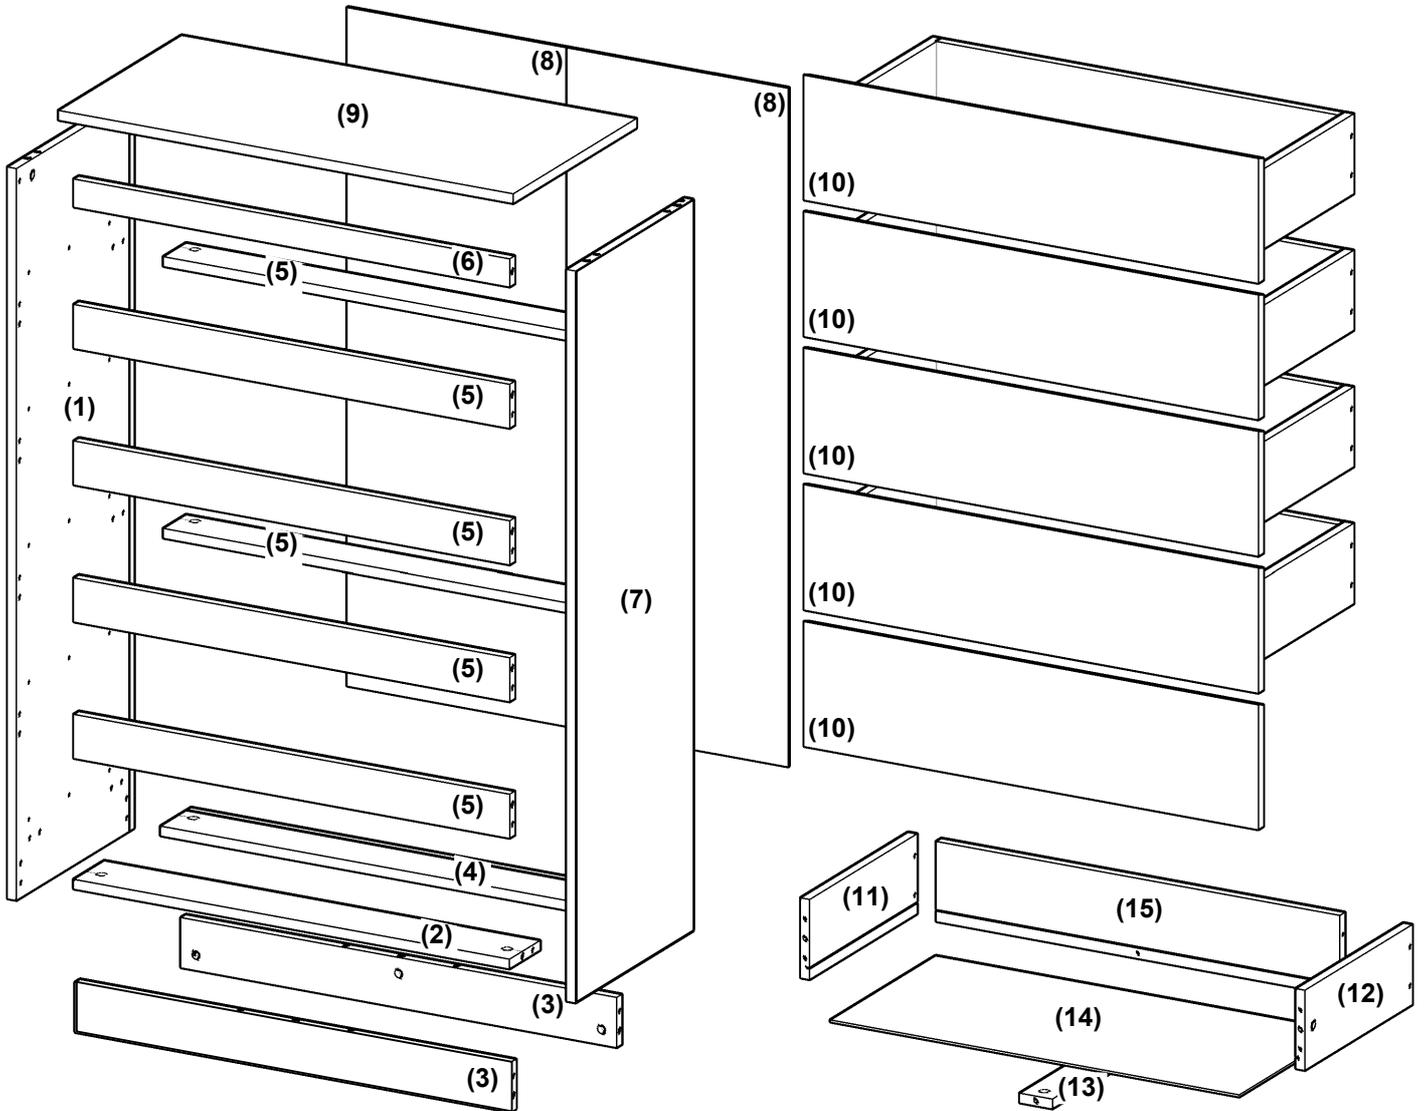

NO.	PART NAME	QTY
1	SIDE PANEL (LEFT)	1
2	BOTTOM STRIP (FRONT)	1
3	BOTTOM STRIP	2
4	BOTTOM STRIP (BACK)	1
5	DRAWER SLATS (DOWN & BACK)	6
6	DRAWER SLATS (UP)	1
7	SIDE PANEL (RIGHT)	1

8	BACK PANEL	8
9	TOP PANEL	1
10	DRAWER (FRONT)	5
11	DRAWER (LEFT)	5
12	DRAWER (RIGHT)	5
13	DRAWER BOTTOM STRIP	5
14	DRAWER (BOTTOM)	5
15	DRAWER (BACK)	5

COMO 5 TALLBOY

ITEM CODE : CD 790

HARDWARE LIST

A x60



SCREW M3.5 x 12MM

B x14




SCREW M3.5 x 20MM

C x20




SCREW M4 x 38MM

D x48



DOWEL Ø6 x 25 MM

E x48




CAM BOLT

F x48




CAM NUT

G1 x5 PAIR



G2 x5 PAIR



14" DRAWER SLIDE

H x14



BACK PANEL
CONNECTOR

I x4



GLIDER NAIL

Tips before you start :


- Please check that all parts are present before you start the assembly of your furniture. Please do not start to build your item if any parts are damaged as this may void your warranty. Please contact the retailer immediately so they can advise what you should do.
- For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.

COMO 5 TALLBOY

ITEM CODE : CD 790

STEP 1

Insert the Dowel (D) into the designated hole as shown. Then nail the (I) Glider nail to the bottom of board 1 and board 7.


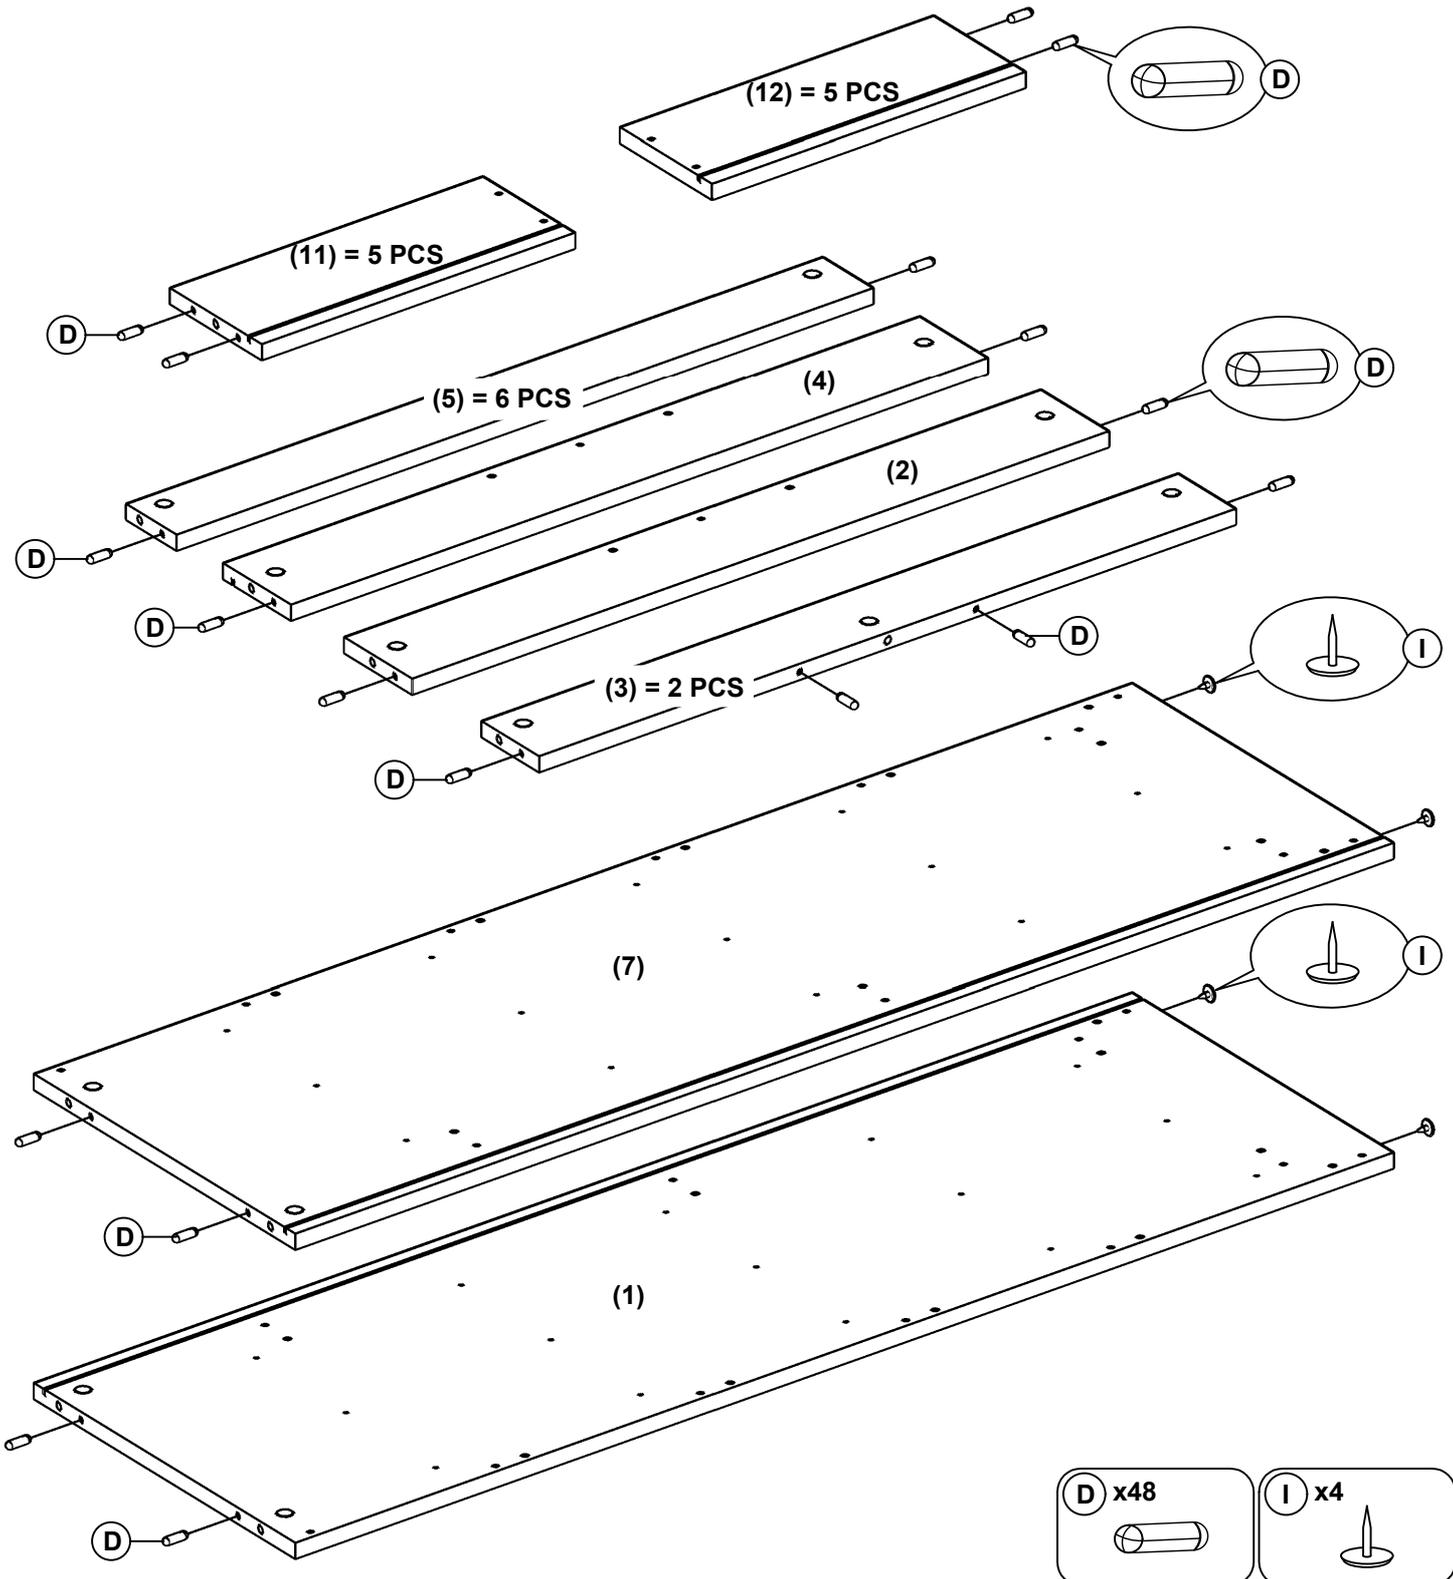


COMO 5 TALLBOY

ITEM CODE : CD 790

STEP 2

Insert the Cam bolt (E) into the designated hole as shown.

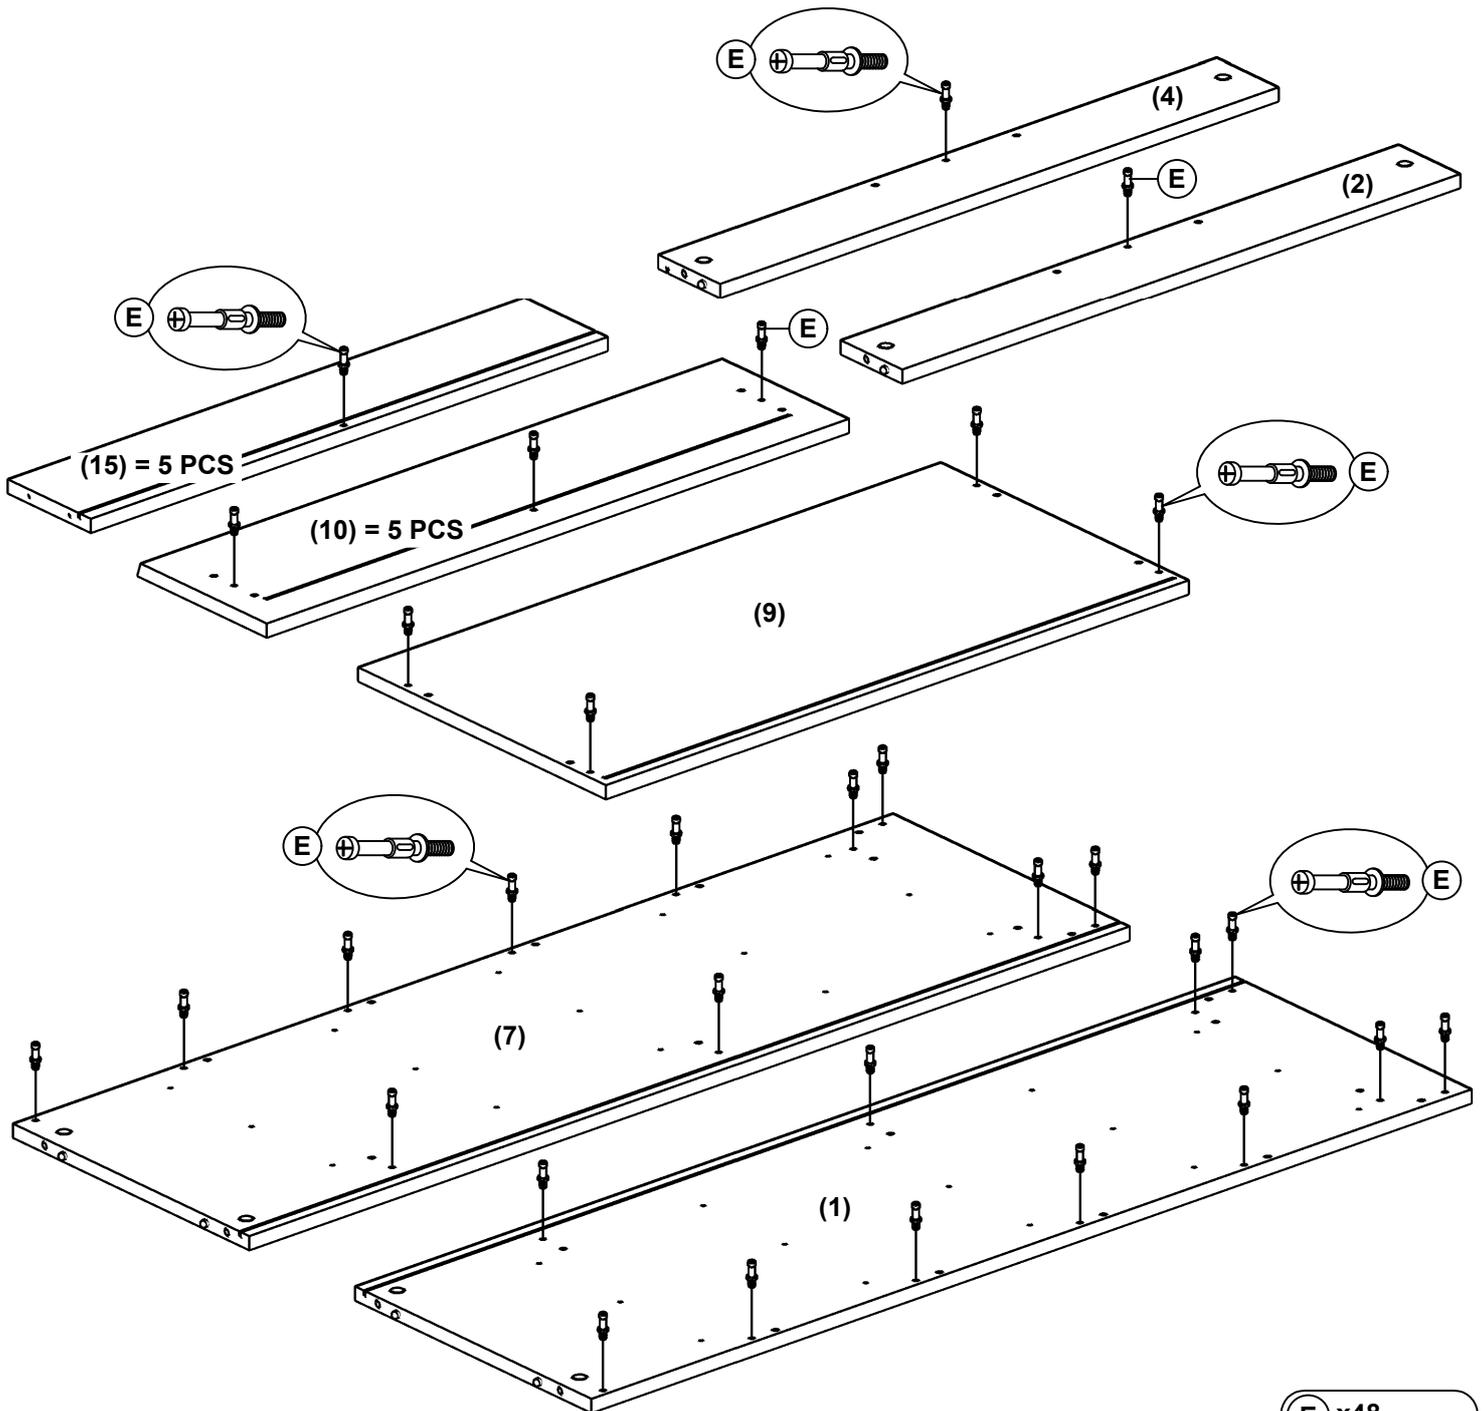


COMO 5 TALLBOY

ITEM CODE : CD 790

STEP 3

Make sure the holes in the drawer slides (G1) line up with the holes shown in the picture and are positioned correctly, then tighten the screws (A).

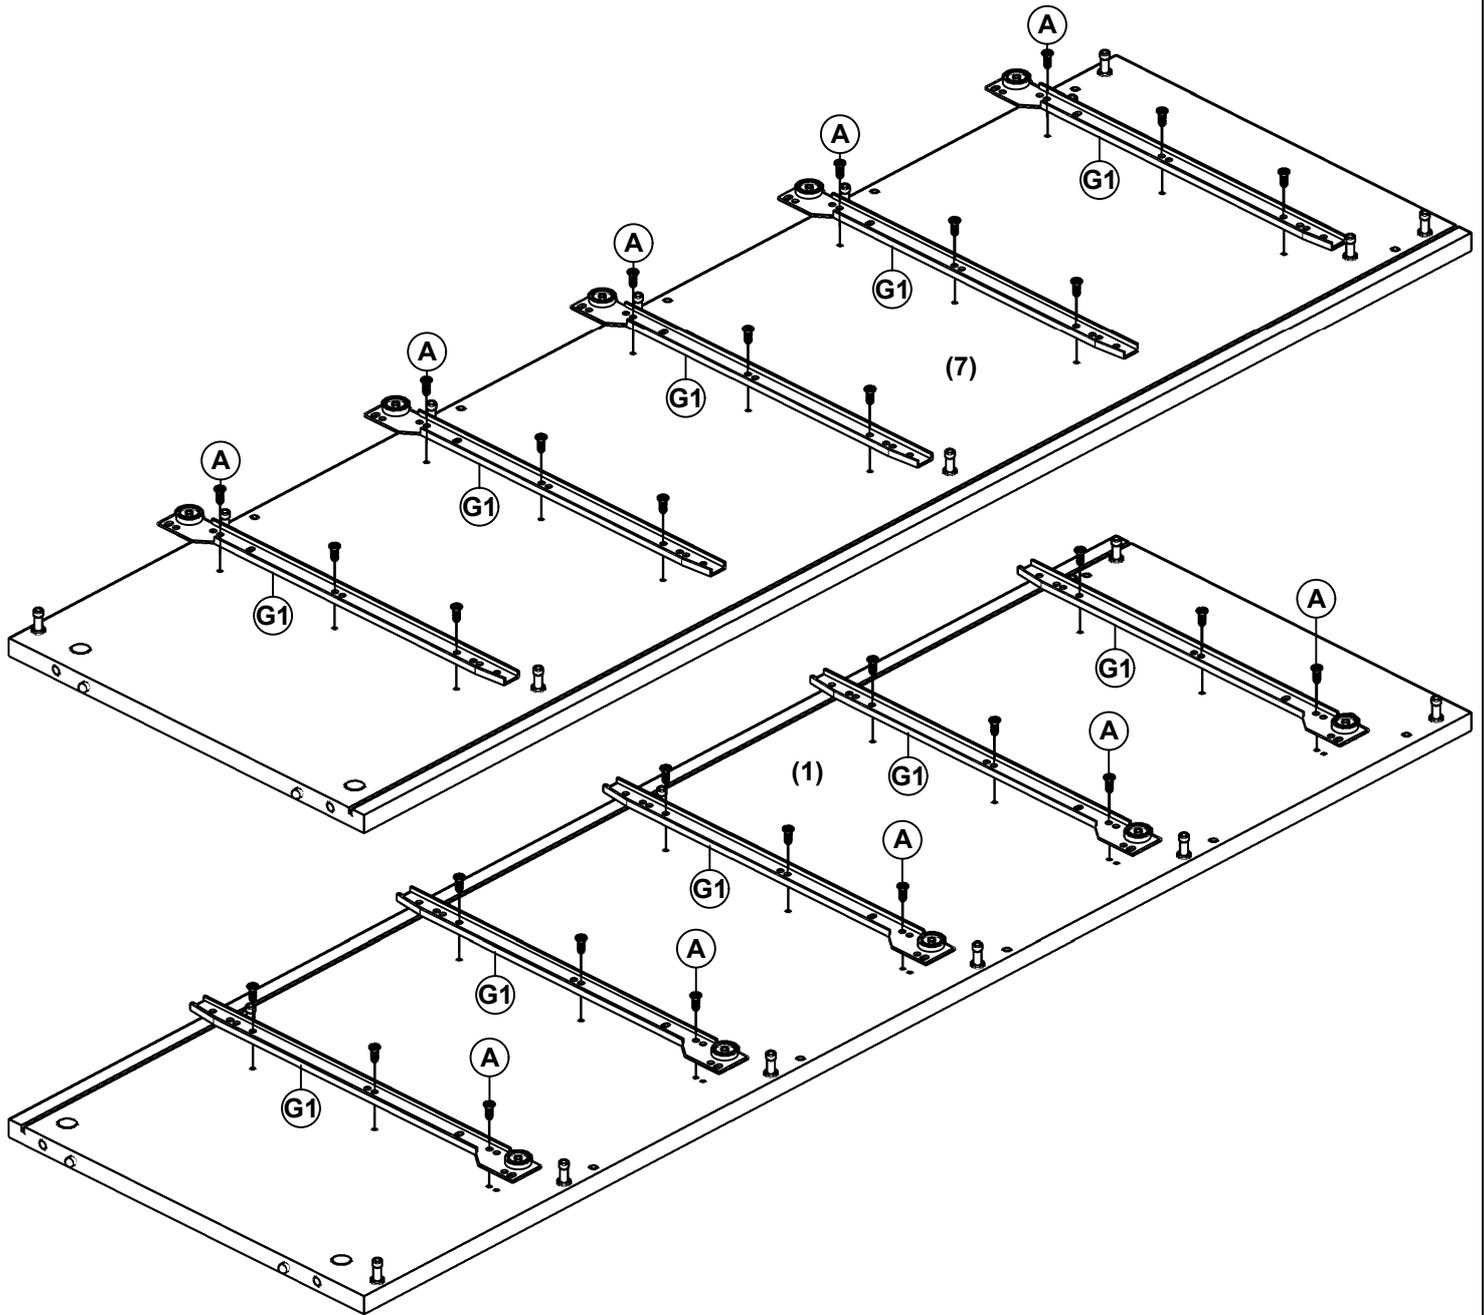

A x30



G1 x5 PAIR




COMO 5 TALLBOY

ITEM CODE : CD 790


STEP 4

As shown in the figure, align the panels 11, 12 and 13 with the designated holes on the panel 10, insert and fix them, and then tighten the cam nuts (F) to the designated holes 180°.

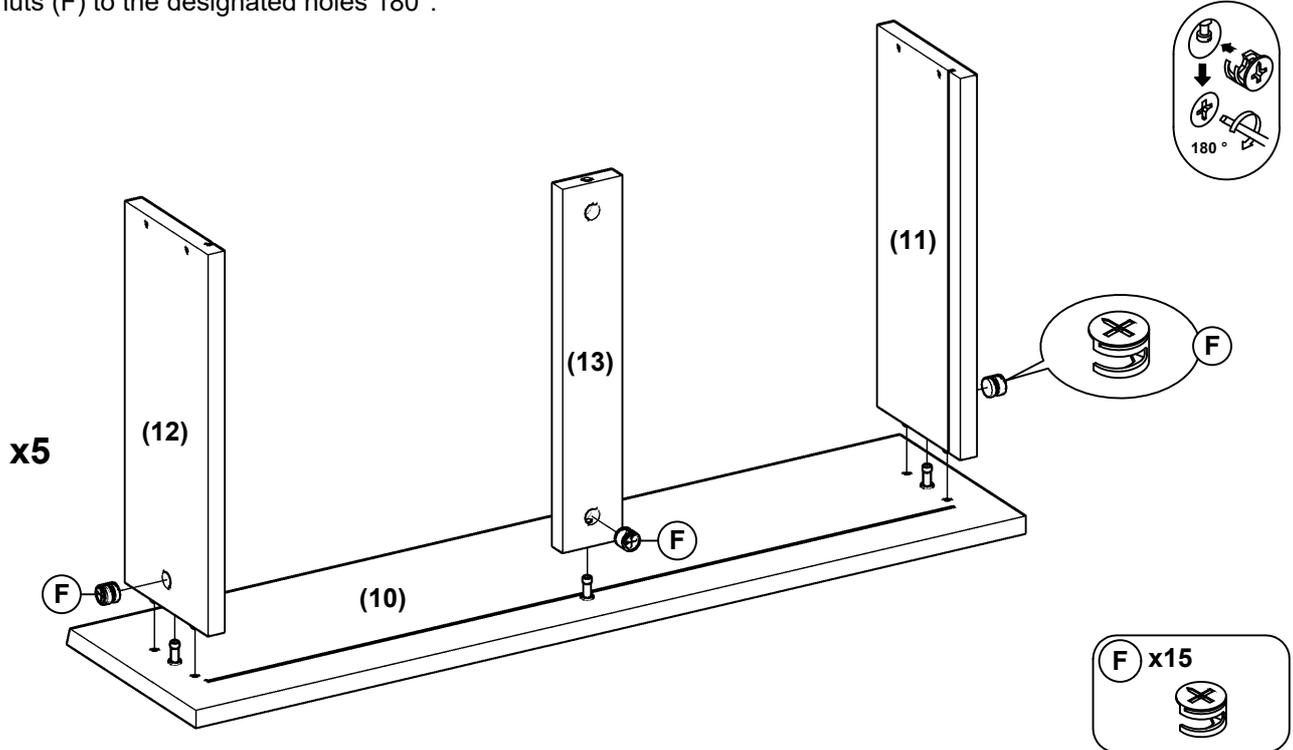

STEP 5

Align panel No. 14 with the slot and insert.


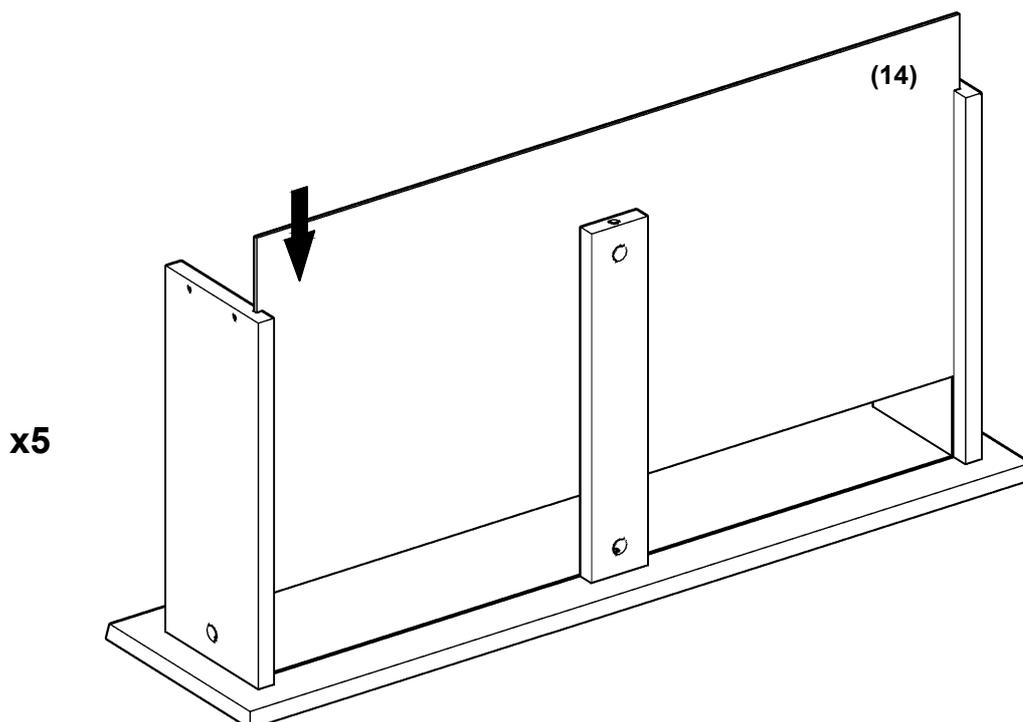


COMO 5 TALLBOY

ITEM CODE : CD 790



STEP 6

As shown in Figures 11, 12, and 14, fix and tighten the panel with screws (C), then put the cam nut (F) into the designated hole on the panel 13, fix it at 180° and tighten it.

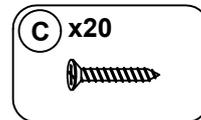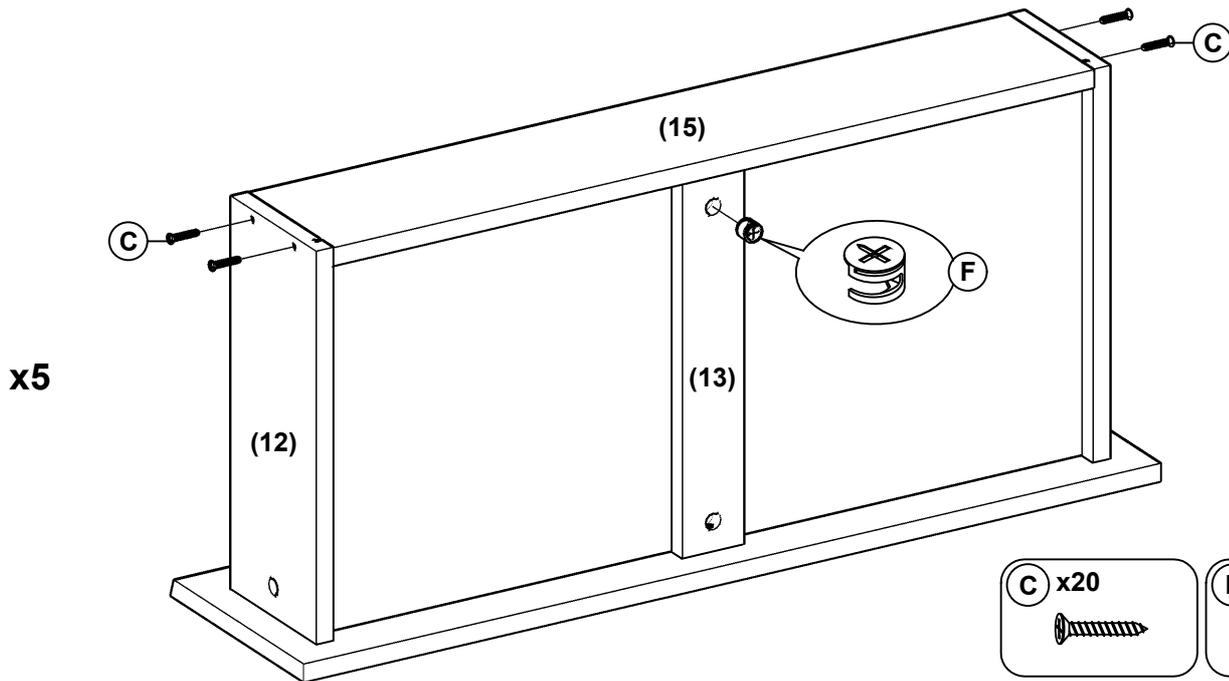

STEP 7

Secure the drawer slides (G2) to the bottom of panels 11, 12 with screws (A) as shown.

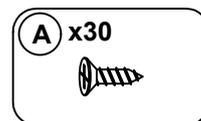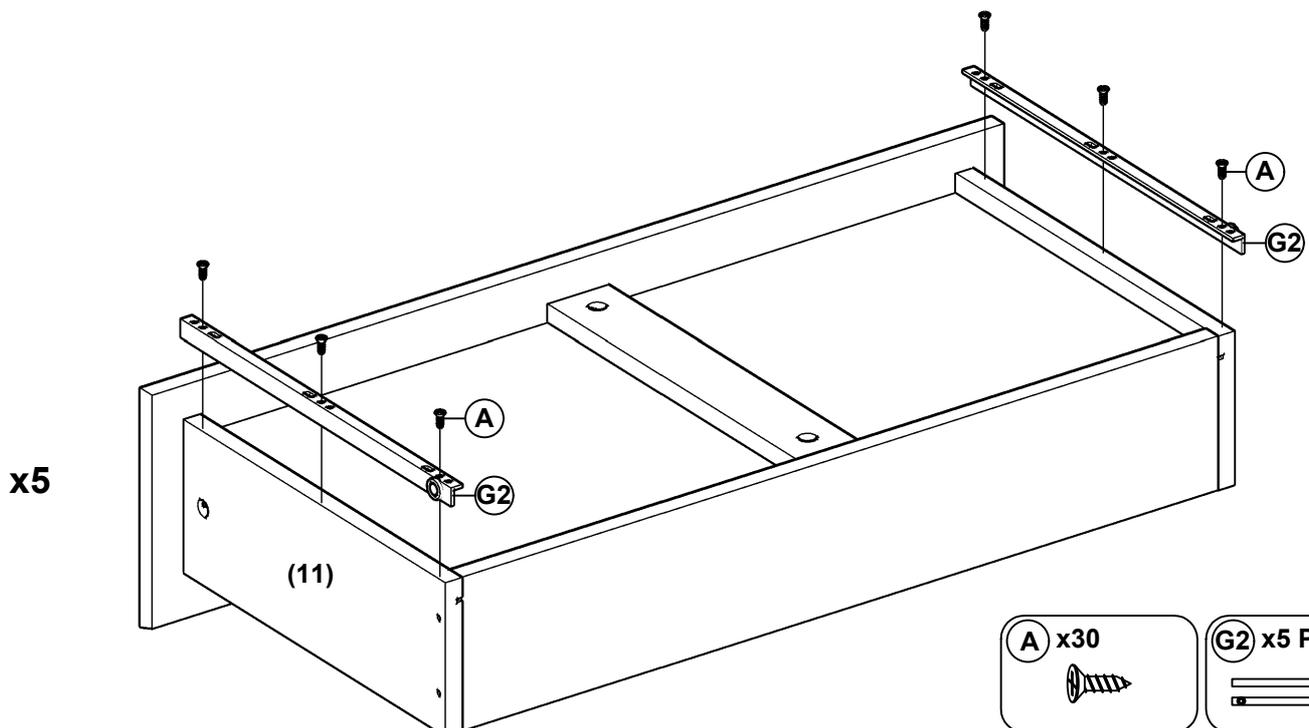


COMO 5 TALLBOY

ITEM CODE : CD 790


STEP 8

As shown in the figure, align the panels 2 and 4 with the designated holes on the panel 3, insert and fix them, and then tighten the cam nuts (F) to the designated holes 180°.

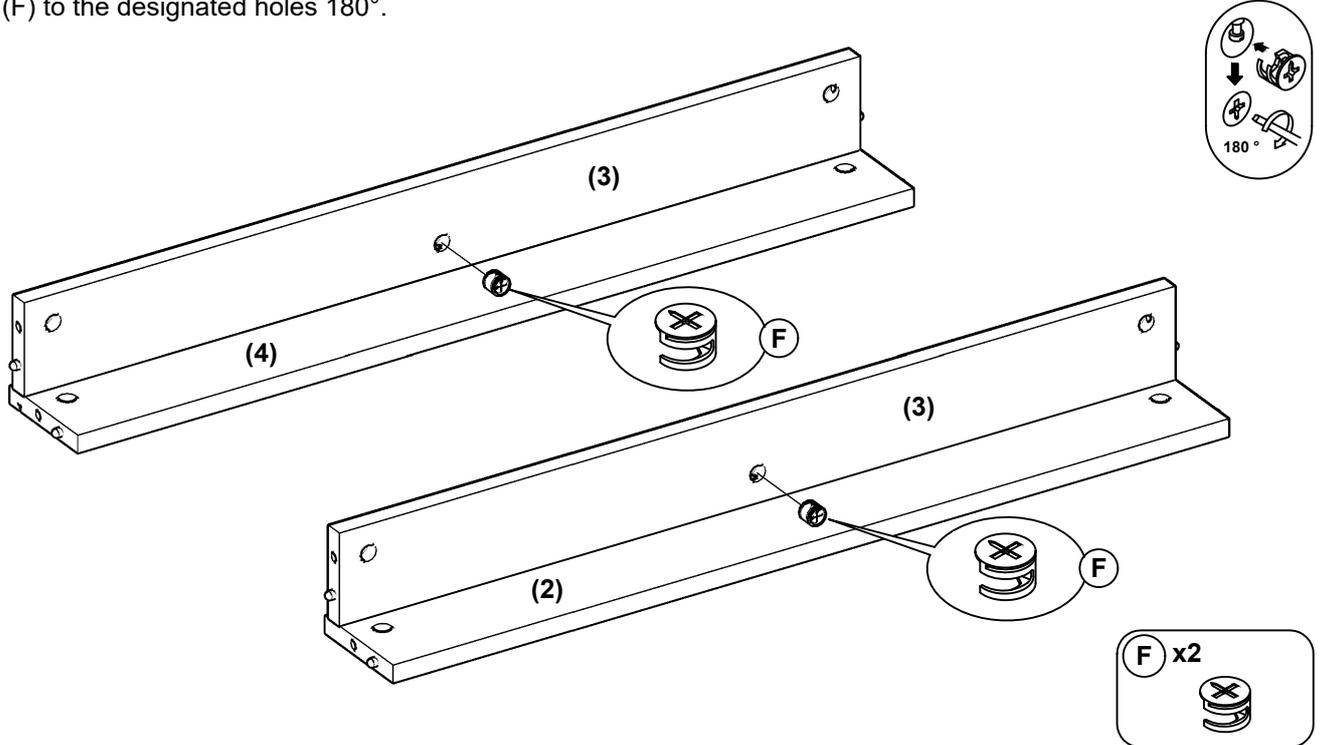

STEP 9

Put the front side on the ground as shown in the picture, assemble the slats on the NO.1 panel with the cam nuts (F) according to the numbers on the drawing.

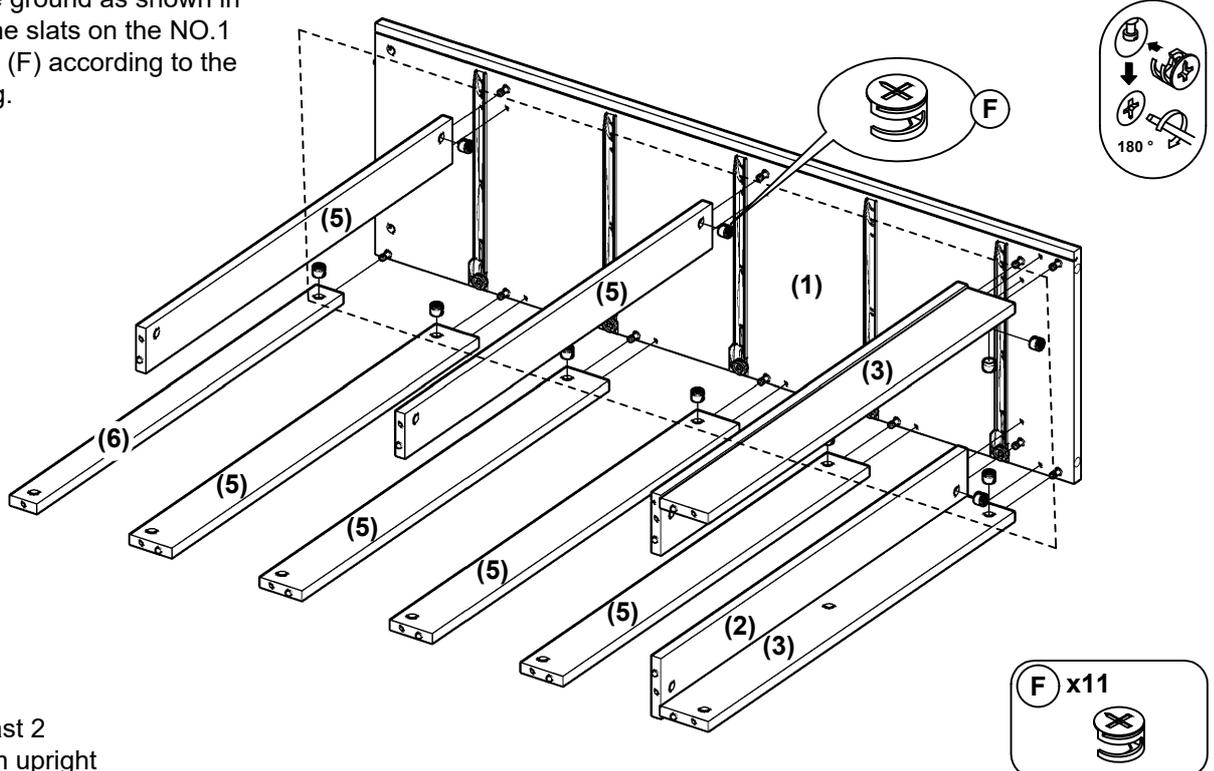

**2 PERSON
ASSEMBLY**


Note: Always use atleast 2
adults to stand the item upright

COMO 5 TALLBOY

ITEM CODE : CD 790

STEP 10

Put the front side on the ground as shown in the picture, assemble the slats on the NO.7 panel with the cam nuts (F) according to the numbers on the drawing.


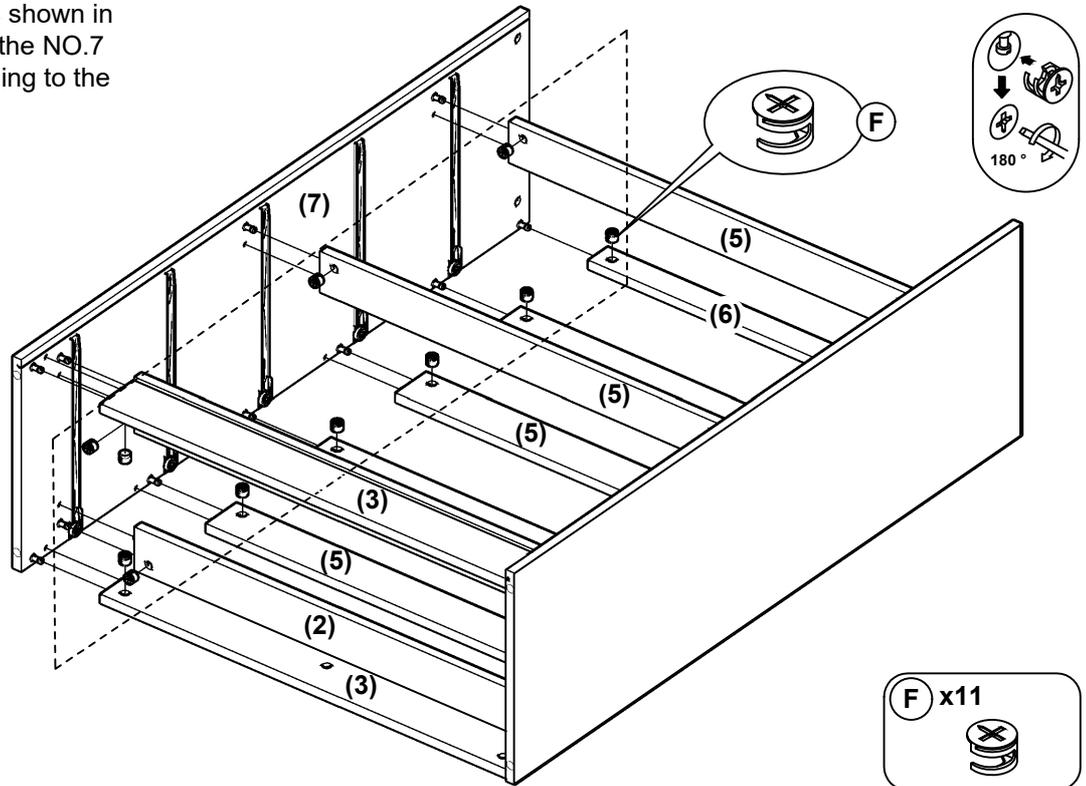


**2 PERSON
ASSEMBLY**

Note: Always use atleast 2 adults to stand the item upright

STEP 11

No. 8 panel is aligned with the slot and inserted.

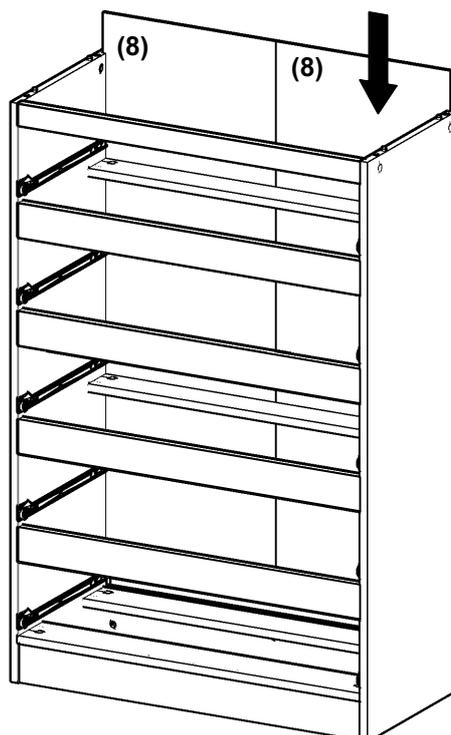

**2 PERSON
ASSEMBLY**

Note: Always use atleast 2 adults to stand the item upright


COMO 5 TALLBOY

ITEM CODE : CD 790

STEP 12

Align the holes on the bottom of panel No.9 with the pins on the top of panel No.1,7 as shown, Then place the cam nuts (F) in the designated holes and tighten 180°.

Note: Please always ensure cams are correctly locked to secure and support your item. Refer to cam lock guidelines at the beginning of this manual for future information.

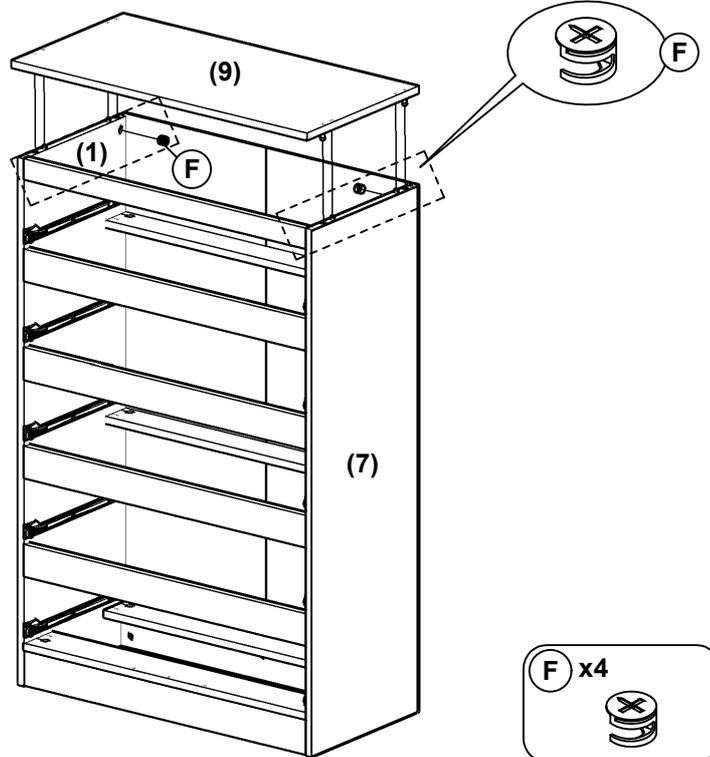


**2 PERSON
ASSEMBLY**

Note: Always use atleast 2 adults to stand the item upright

STEP 13

Simply align the drawer with the side drawer slides and place the drawer in.



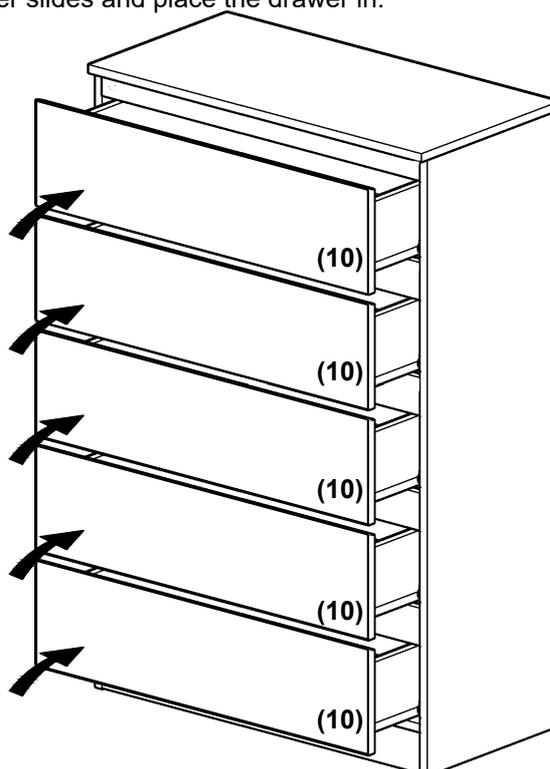


COMO 5 TALLBOY

ITEM CODE : CD 790

STEP 14

Insert the rear panel connector (H) into the slot on the edge of the rear panel as shown and secure with the screw (B).
NOTE : It is important to attach the rear tier stop correctly as this will help support and stabilize your items.

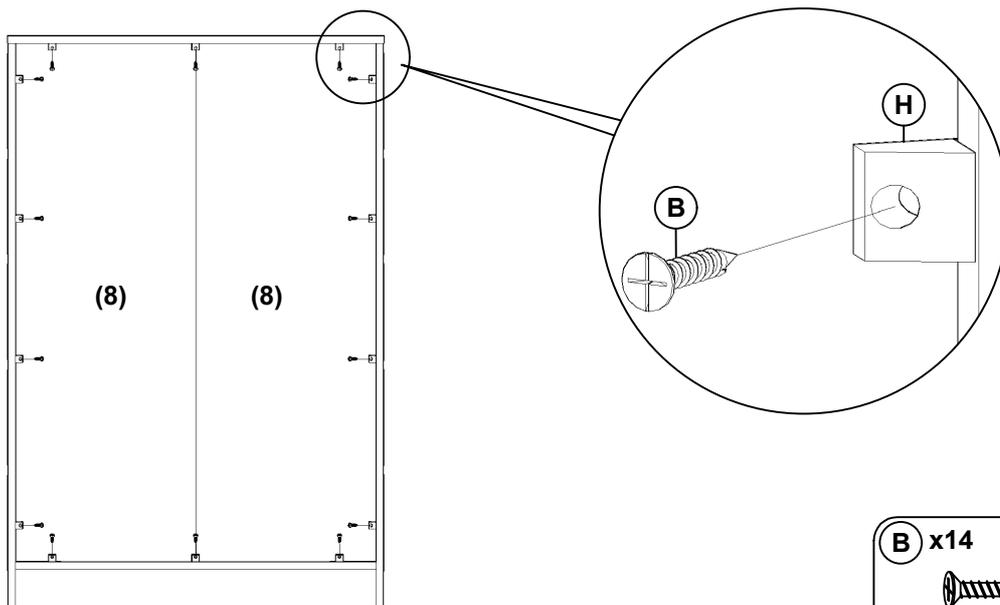

STEP 15

