


# TALLBOY WITH MIRROR

ITEM CODE : JCD 791

**1.5 HR**

APPROXIMATE ASSEMBLY TIME




**2 PERSON  
ASSEMBLY**

**FLOOR AREA  
2.0M X 2.0M**




**REQUIRED ASSEMBLY SPACE**


## REQUIRED ASSEMBLY TOOLS



POZI SCREWDRIVER

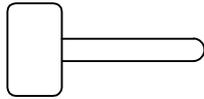

HAMMER

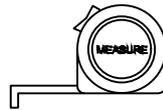


MEASURING TAPE



**DRILL**

## ASSEMBLED DIMENSIONS

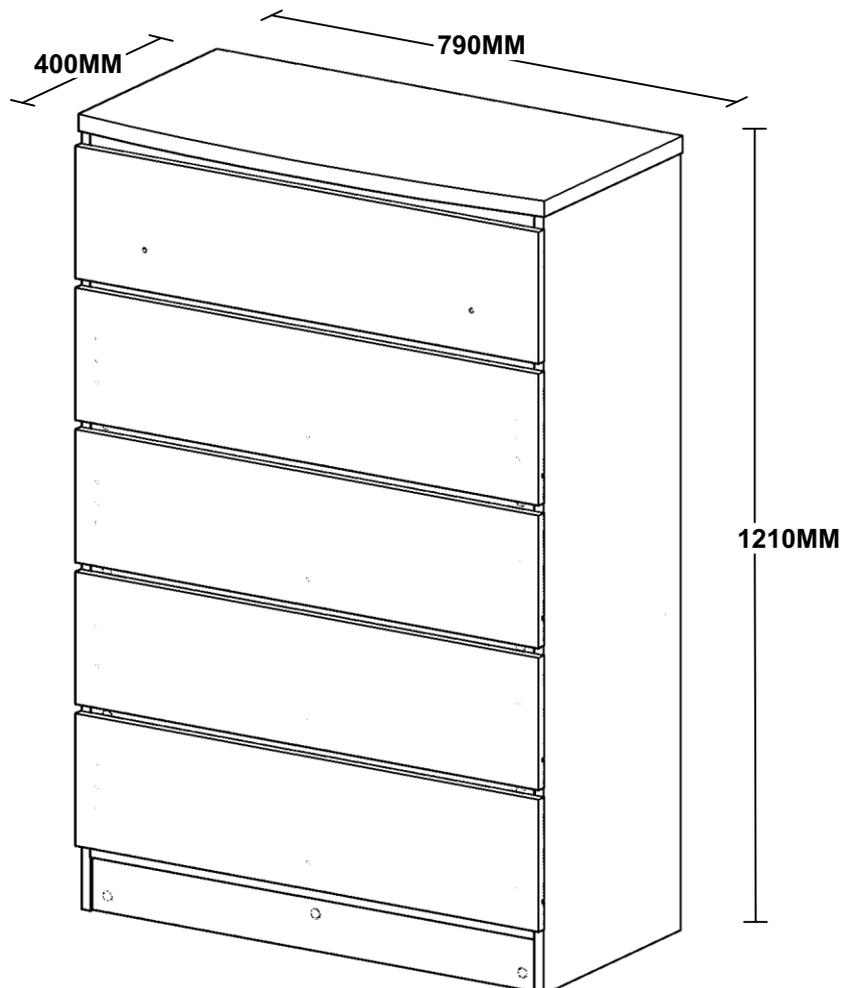

# TALLBOY WITH MIRROR

ITEM CODE : JCD 791

## Important :

Please read these instructions carefully before use and keep for future reference.

- This product is intended for domestic use only and is not designed for commercial use.
- DO NOT assemble / use this item if any components are missing or damaged. Please contact the retailer straight away.
- DO NOT attempt to modify your item as this will void your warranty. Please call the retailer for required parts.
- Assembly to be carried out by a competent adult only.
- During assembly children should be kept away from the product due to possible risk of injury.

**Please refer to separate Warranty Certificate for full warranty details and information.**

## Tips before you start :

- Please check that all parts are present before you start the assembly of your furniture. Please do not start to build your item if any parts are damaged as this may void your warranty. Please contact the retailer immediately so they can advise what you should do.
- For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.

# TALLBOY WITH MIRROR

ITEM CODE : JCD 791

## Assembly Tips:

1. For larger items, please ensure that you have sufficient space and people (as indicated on page 1) to assemble your product safely.
2. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
3. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
4. During assembly please take care not to over-tighten, any fittings, as this may damage the product.
5. Always place the product on a flat, steady and stable surface.
6. Do not stand on the product. Do not use the product as a stepladder.
7. This product is intended for indoor, household use only as it is a non industrial product.
8. Use of power tools is NOT recommended for assembling this product as over-tightening may occur and damage the product.
9. Due to the laminated finish of this item and the materials used to construct it, when first opening the carton and assembling a slight smell may be noticeable. This will dissipate over a short period of time. Please contact the retailer you purchased this item from if you have any concerns.
10. Please use caution and care when lifting the product to avoid personal injury and / or damage.

## Care and Maintenance of your Furniture


- Please periodically check all fittings and re-tighten as necessary.
- To clean your item, please use a damp cloth and wipe clean. Never use harsh chemicals or strong detergents as this could damage the finish of your product.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- Please do not place hot / cold items (e.g. hot drinks) directly on to the surface.
- Do not pull or drag your item. Ensure it is evenly supported and lifted while moving it.
- Avoid placing sharp objects on the surface as this may scratch the surface. It is recommended to use trivets or coasters under flowerpots, vases, cups etc to avoid damage to your item.

# TALLBOY WITH MIRROR

ITEM CODE : JCD 791


Tips before you start:

## QUICKFIT

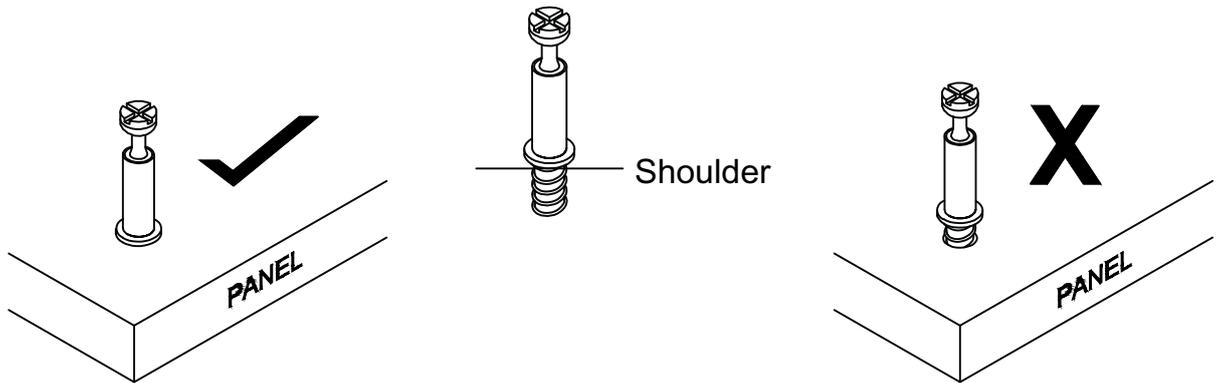


Tighten quickfit until shoulder is flush with panel. do not overtighten or unde tighten.

## CAM LOCK

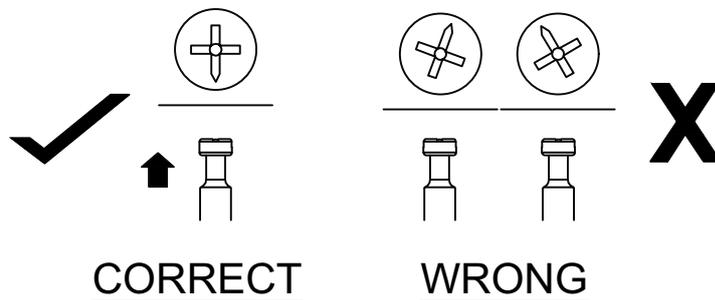

When fitting cam lock , ensure starting position is correct before you insert connecting quickfit.

Quickfit head should be in the center of the cam lock when the two panels are joined.

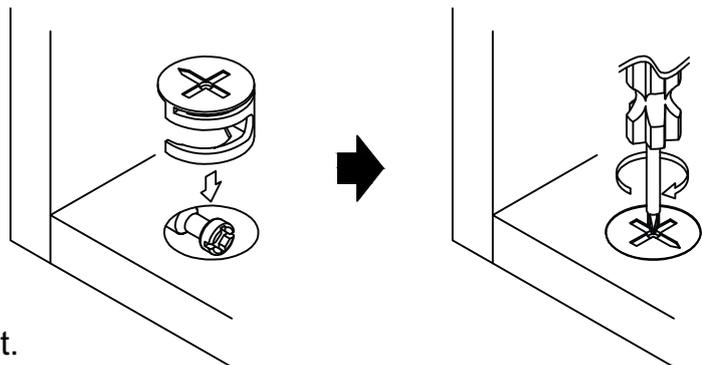


Cam lock should be inserted before quickfit.

Turn camlock clockwise to tighten.

# TALLBOY WITH MIRROR

ITEM CODE : JCD 791

## PART LIST:

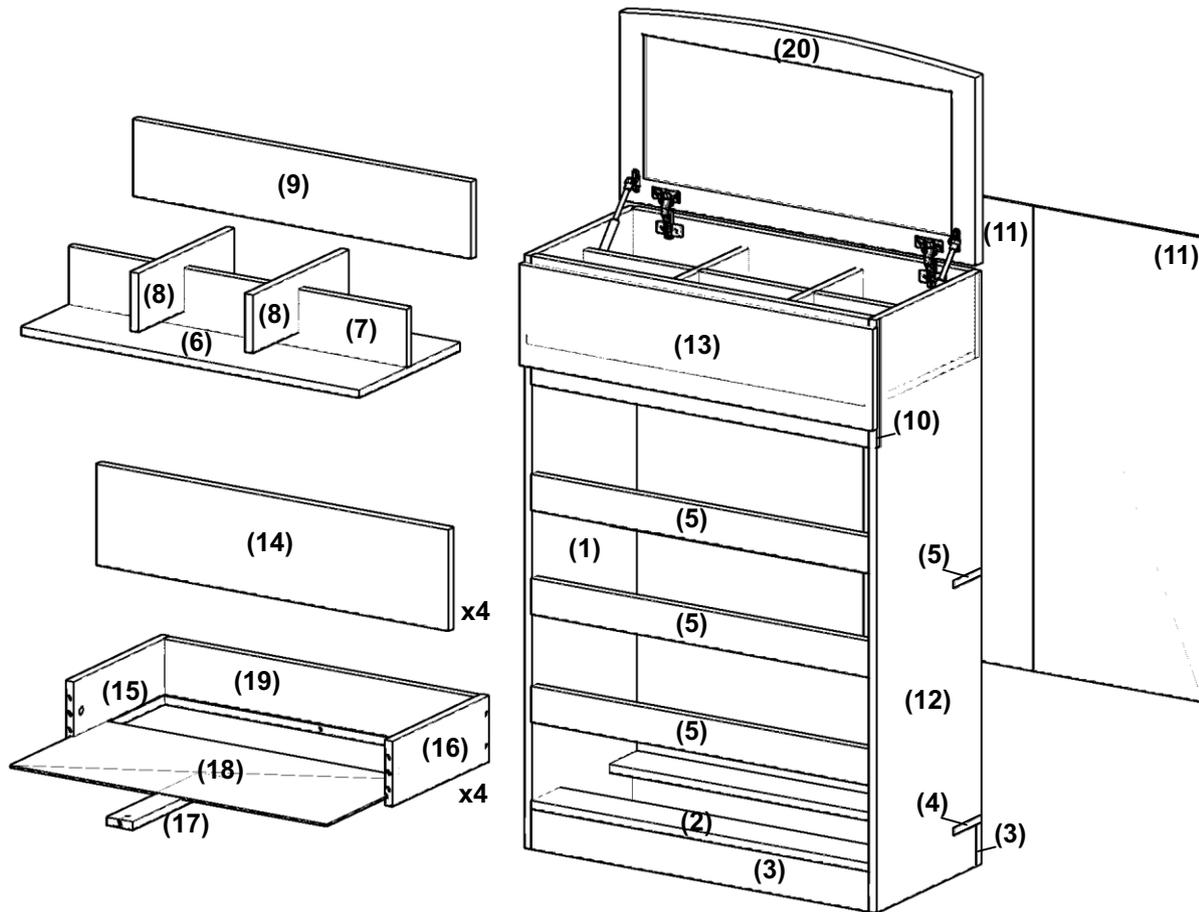

NO.	PART NAME	QTY	NO.	PART NAME	QTY
1	SIDE PANEL (LEFT)	1	11	BACK PANEL	2
2	FRONT BOTTOM SLATS	1	12	SIDE PANEL (RIGHT)	1
3	BOTTOM PANEL	2	13	TOP FRONT PANEL	1
4	BACK BOTTOM SLATS	1	14	DRAWER FRONT	4
5	TOP SLATS	4	15	DRAWER SIDE (LEFT)	4
6	SHELF PANEL	1	16	DRAWER SIDE (RIGHT)	4
7	HORIZONTAL PANEL	1	17	DRAWER SUPPORT	4
8	VERTICAL PANEL	2	18	DRAWER BOTTOM	4
9	TOP BACK PANEL	1	19	DRAWER BACK	4
10	TOP FRONT SLATS	1	20	TOP PANEL	1

# TALLBOY WITH MIRROR

ITEM CODE : JCD 791


## HARDAWRE LIST

**A** x72




C/B SCREW M3.5 x 16mm

**B** x4




C/B SCREW M4 x 28mm

**C** x26




SCREW M5 x 36mm

**D** x2

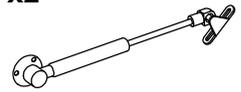

HINGES PUMP

**E** x68




DOWEL Ø6 x 25mm

**F** x42



CAM NUT

**G** x42




CAM BOLT

**H** x12




BACK PANEL

**I1** x4



METAL DRAWER SLIDE  
LEFT (350MM)

**I2** x4



METAL DRAWER SLIDE  
RIGHT (350MM)

**J1** x4




METAL DRAWER SLIDE  
LEFT (350MM)

**J2** x4



METAL DRAWER SLIDE  
RIGHT (350MM)

**M** x2

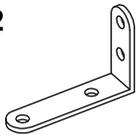


L - BRACKET

**N** x4



GLIDER WITH NAIL

**O** x2

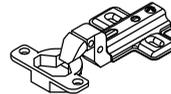

HINGE (5/8") W/SPRING

**P** x10



SCREW M4 x 16mm

### Tips before you start :


- Please check that all parts are present before you start the assembly of your furniture. Please do not start to build your item if any parts are damaged as this may void your warranty. Please contact the retailer immediately so they can advise what you should do.
- For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.

# TALLBOY WITH MIRROR


ITEM CODE : JCD 791

## STEP 1

Insert the Dowel (E) into the designated hole as shown.

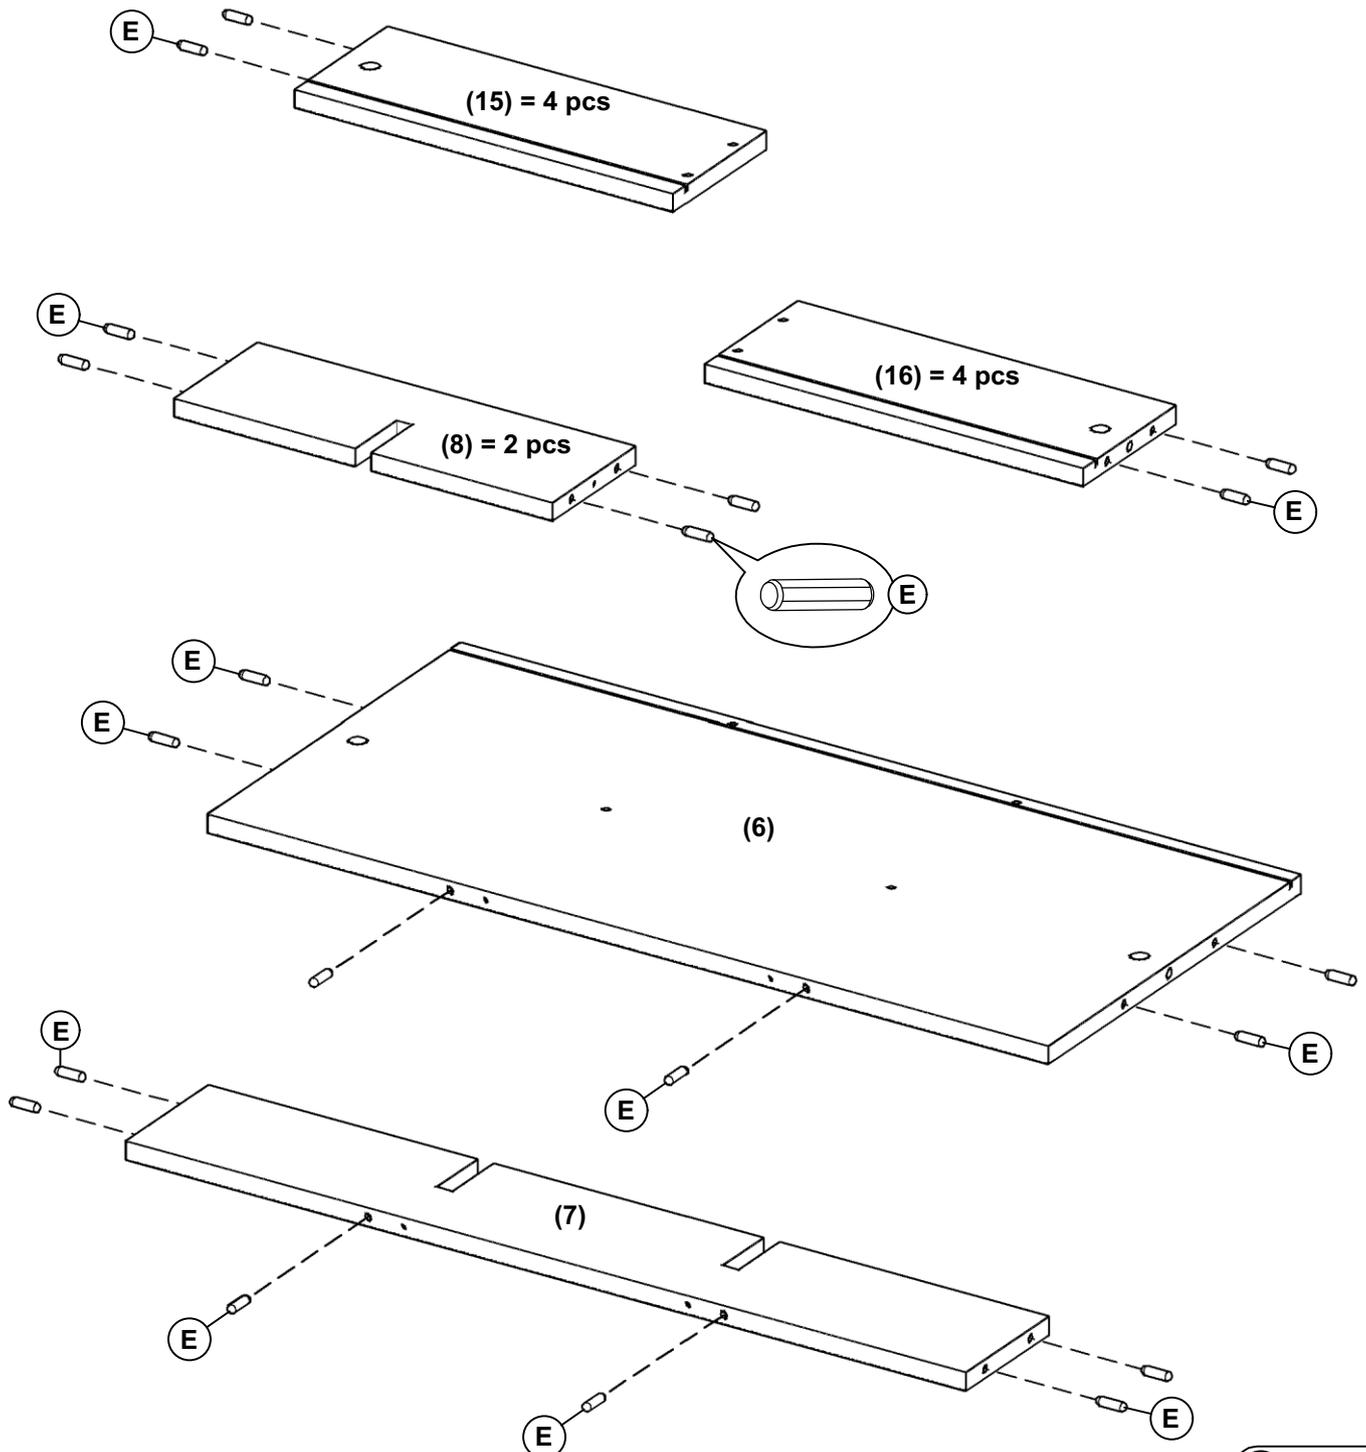

E x36




# TALLBOY WITH MIRROR

ITEM CODE : JCD 791

## STEP 2

Insert the Dowel (E) into the designated hole as shown.

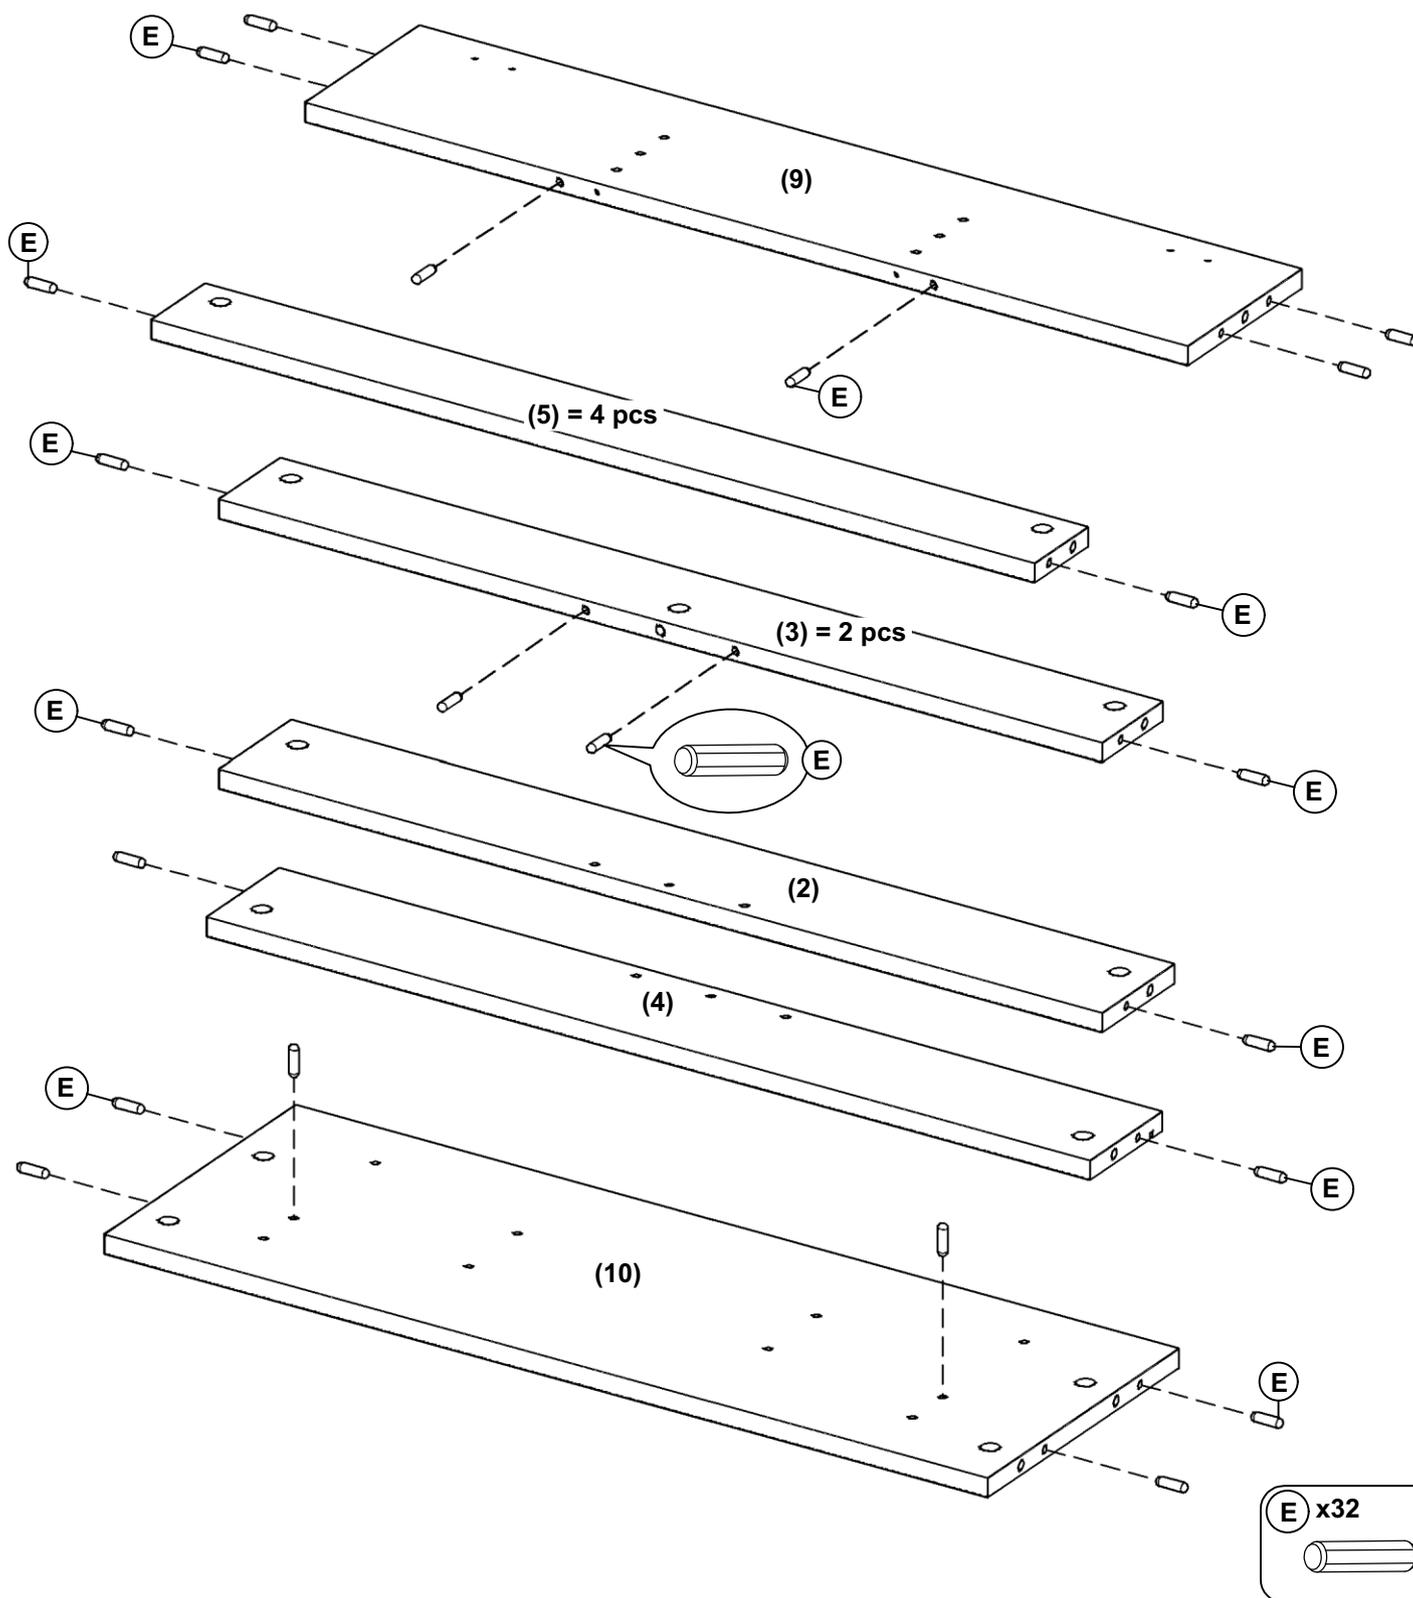










# TALLBOY WITH MIRROR

ITEM CODE : JCD 791

## STEP 4

Take both side panels (1,12) attach drawer slide (I1 & I2) using screw (A). Then attach the hinges pump leg (D) to the panels using (P) screws.

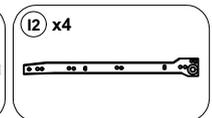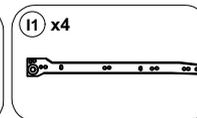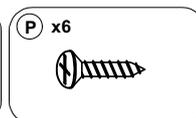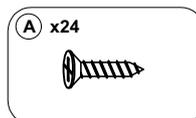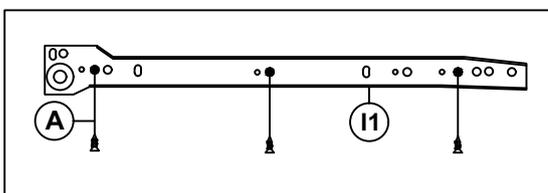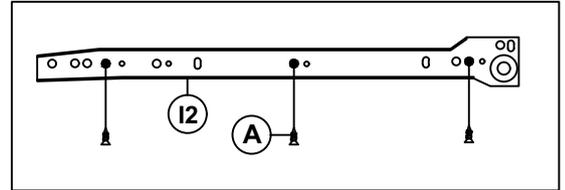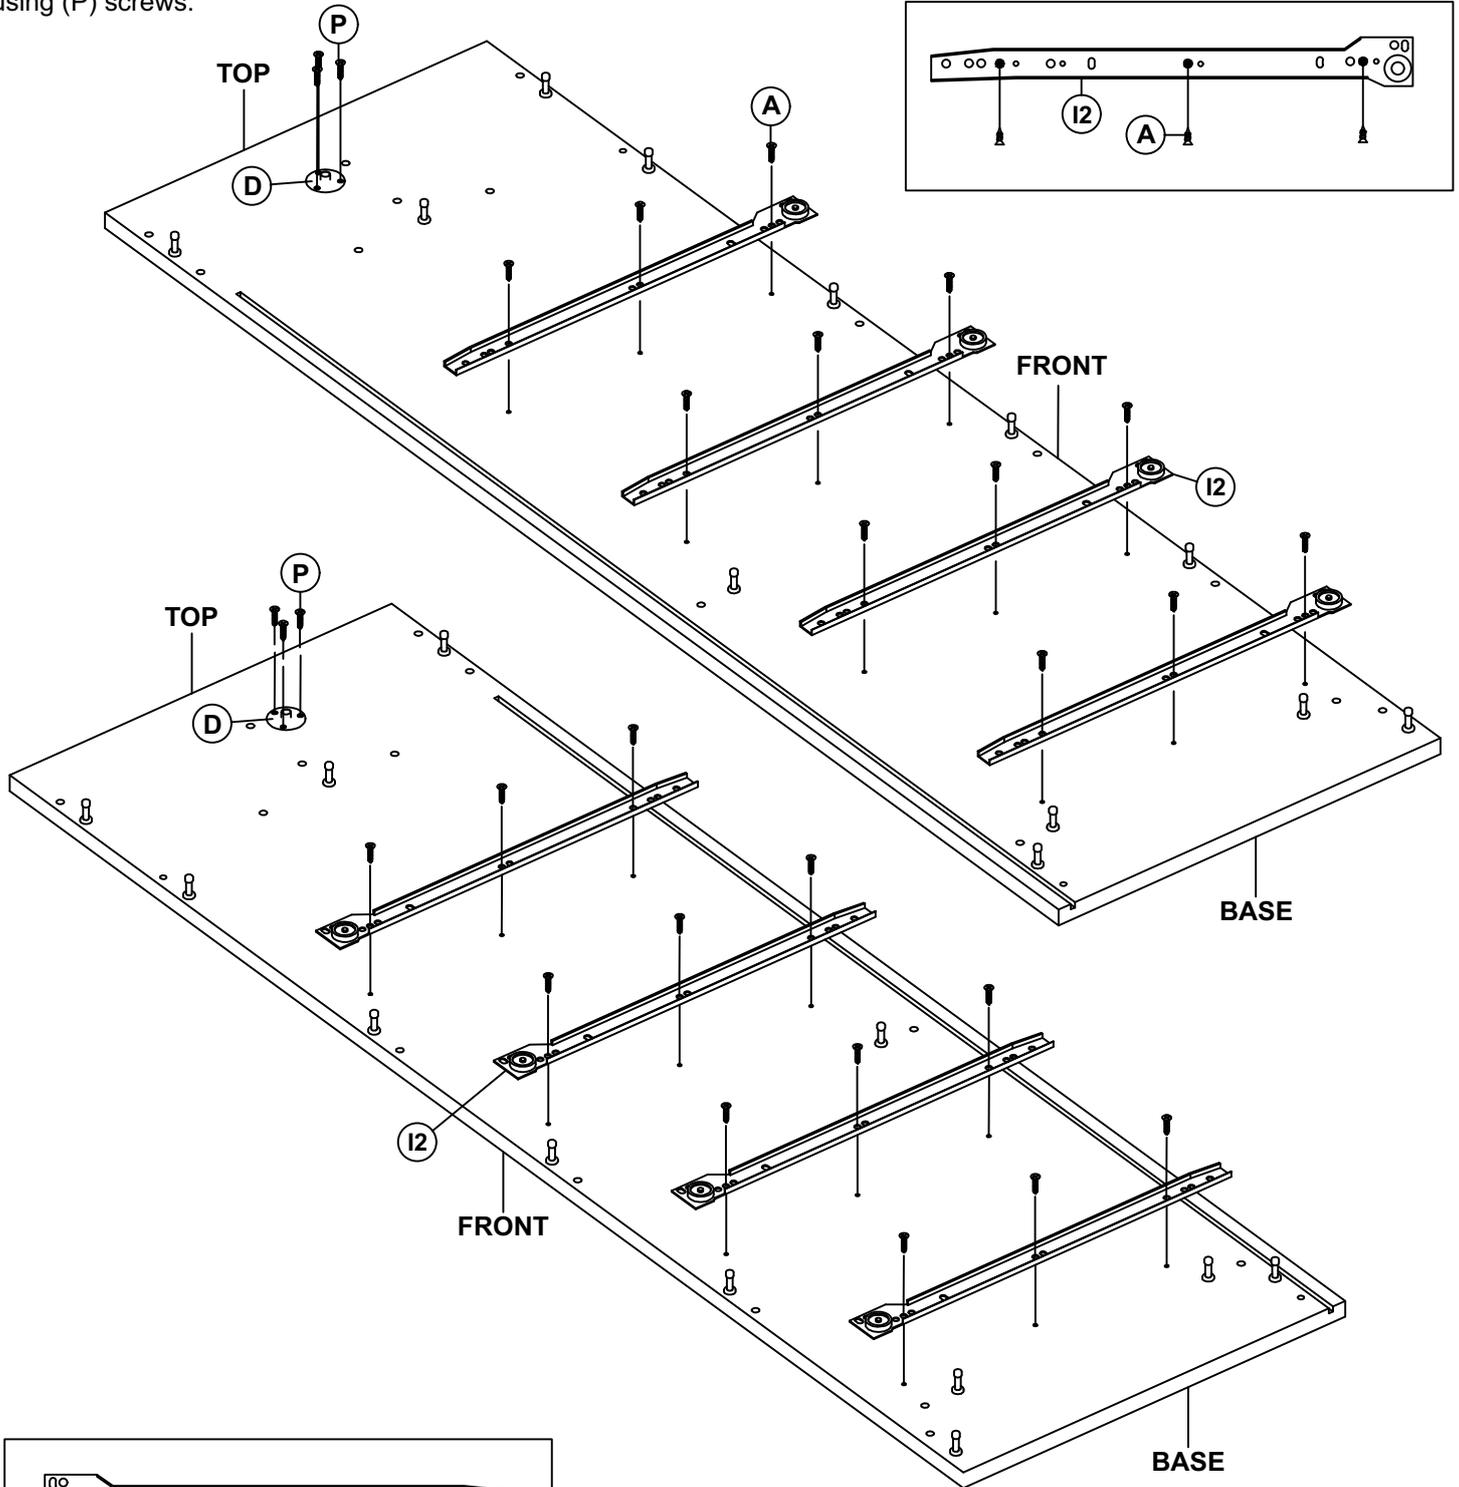


# TALLBOY WITH MIRROR

ITEM CODE : JCD 791

## STEP 5



Attach Hinges (O) to the top panel (20) using screws (A) as shown in the diagram below. Ensure the hinges are nice and straight.

**TIP :** To ensure the hinge plates are straight you could use the straight edge of another panel and place on top and position the edge against the hinge plates, ensure the panel is aligned properly with the door panel and double check all hinges are nice and straight before you tighten / secure the hinges onto the panel.

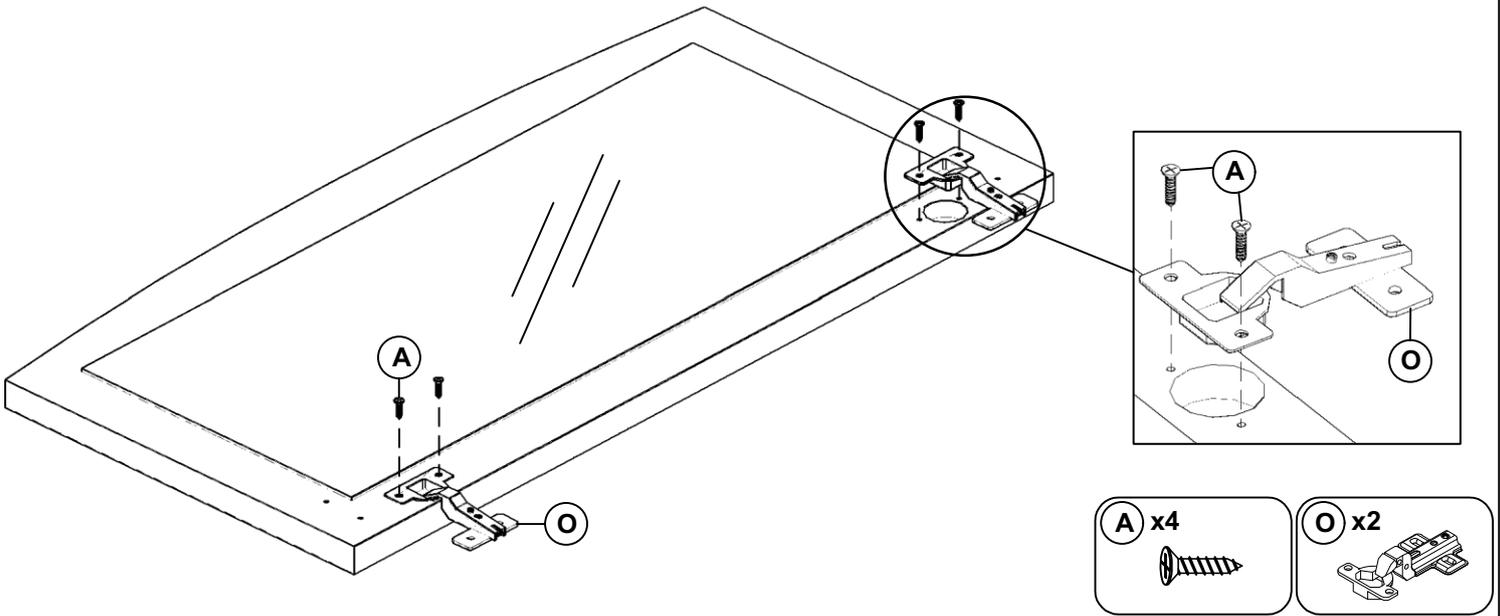

## STEP 6

Align panels (4) and (2) with the holes on (3) as shown and secure with cam nut (N) 180°.

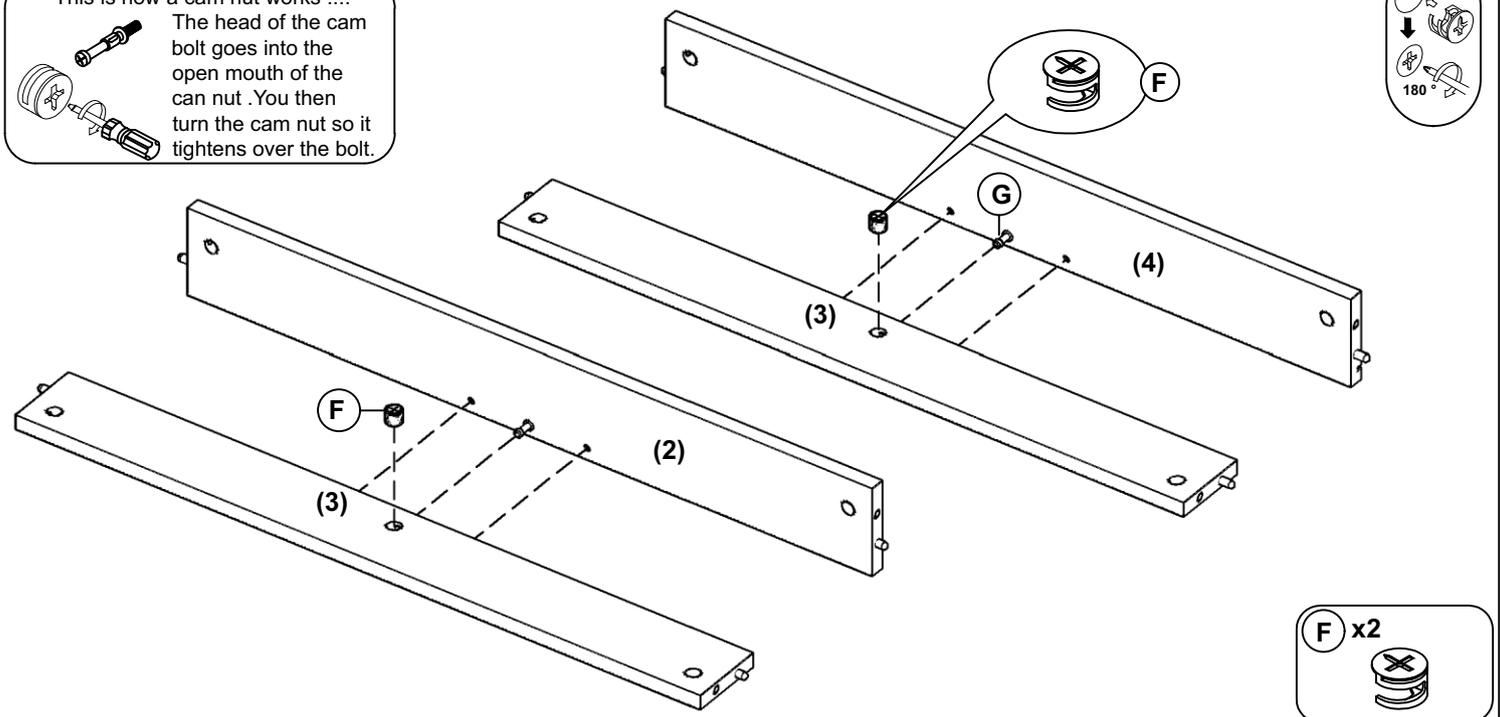
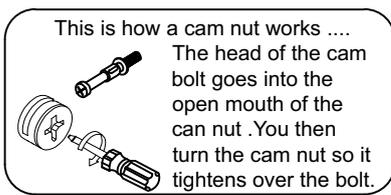


# TALLBOY WITH MIRROR

ITEM CODE : JCD 791


## STEP 7

Secure the drawer sides (16 and 15) to the drawer front (14) by fasten into place using CAM BOLT (G) as shown in the picture, slide the drawer bottom (18) to the drawer front panel (14), put the cam nut (F) into the designated hole and tighten 180°.

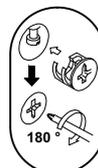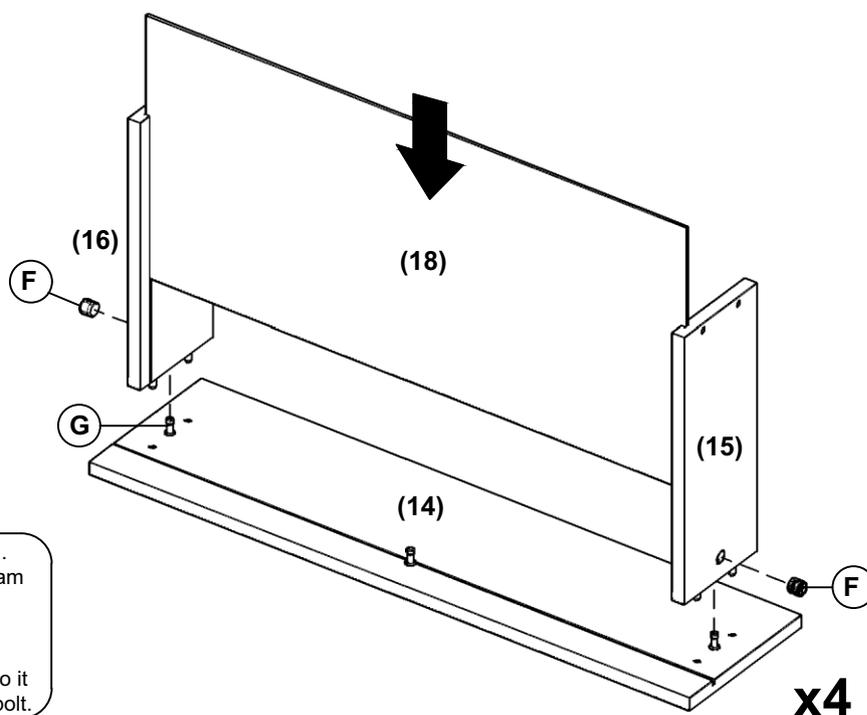

This is how a cam nut works ....

The head of the cam bolt goes into the open mouth of the cam nut. You then turn the cam nut so it tightens over the bolt.


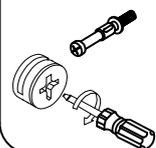


(F) x8




## STEP 8

Install the drawer support (17) to the drawer front panel (14), put the cam nut (F) into the designated hole and tighten 180°.

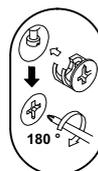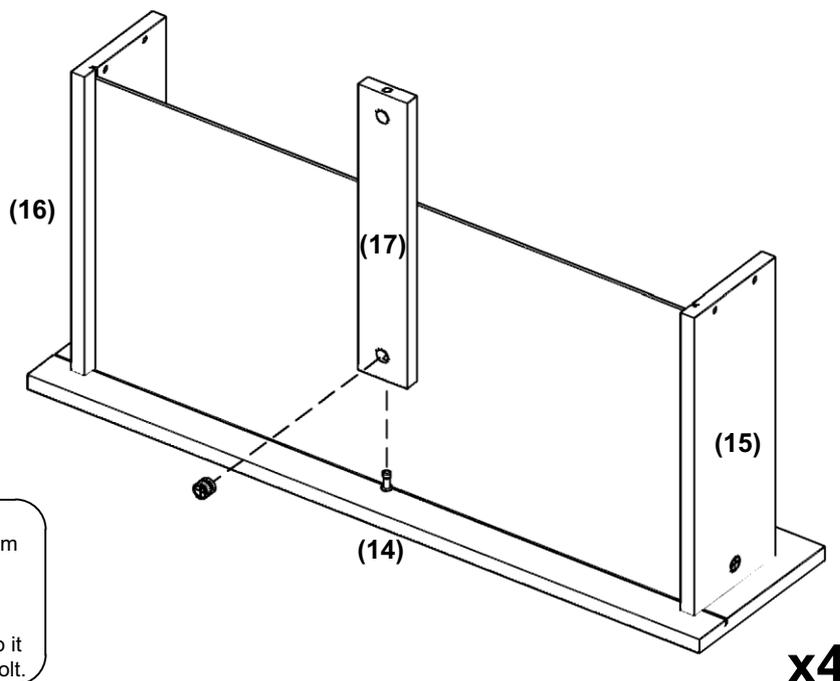

This is how a cam nut works ....

The head of the cam bolt goes into the open mouth of the cam nut. You then turn the cam nut so it tightens over the bolt.

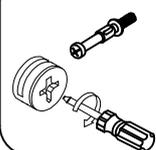

(F) x4




# TALLBOY WITH MIRROR

ITEM CODE : JCD 791


## STEP 9

Install the drawer back panel (19) to the panel (17). Fix the cam bolt (G) and put the cam nut (F) into the designated hole at panel (11) and tighten 180°.

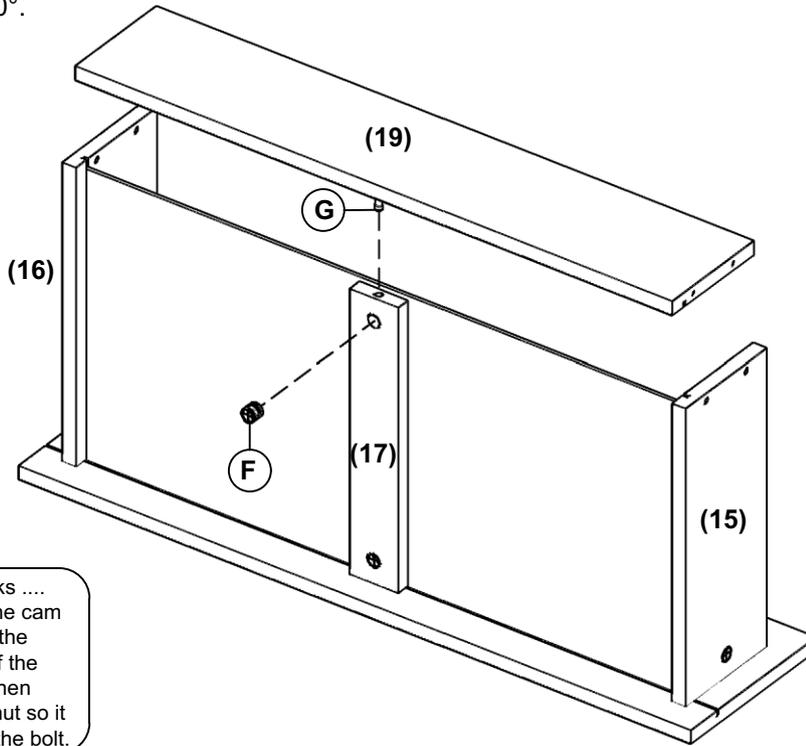

## STEP 10

Secure the drawer sides (15 and 16) to the drawer back (19) using screws (C) as shown.



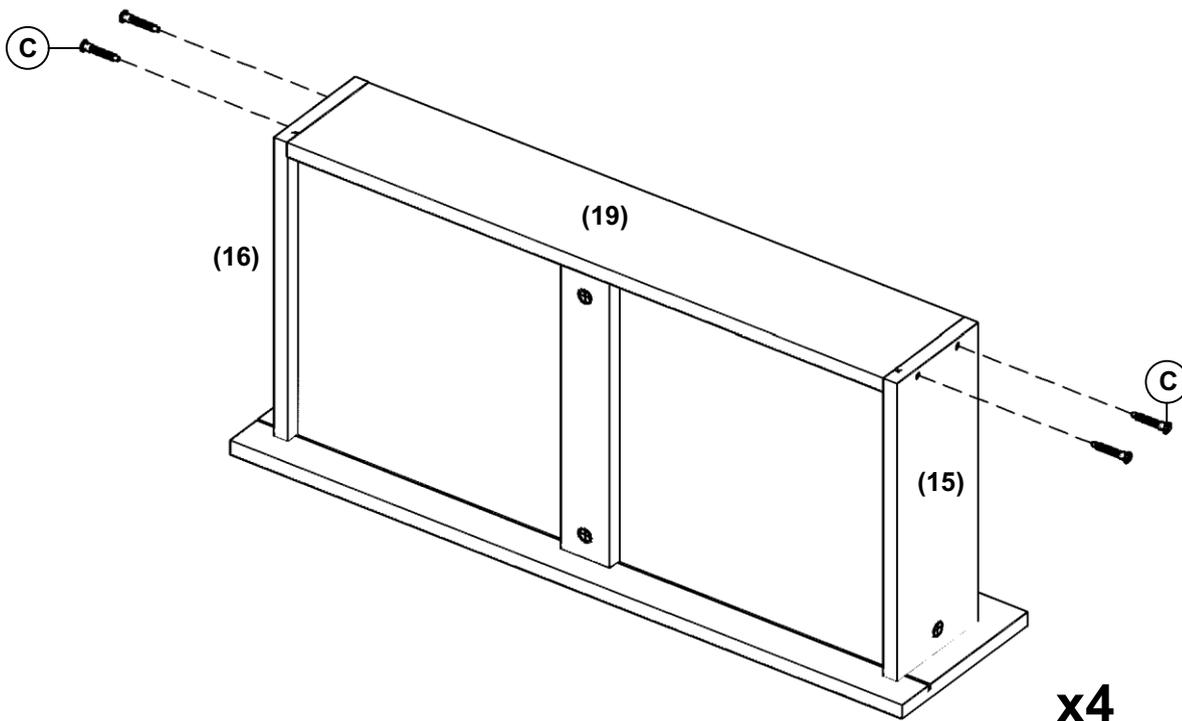


# TALLBOY WITH MIRROR

ITEM CODE : JCD 791

## STEP 11

Attach the drawer slide (J1 & J2) to the base of the drawer side (15 & 16) with the screw (A) as shown.

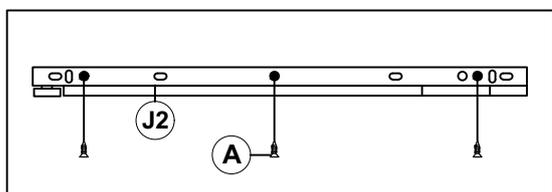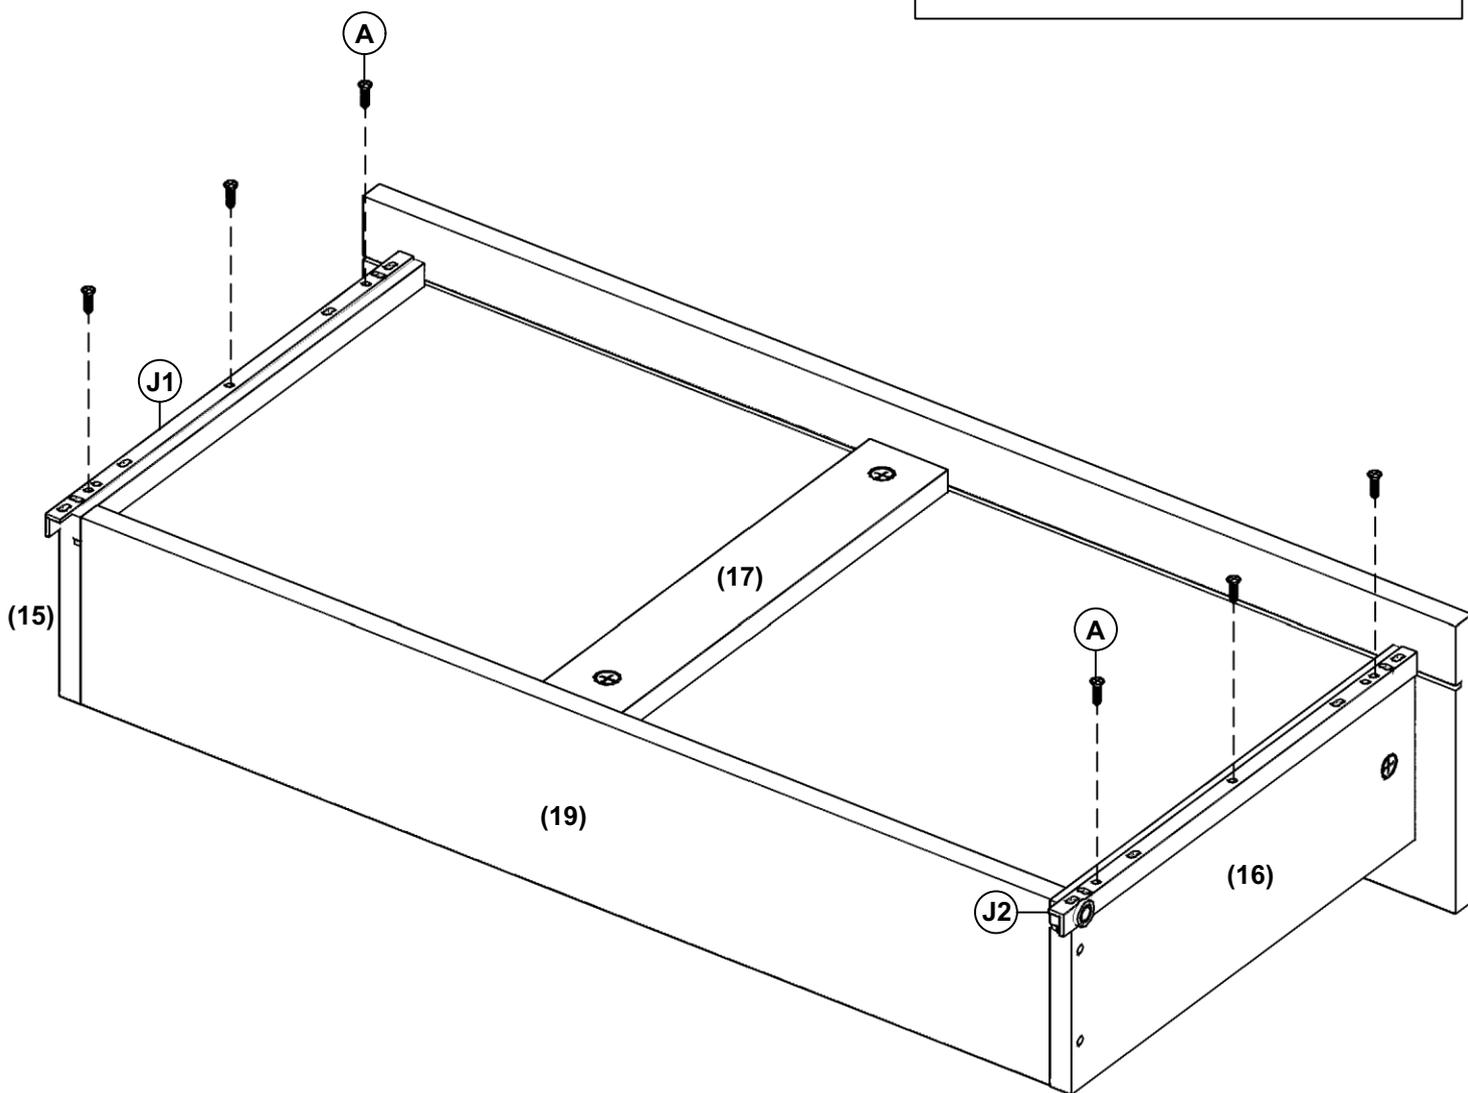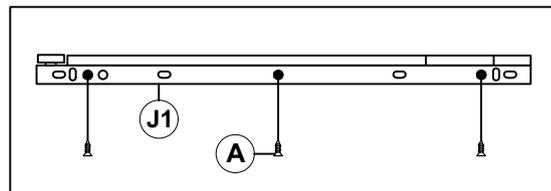

A x24



J1 x4



J2 x4




# TALLBOY WITH MIRROR

ITEM CODE : JCD 791


## STEP 12

Attach two panels (8) to panel (7). Then, secure panel (9) with panel (8) using screw (C) as shown below.

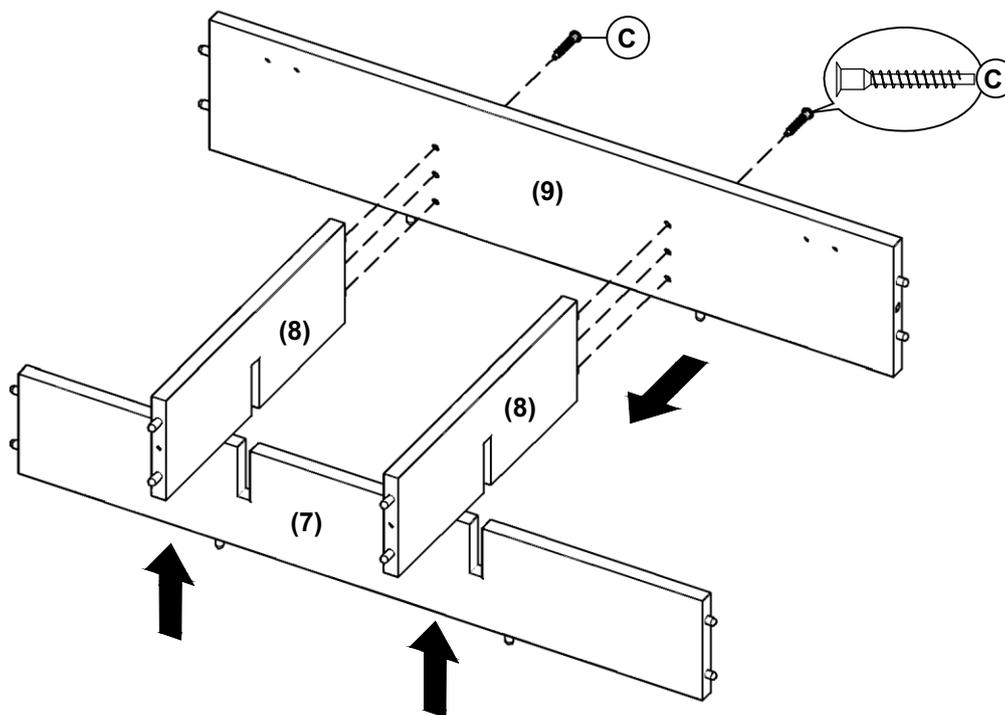

## STEP 13

Attach all the panels (7),(8),(9) and (6) together. Then, secure the panels using screw (C) as shown below.

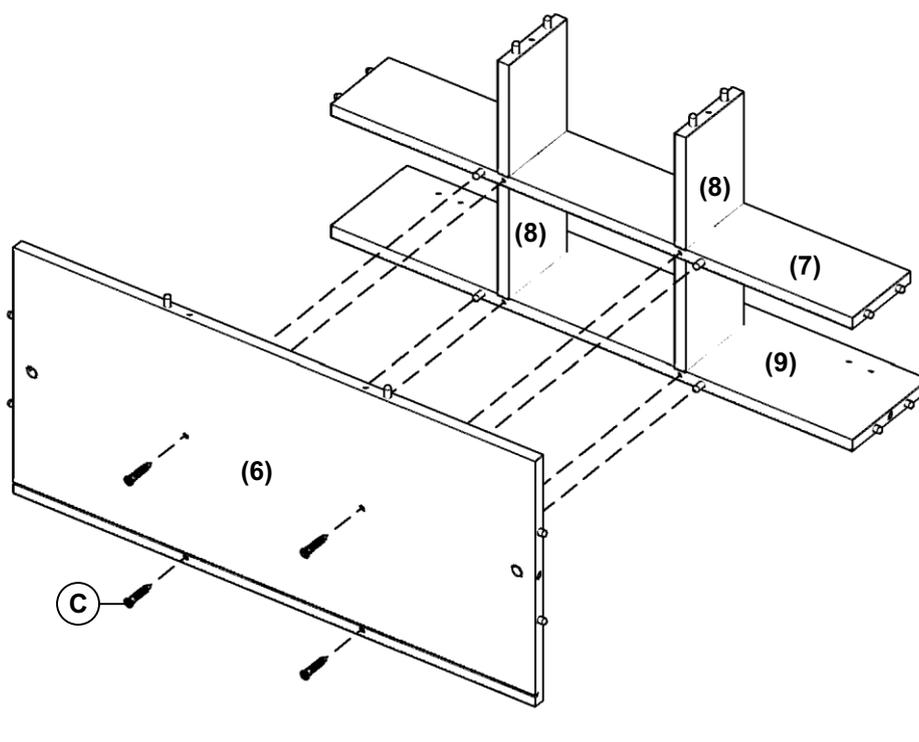


# TALLBOY WITH MIRROR

ITEM CODE : JCD 791

## STEP 14



Attach panels (10) to the unit panel. Then, secure the panels (6) and (8) to panel (10) using screw (C) as shown below.

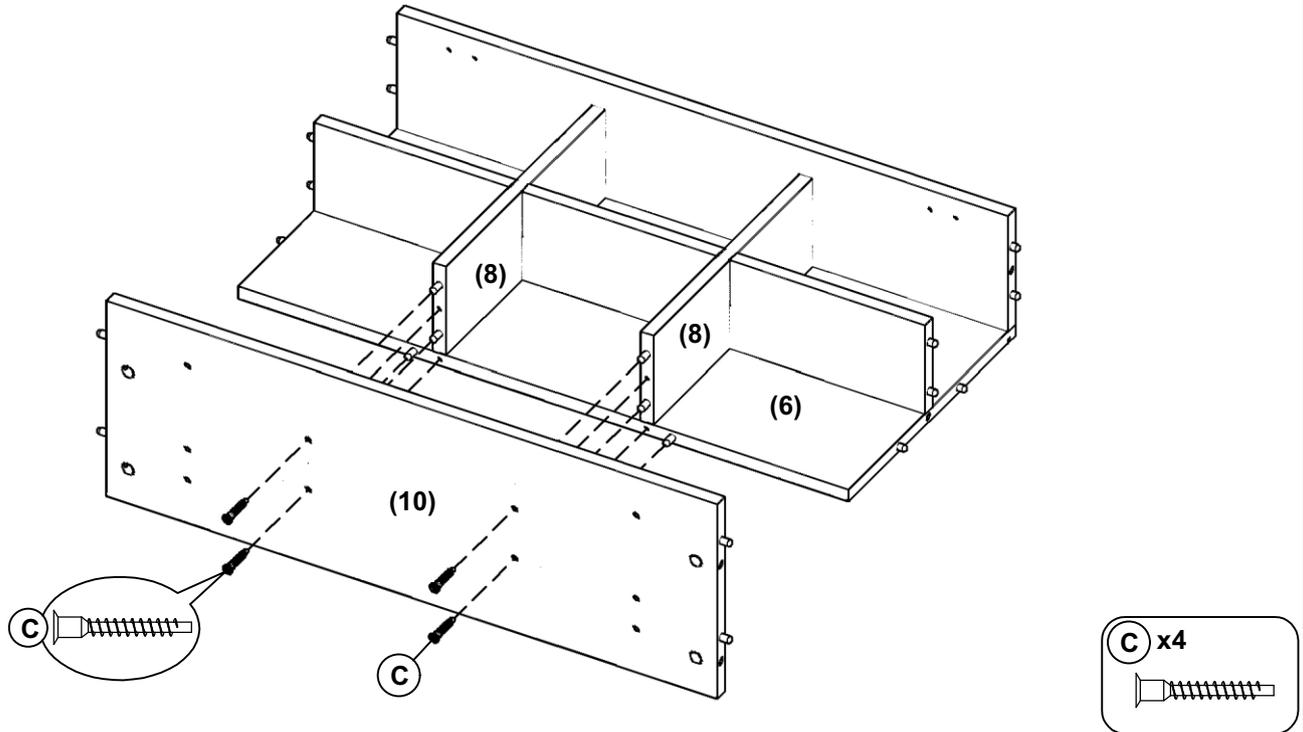

## STEP 15

Attach panels (12) to the frame unit with cam lock (F) on panels (2,3,4,6,9 & 10) as shown. Turn cam lock using screw driver until they tighten into place.

**Note:** Carefully check your cam lock are securely fastened to ensure correct stability of your item.

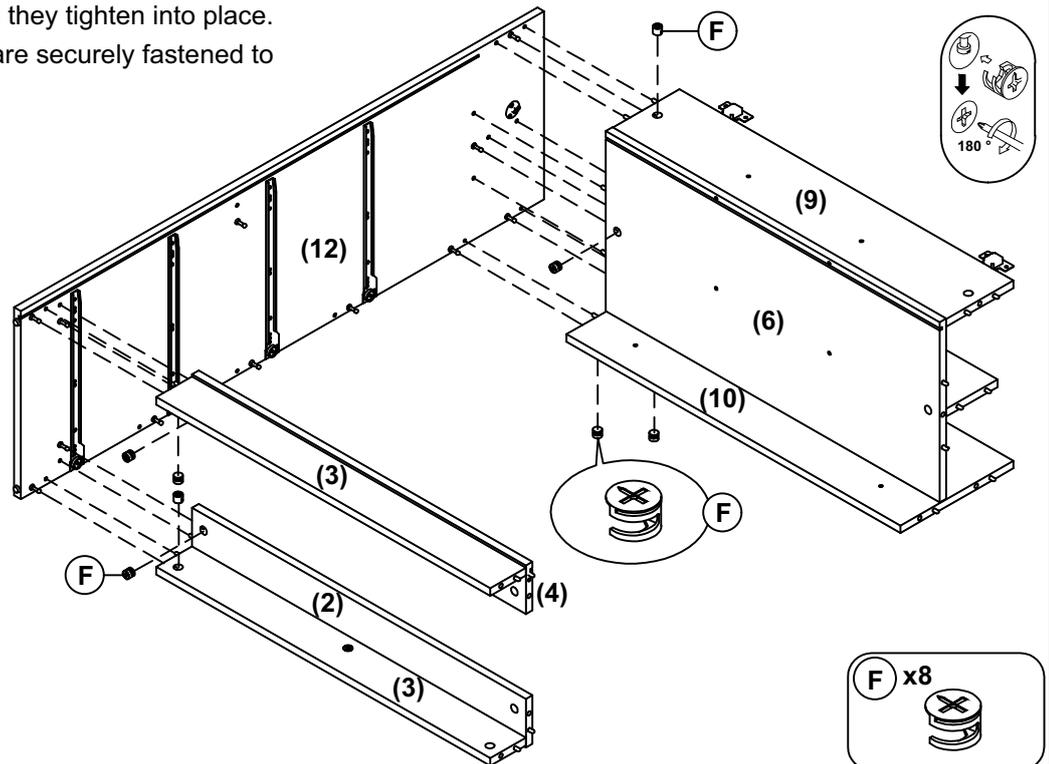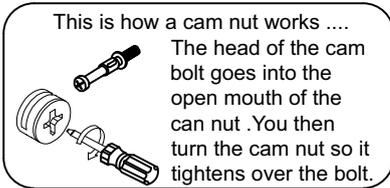

2 PERSON

Note: Its easier to have the help of a 2nd person to hold panels during this step and avoid damage to your item

# TALLBOY WITH MIRROR



ITEM CODE : JCD 791

## STEP 16

Next, attach panels (5) to panel (12) with cam lock (F) as shown. Turn cam lock using screw driver until they tighten into place.

**Note:** Carefully check your cam lock are securely fastened to ensure correct stability of your item.

This is how a cam nut works ....  
The head of the cam bolt goes into the open mouth of the cam nut . You then turn the cam nut so it tightens over the bolt.

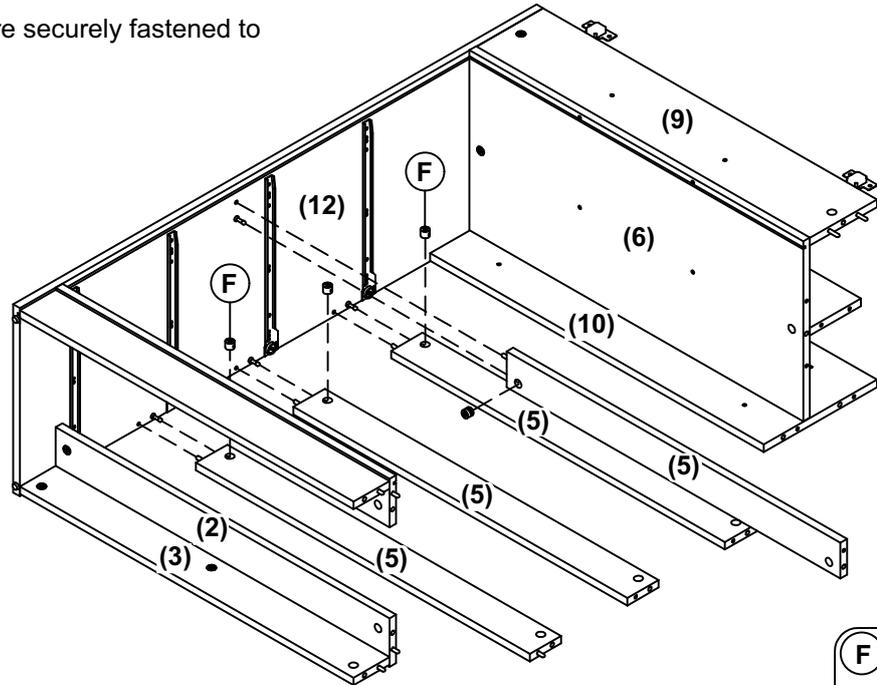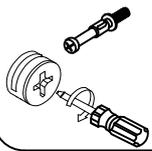


2 PERSON

Note: Its easier to have the help of a 2nd person to hold panels during this step and avoid damage to your item



## STEP 17

Then, slide in back panels (11) to the unit carefully.

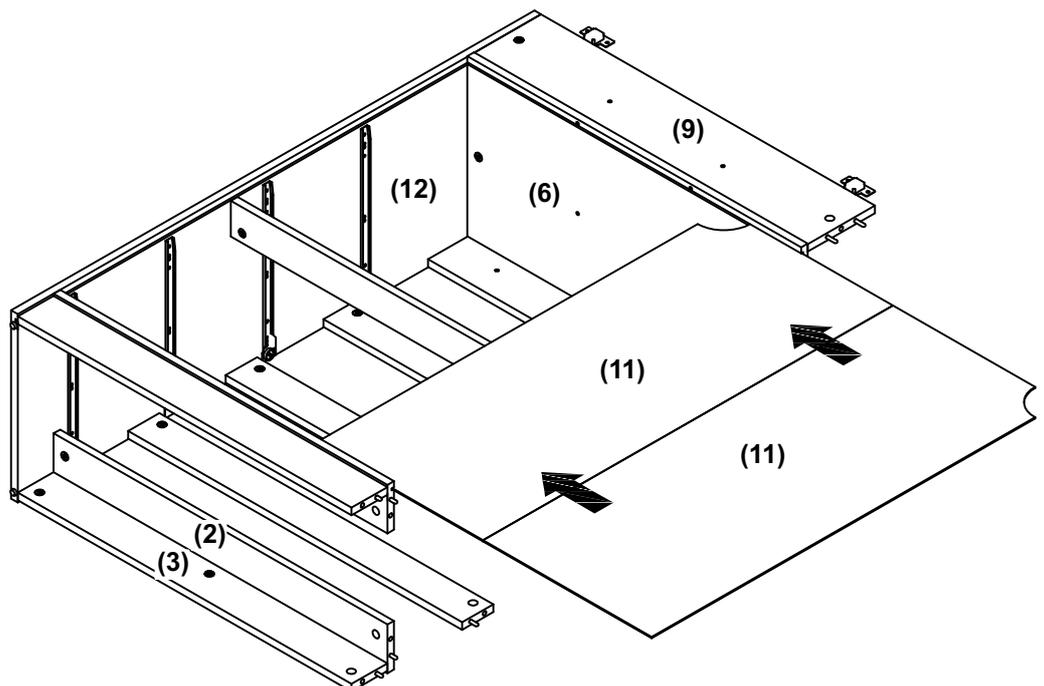

2 PERSON

Note: Its easier to have the help of a 2nd person to hold panels during this step and avoid damage to your item


# TALLBOY WITH MIRROR

ITEM CODE : JCD 791

## STEP 18


Attach panels (1) to the frame unit with cam lock (F) on panels (2,3,4,6,9 & 10) as shown. Turn cam lock using screw driver until they tighten into place. Then secure panel (6) with (9) using screw (C) as shown.

**Note:** Carefully check your cam lock are securely fastened to ensure correct stability of your item.

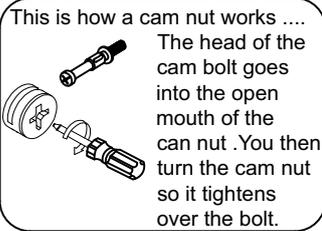

2 PERSON



**Note:** Its easier to have the help of a 2nd person to hold panels during this step and avoid damage to your item

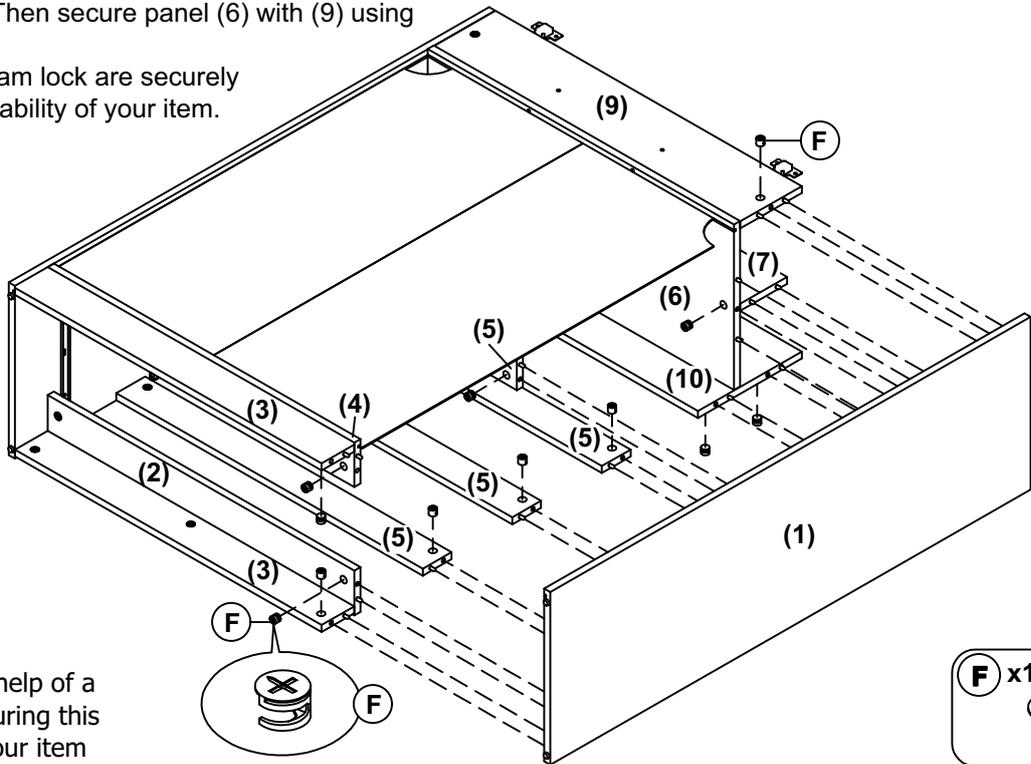

## STEP 19

Tack the plastic leg stud (N) to side panel (1 & 12) as shown. Then secure the backply stoppers (H) to the back panels (11) using screw (A).

**Note:** It is really important to attach the backply stoppers correctly as this will help with the overall structure and stability of the item.

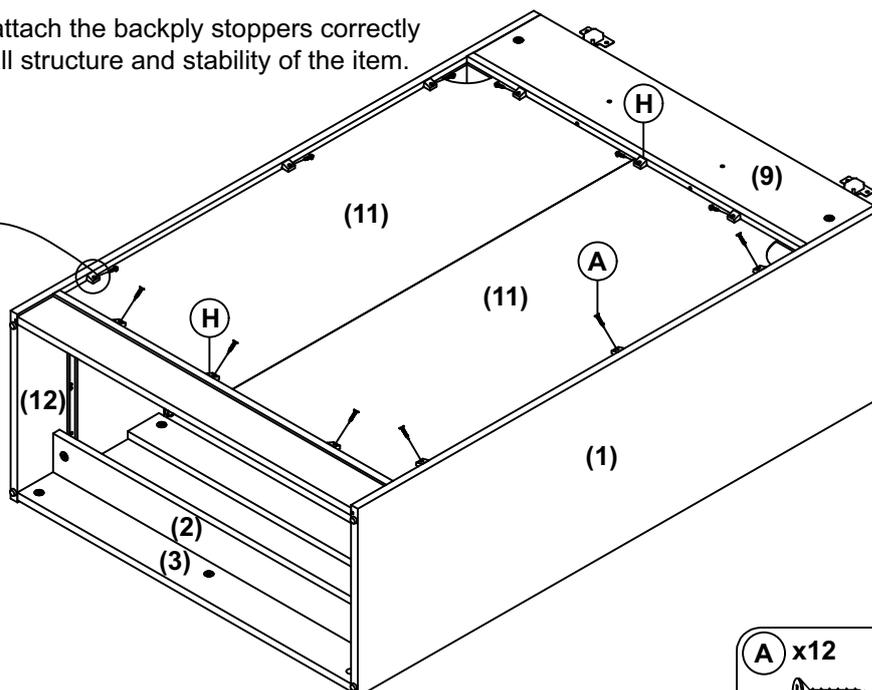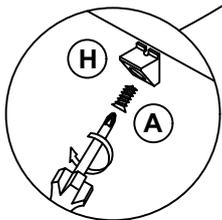


# TALLBOY WITH MIRROR

ITEM CODE : JCD 791



## STEP 20

Turn the unit front back (Step 19) to front. Then put up the unit and stand as shown below.

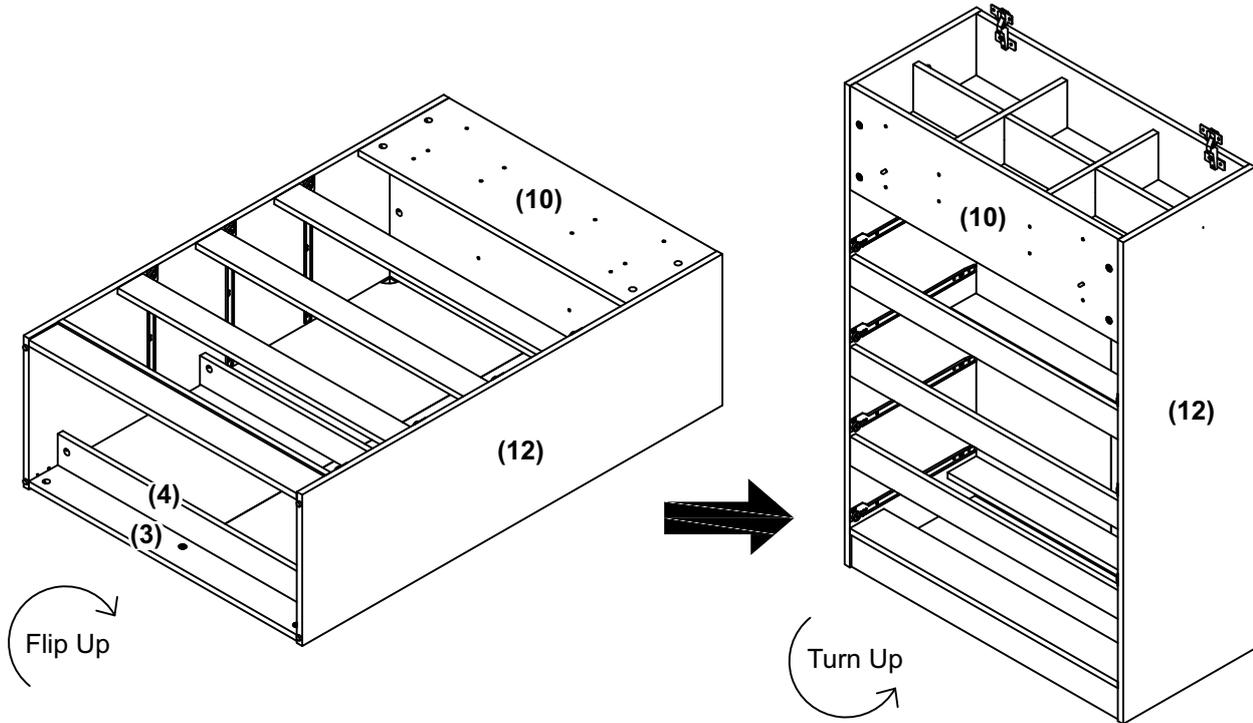

## STEP 21

Attach panels (13) to panel (10). Then, secure panel (13) with panel (10) using screw (B) as shown below.

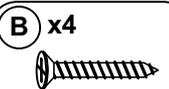
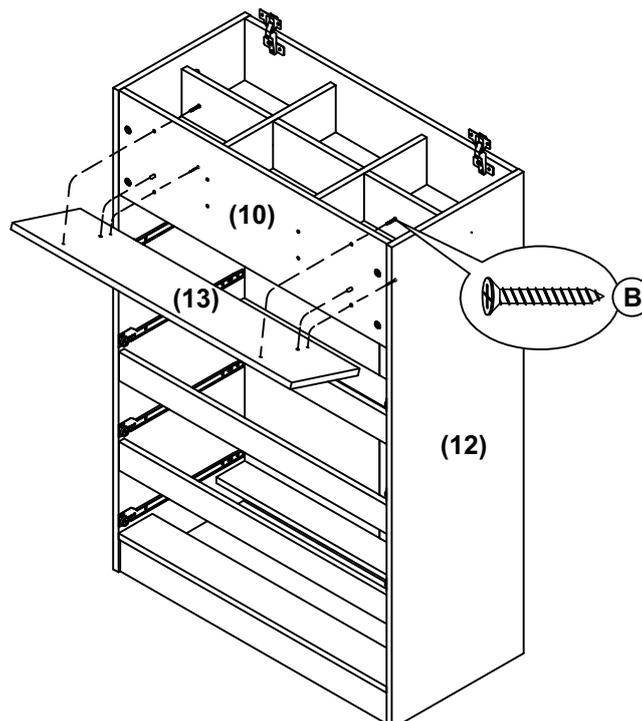


# TALLBOY WITH MIRROR

ITEM CODE : JCD 791

## STEP 22

To attach your doors to the cabinet, align the door panel (20) and hinge with the screw guide holes on the panel no (9). A 2nd person must help during this step. Attach the hinge plate (O) with screws (A) as shown. The screws should be positioned into the middle of the holes on the hinge plate, if required they can be adjusted in the final steps if you need to adjust door heights.

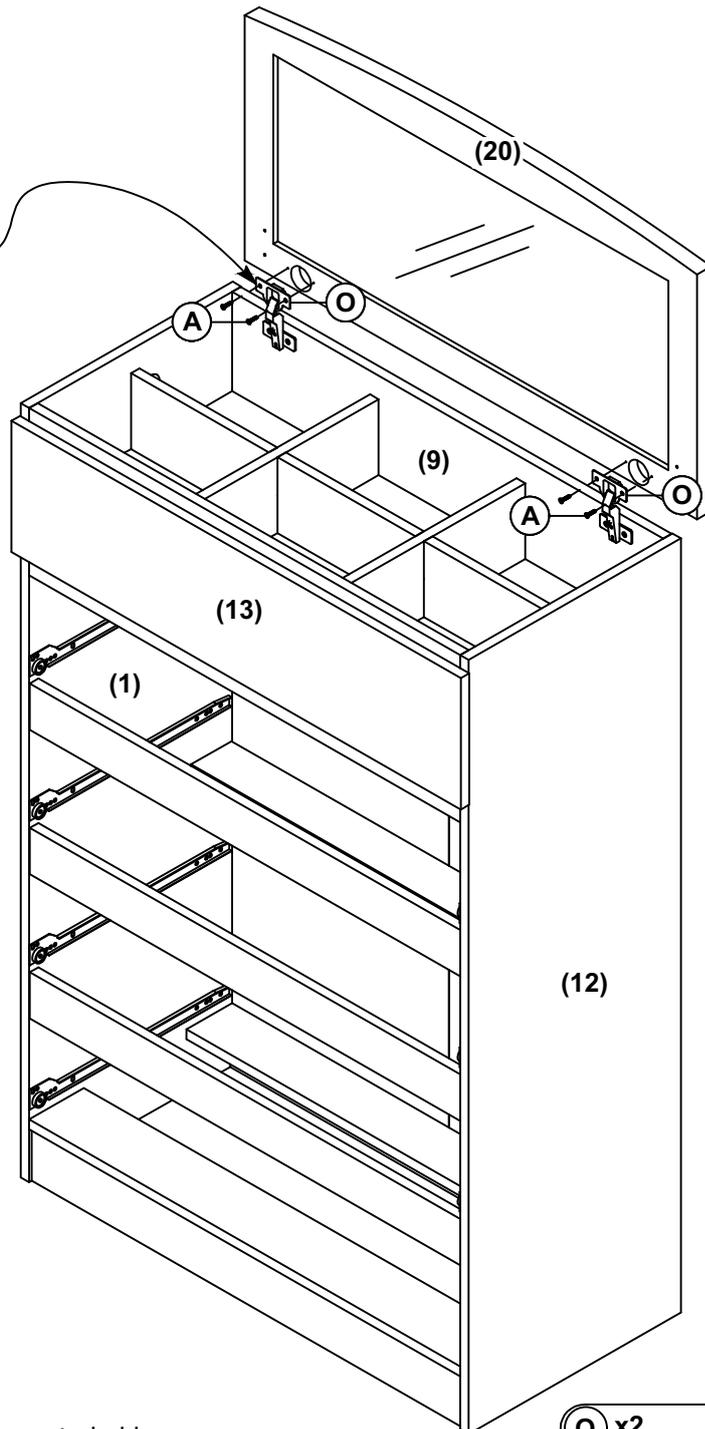
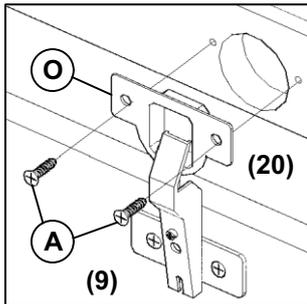


**TIP:** You might find this step easier if you loosely tighten all screws first into the hinge plates so that they can take the weight of the top panel and help to keep it straight before you fully tighten and complete the step. Hinges must be secured straight so that the top panel will function correctly.



2 PERSON



Note: Its easier to have the help of a 2nd person to hold panels during this step and avoid damage to your item

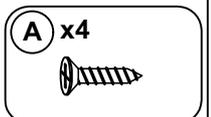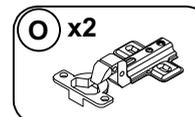

# TALLBOY WITH MIRROR


ITEM CODE : JCD 791

## HOW TO ADJUST THE HINGES FOR THE TOP PANEL

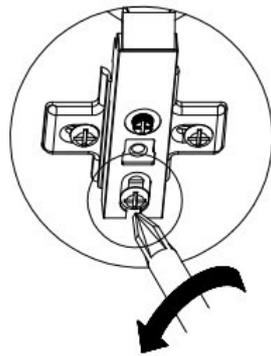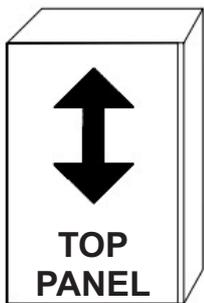


### STEP 1

Please loosen the screw to adjust the top panel.

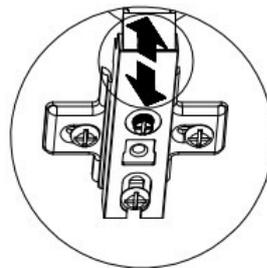

### STEP 2

Adjust the top panel.

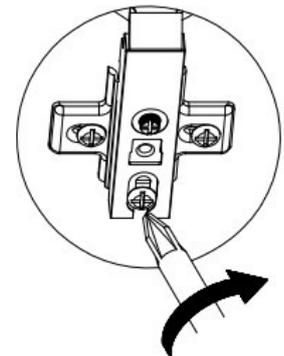

### STEP 2

After the adjustment, tighten back the screw.

This adjustment is used if the top panel have a big gap at the top or the bottom, or if one side of the hinges sits straight but is lower than the other hinges.

Before you begin always ensure your cupboard is on a flat even surface, as rugs and carpet / uneven tiles can affect the position of the top panel.

To begin, carefully tighten/loosen the screw as shown in the diagram it will move your top panel towards up or the bottom.


Sometimes just half a turn of the screw can make a big impact to the gap.

# TALLBOY WITH MIRROR

ITEM CODE : JCD 791

## STEP 23

Secure the screws (A) into the holes of the L-shaped bracket (L) to the bottom of panel (6) as shown below.

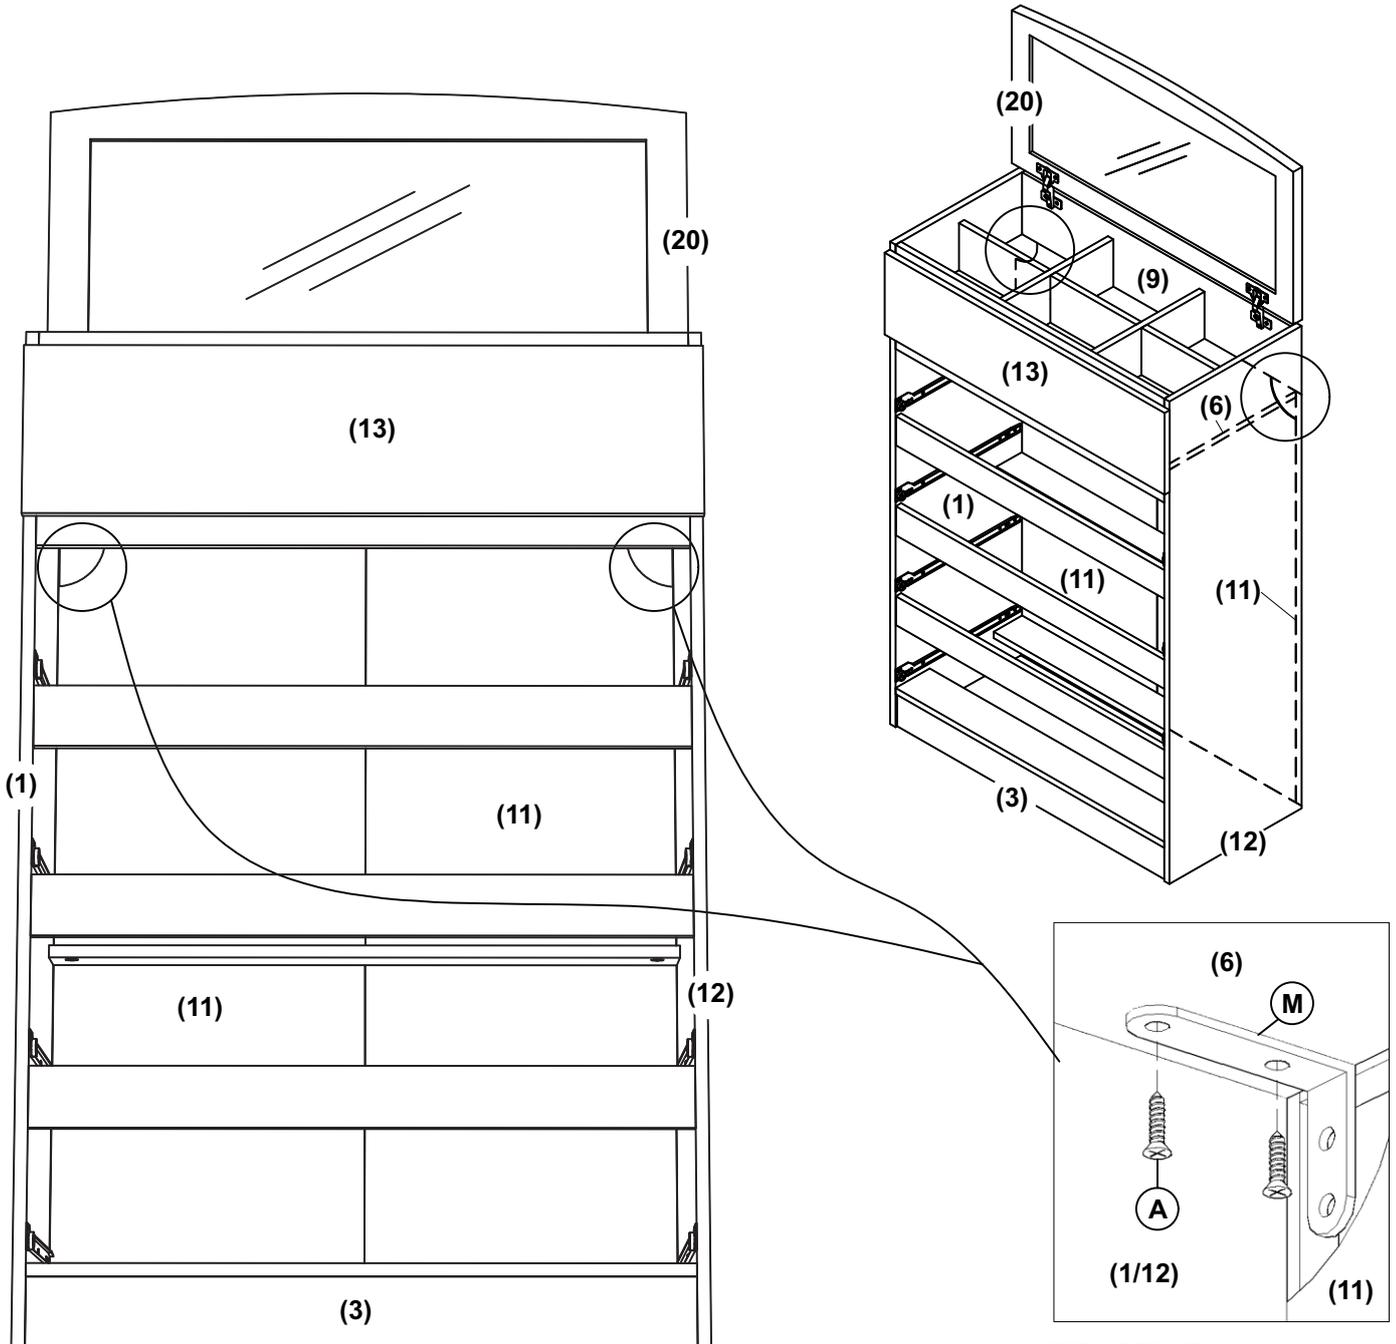

FRONT VIEW





2 PERSON

Note: Its easier to have the help of a 2nd person to hold panels during this step and avoid damage to your item

### IMPORTANT:

Weight Capacity per shelf is 6kg distributed evenly across the shelf

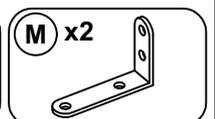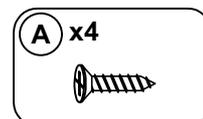


# TALLBOY WITH MIRROR

ITEM CODE : JCD 791


## STEP 24

Secure the hinges pump to top panel (20) and to side panel (1 & 12) using screw (A) as shown below.

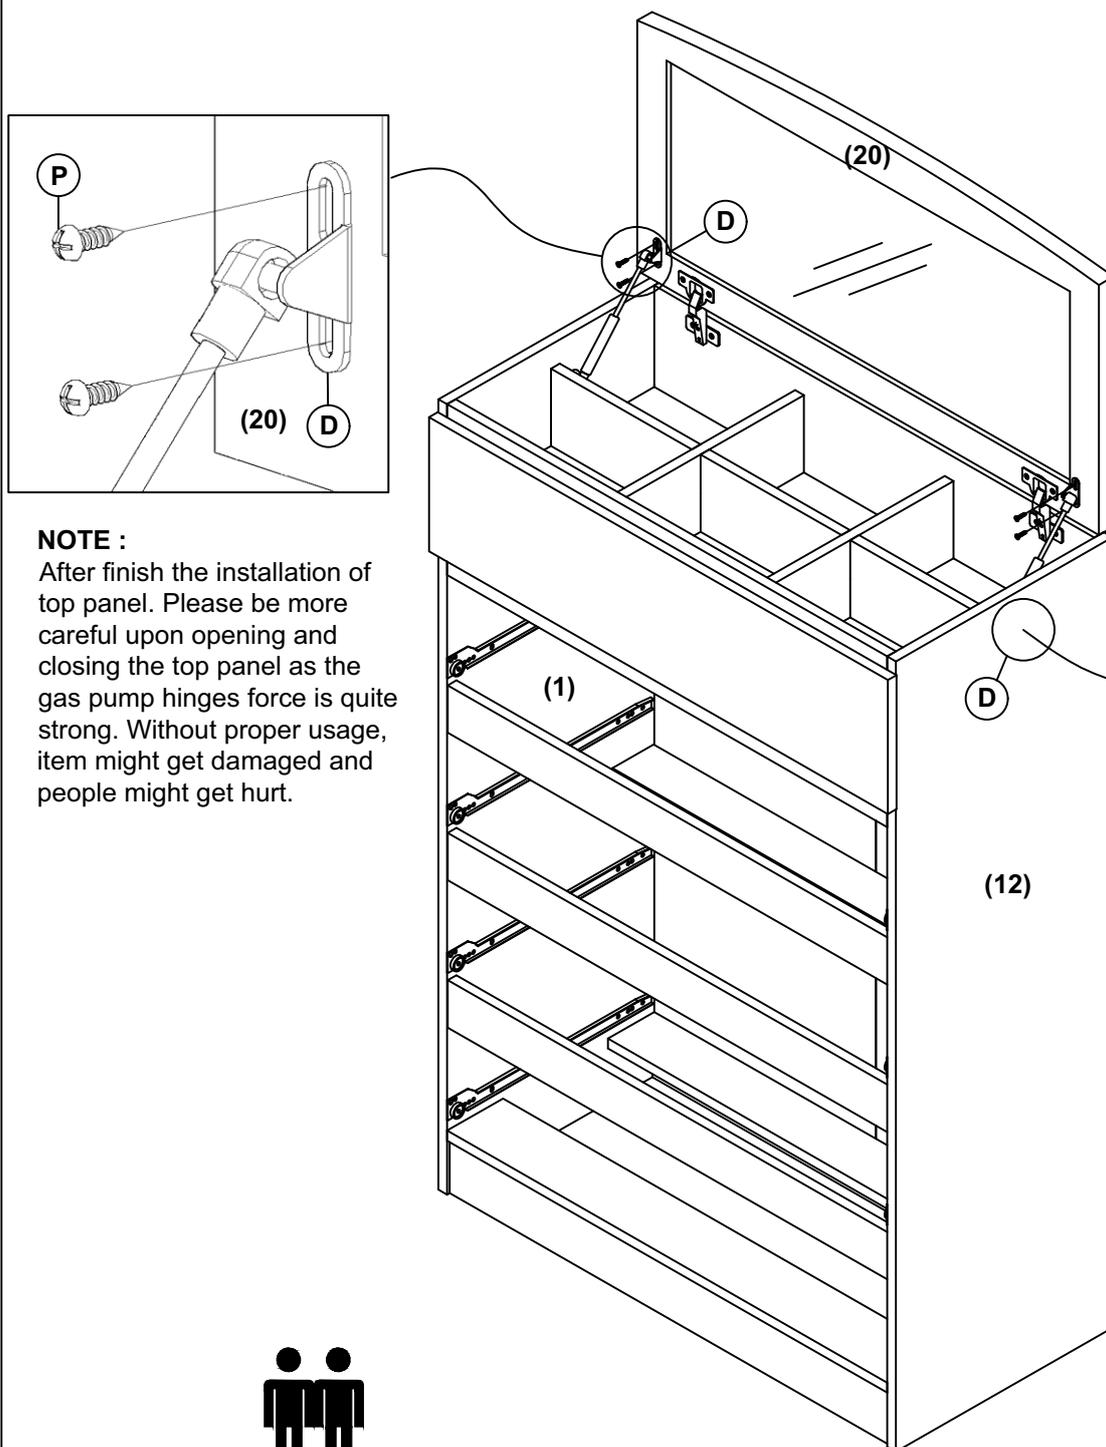

### NOTE :

After finish the installation of top panel. Please be more careful upon opening and closing the top panel as the gas pump hinges force is quite strong. Without proper usage, item might get damaged and people might get hurt.

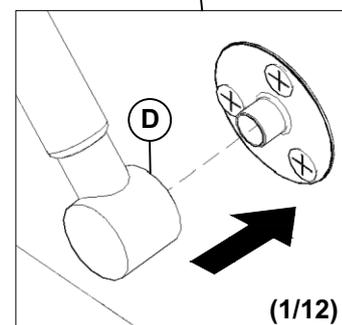



### IMPORTANT:

Insert the cap for the hinges pump leg first before attach the other part to top panel.



2 PERSON

Note: Its easier to have the help of a 2nd person to hold panels during this step and avoid damage to your item

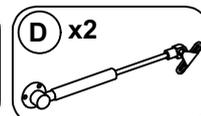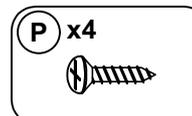

# TALLBOY WITH MIRROR

ITEM CODE : JCD 791

## STEP 25

After secured the L-shaped bracket (L) to the bottom of panel (6), we need to attach the bracket to the wall.



### WARNING

Serous or fatal crushing can occur from furniture tip over. To help prevent tip over :

- Install all tip over restraints provided with your product.
- Place heaviest item inside the lower doors.
- Do not sit TV's or other heavy objects on top of this product,
- Never allow children to climb or hang on drawers, doors, shelves.
- Never open more than one door at a time.

Use a tip over restraints may only reduce, but will not eliminate, the risk of tip over.

### Bracket Fixing

The horizontal arms of the brackets are to be secured to the underside of shelf so that it is out of sight when the cabinet is installed into position.

After assembling the unit place it against the wall where it will be permanently positioned.


Working from inside the cabinet place the bracket through the pre-cut hole in the rear wall of the cabinet as shown in diagram.

Use a pencil to mark through the screw hole in the bracket, where the bracket has to be attached to the wall.

• Move the cabinet away from the wall and secure the bracket to the wall at the marked position using a wall anchor suited to your wall surface.

With the wall brackets in position, move the cabinet back to the wall allowing the horizontal arm of the bracket to enter into the cabinet through the pre-cut holes in the back wall of the cabinet.

Then using the screw supplied, secure the horizontal arm of the brackets to the underside of the shelf.

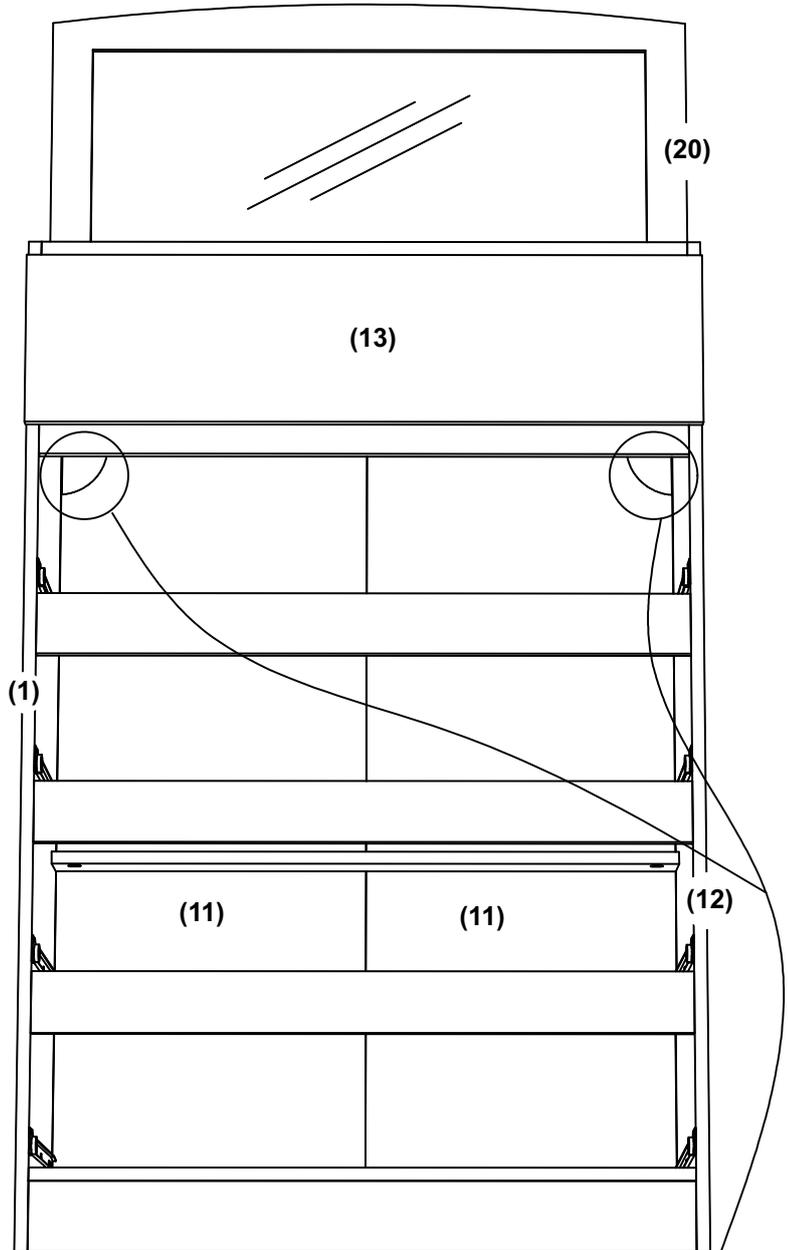


### WARNING:

#### ENSURE THAT WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY

To avoid any serious injury, this product has been supplied with a wall strap to prevent toppling.

We strongly recommend that this product is permanently fixed to the wall or other suitable surface.

Please seek professional advice if you are in doubt of what fixing should be used. Wall fixings can be purchased from your local hardware store.

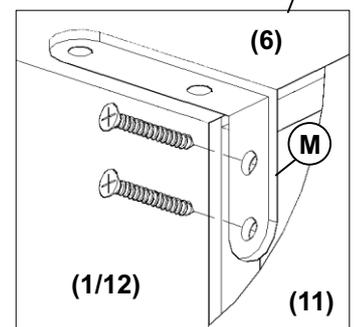


# TALLBOY WITH MIRROR

ITEM CODE : JCD 791

**COMPLETED**

## ASSEMBLY IS COMPLETE

Insert the drawer properly to the unit as shown below.

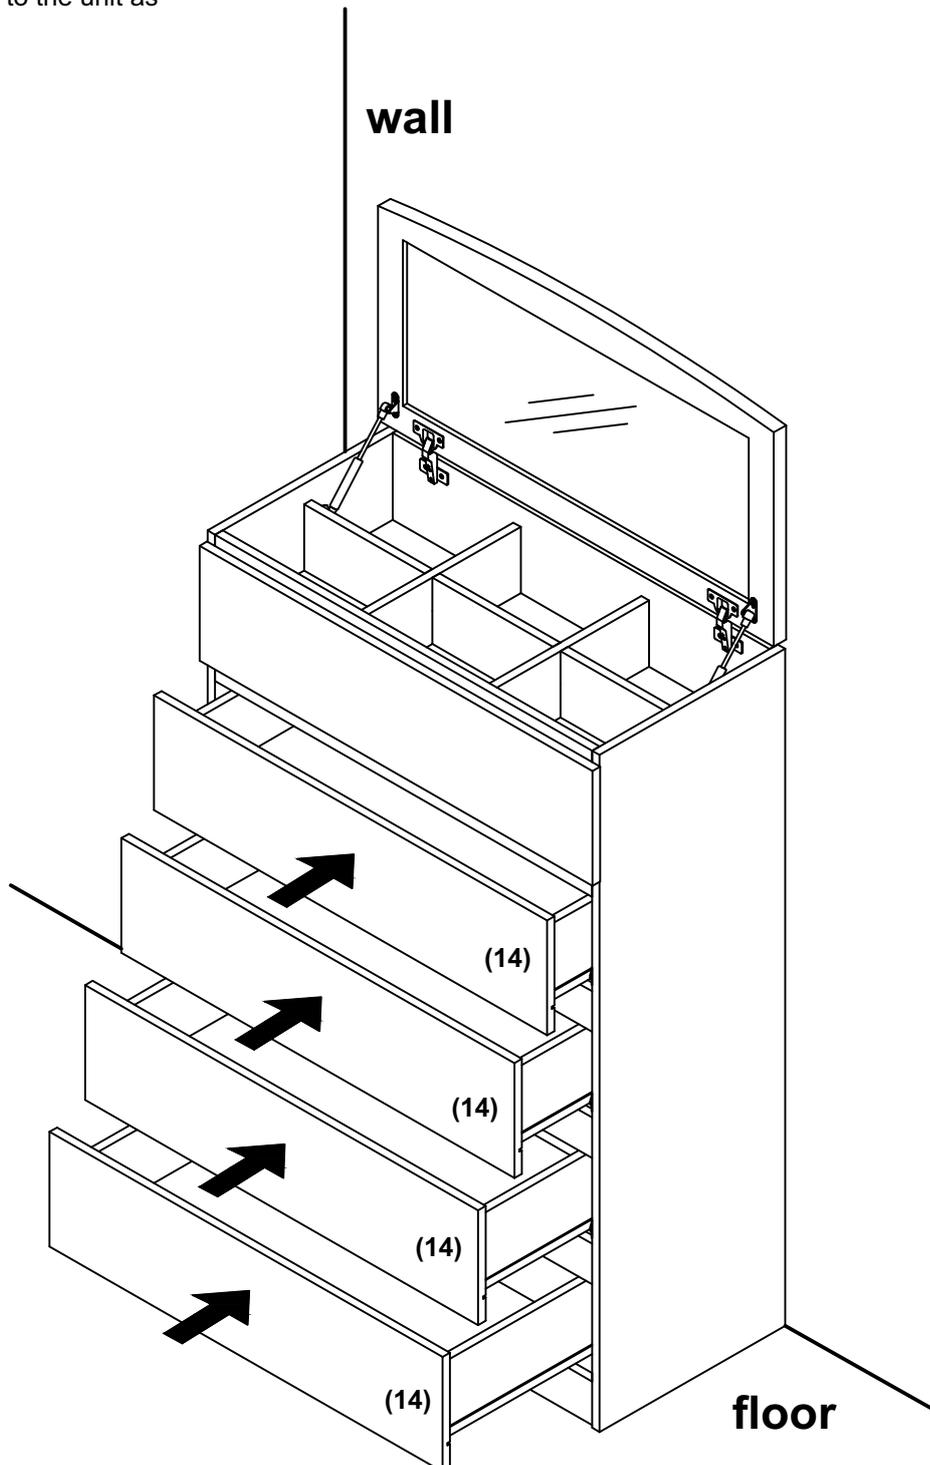

# Wall Mounting & Fixing Guide

**NOTE: Supplied wall plugs are only suitable for use in masonry walls.**

If you have any doubts about using the correct plug for your wall, please seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.



## IMPORTANT:

When drilling into walls, always check for hidden wires or pipes, etc.



## Tips & Tricks


**Make sure that the hardware used is suitable for supporting your unit. Please consult a qualified tradesperson if unsure.**

- ✓ If you are unsure, please select a larger screw and wall plug.
- ✓ Ensure that you use the recommended drill bit to match the wall plug and hole size.
- ✓ Take extra care when drilling high walls, ceiling and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid splitting or cracking.
- ✓ Ensure that wall plugs are well fitted and are a tight fit in the drilled hole.

## Types Of Walls


Use one of the following types of wall plug (not included) if your walls are made of brick, breeze block, concrete, stone or wood. Screws may be able to be fixed directly to solid wood walls as they will provide a secure anchor point.

### 1. General purpose wall plug

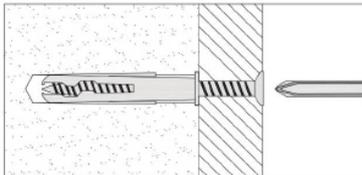


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

### 2. Plasterboard wall plug

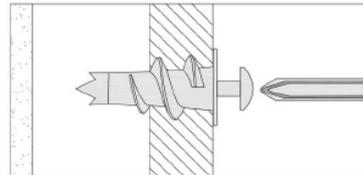


For use when attaching light loads on to plasterboard partitions or hollow wooden doors.

### 3. Cavity fixing wall plug

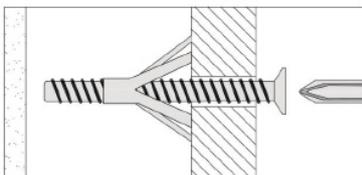


For use with plasterboard partitions or hollow wooden doors.

### 4. Cavity fixing-heavy duty wall plug

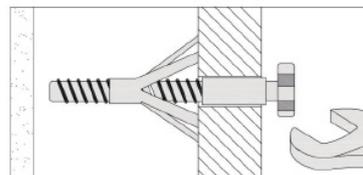


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

### 5. Hammer fixing wall plug

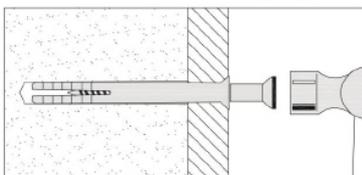

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

### 6. Shield anchor wall plug - heavy loads

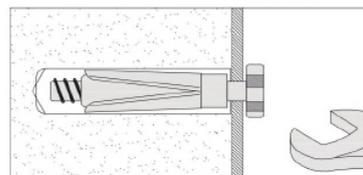

For use with heavier loads such as TV & HiFi speakers and satellite dishes etc.