

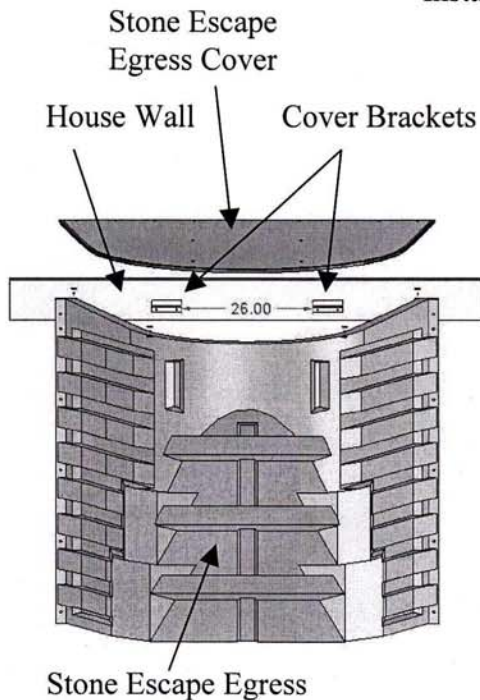


Mar-flex Waterproofing & Building Products

Installation Instructions for Stone Escape Egress Cover

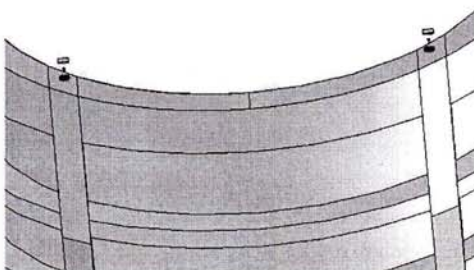

ADHESIVE SIDE UP

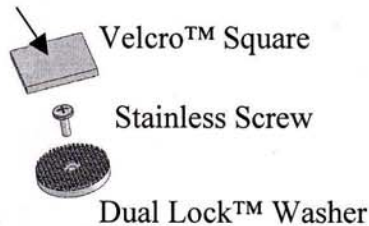

Step 1 Acquire (4) anchor-bolts for concrete or screws/bolts for wood at least 2-1/2" long and 1/8" diameter to secure the Cover Brackets to the House Wall.

Step 2 Draw a line on the House Wall across the top of the Egress. Place one Cover Bracket immediately below the line and 13" left of center of egress with the holes of the bracket up against the House Wall. Use the Cover Bracket as a template and mark the two holes on the wall. Check that the holes are 2" below the line and 14" & 18" left of center. Repeat w/ right Cover Bracket.

Step 3 Drill the (4) holes and mount the Cover Brackets to the wall using the (4) screws/bolts from Step 1.

Step 4 Locate positions for the (4) Dual Lock™ Washers. Position the front (2) washers over the vertical supports - about 30" apart and on the top ledge of the Egress. Position the rear (2) washers 3" to 4" out from the House Wall. Drill 1/16" diameter hole towards the front edge of the top ledge of the Egress (4) places. (See picture at lower left of page for approximate locations of front two Velcro™.)

Step 5 Use Stainless Steel Screw supplied with egress and run screw through Washer (washer teeth upward) and secure to poly egress using screw driver to run screw into the 1/16" hole of Step #4.

Step 6 Place Velcro™ square centered onto Dual Lock™ washer with adhesive side away from washer. Then remove backing paper from adhesive on square and bring lid down slowly until firm contact is maintained between egress cover and adhesive of the Velcro™ square.

NOTE: The weather should be neither COLD nor WET when applying the adhesive squares in Step #6.

NOTE: Egress Cover may be cleaned with mild soap and water. Use of harsh chemicals should be avoided. Use cleaners appropriate for polycarbonate only.