

Assemby Instructions Continued

FIBREGLAST

3. Insert rubber end caps into fabric bars and hammer into place

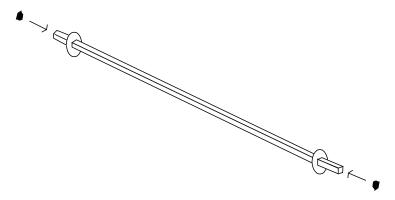


4. Lay the 3 fabric bars into place so that they rest securely in their slots

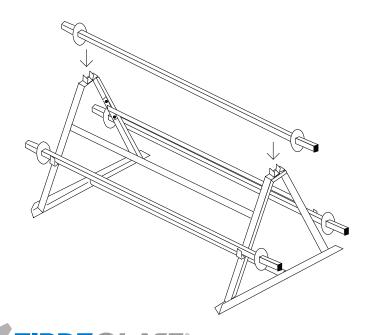

1719–A 3 Roll Fabric Rack

Usage Instructions & Parts List

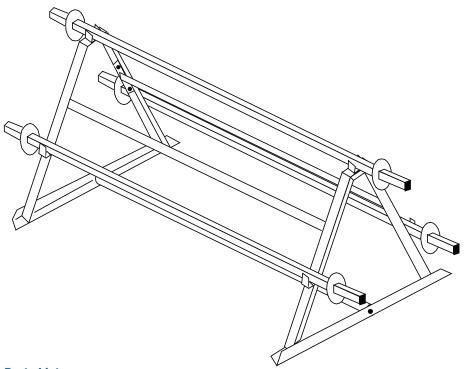

Parts List


- 2 End Members
- 1 Bottom Stabilizer
- 2 Cross Braces
- 3 Fabric Bars
- 2- 15/16" Bolts
- 2 Washers for 15/16" Bolts
- 8 9/16" Nuts
- 8 9/16" Bolts
- 6 Rubber End Caps

Tools Required

- 2 Adjustable Wrenches
- 1 Hammer

Assemby Instructions:

1. Attach bottom stabilizers to end members using 15/16" bolts and washers

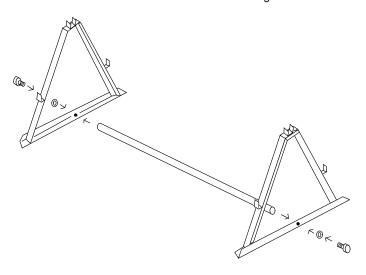

2. Attach cross braces to end members using 9/16" nuts and bolts

