

Wireless Industrial Automation




EZE
TECHNOLOGIES


PulseNET High Availability Options

PulseNET HA: "Cold Standby"


Normal Running Condition:
Standby powered off

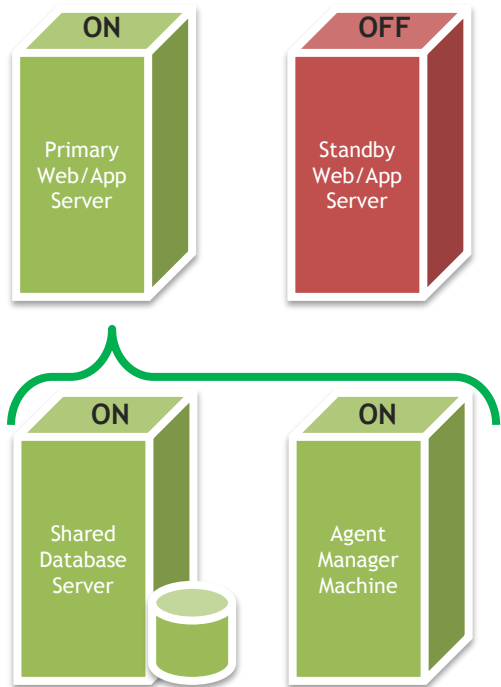

Failure Condition:
Primary goes offline

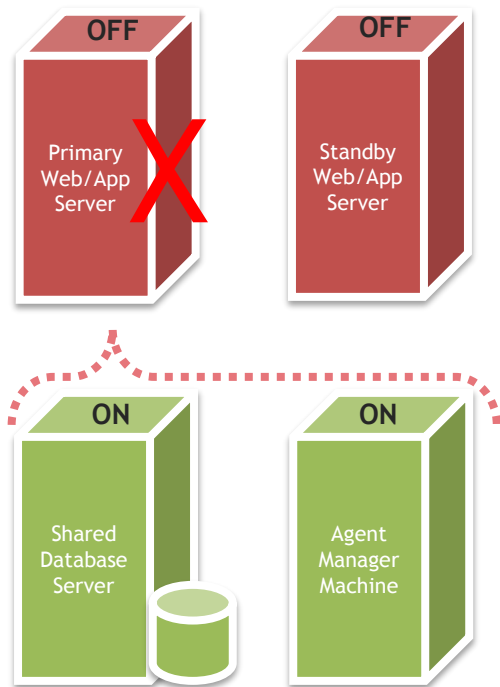


Recovery Process:
Power Standby on

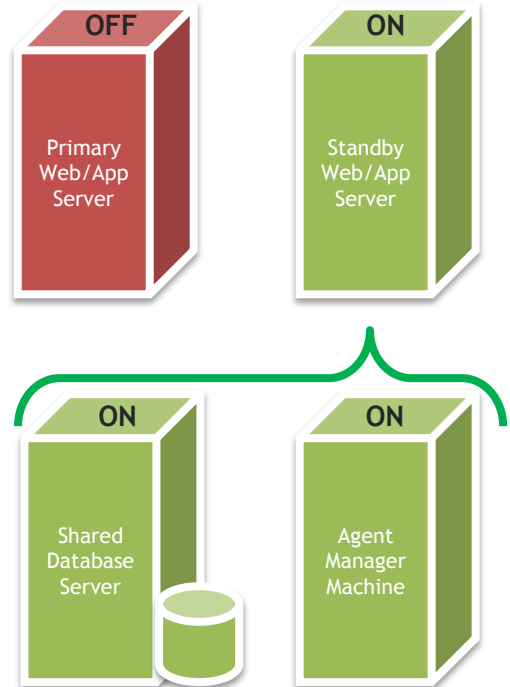


PulseNET HA: "Hot Standby"


Normal Running Condition:
All are powered on

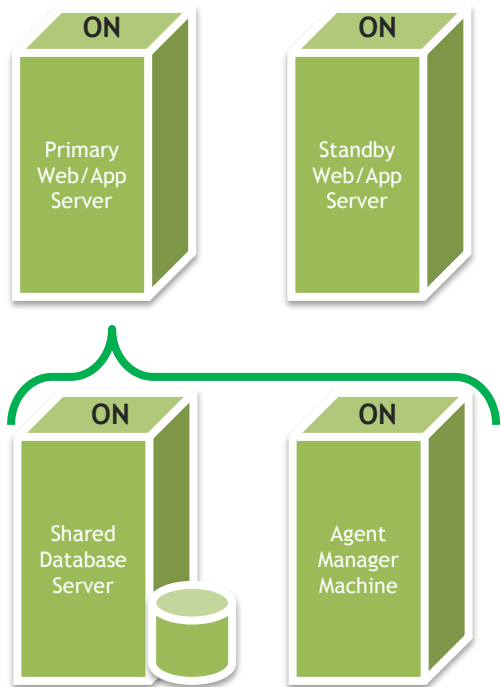

Failure Condition:
Primary goes offline

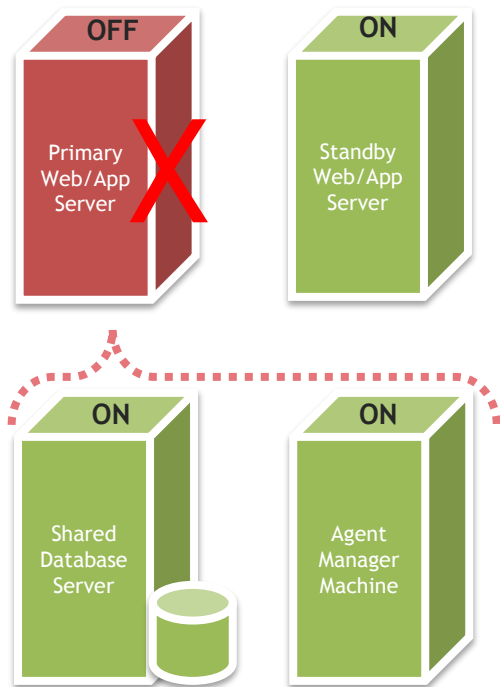

Auto-Recovery:
Standby takes over

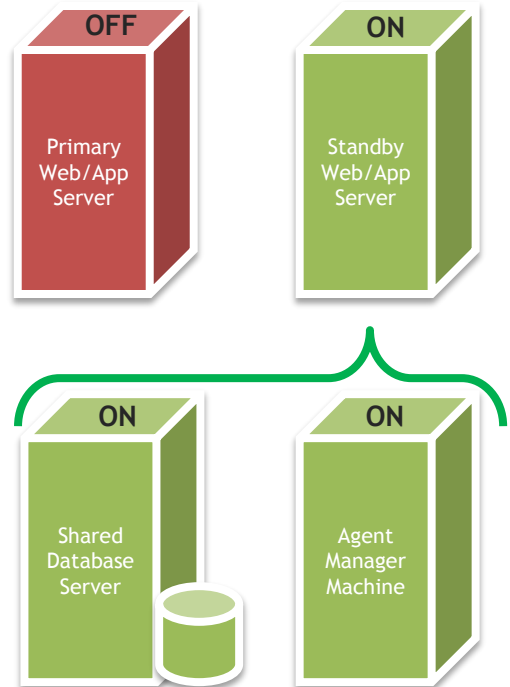

PulseNET with Virtual Server Clustering

