

S-300 AND S-300H TEMPO™ SPLASHGUARD MODIFICATION

Follow this procedure to prevent water from getting into the vacuum through the vacuum stack.

Tools Needed:

- 1" paddle or drill bit
- Phillips screwdriver
- Scissors, shears, or knife

Labor hours allowed: 30 mins.



1. Take the vacuum tank off the body. Using a 1" paddle or drill bit carefully bore open the inside hole on the vacuum hose port to make it bigger. Clean out any plastic shavings left over in the tank.




2. Take off the lid by removing the 6 screws securing the lid to the body.



3. Take the splashguard out.



4. Cut a 2" notch in the splashguard. Make sure the notch is between two of the screw holes.

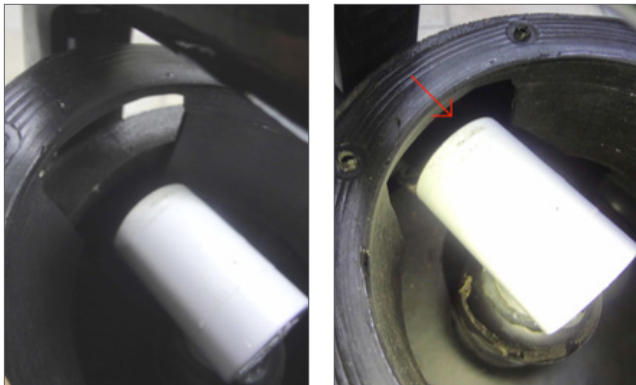

5. Put the splashguard back in. Make sure the notch you cut slips over the PVC filter.

6. Secure the lid back onto the body.