


SAAV in Convergence Quick Start Guide


These instructions provide a summary of the steps required to properly install an SAAV in convergence. Comprehensive installation instructions are available in the SAAV Manual: <http://saav.measurand.com/home>

1. Place the reel so that the SAAV unreels towards the surface of the structure to be monitored. The reel can be positioned such that the SAAV rolls off the top or the bottom of reel.

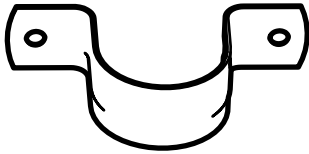


2. Unreel the SAAV and secure the first segment to the structure. Measurand recommend using one of the larger U-clamps included in the installation kit.

3. Using the smaller U-clamps provided in the installation kit, continue carefully unreeling the SAAV and securing each segment to the surface of the structure.

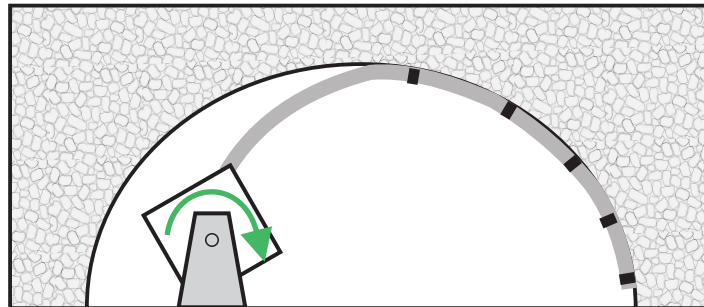

NOTE - Ensure only one clamp is used per segment. Clamps must be offset approximately 5 cm (2") from the bendable joints between the SAAV's segments.

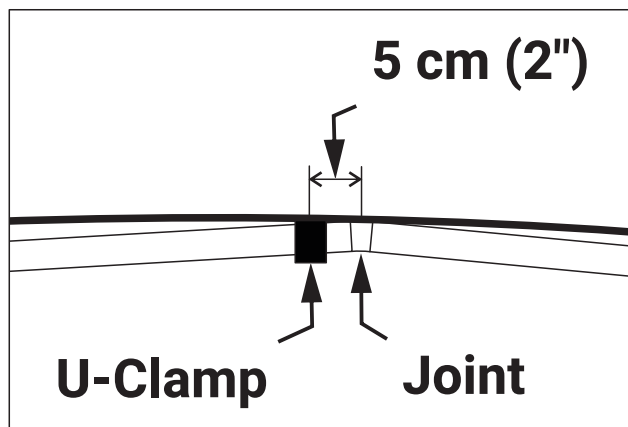

More detailed information about ShapeArray and other Measurand products is available in our Support portal knowledge base and online manuals at the following URLs:

<https://support.measurand.com/>

<http://manuals.measurand.com/>