

## **INSTALLATION WARNINGS:**

### **BEFORE COMMENCING INSTALLATION ISOLATE YOUR MAINS ELECTRIC SUPPLY**

Read the instructions care fully before starting the installation process and keep them for future reference. This product must be installed by a qualified electrician. This product should be installed in accordance with the relevant sections of the building regulations code, and the current edition of the IEE Wiring Regulations (BS 7671:Requirements for electrical installations) and appropriate statutory regulations.

Ensure all connections are made correctly and the cables are not stressed and all terminal screws are tight firmly holding the cables  
All Sockets must be earthed and the leads must be correctly sleeved.

Ensure that all electrical connections are correct and fully secured and that the product is screwed securely to its mounting box before turning the mains electricity supply on.

To prevent fire hazard do not exceed the maximum rated current of the socket.

## **Guarantee**

All items purchased come with a 1 year warranty (from date of purchase). Please keep proof of purchase.




## Installation

**Ensure mains power is turned off at the main fuse box before commencing any work**

1. Remove the glass panel off socket: Using a flat head screw-driver remove the front cover by placing flat head in the location notch on the underside of socket. Insert and twist to remove the cover. Be careful not to damage glass.
2. We recommend using a 35mm double backbox. Ensure the backbox is secure in the wall.  
Strip back cable sheath and trim the wires so no excess wire is protruding out of the terminal.
4. Ensure there is a green/yellow insulation sleeve on the bare earth wire.
5. Ensure the wires are connected to the correct terminal.
6. Check all the connections are firmly in place and the screws are tightened.
7. Taking care not to knock, pinch or trap any of the cables insert the socket in to the backbox
8. Align the screw holes on the socket and backbox and tighten until the socket is firmly seated and does not move.
9. Align the glass surround on the socket and push firmly until it clicks into place. After socket is refitted turn mains power back on, ready for use.

The completed installation should be tested in accordance with the current IEE Wiring Regulations by a qualified electrician.

## Single 13A Switched Socket

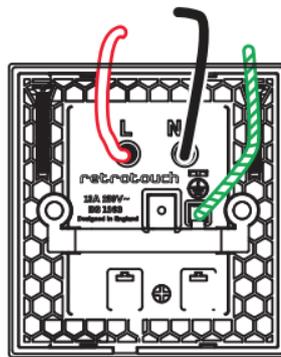

**RED or BROWN WIRE** to terminal marked ' L '

**BLACK or BLUE WIRE** to terminal marked ' N '

**GREEN/YELLOW** to terminal marked ' ⚡ '

Conforms to BS1363 standard