

Product no. :	Morhana-A-1000-B
Document No. :	MI-I-PCKG-Morhana-A-1000 B-R4
Update date:	28-03-2019

Cleangreen3D

Components

LP	P / N	Description	Quantity
1	FLXH-00020949	Label 43x9 polyester	2
2	FLXH-0006903	BAG_ESD_800x360x1800x0,12mm	1
3	Morhana-P-05066-A	Packaging Set	1
4	Morhana-A-1378-A	Cleangreen Accessories Shipping Kit	1
5	Morhana-P-02569-A	Serial number label - blank L6011	1
6	Morhana-P-03800-B	Cleangreen name Plate	1
7	Morhana-P-03260-A	Medium Leaf Cover Southco N6-C-44-24	4
8	Morhana-A-1042-B_950	BACK PLATE	1
9	Morhana-FSSM-05010-B	SHCS M5 x 10	2
10	Morhana-P-03357-A	Serrated Lock washer A M5 x 18	2
11	Morhana-FSSM-05012-B	Socket Head Cap Screw	1
12	Morhana-P-0009236	Nylon 6.6 (Polyamide 6.6), Black, 368 mm, 7.6 mm, 102 mm, 120 lb	1
13	Morhana-P-03837-B_911	Transport Bracket	1
14	Morhana-FWFM-05001-C	Flat Washer M5	1
15	Morhana-FWSM-05001-C	M5 SPRING WASHER	1

Tools Required

1. Hexagonal bit set

Product no. :	Morhana-A-1000-B
Document No. :	MI-I-PCKG-Morhana-A-1000 B-R4
Update date:	28-03-2019

Cleangreen3D

Preparing the printer for packing

Component number	Part number	Quantity
1	Morhana-A-1378-A	1
2	Morhana-FSSM-05012-B	1
3	Morhana-FWFM-05001-C	1
4	Morhana-FWSM-05001-C	1
5	Morhana-P-0009236	1
6	Morhana-P-03837-B_911	1

1. Place the box with all the accessories onto the magnetic mat as shown in the picture. Secure the box to ensure it will not move during shipping.
2. Secure the printbar to ensure it will not move as shown in figure 2.
3. Secure the magnet as shown in the picture in figure 3.
4. Screw on the shipping bracket as shown in the picture in figure 4.
5. Ensure that the level of glue in the container is at the minimum and the glue valve is in to closed position (horizontal position)



Figure 1

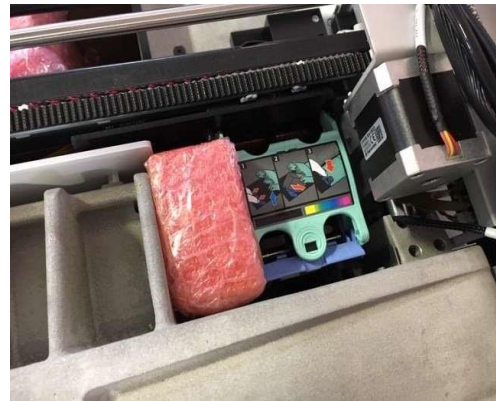


Figure 2



Figure 3

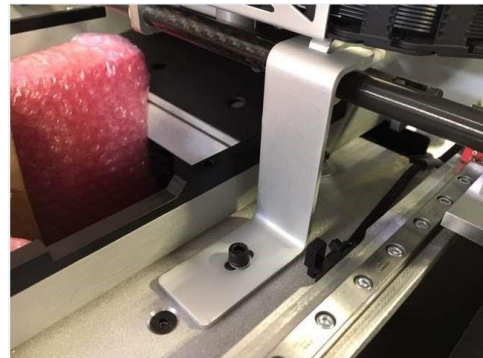


Figure 4



Figure 5