

Bar Pot Rack Installation and Care Instructions


PR-36

Included in the pack is:

- 1 Pot rack bar
- 2 Ceiling eye screws
- 8 Cast pot hooks
- 2 4" Extension hooks
- Instruction sheet

Installation of your J. K. Adams pot rack is not difficult. Two people will make hanging the rack a simple project.

The screw eyes *must* be securely installed into solid wood. Sheet-rock fasteners will not hold enough weight and should not be used.

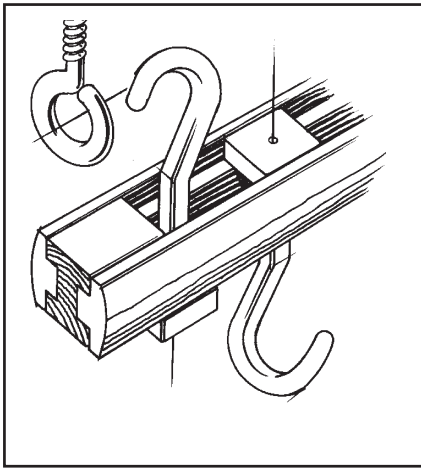

1. Find the wooden members in your ceiling. Usually they are 16" apart.

2. Drill two 3/16" (pilot) holes approximately 32" apart.

3. Confirm you have hit solid wood. Twist the screw eyes into the pilot holes until all the threads have disappeared.

4. Hang the 4" extension hooks from the eye screws.

5. Alternately if the ceiling is low or the cook tall, the rack can hang directly from the cast pot hooks (shown in illustration). In this case, discard the extension hooks.

6. Place a cast hook in each end of the rack. The hook should go from the bottom up toward the ceiling. Hang the cast hooks from the eye screws or the extension hook, as you prefer.

7. Drop the remaining pot hooks between the wooden rails. Pot hooks can be turned so pans nest together or so pan bottoms face outwards, as you prefer.

Care Instructions:

Wipe the parts with a damp cloth and dry thoroughly.



(800) 451-6118

J.K. Adams Co.

www.jkadams.com