

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
- If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 5 minutes.

CARE AND MAINTENANCE

INDOOR METAL/ALUMINUM FURNITURE: Wipe spills immediately. Maintain with regular dusting and clean with mild soap and water, dry thoroughly and do not use a brass cleaner. Adhesive felt pads should always be used/applied in order to prevent damage to the furniture or surfaces on which the furniture is placed.

GLASS AND MIRROR CARE: Dust with a soft, dry cloth. Do not use abrasive cleaner. To clean mirror, spray a small amount of glass cleaner onto a lint-free cloth and wipe mirror clean.

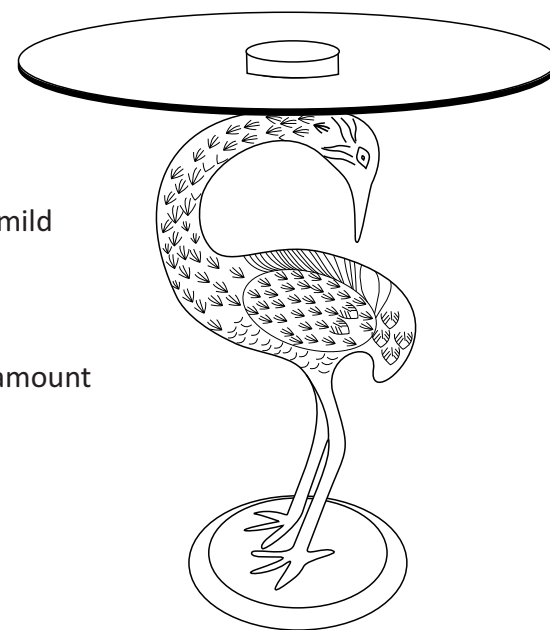
Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Body		1X1
B	Glass		1X1
C	Rubber		1X2
D	Top Nut (D-45 mm X H-32 mm)		1X1

 **SAFAVIEH**
FURNITURE

Model# ACC4610A

Product Dimensions: 15.75"W X 15.75" D X 22.75" H



Weight Capacity -30 LBS

Warning : Do not stand on Table

Warning : Do not over torque bolts.

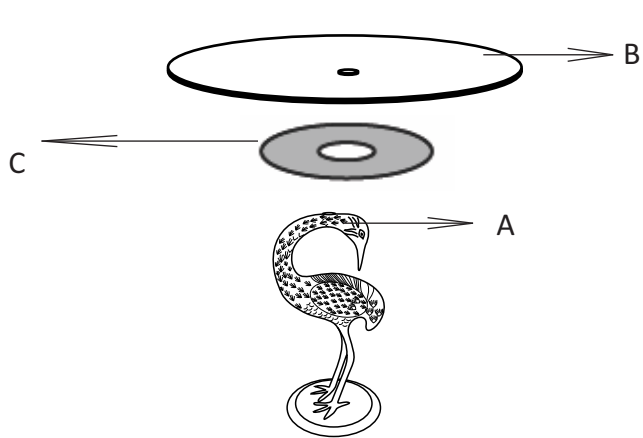
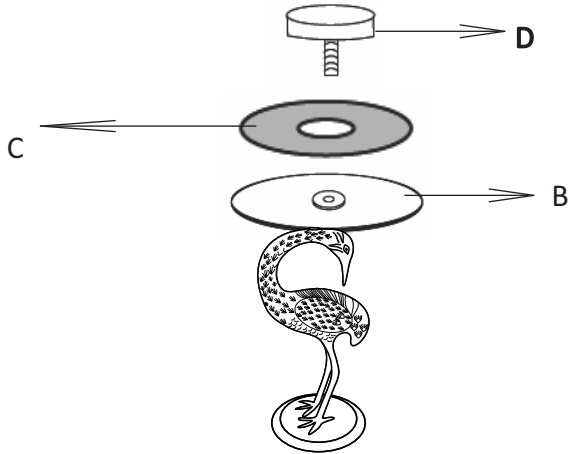
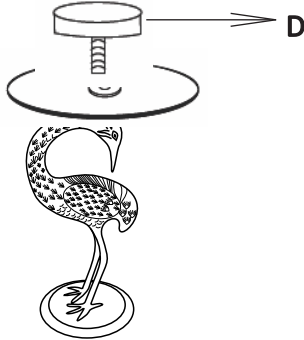
PREPARATION

* Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.

*Estimated Assembly Time: 5 minutes.

* If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

		
STEP1: Keep 1 piece of rubber (C) over hole of crane body (A) then put glass (B)	STEP2: Now put second rubber (C) over top of glass (B) then insert top nut threaded stud part	STEP3: Now screw (D) clockwise till full tight

