

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com



PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 30 minutes.
- * Tools Required for Assembly : Phillips Screwdriver

CARE AND MAINTENANCE


Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish.

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	TOP PANEL		1X
B	SHELF		1X
C	BOTTOM PANEL		1X
D	LARGE PANEL		4X
E	SMALL PANEL		4X
F	LONG RAIL		2X
G	SHORT RAIL		2X



Model# ACC5001
Product Dimensions: 23 19/32"W x 23 19/32"D x 21"H

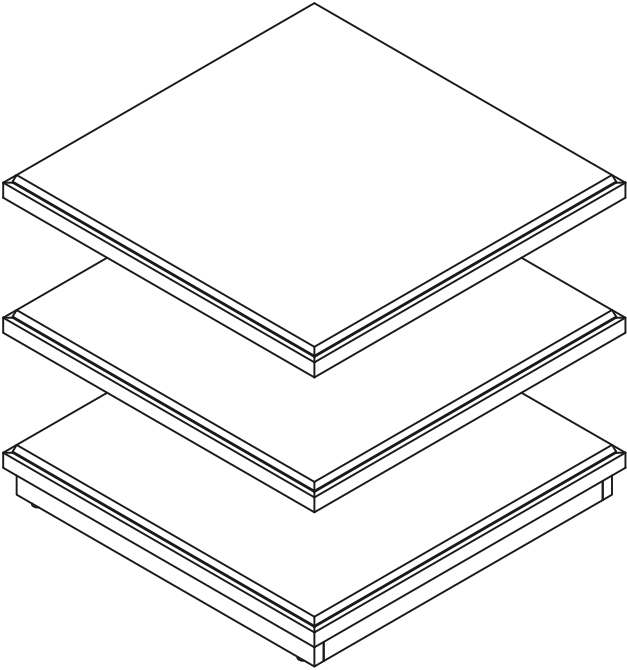



WEIGHT CAPACITY :
TOP : 50 LBS
SHELF : 20 LBS


**WARNING: DO NOT OVER TORQUE
BOLTS/SCREWS**

PIECE	DESCRIPTION	PICTURE	QUANTITY
HW1	1 3/4" HEAD CAP SCREW	M6x44mm 	12X
HW2	CAMBOLT	Ø8x32mm 	24X
HW3	CAMLOCK	Ø15x12mm 	24X
HW4	DOWEL	Ø8x28mm 	16X


PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 30 minutes.
- * Tools Required for Assembly : Phillips Screwdriver
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

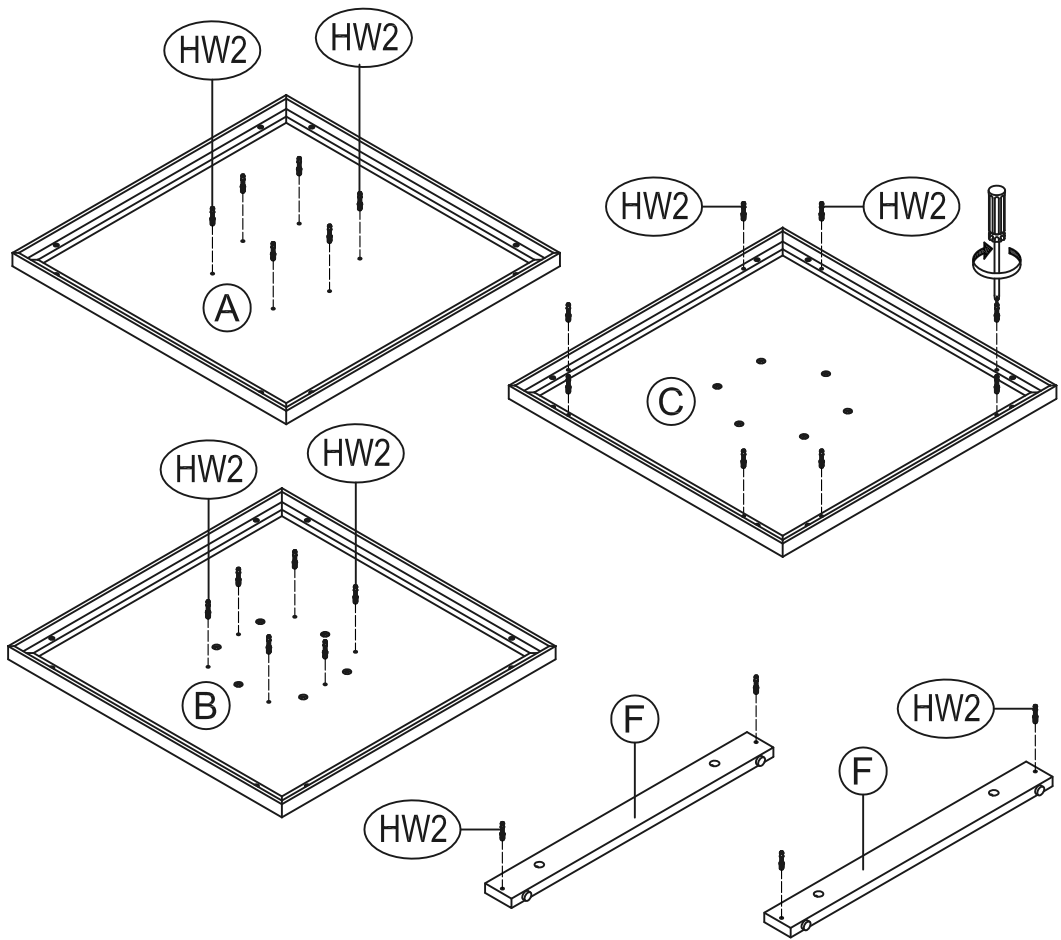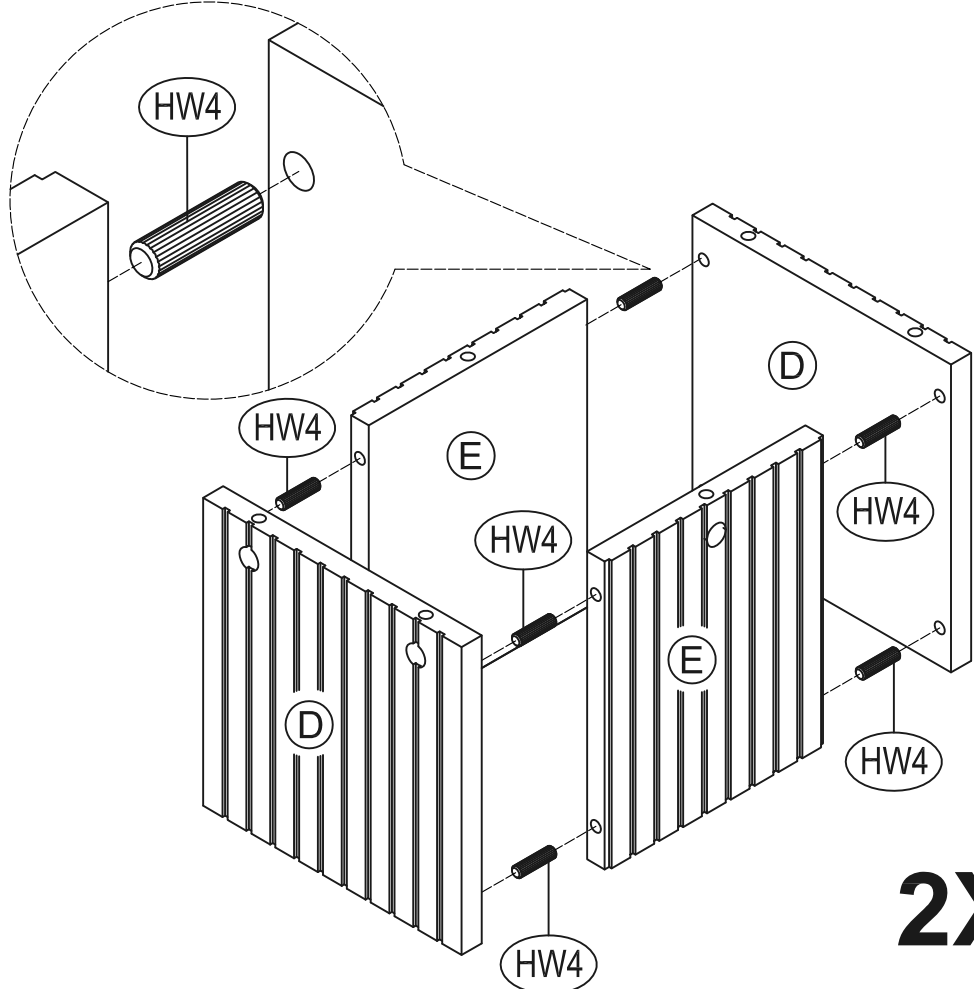
 The diagram shows three square panels labeled A, B, and C, and two long rectangular rails labeled F. Each panel and rail has four holes. Arrows point to these holes, indicating where to attach cambolts labeled HW2. A screwdriver is shown inserting a cambolt into one of the holes on panel C.	 The diagram shows two large rectangular panels labeled D and two smaller rectangular panels labeled E. Arrows indicate where to attach dowels labeled HW4 to connect the panels. A circular inset shows a close-up of a dowel being inserted into a hole. The text '2X' is shown in the bottom right corner, indicating that the assembly should be repeated for the second set of panels.
STEP 1 ATTACH CAMBOLTS (HW2) TO TOP PANEL (A), SHELF (B) AND BOTTOM PANEL (C) AND LONG RAILS (F).	STEP 2 ATTACH SMALL PANELS (E) TO LARGE PANELS (D) USING DOWELS (HW4).

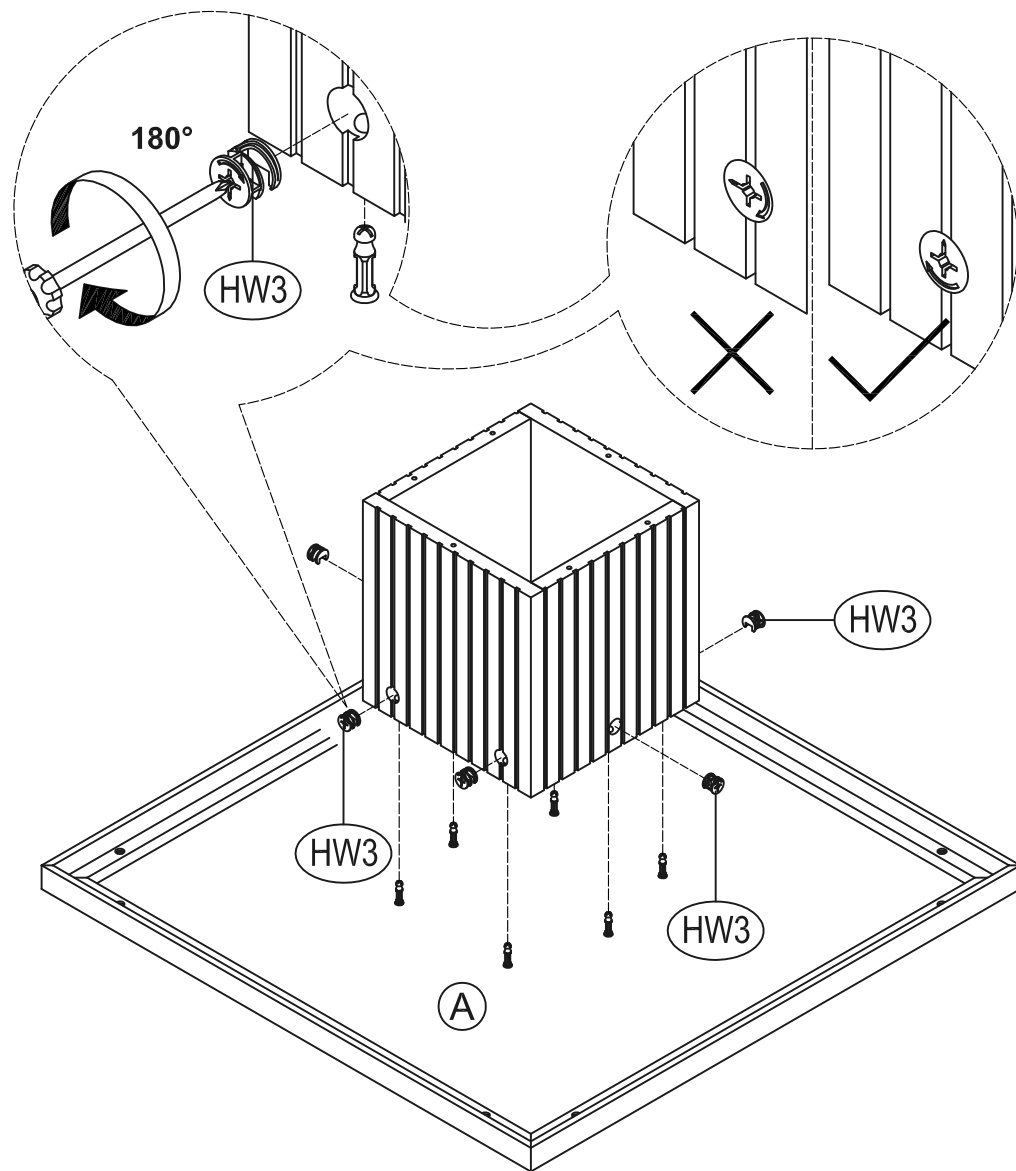


STEP 3 ATTACH UNIT FROM STEP 2 TO TOP PANEL (A) USING CAMLOCKS (HW3).

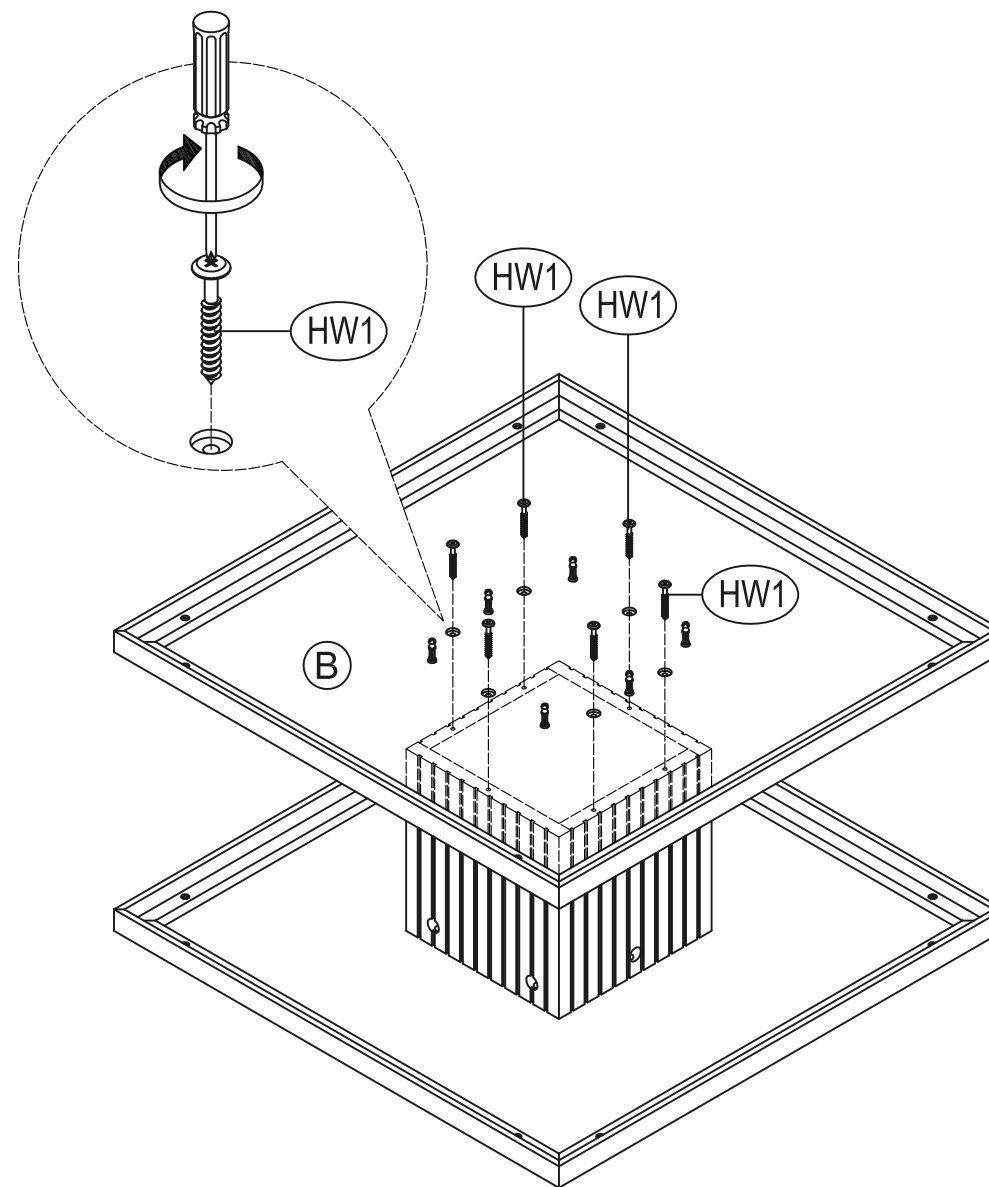


STEP 4 ATTACH SHELF (B) TO UNIT USING 1 3/4" HEAD CAP SCREWS (HW1).

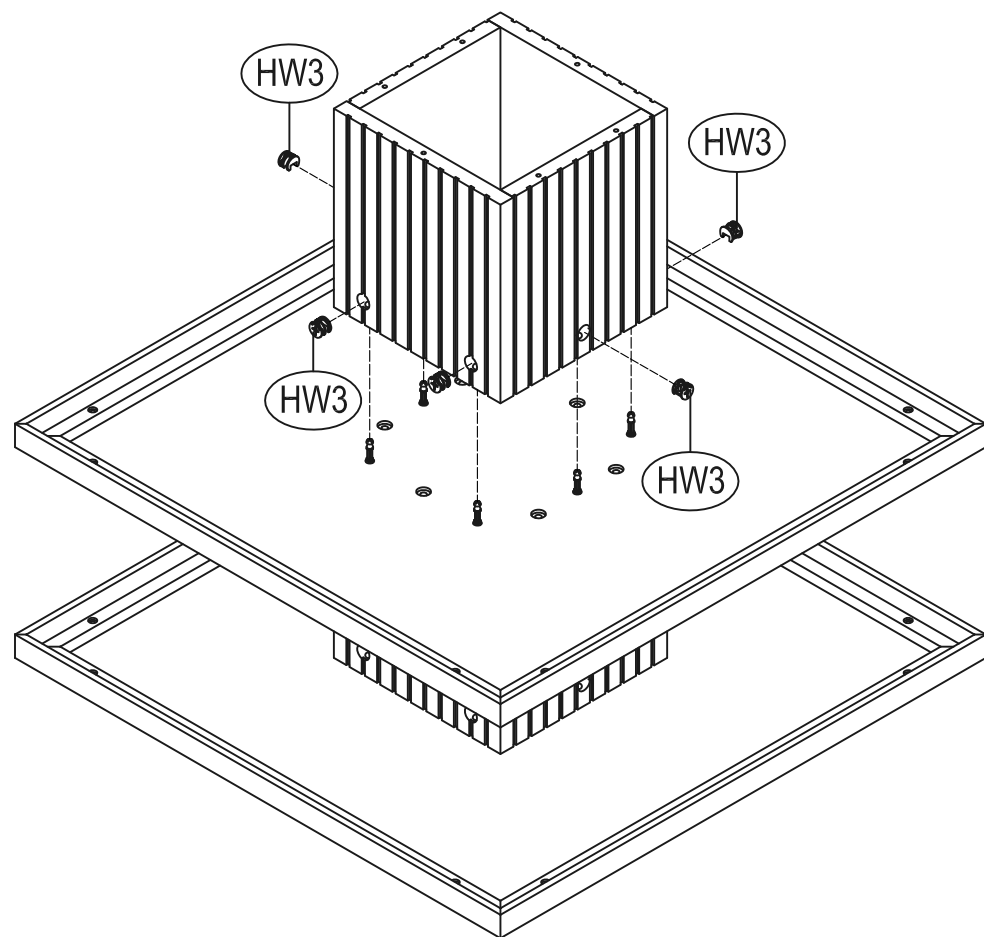


STEP 5 ATTACH UNIT FROM STEP 2 TO UNIT FRO STEP 4 USING CAMLOCKS (HW3).

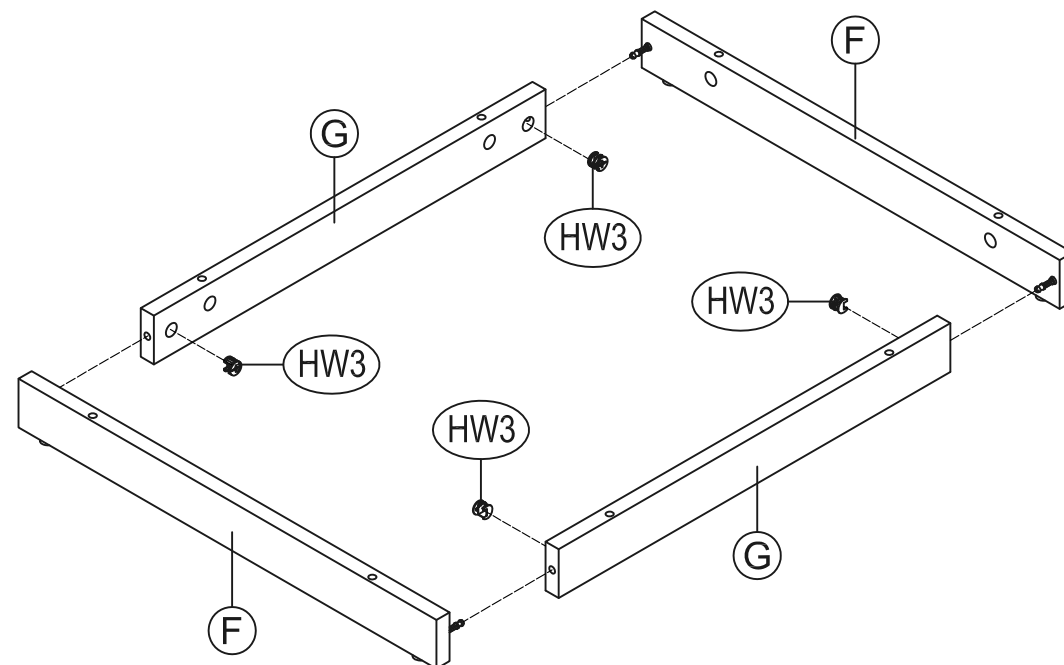


STEP 6 ATTACH SHORT RAILS (G) TO LONG RAILS (F) USING CAMLOCKS (HW3).

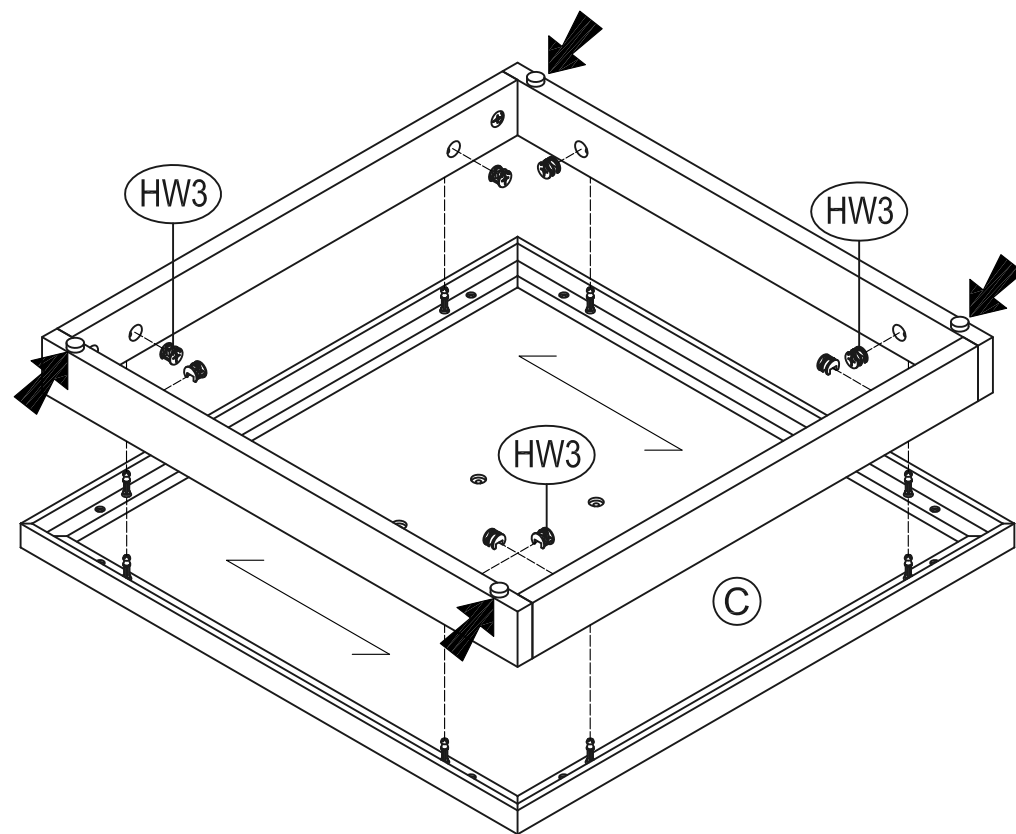

STEP 7 ATTACH RAIL ASSEMBLY FROM STEP 6 TO BOTTOM PANEL (C) USING CAMLOCKS (HW3).
NOTE: MAKE SURE THE WOOD GRAIN DIRECTION AND POSITION ADJUSTABLE LEVELER
 (SEE FIGURE).

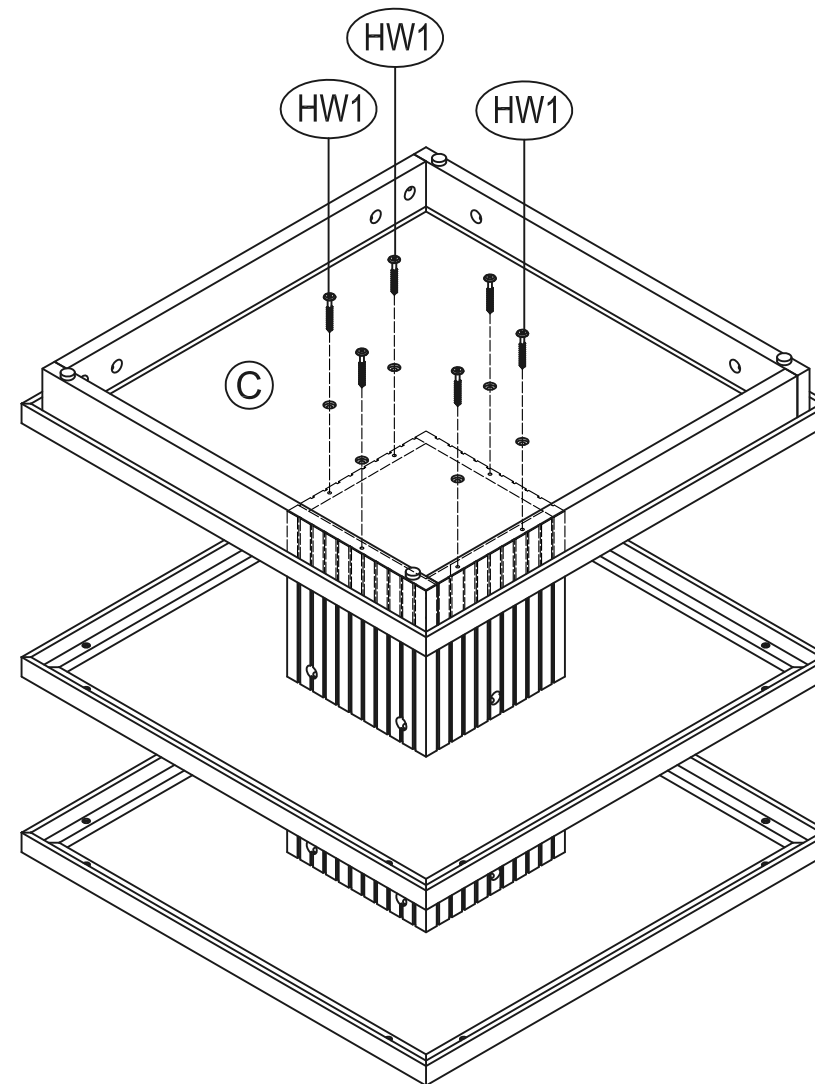

STEP 8 ATTACH BOTTOM PANEL (C) TO UNIT USING 1 3/4" HEAD CAP SCREWS (HW1).

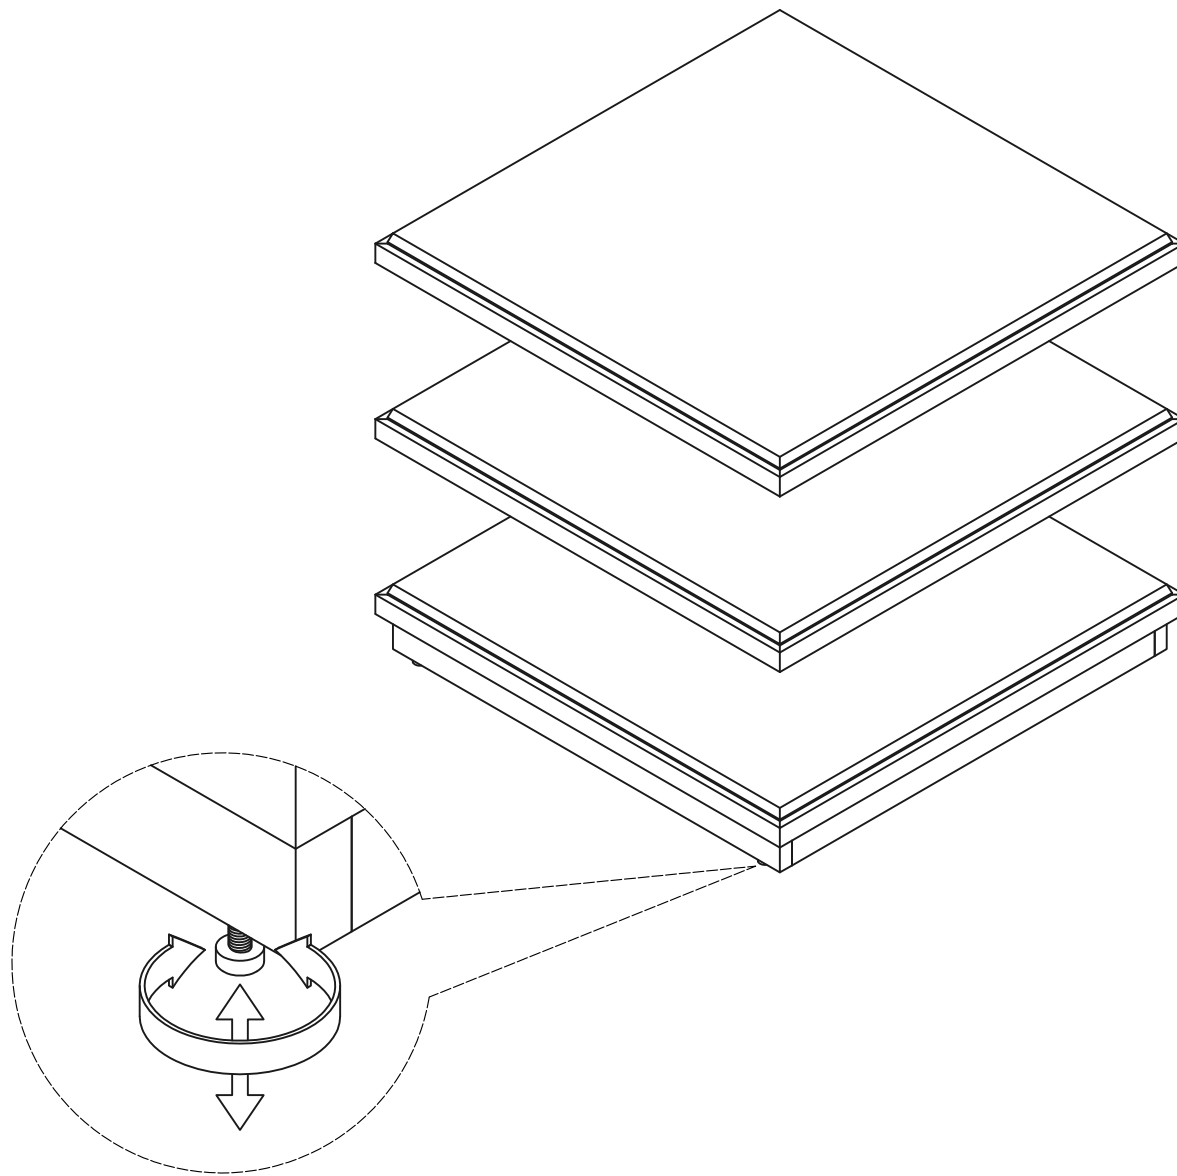

STEP 9 ADJUST THE ADJUSTER THAT HAS ALREADY BEEN ASSEMBLED TO THE LEGS TO STABILIZE YOUR UNIT.