NOTICE

- *Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list andhardware list below for guidance.
- *This item should be assembled on a soft surface to prevent scratching the finish durin gassembly.
- *This item may require periodic tightening.
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 10 minutes.
- *Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

WOOD CARE

Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Objects whose composition consists of plastic and rubber are known to discolor and damage the wood surfaces on which they rest. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish, On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.



ITEM ID:AMH6571
Product Dimensions:
35.8"Wx14.2"Dx34"H






Shelf Weight Capacity-60 LBS Warning:Do not over torque bolt

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
А	ТОР	0 0	1X
В	DRAWERS		1X
С	LEFT LEG		1X
D	RIGHT LEG		1X
HW1	Allen bolt: M6 x1 x 40 mm	<u> </u>	12X
HW2	Flat washer: M6 x 4 mm	0	12X
HW3	ALLEN KEY		1X

PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 10 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

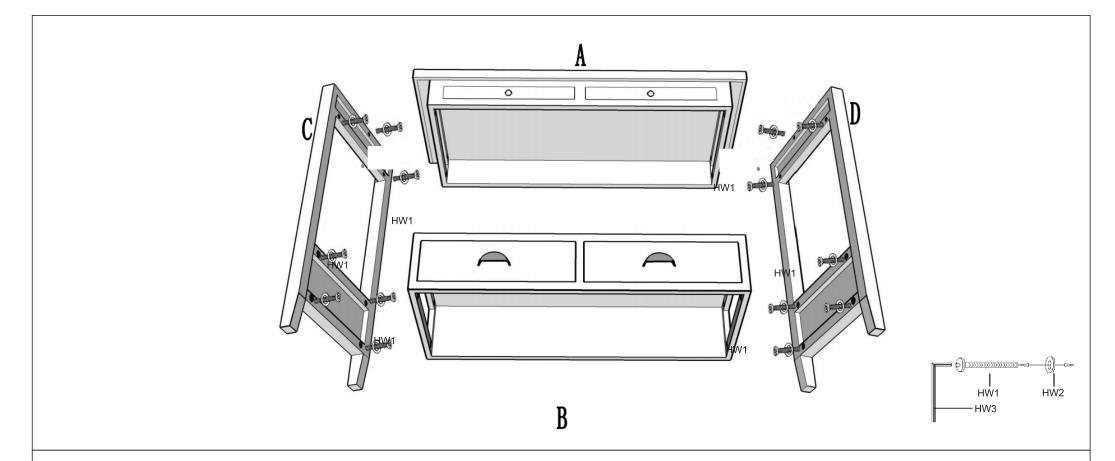

Step 1:

Attach the Legs (C) (D) to the Top (A), then attach the Drawers (B) to the Legs. Use Allen Key to tighten all the Bolts. (Pull out the shelf of A to find the hole and install).