

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 30 minutes.
- * Tools Required for Assembly (included): Allen Key & Wrench.

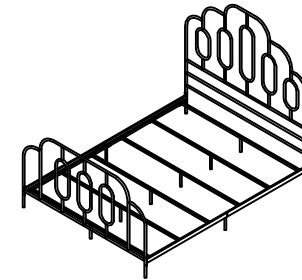
CARE AND MAINTENANCE

INDOOR METAL/ALUMINUM FURNITURE: Wipe spills immediately. Maintain with regular dusting and clean with mild soap and water, dry thoroughly and do not use a brass cleaner. Adhesive felt pads should always be used/applied in order to prevent damage to the furniture or surfaces on which the furniture is placed.

SAFAVIEH FURNITURE

Model# BED6201-F

Product Dimensions: 55.875"W x 77.25"D x 59"H



Weight capacity: 550 lbs

WARNING : DO NOT STAND ON THE PRODUCT

WARNING : DO NOT OVER TORQUE BOLTS

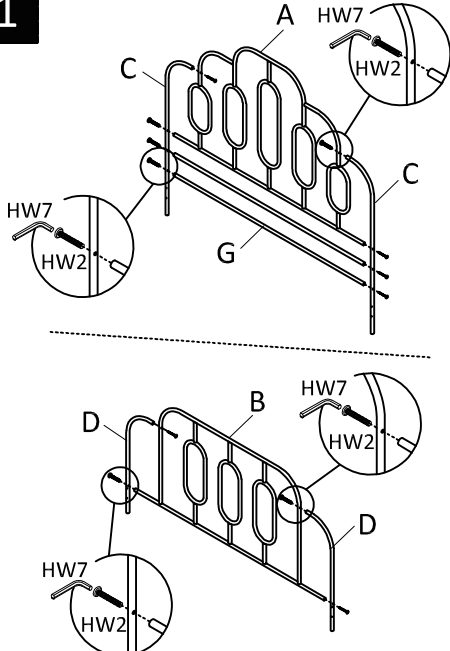
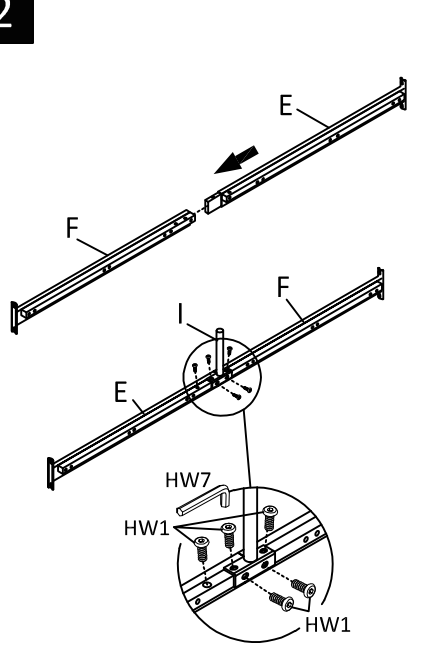
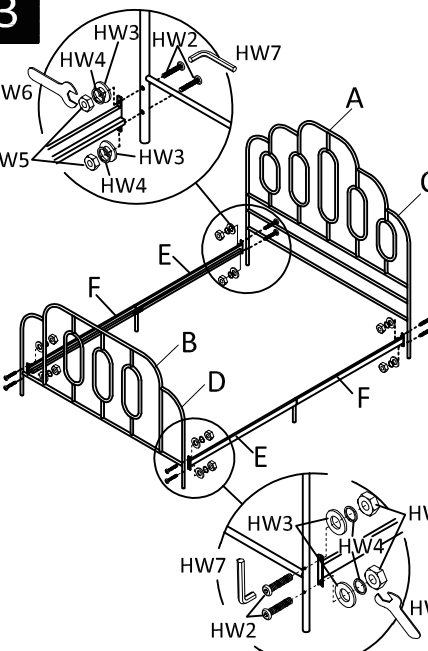
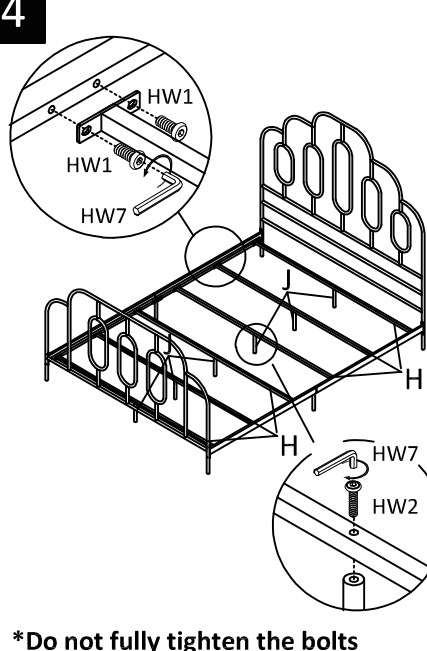
Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QTY
A	Headboard		1x
B	Footboard		1x
C	Headboard post		2x
D	Footboard post		2x
E	L - Rail		2x
F	R - Rail		2x
G	Connect Bar		2x
H	Metal Slat		6x
I	Support legs of rails		2x
J	Support legs of slats		6x

PIECE	DESCRIPTION	PICTURE	QTY
HW1	Hex Socket Bolt 1/4"-20 x 0.625"		34x
HW2	Hex Socket Bolt 1/4"-20 x 1.375"		26x
HW3	Flat Washer 1/4" x 0.5"		8x
HW4	Split Lock Washer 1/4" x 0.375"		8x
HW5	Hex Nut 1/4"-20		8x
HW6	Wrench M10		1x
HW7	Allen Key M4		1x

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 30 minutes.
- * Tools Required for Assembly (included): Allen Key & Wrench.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

1  *Do not fully tighten the bolts until the product is assembled.	2  *Do not fully tighten the bolts until the product is assembled.	3  *Do not fully tighten the bolts until the product is assembled.	4  *Do not fully tighten the bolts until the product is assembled. *After properly adjusting the levelers for stability, then fully tighten all bolts.
Step 1 Assembly the Headboard : Attach 2x Headboard Post (C) and 2x connect bar (G) to the Headboard (A), Use Allen Key (HW7) to lock 8x Hex Socket Bolts (HW2). Assembly the Footboard: Attach 2x Footboard Post (D) to the Footboard (B), Use Allen Key (HW7) to lock 4x Hex Socket Bolts (HW2). Reference image above.	Step 2 Insert L-Rail (E) into the R-Rail (F), then put the Support leg of rail (I) on the alignment position, Using Allen Key (HW7) to lock with 5x Hex Socket Bolts (HW1), Reference image above. (Repeat afore-mentioned to assemble another set of side rail)	Step 3 Attach the end of assembled 2x side rails to assembled HB/FB posts (C/D), by using Allen Key (HW7) to lock 8x Hex Socket Bolts (HW2). Use Wrench (HW6) to lock into assembled HB/FB-posts with Flat washer (HW3), Split Lock Washer (HW4) and Hex Nut (HW5) from the other side.	Step 4 Assembly 6x support legs of slats (J) to 6x metal slats (H), by using Allen Key (HW7) to lock 6x Hex Socket Bolts (HW2). Then attach the assembled metal slats (H) on inside of both assembled side rails (E/F), by using Allen Key (HW7) to lock 24x Hex Socket Bolts (HW1). Reference image above. Assembly is completed.

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 30 minutes.
- * Tools Required for Assembly (included): Allen Key & Wrench.

CARE AND MAINTENANCE

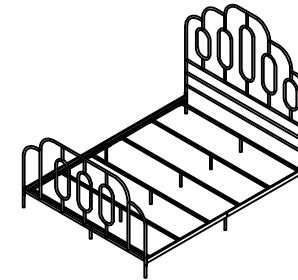
INDOOR METAL/ALUMINUM FURNITURE: Wipe spills immediately. Maintain with regular dusting and clean with mild soap and water, dry thoroughly and do not use a brass cleaner. Adhesive felt pads should always be used/applied in order to prevent damage to the furniture or surfaces on which the furniture is placed.

SAFAVIEH

FURNITURE

Model# BED6201-Q

Product Dimensions: 61.875"W x 82.25"D x 59"H



Weight capacity: 550 lbs

WARNING : DO NOT STAND ON THE PRODUCT

WARNING : DO NOT OVER TORQUE BOLTS

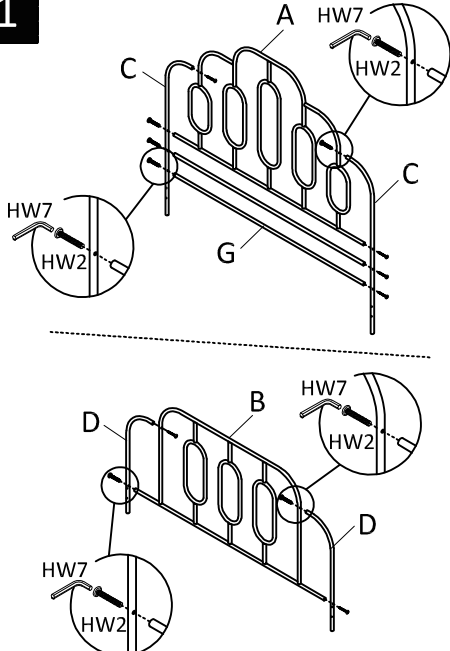
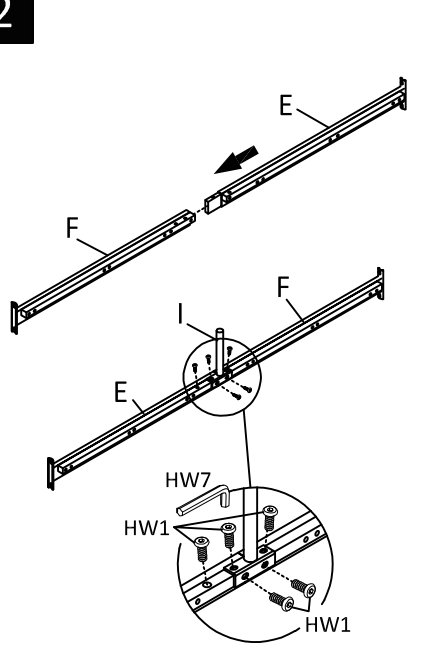
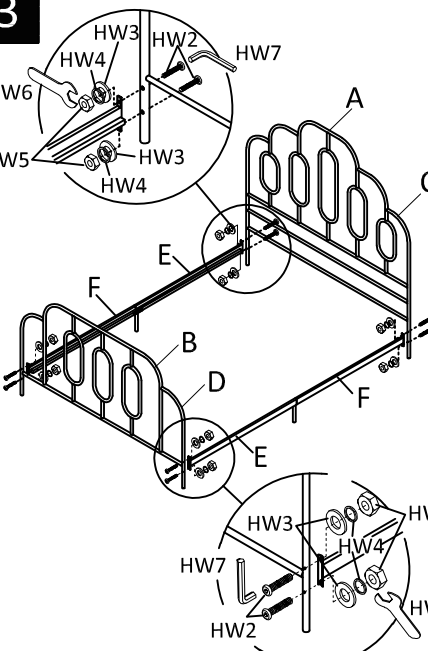
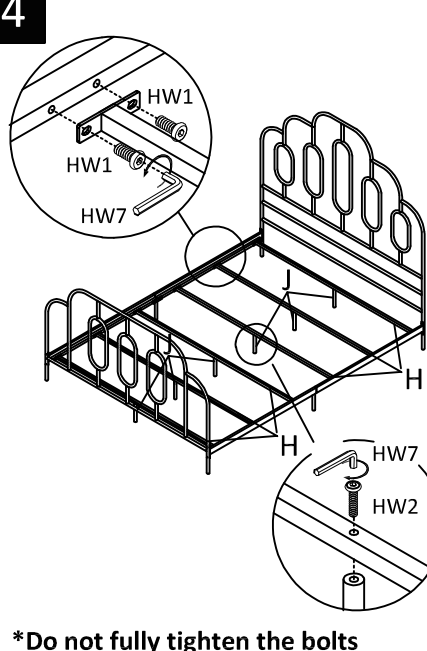
Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QTY
A	Headboard		1x
B	Footboard		1x
C	Headboard post		2x
D	Footboard post		2x
E	L - Rail		2x
F	R - Rail		2x
G	Connect Bar		2x
H	Metal Slat		6x
I	Support legs of rails		2x
J	Support legs of slats		6x

PIECE	DESCRIPTION	PICTURE	QTY
HW1	Hex Socket Bolt 1/4"-20 x 0.625"		34x
HW2	Hex Socket Bolt 1/4"-20 x 1.375"		26x
HW3	Flat Washer 1/4" x 0.5"		8x
HW4	Split Lock Washer 1/4" x 0.375"		8x
HW5	Hex Nut 1/4"-20		8x
HW6	Wrench M10		1x
HW7	Allen Key M4		1x

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 30 minutes.
- * Tools Required for Assembly (included): Allen Key & Wrench.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

1  *Do not fully tighten the bolts until the product is assembled.	2  *Do not fully tighten the bolts until the product is assembled.	3  *Do not fully tighten the bolts until the product is assembled.	4  *Do not fully tighten the bolts until the product is assembled. *After properly adjusting the levelers for stability, then fully tighten all bolts.
Step 1 Assembly the Headboard : Attach 2x Headboard Post (C) and 2x connect bar (G) to the Headboard (A), Use Allen Key (HW7) to lock 8x Hex Socket Bolts (HW2). Assembly the Footboard: Attach 2x Footboard Post (D) to the Footboard (B), Use Allen Key (HW7) to lock 4x Hex Socket Bolts (HW2). Reference image above.	Step 2 Insert L-Rail (E) into the R-Rail (F), then put the Support leg of rail (I) on the alignment position, Using Allen Key (HW7) to lock with 5x Hex Socket Bolts (HW1), Reference image above. (Repeat afore-mentioned to assemble another set of side rail)	Step 3 Attach the end of assembled 2x side rails to assembled HB/FB posts (C/D), by using Allen Key (HW7) to lock 8x Hex Socket Bolts (HW2). Use Wrench (HW6) to lock into assembled HB/FB-posts with Flat washer (HW3), Split Lock Washer (HW4) and Hex Nut (HW5) from the other side.	Step 4 Assembly 6x support legs of slats (J) to 6x metal slats (H), by using Allen Key (HW7) to lock 6x Hex Socket Bolts (HW2). Then attach the assembled metal slats (H) on inside of both assembled side rails (E/F), by using Allen Key (HW7) to lock 24x Hex Socket Bolts (HW1). Reference image above. Assembly is completed.