

NOTICE

*Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

*This item may require periodic tightening.

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.


Part List

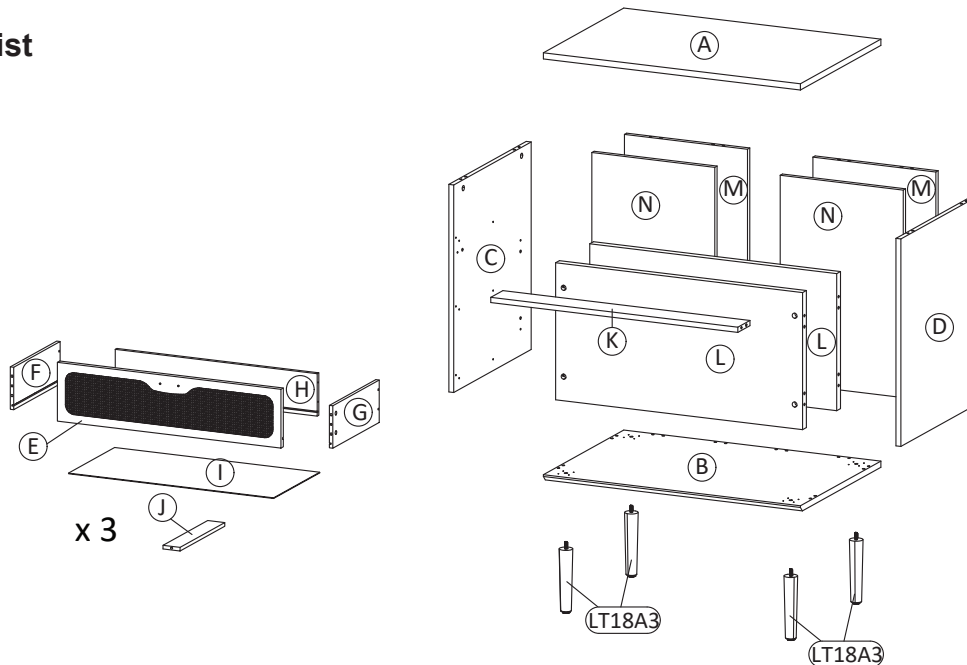

 **SAFAVIEH**
FURNITURE

Model# CHS9602

Product Dimensions: 31"Wx21"Dx32"H

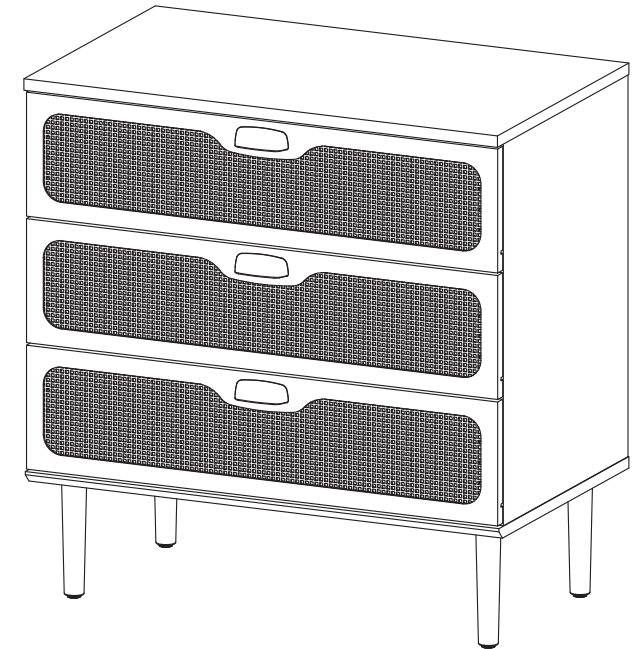

WARNING :







WEIGHT CAPACITY: 60 LBS.

DRAWER LOAD CAPACITY 22 LBS

Warning : Do not stand on chest.

Warning : Do not over torque bolts.

Hardware List

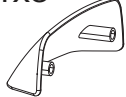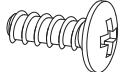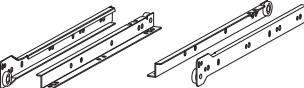HW1x29  $\varnothing$ 6 x 35 mm	HW2x14  $\varnothing$ 15 mm	HW3x15  $\varnothing$ 12 mm	HW4x24  $\varnothing$ 8 x 30 mm	HW5x6  $\varnothing$ 6 x 30 mm	HW6x8  M 7 x 50 mm
HW7x2  L 4	HW8x18  M 8 x 39 mm	HW9x18  M 3.5 x 13 mm	HW10x18  M 6 x 10.5 mm	HW11x3  	HW12x6  M 4 x 25 mm
HW13x12  M 3.5 x 15.5 mm	HW14x16  M 4.5 x 12.5 mm	HW15x12  	HW16x6  $\varnothing$ 5 x 20 mm	HW PM3x4  	HW RM35Ax3 

Part List & HW For Multi-Box Items

Piece	Description	Qty
A	Top Board	1
B	Bottom Board	1
C	Side Board Left	1
D	Side Board Right	1
E	Front Drawer	3
F	Side Drawer Left	3
G	Side Drawer Right	3
H	Back Drawer	3
I	Bottom Drawer	3
J	Support Drawer	3
K	Support Board 1	1
L	Support Board 2	2
M	Back Board 1	2
N	Back Board 2	2
LT18A3	Leg	4

Piece	Description	Qty
HW1	Cambolt	29
HW2	CamLock Big	14
HW3	CamLock Small	15
HW4	Dowel Big	24
HW5	Dowel Middle	6
HW6	Screw M 7 x 50 mm	8
HW7	Allen Key	2
HW8	Screw M 8 x 39 mm	18
HW9	Screw M 3.5 x 13 mm	18
HW10	Screw M 6 x 10.5 mm	18
HW11	Handle	3
HW12	Screw M 4 x 25 mm	6
HW13	Screw M 3.5 x 15.5 mm	12
HW14	Screw M 4.5 x 12.5 mm	16
HW15	Wedge	12
HW16	Dowel Small	6
PM3	Mounting Plate	4
HW RM35A	Rail	3

PREPARATION



*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.

*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

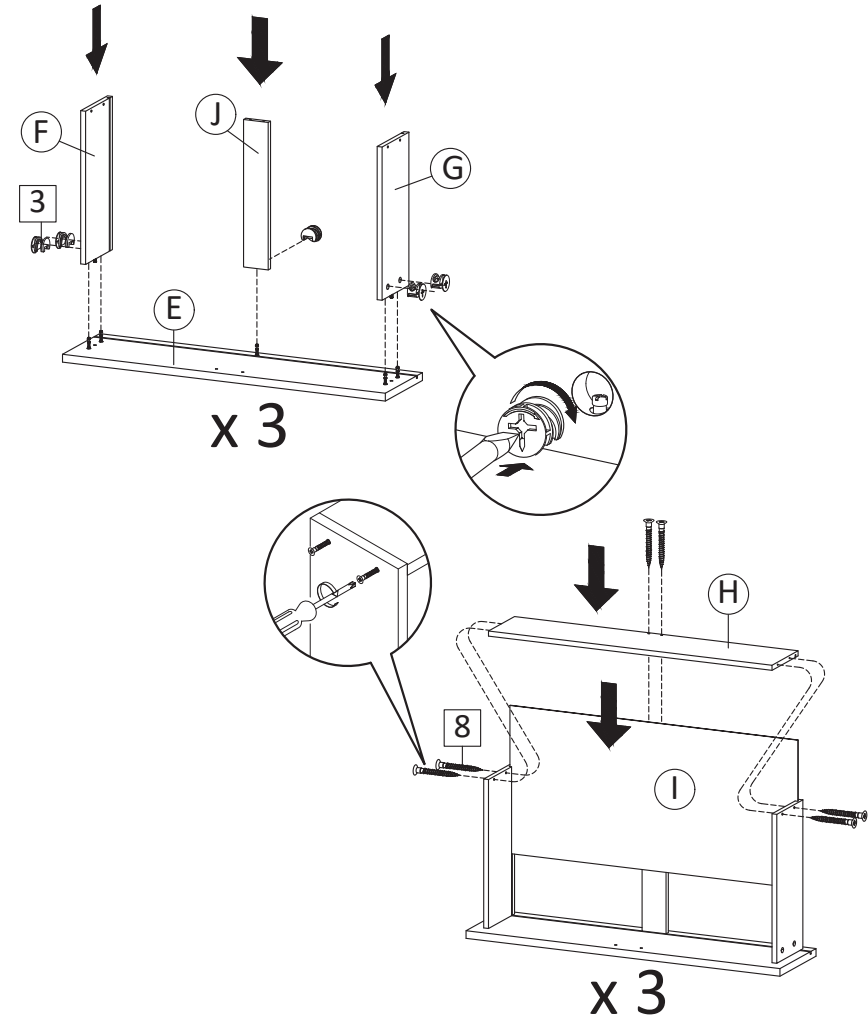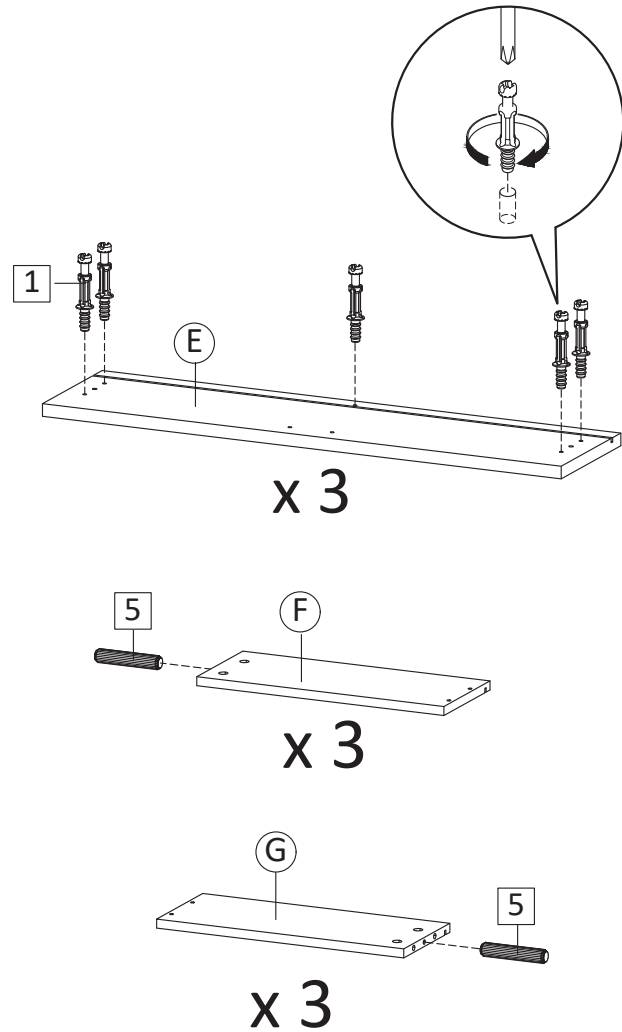

STEP1: Insert Cambolt (HW1) into Front Drawer (E). Insert Dowel Middle (HW5) into Side Drawers (F & G).

STEP2: Combine Side Drawers (F & G) and Support Drawer (J) into Front Drawer (E) then tighten camlock (HW3) using screwdriver. Insert Bottom Drawer (I), then put Back Drawer (H) with laminated face facing upward then secure with Screw M8x39mm (HW8).

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

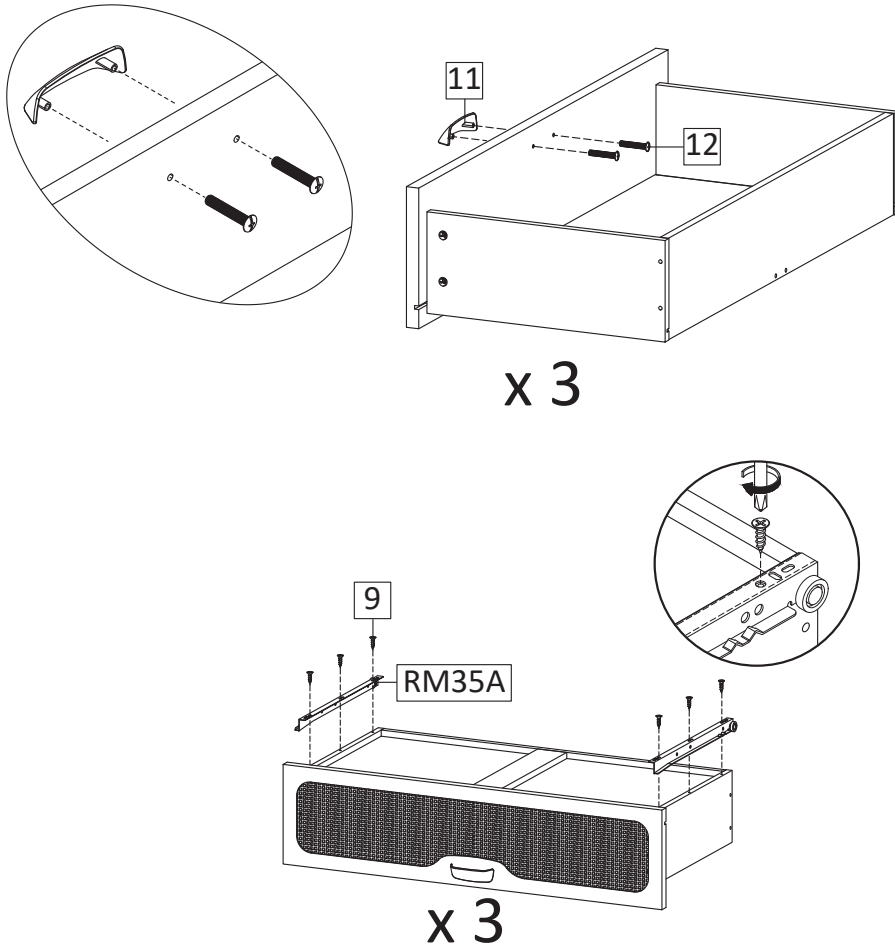

STEP3: Use Screw M4x25mm (HW12) to attach Handle (HW11) to the Front Drawer. Install the metal runner (HW RM35A) into position as shown in picture. Secure with screws M3.5x13mm (HW9).

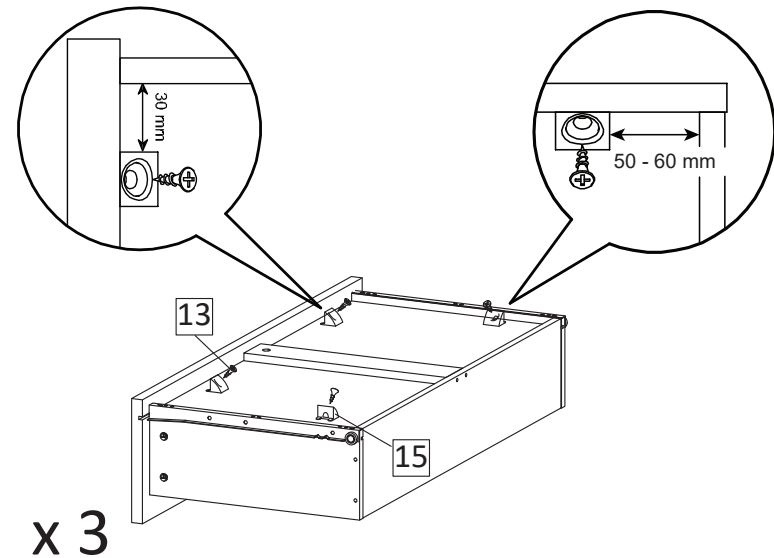

STEP4: Insert the Screw M3.5x15.5mm (HW13) and wedge (HW15) into the bottom of the drawer according to the picture.

PREPARATION



*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.

*Estimated Assembly Time: 60 minutes.


*Tools Required for Assembly (included): Allen Key

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

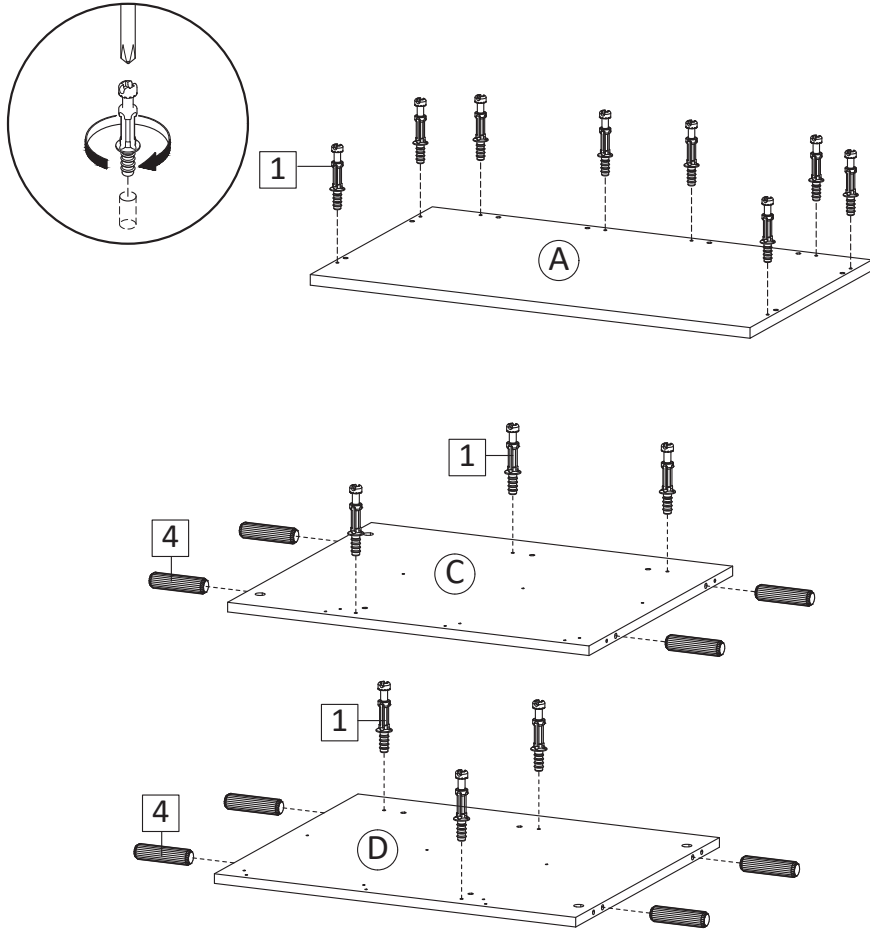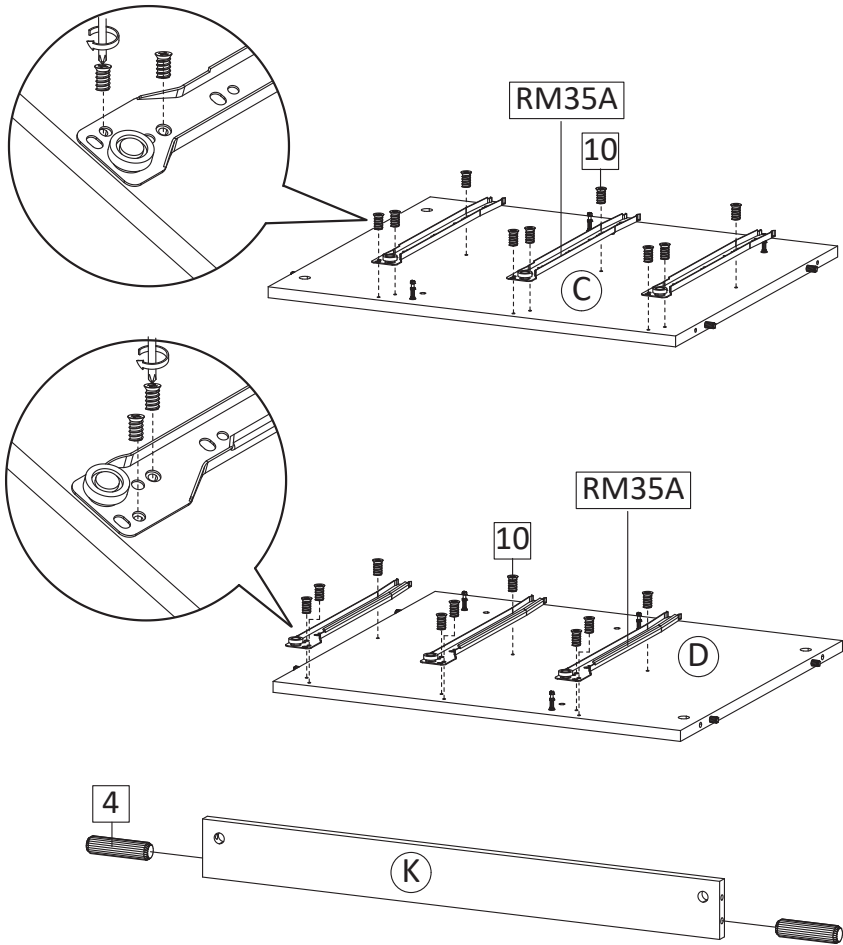
 The diagram for Step 5 shows three boards: A (Top Board), C (Side Board Left), and D (Side Board Right). Board A is shown with eight screws (HW1) being inserted into its top surface. Boards C and D are shown with four screws (HW1) being inserted into their top surfaces. Additionally, four dowel pins (HW4) are shown being inserted into the side edges of boards C and D. A circular inset shows a close-up of a screw (HW1) being inserted into a board.	 The diagram for Step 6 shows the assembly of the metal runners and support board K. Two circular insets show a close-up of a metal runner (RM35A) being secured to a board with a screw (HW10). The main diagram shows boards C and D with the metal runners (RM35A) being secured to their top surfaces using screws (HW10). Below this, a support board K is shown with four dowel pins (HW4) being inserted into its side edges.
STEP5: Insert Cambolt (HW1) into Top Board (A), Side Board Left (C) and Side Board Right (D). Insert Dowel Big (HW4) into Side Board Left (C) and Side Board Right (D).	STEP6: Securing part of the metal runner (HW RM35A) into position as the above image, using screw M6x10.5mm (HW10) into Side Board Left (C) and Side Board Right (D). Insert Dowel Big (HW4) into Support Board 1 (K).

PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 60 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

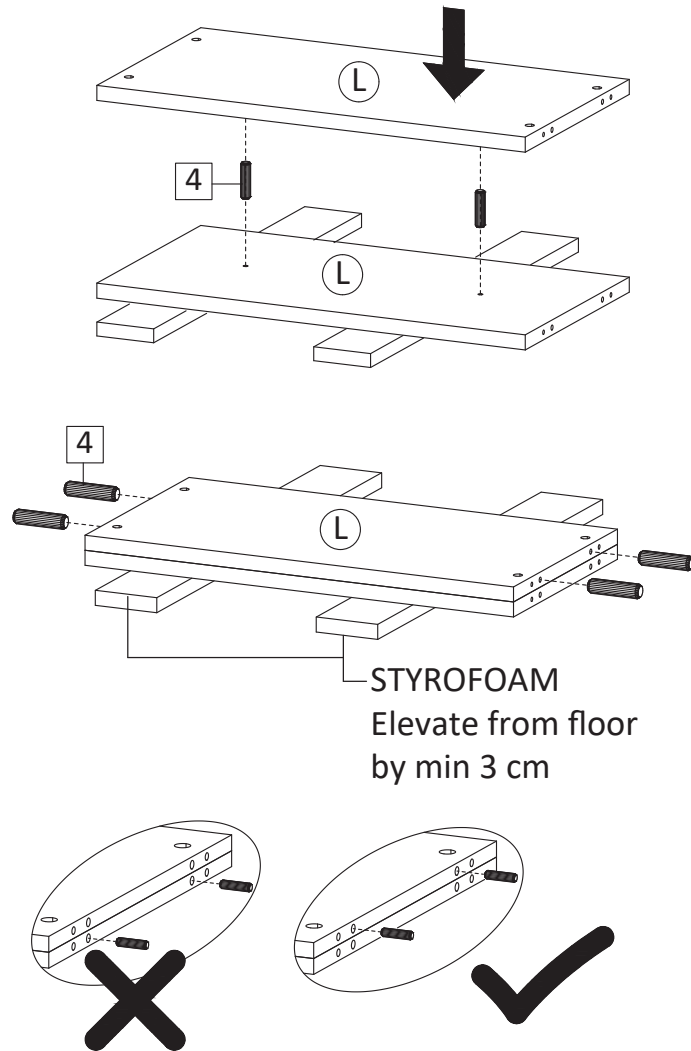



STEP7:Place Support Board 2 (L) on styrofoam block to elevate it from floor. Insert Dowel Big (HW4) then pair with the other Support Board 2 (L) on top of it. Insert Dowel Big (HW4) on both edges of the upper Support Board.

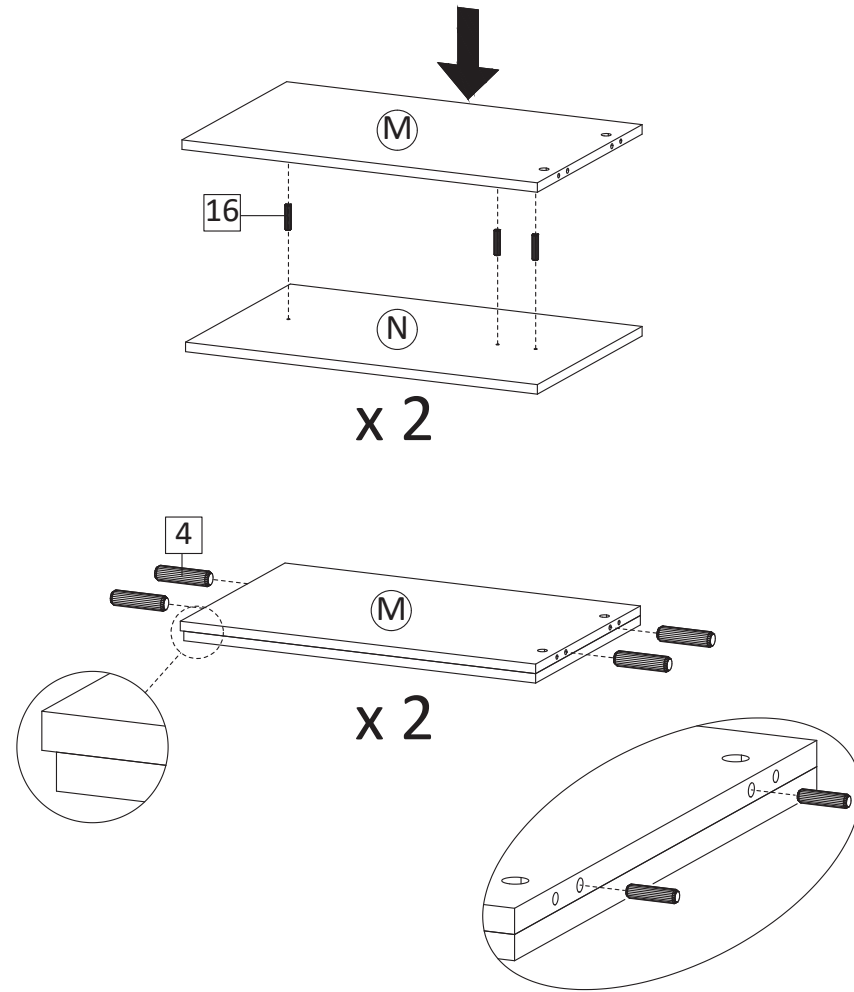



STEP8: Place Back Board 2 (N) with holes facing upward, insert Dowel Small (HW 16), then pair it with Back Board 1 (M) on top. Insert Dowel Big (HW4) on both edges of the upper Back Board.

PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 60 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

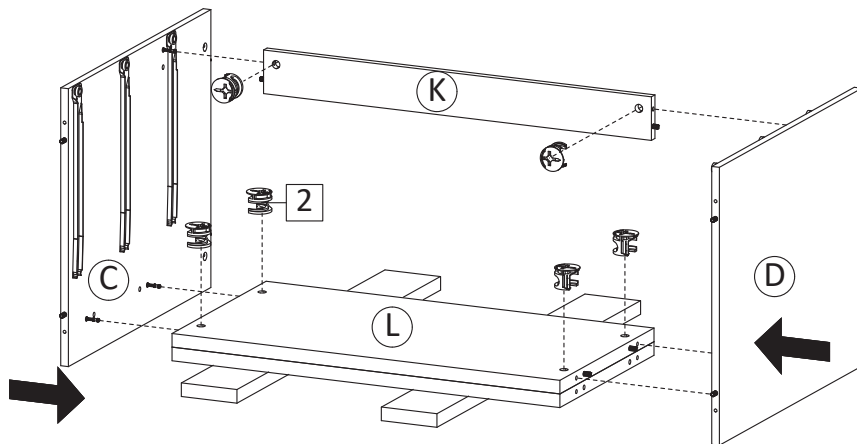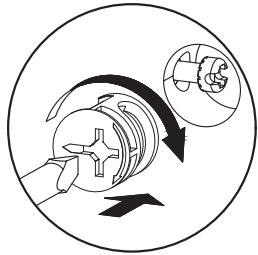

STEP9: Attach Support Board 1 (K) and Support Board 2 (L) Between Side Board Left (C) and Side Board Right (D). Secure with Camlock Big (HW2) and tighten it using screwdriver.

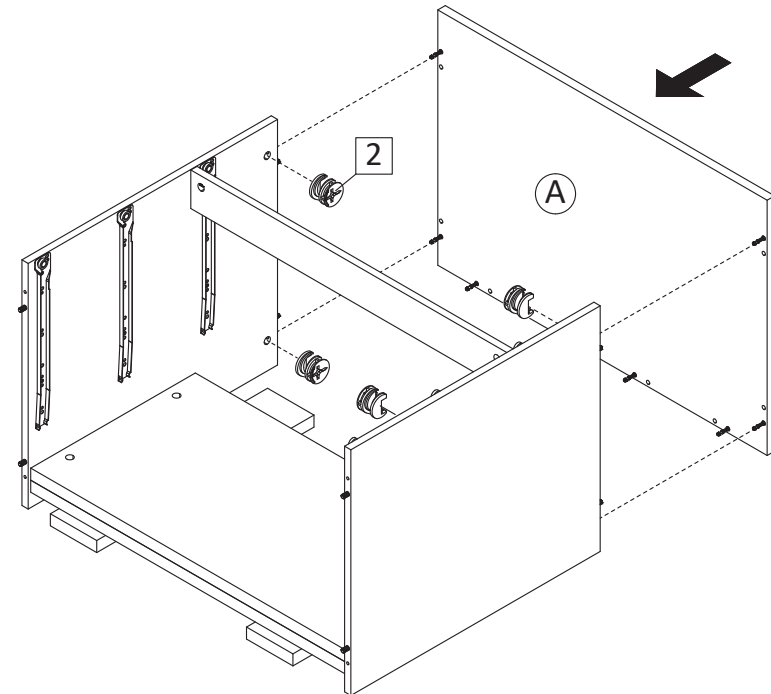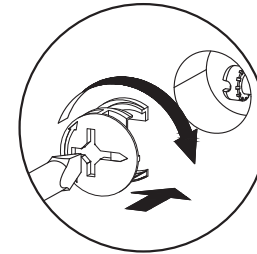

STEP10: Insert Top Board (A) Secure with Camlock Big (HW2) and tighten it using screwdriver.

PREPARATION



*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.

*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

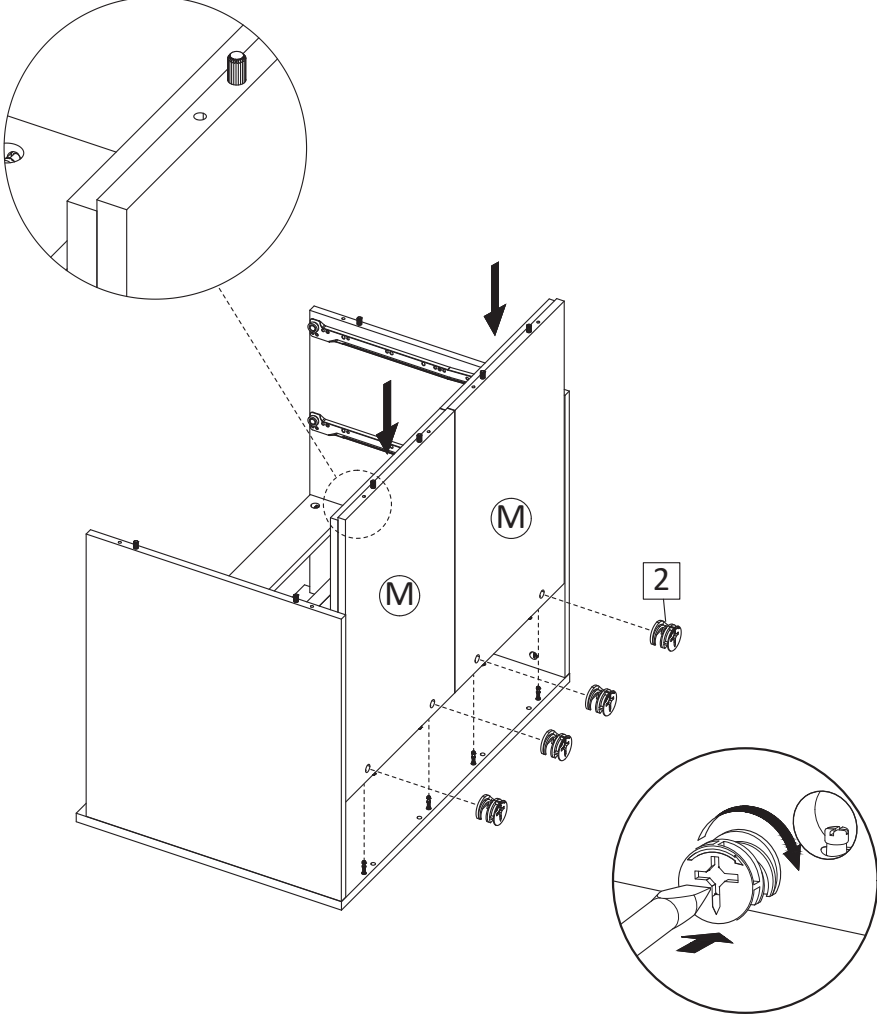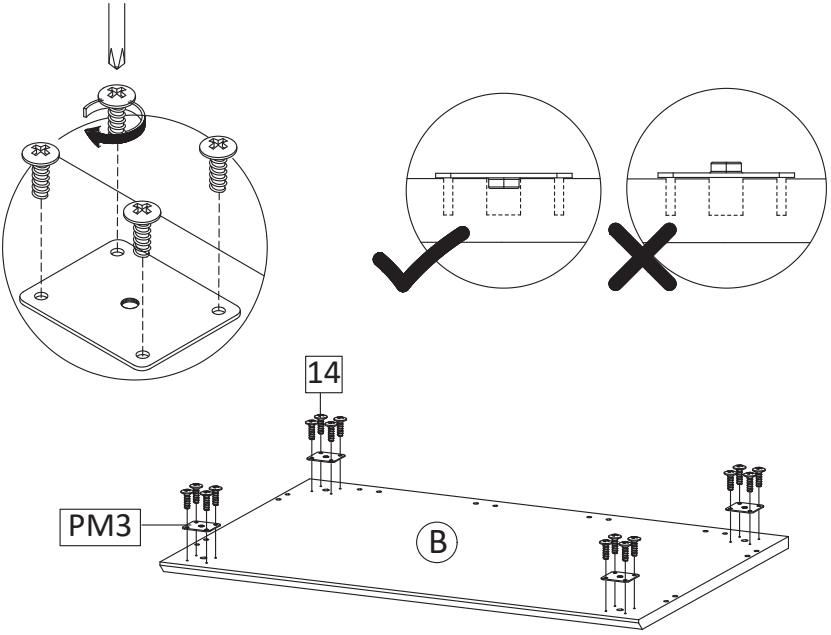 The diagram shows a 3D perspective of a cabinet's back assembly. A back board, labeled 'M' in a circle, is being inserted into the frame. Arrows indicate the direction of insertion. A circular inset at the top left shows a close-up of the back board fitting into a slot. Another circular inset at the bottom right shows a close-up of a camlock, labeled '2' in a box, being tightened with a screwdriver. The main assembly shows several camlocks being inserted into the back board.	 The diagram shows a 3D perspective of a mounting plate, labeled 'PM3' in a box, being installed onto a bottom board, labeled 'B' in a circle. Arrows indicate the direction of installation. A circular inset at the top left shows a close-up of a screw being inserted into the mounting plate. To the right, two circular insets show the correct and incorrect ways to install the mounting plate. The first inset, marked with a checkmark, shows the mounting plate being inserted into a slot. The second inset, marked with an 'X', shows the mounting plate being placed on top of the slot.
STEP11: Insert Back Board (M) Secure with Camlock Big (HW2) and tighten it using screwdriver.	STEP12: Install Mounting Plate (PM3) and secure with screw M4.5x12.5mm (HW14) on Bottom Board (B).

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

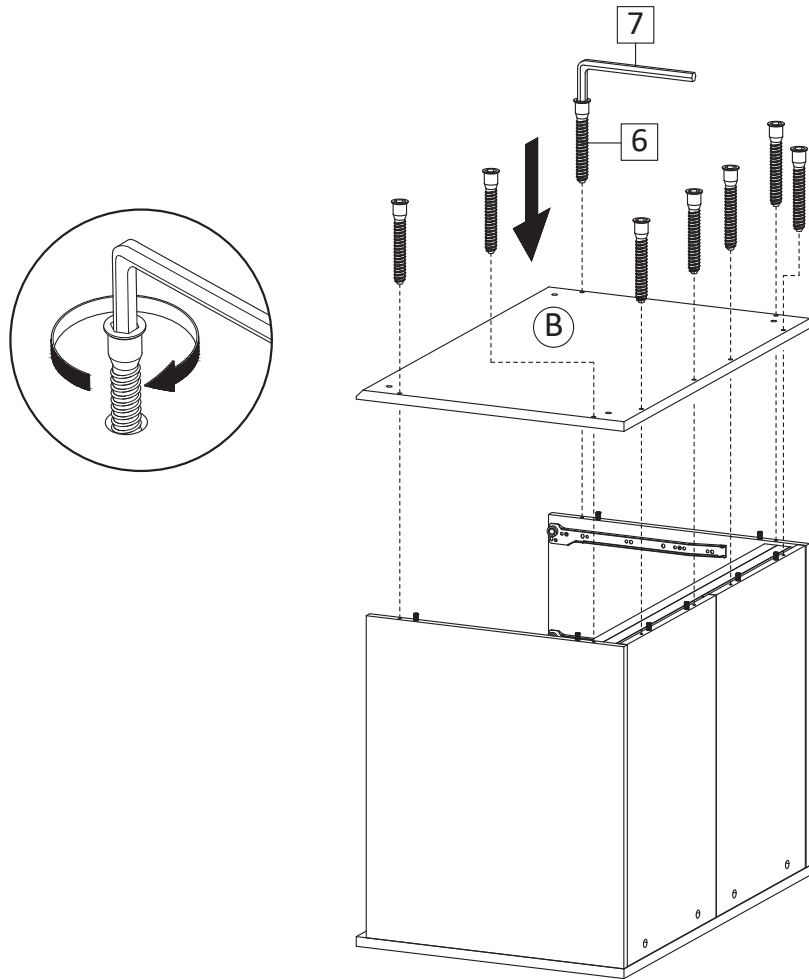

STEP13: Insert Bottom Board (B), secure with Screw M7x50mm (HW6), tighten screws using Allen Key (HW7).

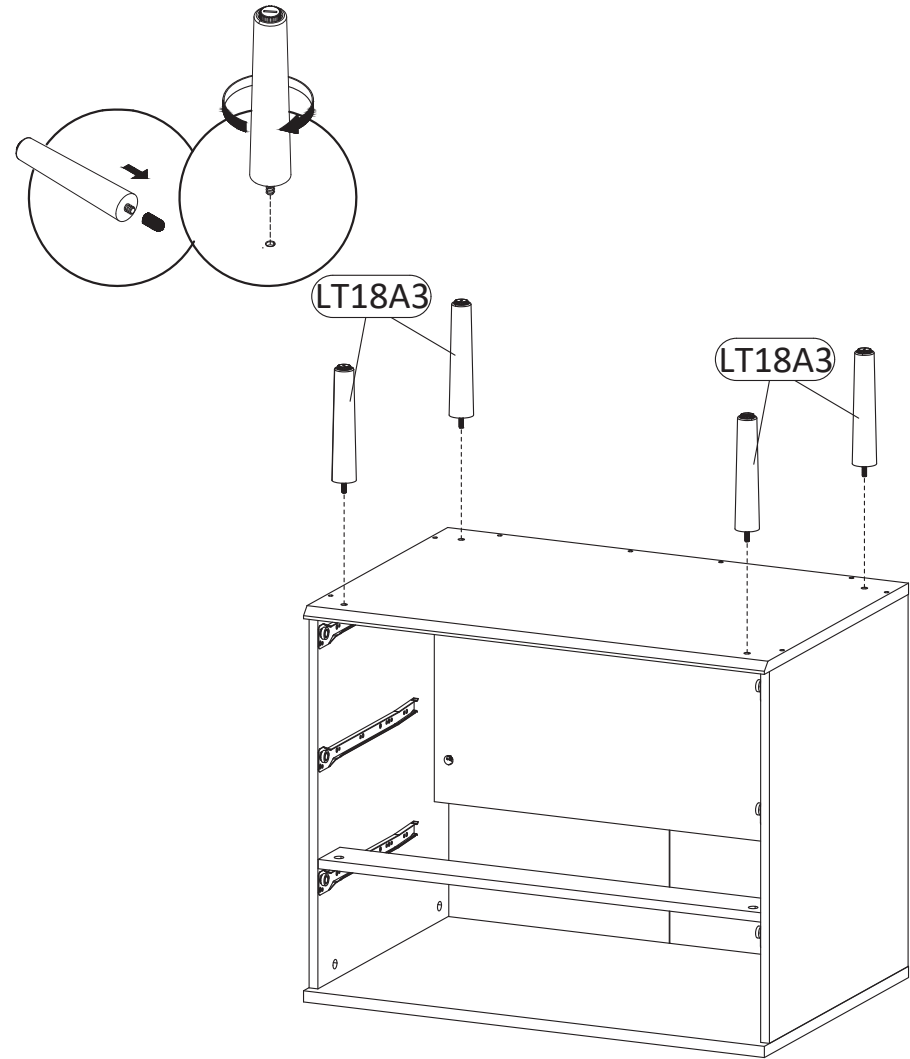

STEP14: Insert Leg (LT18A3) into Mounting Plate, tighten by rotating .the leg clockwise.

PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 60 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

Sticker Warning Position Name Plate Position	
STEP15: Hold the sides of drawer, position the wheel of rail at drawer back and the wheel of rail at side boards, according to the image. Slide in the drawers one by one into the cabinet. Place your furniture on level floor. The legs come with adjustable leveller, adjust it as needed until your furniture sit steady on the floor.	STEP16: Assembly is complete

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for your wall type.

