

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 40 minutes.
- * Tools Required for Assembly: Allen Key, Screwdriver, Wooden hammer.


CARE AND MAINTENANCE

Dust regularly with a soft, dry cloth. Never use oiled or treated cloths on lacquered finishes. Some finishes can be wiped with a damp (not wet) cloth, followed at once by rubbing with a dry cloth to remove fingerprints and smudges. For persistent spots, gently clean with a soft cloth and a solution of water and mild soap, make sure to wipe dry. Use adhesive felt pads, coasters and placemats to protect your furniture.




Model# COF2238

Product Dimensions: 43.3"W×25.98"D×16.54"H

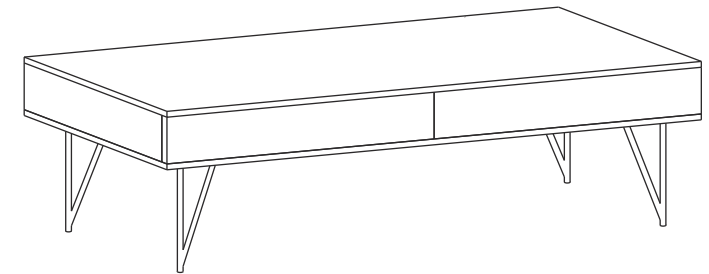

Part List and Hardware List

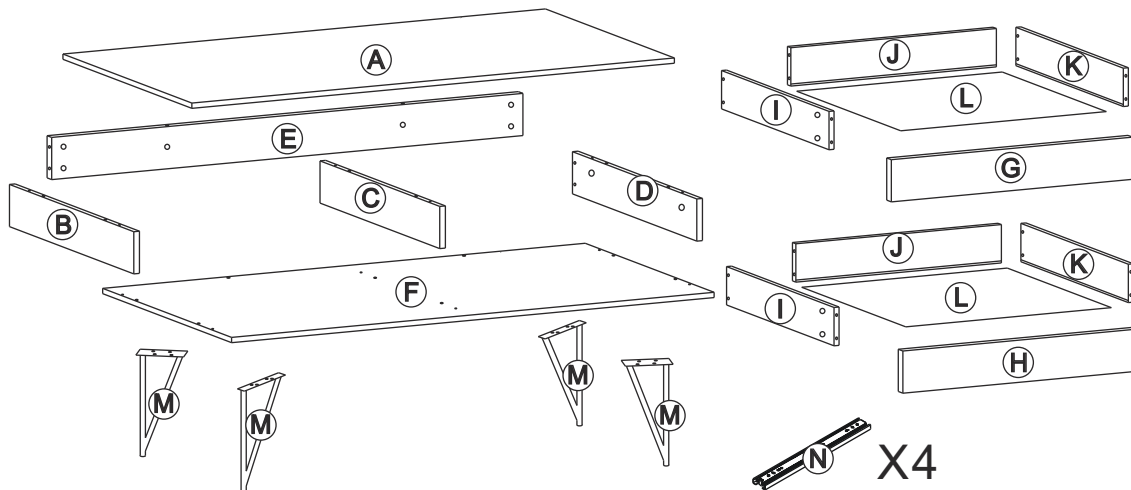

⚠ WARNING ⚠

Weight Capacity: 70 lbs.
Warning: Do not stand on Table.
Warning: Do not over torque bolts.

HW1x1 	HW2x16  6x16mm	HW3x12  6x45mm	HW4x12  Ø15	HW5x12  Ø7.8x30mm
HW6x8  5x45mm	HW7x8  4x35mm	HW8x16  3.5x14mm	HW9x8  6x27mm	HW10x8  Ø10

Part List & HW List

Piece	Description	Qty
A	Top Board	1
B	Side Board Left	1
C	Middle Board	1
D	Side Board Right	1
E	Back Board	1
F	Bottom Board	1
G	Left Drawer Front Board	1
H	Right Drawer Front Board	1
I	Drawer Side Board Left	2
J	Drawer Back Board	2
K	Drawer Side Board Right	2
L	Drawer Bottom Board	2
M	Leg	4
N	Slide Rail	4

Piece	Description	Qty
HW1	Allen Key	1
HW2	Screw M6 x 16 mm	16
HW3	Cambolt M6 x 45 mm	12
HW4	Camlock Big	12
HW5	Dowel	12
HW6	Screw M5 x 45 mm	8
HW7	Screw M4 x 35 mm	8
HW8	Screw M3.5 x 14 mm	16
HW9	Cambolt M6 x 27 mm	8
HW10	Camlock Small	8


PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 40 minutes.
- * Tools Required for Assembly: Allen Key, Screwdriver, Wooden hammer.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com


1 Install HW ③ on part ②, ④.




2 Insert HW ④ in part ⑤, attach part ②, ④ to ⑤, Fasten HW ④ to install them together.

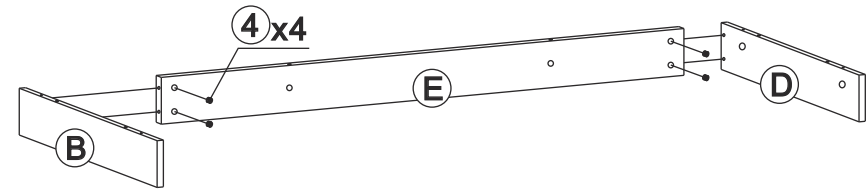


3 Install HW ③ on part ①.

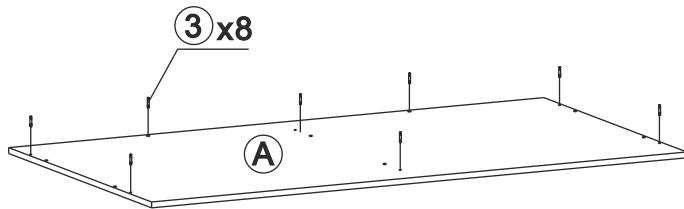


4 Insert HW ④ in part ②, ④, ⑤, insert HW ⑤ in part ①, Attach part ②, ④, ⑤ to ①, fasten HW ④ to install them together.

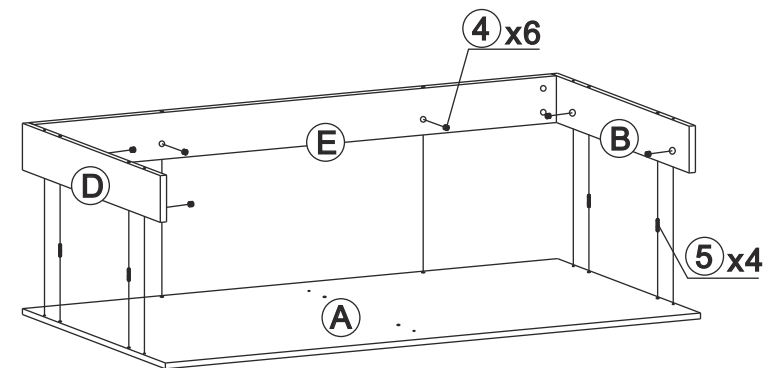



- 5** Insert HW④ in part③, insert HW⑤ in part①,
Attach part③ to ①, fasten HW④ to install them together.

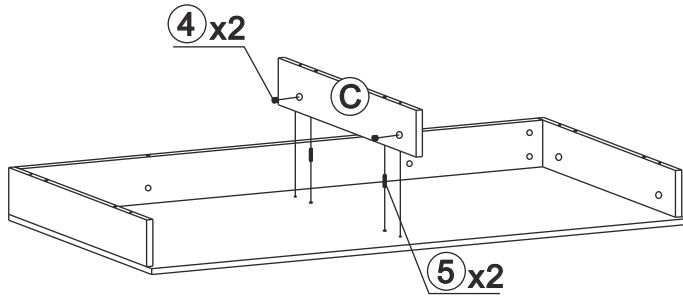


- 6** Press down and pull away.

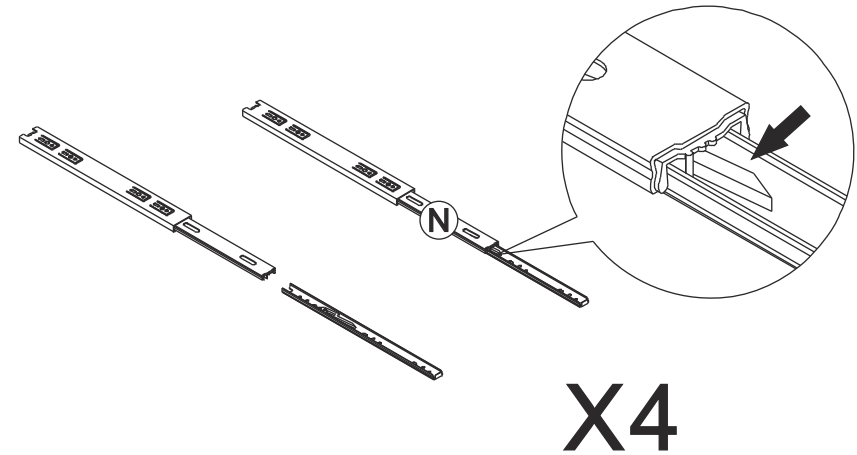


- 7** Use HW⑧ to install the big piece of part③ on ②, ③, ④.
Pay attention to the direction.

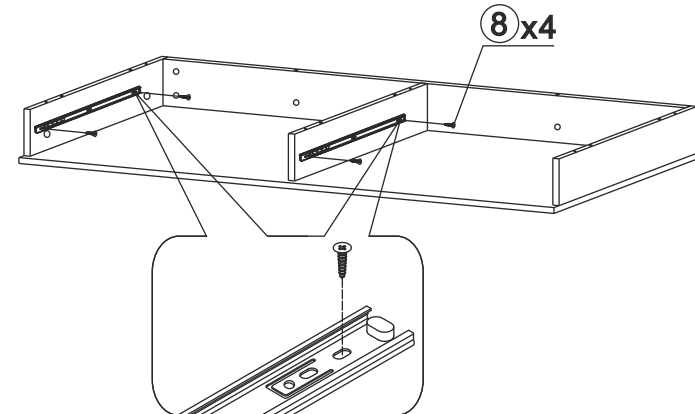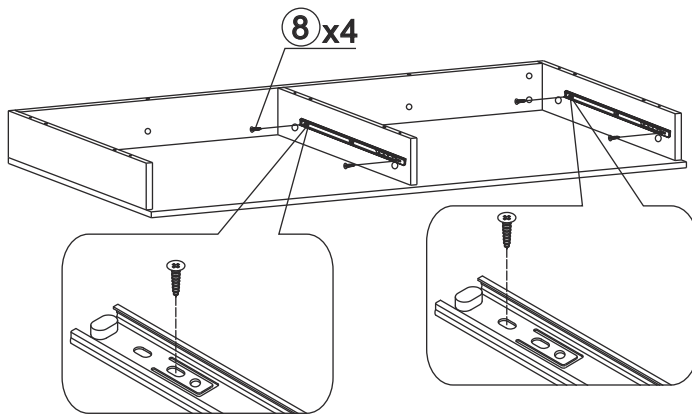



- 8** Insert HW⑤ in part ②, ③ and ④, attached to part ①, Use HW⑥ to install them together.

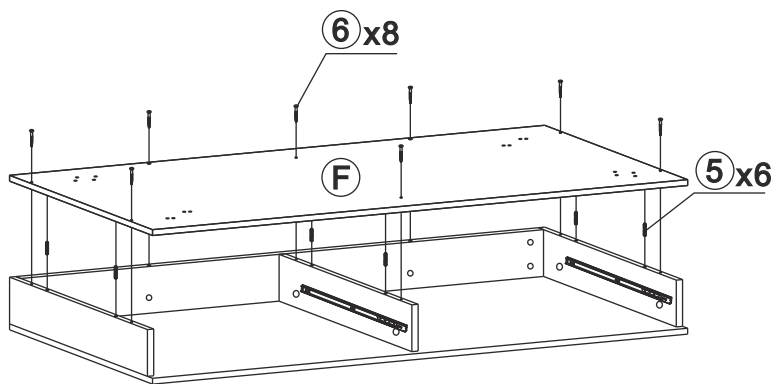


- 9** Use HW② to install part ③ on ①.

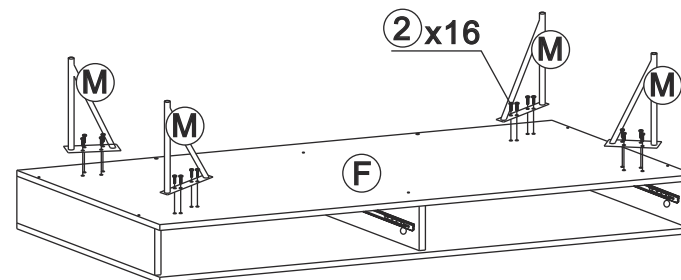



- 10** Install HW⑨ on part ③, ④, use HW⑦ to install part ⑤, ⑥ and ⑦ together.

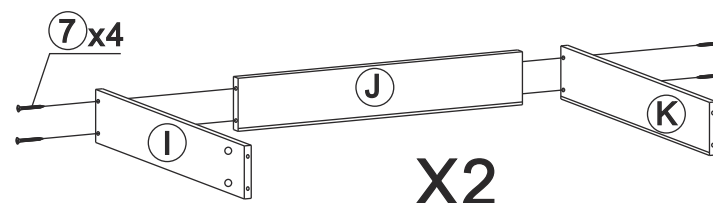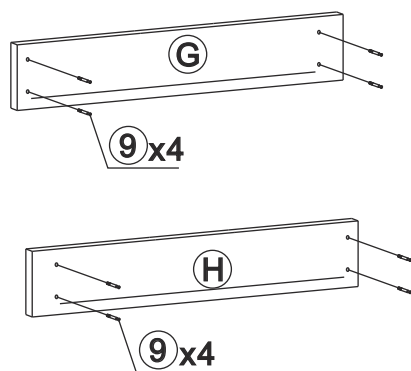



- 11** Insert part **L** in part **I**, **J**, **K** frame, insert HW **10** in part **I**, **K**, Attach part **G**, **H** to **I**, **K**, fasten HW **10** to install them together.

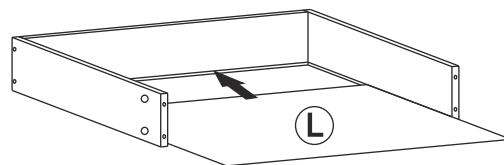


X2

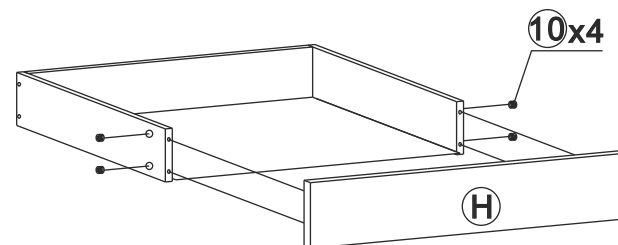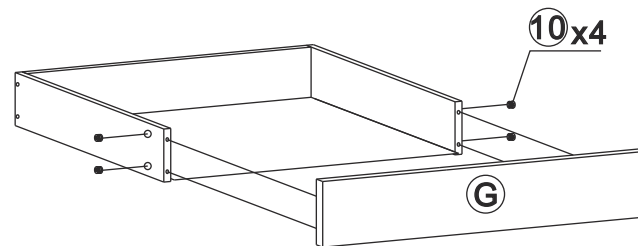

- 12** Use HW **8** to install the small piece of part **N** on drawer side board, Pay attention to the direction.

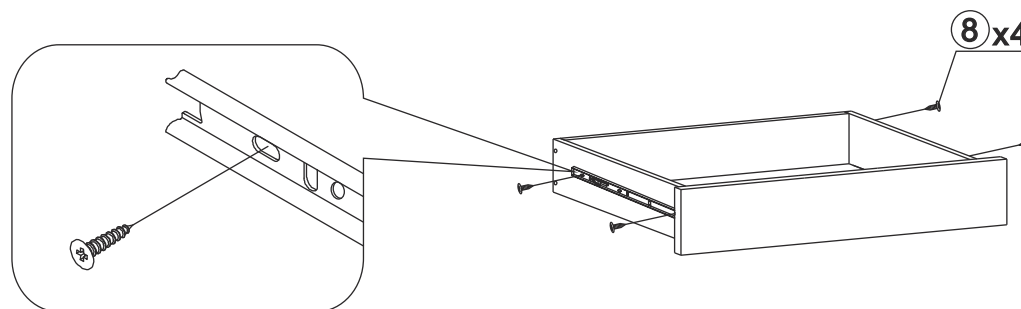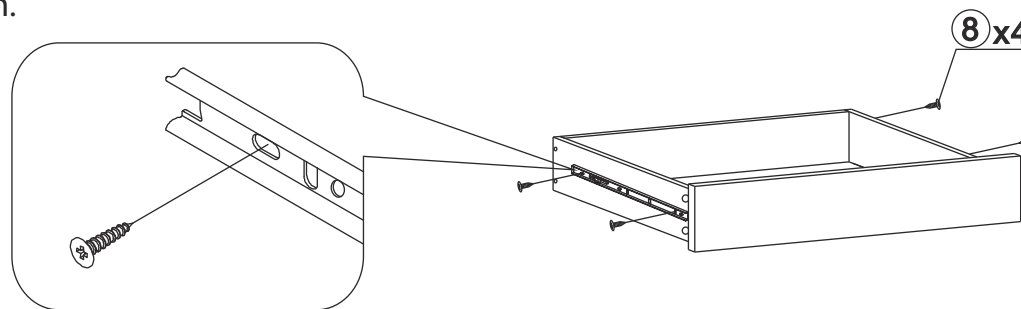

13 Insert two drawers in table.

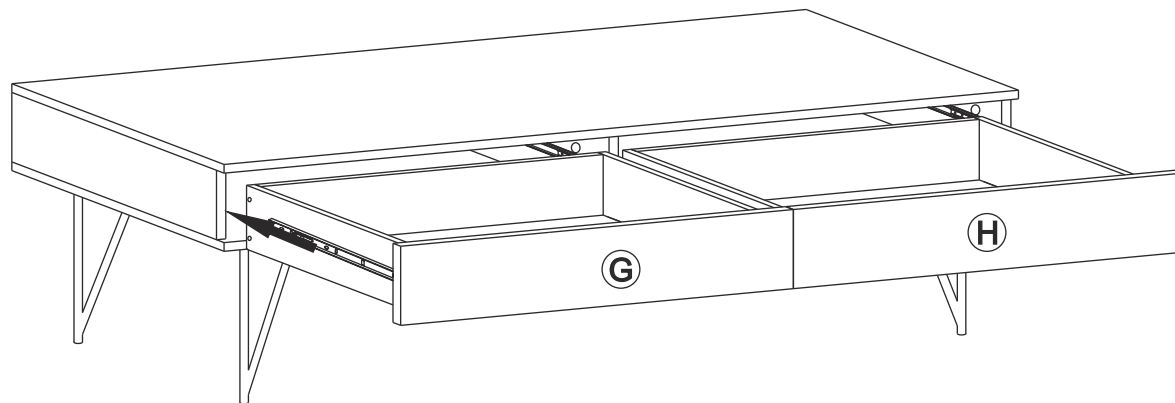

14 Finish.

