

## NOTICE

- \* Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- \* This item may require periodic tightening.
- \* If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)








## PREPARATION

- \* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- \* If any part is missing or damaged, do not attempt to assemble the product.
- \* Estimated Assembly Time: 10 minutes.
- \* Tools Required for Assembly (included): Allen Key

## CARE AND MAINTENANCE

Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning. The use of steam or water-based cleaners may cause excessive shrinking or staining.

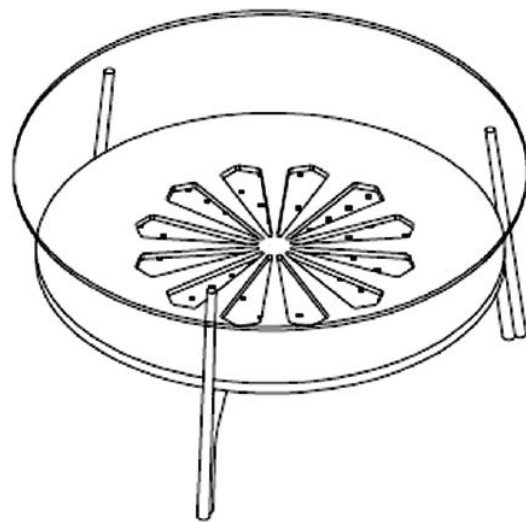
### Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Wooden Shelf		1X
B	Glass Top		2X
C	Leg		3X
HW1	Bolt 15x6x12		3X
HW2	Allen Bolt 6x1.6x16mm		12X
HW3	Flat Washer 16x8 mm		12X
HW4	Allen key 4 mm		1X



Item# COF9005

Product dimensions: 29.13"W X 29.13"D X 11.81"H

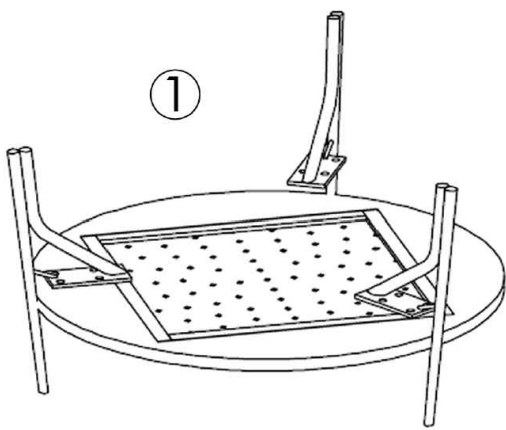
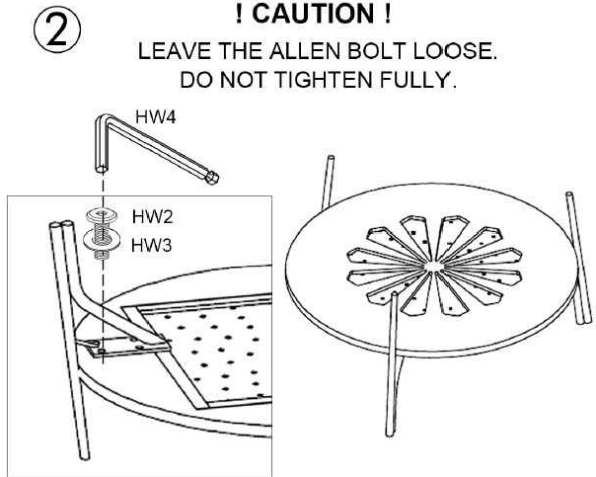
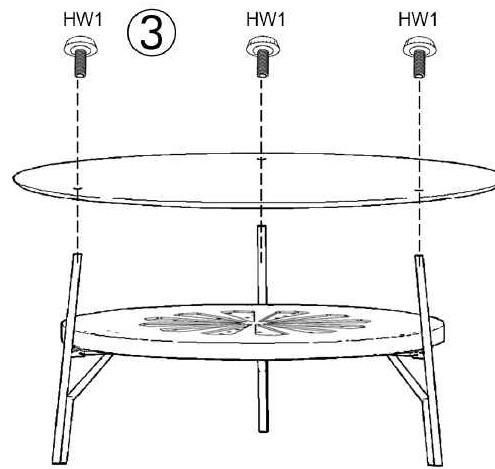
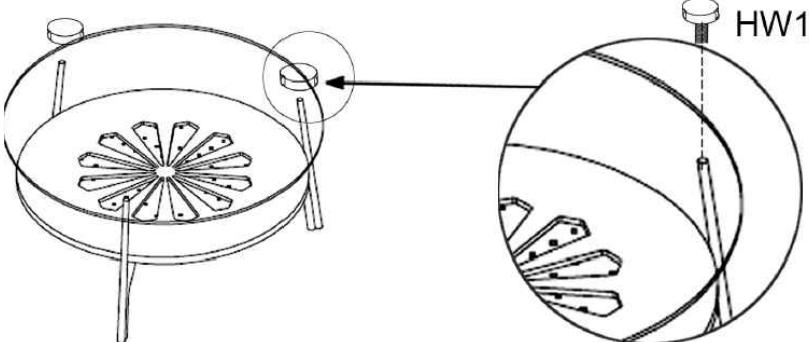
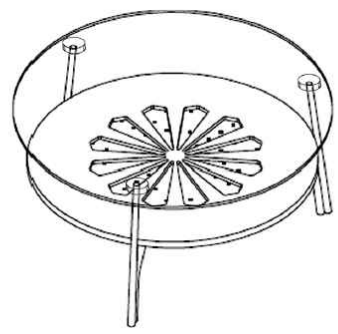


 WARNING 

Weight Capacity - 20 LBS  
Warning : Do not stand on Coffee table  
Warning : Do not over torque bolts.

# PREPARATION

- \* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- \* If any part is missing or damaged, do not attempt to assemble the product.
- \* Estimated Assembly Time: 15 minutes.
- \* Tools Required for Assembly (included): Allen Key

 <p>1</p>	 <p>2</p> <p><b>! CAUTION !</b> LEAVE THE ALLEN BOLT LOOSE. DO NOT TIGHTEN FULLY.</p> <p>HW4 HW2 HW3</p>	 <p>3</p> <p>HW1 HW1 HW1</p>
 <p>4</p> <p>HW1</p>	 <p>5</p>	
<p>STEP1 OPEN THE ZIPPER ON THE INSIDE OF THE DRAWER AND TAKE OUT LEGS AND HARDWARE ALIGN THE LEG</p>	<p>STEP2 PUT THE WASHERS (HW3) ON THE ALLEN BOLT (HW2) PARTAILLY TIGHTEN WITH(HW4)</p> <p>STEP4 NOW USE BOLT (HW1) FOR FIXING THE TOP AND TIGHTEN. AFTER PRODUCT ASSEMBLED NOW FULLY TIGHTEN ALL BOLTS</p>	<p>STEP3 NOW THE GLASS ON TOP AND ALLIGN HOLES</p> <p>STEP5 NOW PRODUCT IS READY TO USE.</p>

The legs are located under the drawer