

NOTICE

*Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

*This item may require periodic tightening.

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.


Part List

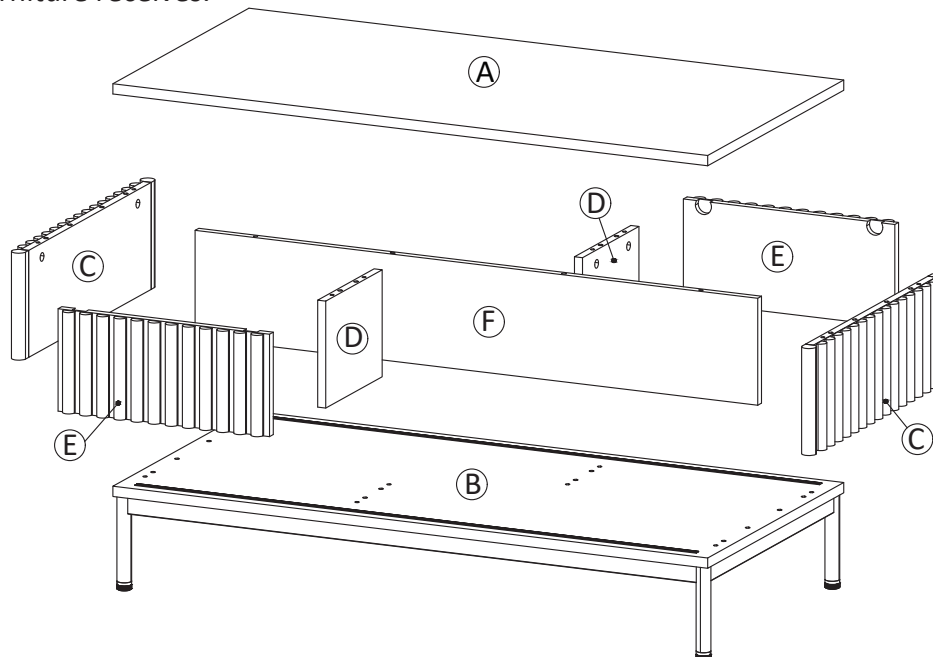

 **SAFAVIEH**
FURNITURE

Model# COF9603

Product Dimensions: 44"Wx21"Dx15"H

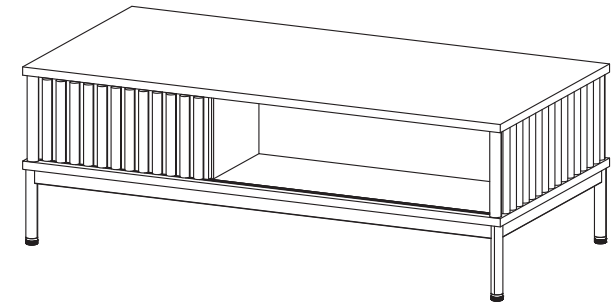






WARNING :

WEIGHT CAPACITY: 88 LBS.

Warning : Do not stand on coffee table.

Warning : Do not over torque bolts.

Hardware List

HW1x10  Ø 6 x 35 mm	HW2x10  Ø 15 mm	HW3x28  Ø 8 x 30 mm	HW4x10  M 7 x 50 mm	HW5x2  L 4
HW6x4 	HW7x10  Ø 15 mm	HW8x4 	HW9x4 	HW10x16  M 3.5 x 13 mm
HW11x4  M 6 x 40 mm	HW12x4 	HW13x4 	HW14x12  M 6.4 x 45 mm	HW15x2 
HW16x2 	HW17x4 			


Part List & HW For Multi-Box Items

Piece	Description	Qty
A	Top Board	1
B	Bottom Board	1
C	Side Board	2
D	Center Board Small	2
E	Door	2
F	Center Board Big	1


Piece	Description	Qty
HW1	Cambolt	10
HW2	CamLock	10
HW3	Dowel	28
HW4	Screw M 7 x 50 mm	10
HW5	Allen Key	2
HW6	Bumper	4
HW7	Screw Cap	10
HW8	Sliding Top	4
HW9	Sliding Bottom	4
HW10	Screw M 3.5 x 13 mm	16
HW11	Screw M 6 x 40 mm	4
HW12	Corner Brace	4
HW13	Support Corner Brace	4
HW14	Screw M 6.4 x 45 mm	12
HW15	Support Metal Leg 1	2
HW16	Support Metal Leg 2	2
HW17	Metal Leg	4

PREPARATION


- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 60 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

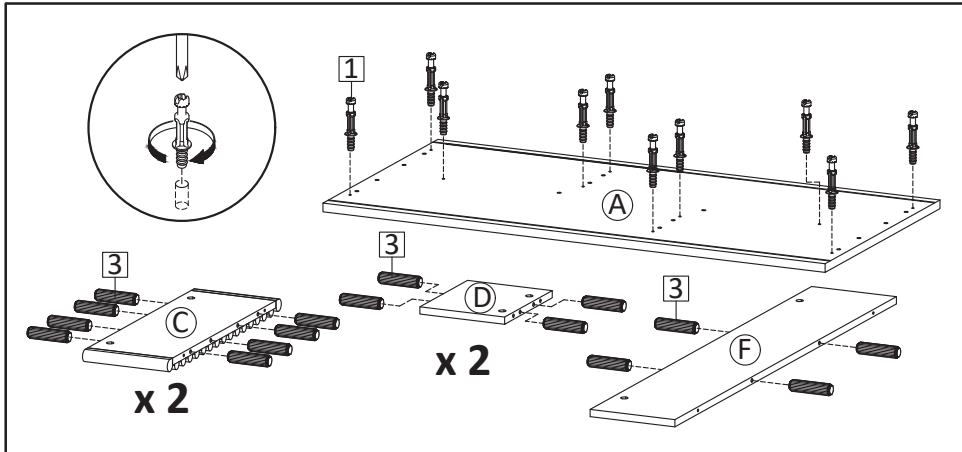


STEP1: Insert Cambolt (HW1) into Top Board (A). Insert Dowel (HW3) into Side Boards (C), Center Board Small and Big (D) and (F) into position as the above image.

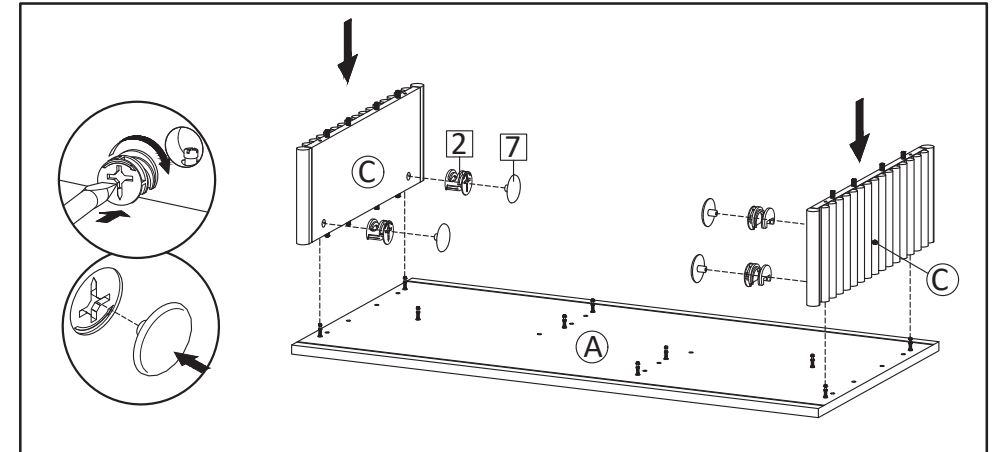

STEP2: Attach Side Boards (C) into Top Board (A). Secure with Camlock (HW2) and tighten it using screwdriver. Put the Screw Cap (HW7) over the tightened camlock.

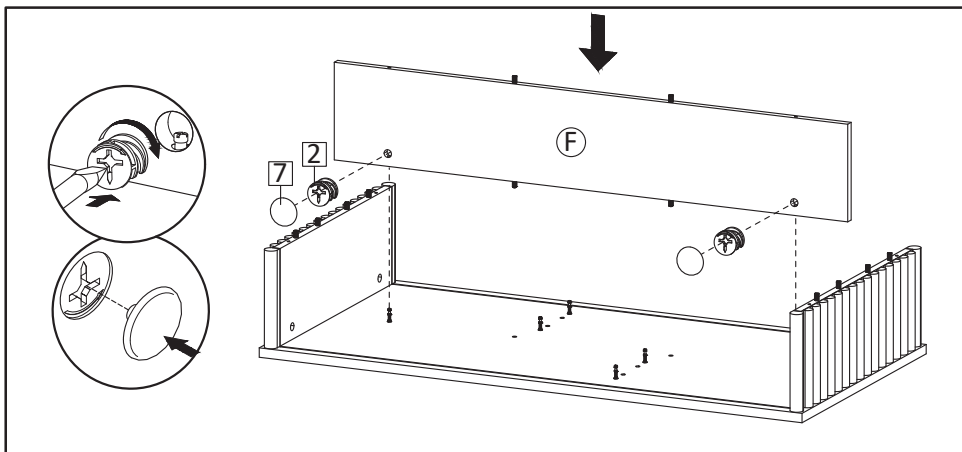

STEP3: Attach Center Board Big (F) into Top Board (A). Secure with Camlock (HW2) and tighten it using screwdriver. Put the Screw Cap (HW7) over the tightened camlock.

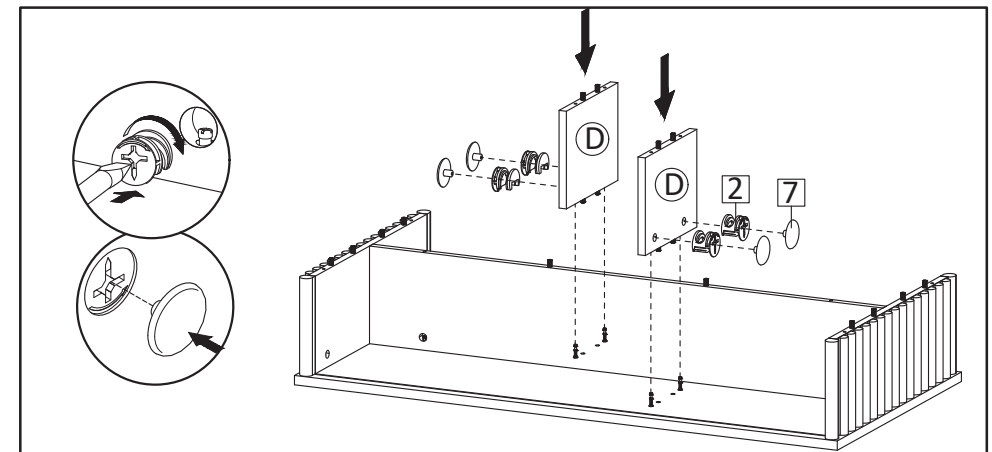

STEP4: Attach Center Boards Small (D) into Top Board (A). Secure with Camlock (HW2) and tighten it using screwdriver. Put the Screw Cap (HW7) over the tightened camlock.

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

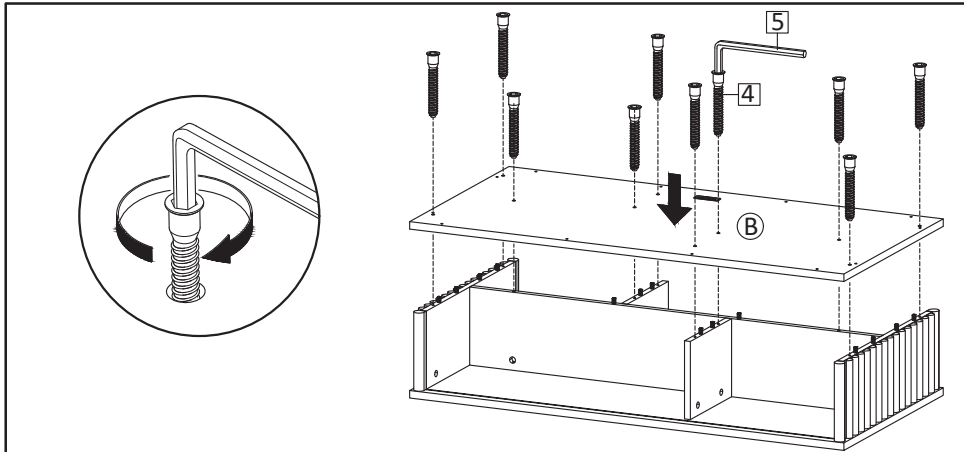


STEP5: Continue by attaching Bottom Board (B) into the assembled components from step 4. secure with Screw M7x50mm (HW4) using Allen Key (HW5).

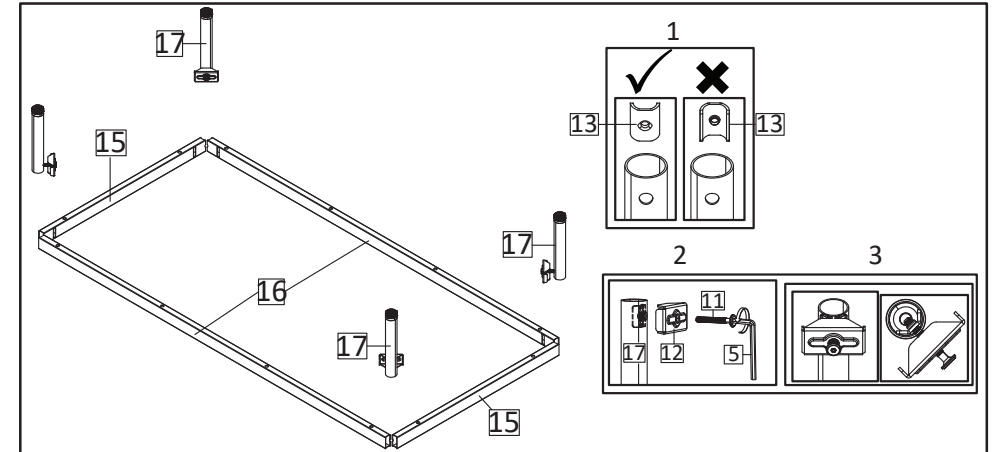

STEP6: Insert Support Corner Brace (HW13) and place it inside Leg (HW17) tube. Insert Screw (HW11) into the hole of Corner Brace (HW12). Screw in slightly just enough to grip Leg (HW17) with Support Corner Brace (HW13) inside. Do not tighten. Now arrange Support Metal Leg 1 (HW15) & Support Metal Leg 2 (HW16) on the floor as per image.

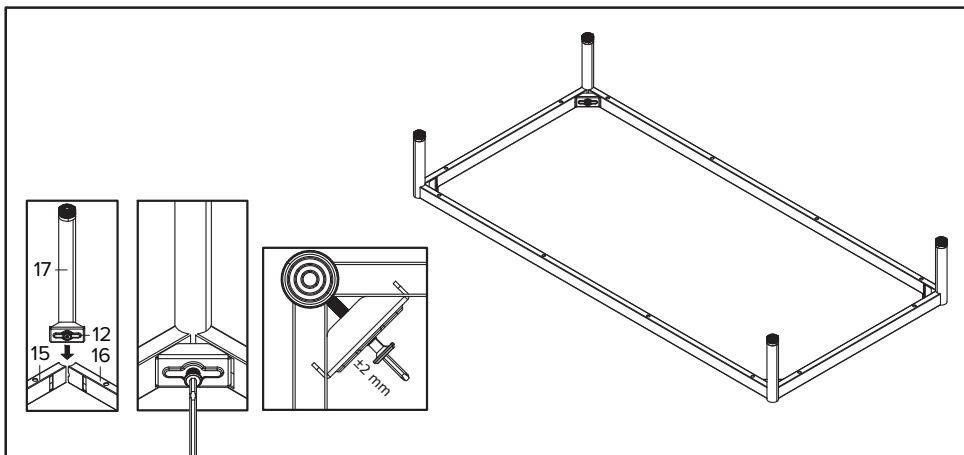

STEP7: Install the prepared Leg (HW17). Ensure the Corner Brace (HW12) hooks into the hole of Support Metal Leg (HW16) and (HW15). Screw in just enough to grip the support using Allen Key (HW5). Do not fully tighten. Repeat for the other legs

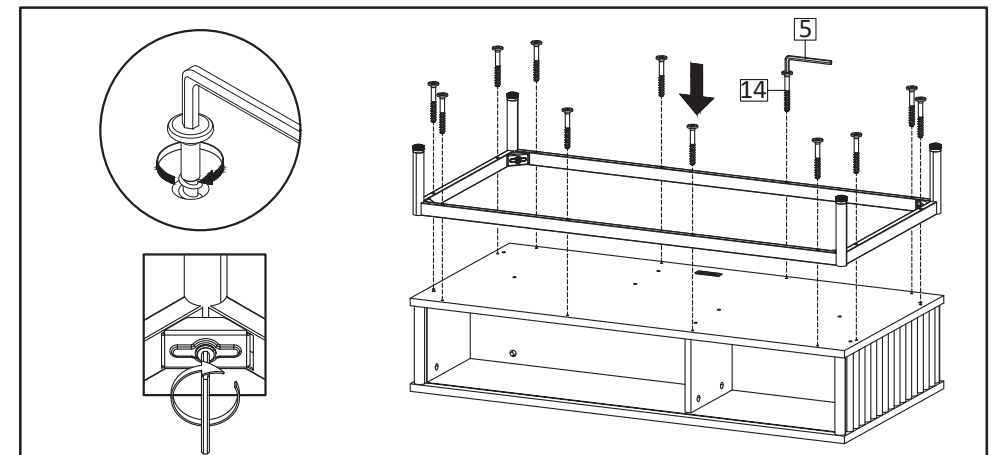

STEP8: Install assembled leg unit from Step 7 onto main assembled unit by inserting Screw (HW14). Tighten with Allen Key (HW5). Then tighten all the Screw on the assembled leg unit.

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

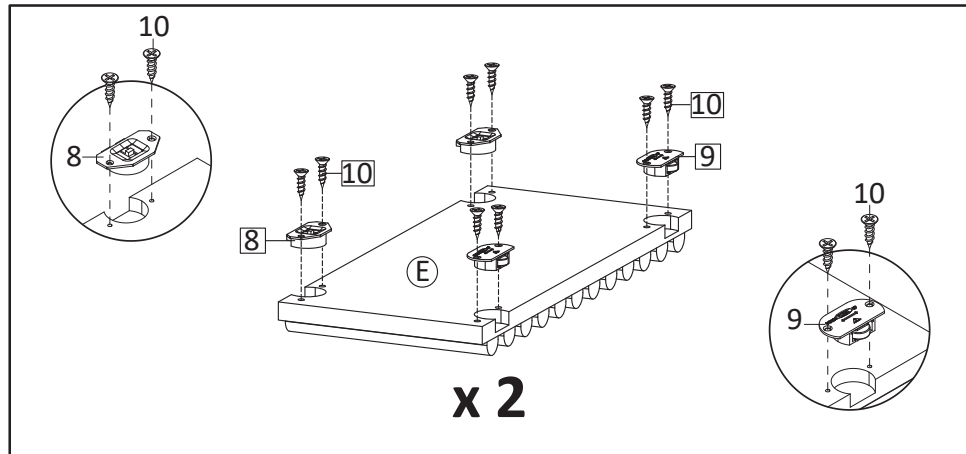

STEP9: Insert Sliding Top (HW8) and Sliding Bottom (HW9) using Screw M3.5x13mm (HW10) into Door (E). Tighten with a screwdriver.

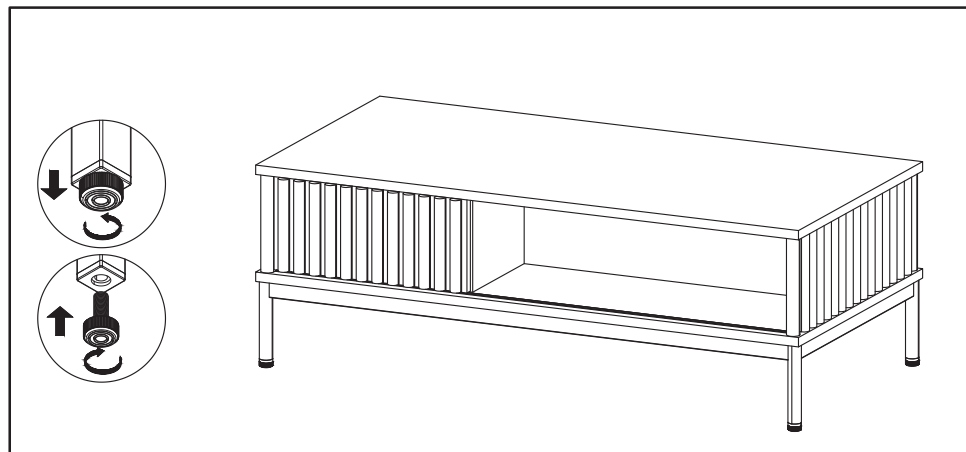

STEP11: Place your furniture on level floor. The legs come with adjustable leveller, adjust it as needed until your furniture sit steady on the floor. Assembly is complete.

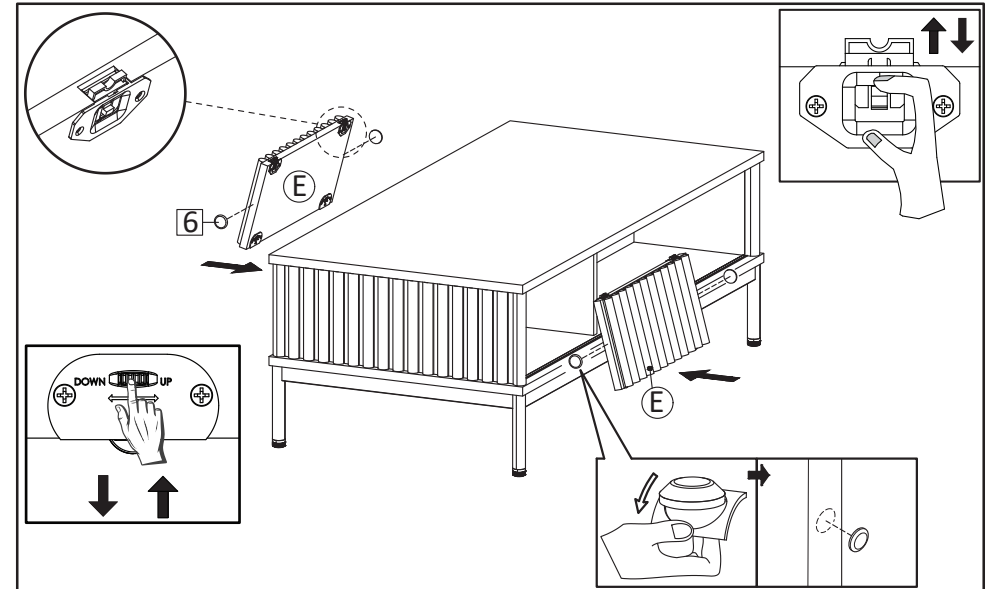

Step10: Peel the back paper of Bumper (HW6) then 2 pcs on Door, position as shown in the figure. Slide in the doors and insert the Sliding Top (HW8) pin into the groove. Position the Sliding Bottom (HW9) into the groove. Once all in the right position, release the button on Sliding Roller. Adjust gap of the door, by scroll the button on Sliding Roller (HW9). Follow the down and up direction.