

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com


PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 30 minutes.
- * Tools Required for Assembly (included): Allen Key, Screwdriver, Drill, Wooden hammer.

CARE AND MAINTENANCE

Dust regularly with a soft, dry cloth. Never use oiled or treated cloths on lacquered finishes. Some finishes can be wiped with a damp (not wet) cloth, followed at once by rubbing with a dry cloth to remove fingerprints and smudges. For persistent spots, gently clean with a soft cloth and a solution of water and mild soap, make sure to wipe dry. Use adhesive felt pads, coasters and placemats to protect your furniture.

Part List and Hardware List

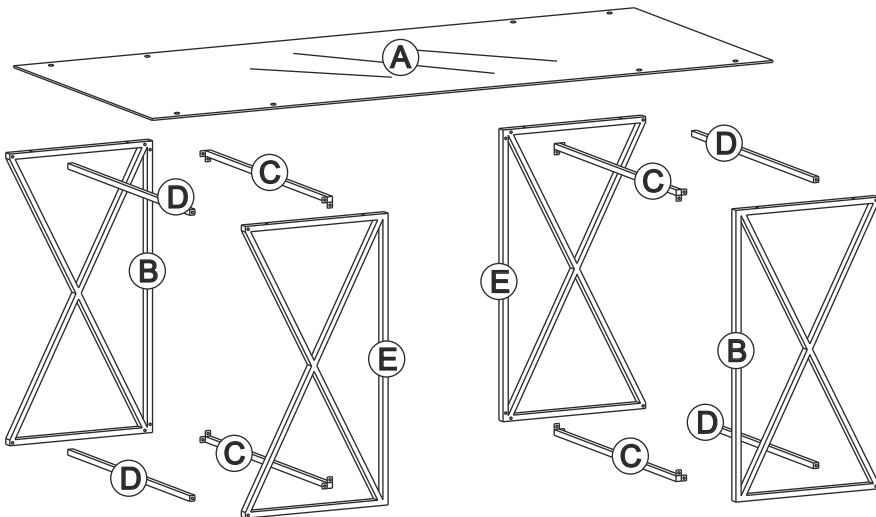


HW1x8 6x40mm	HW2x8 6x25mm	HW3x16 6x12mm	HW4x1 L-shaped bracket
HW5x2 4x40mm	HW6x2 4x40mm	HW7x2 4x40mm	HW8x10 4x40mm



Model# DSK2202A

Product Dimensions: 43.3"W×21.65"D×29.53"H

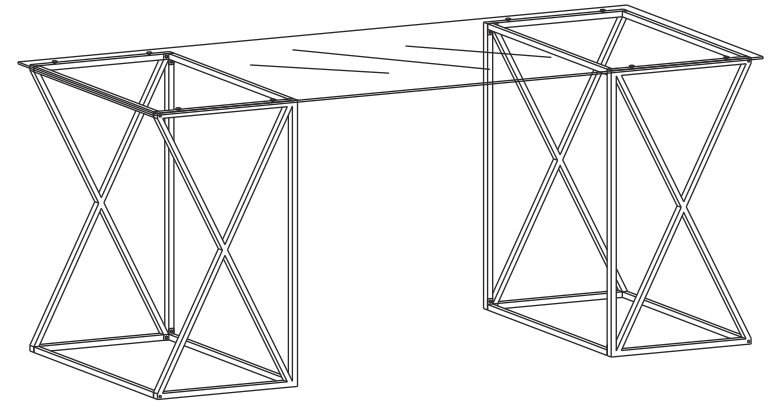

⚠ WARNING ⚠



Weight Capacity: 110 lbs.
Warning: Do not stand on Desk.
Warning: Do not over torque bolts.

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 30 minutes.
- * Tools Required for Assembly (included): Allen Key, Screwdriver, Drill, Wooden hammer.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com


1

Use the listed HW①, HW③ screws to install left leg and right leg.

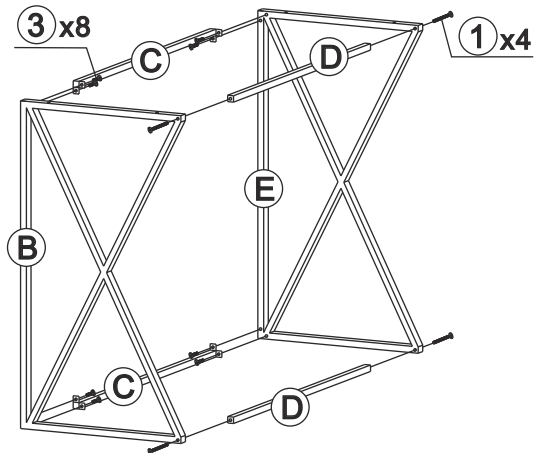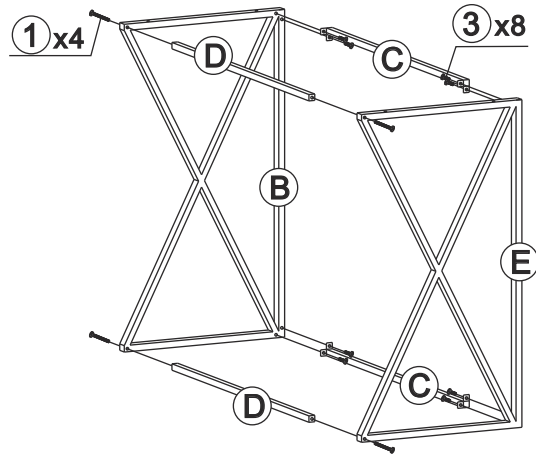

2

HW⑤ is the cloth strap of Anti-Tip Kit, while use the listed HW②, HW⑧ to install legs together with desk top, attach one end of HW⑤ under HW⑧ to install together.

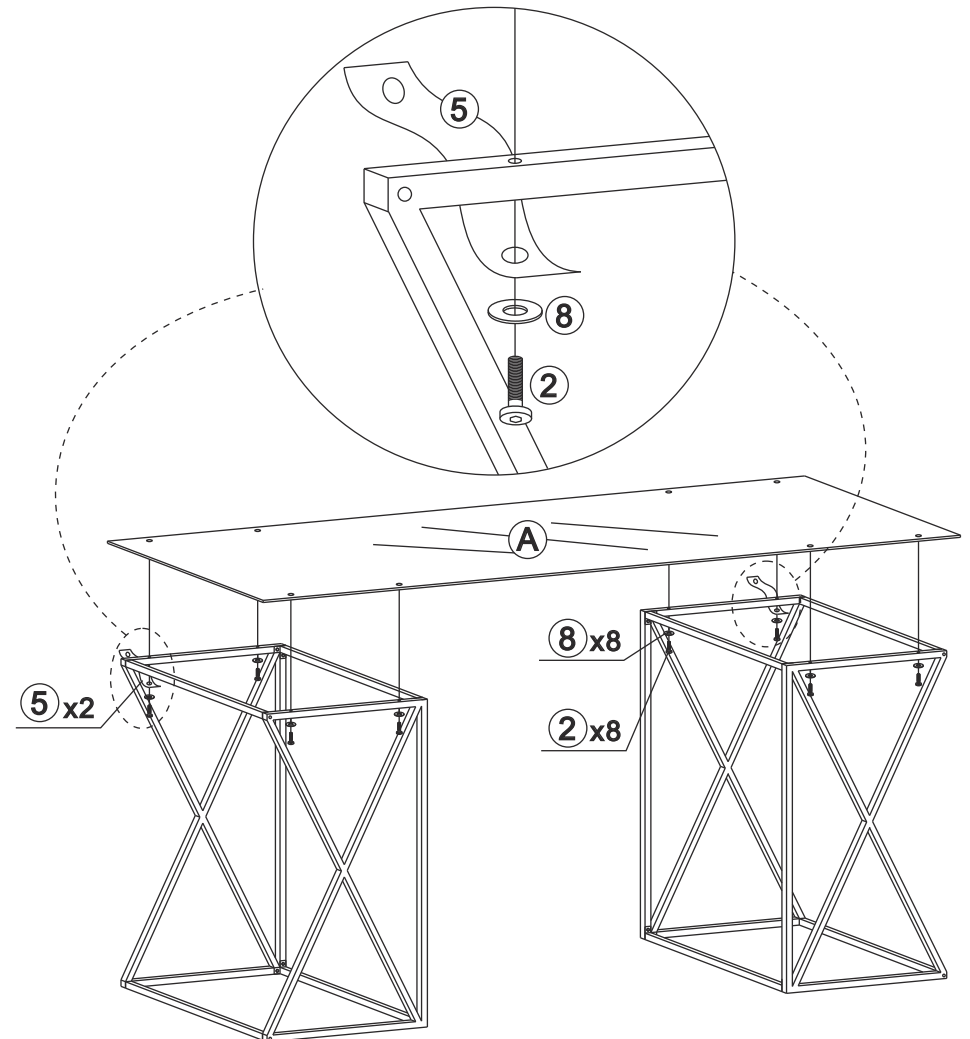

3

This step is to install another end of Anti-Tip Kit on the wall:
Mark the location on the wall, drill a 1/4 inch hole in the wall and insert the plastic screw HW⑦,
Attach another end of HW⑤ under the gasket HW⑧, using the long screw HW⑥ to install them.

