

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com


PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 40 minutes.
- * Tools Required for Assembly (included): Allen Key, Screwdriver, Wooden hammer.

CARE AND MAINTENANCE


Dust regularly with a soft, dry cloth. Never use oiled or treated cloths on lacquered finishes. Some finishes can be wiped with a damp (not wet) cloth, followed at once by rubbing with a dry cloth to remove fingerprints and smudges. For persistent spots, gently clean with a soft cloth and a solution of water and mild soap, make sure to wipe dry. Use adhesive felt pads, coasters and placemats to protect your furniture.

Part List and Hardware List

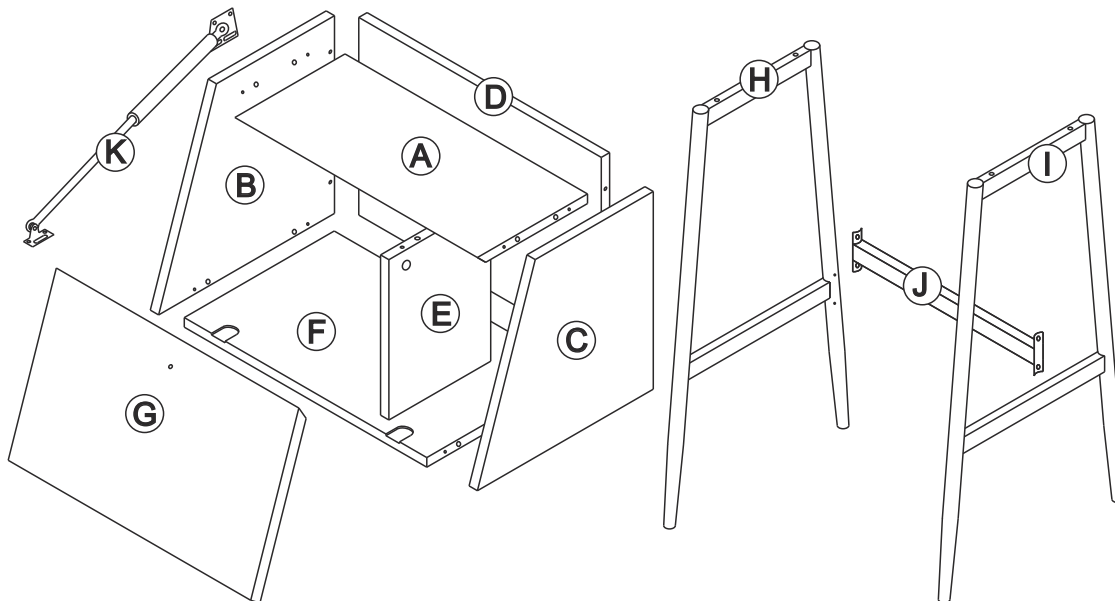



Model# DSK2203B

Product Dimensions: 22.0W"×15.0"D×44.5"H

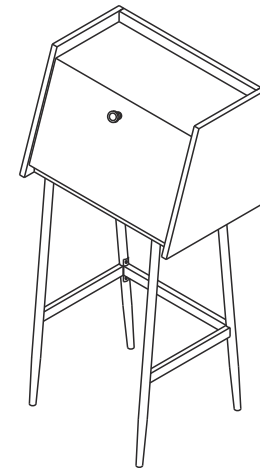

⚠ WARNING ⚠

Weight Capacity: 35 lbs.
Warning: Do not stand on Desk.
Warning: Do not over torque bolts.

HW1x4  6x40mm	HW2x4  6x12mm	HW3x14 	HW4x14 	HW5x16 	HW6x2 
HW7x2 	HW8x12  3.5x12mm	HW9x1 	HW10x1 	HW11x1 	HW12x8  4x16mm
HW13x1  4x40mm	HW14x1 	HW15x2 	HW16x1 		

Part List & HW List


Piece	Description	Qty
A	Top Board	1
B	Side Board Left	1
C	Side Board Right	1
D	Side Board Back	1
E	Middle Board	1
F	Bottom Board	1
G	Door Board	1
H	Leg Left	1
I	Leg Right	1
J	Rod	1
K	Buffer Spring	1

Piece	Description	Qty
HW1	Screw M6 x 40 mm	4
HW2	Screw M6 x 12 mm	4
HW3	Cambolt M6 x 45 mm	14
HW4	Camlock	14
HW5	Dowel	16
HW6	Screw M5 x 45 mm	2
HW7	Hingle	2
HW8	Screw M3.5 x 12 mm	12
HW9	Handle	1
HW10	Screw M4 x 25 mm	1
HW11	Allen Key	1
HW12	Screw M4 x 16 mm	8
HW13	Screw M4 x 40 mm	1
HW14	Cloth Strap	1
HW15	Washer	2
HW16	Plastic Screw Anchor	1


PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 40 minutes.
- * Tools Required for Assembly (included): Allen Key, Screwdriver, Wooden hammer.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com


1 Install HW③ on part ①.

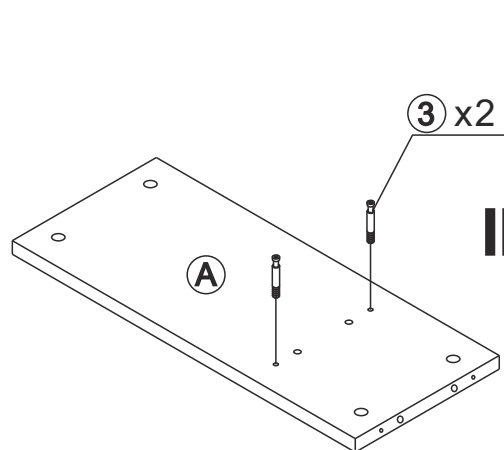




Insert HW⑤ in part ①, insert HW④ in part ②.
Fasten HW④ to install ① and ② together.

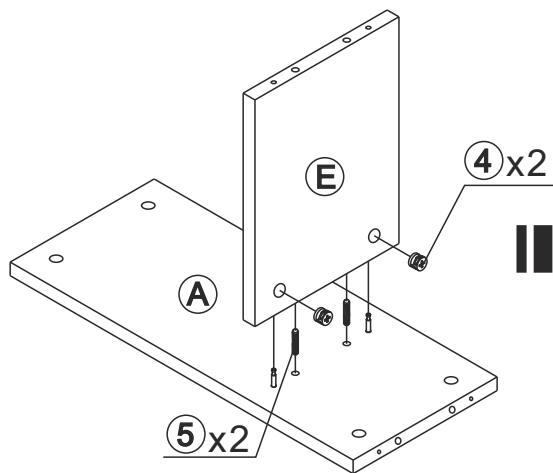



Insert HW⑤ in part ②.
Use HW⑥ to install ② and ③ together.

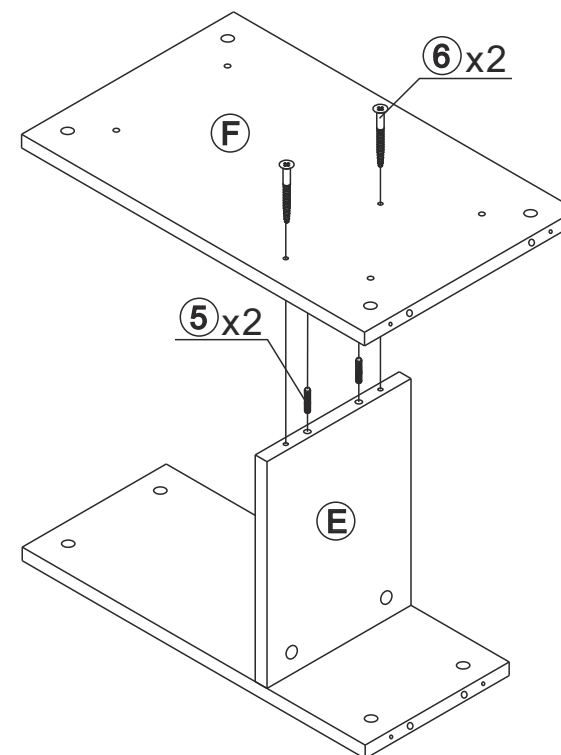

2 Install HW③ on part ④, ⑤.

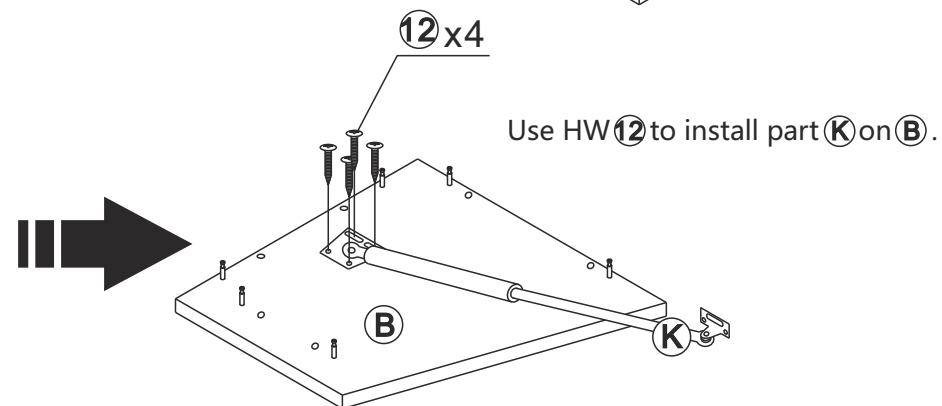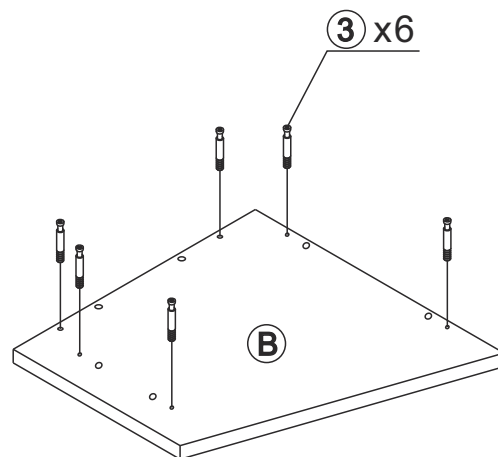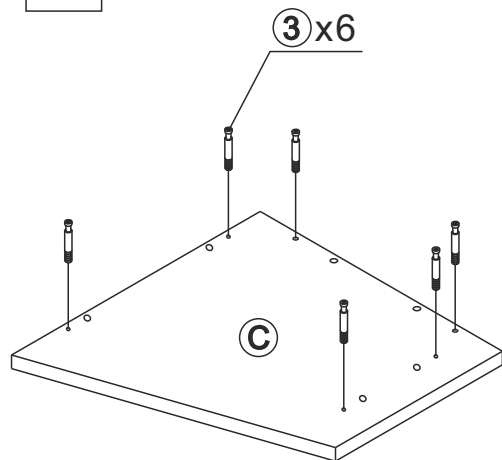


3 Insert HW④ in part ②, ③, insert HW⑤ in part ①, ②, ③.
Attach part ②, ③ to ①, ②, ③, fasten HW ④ to install them together.

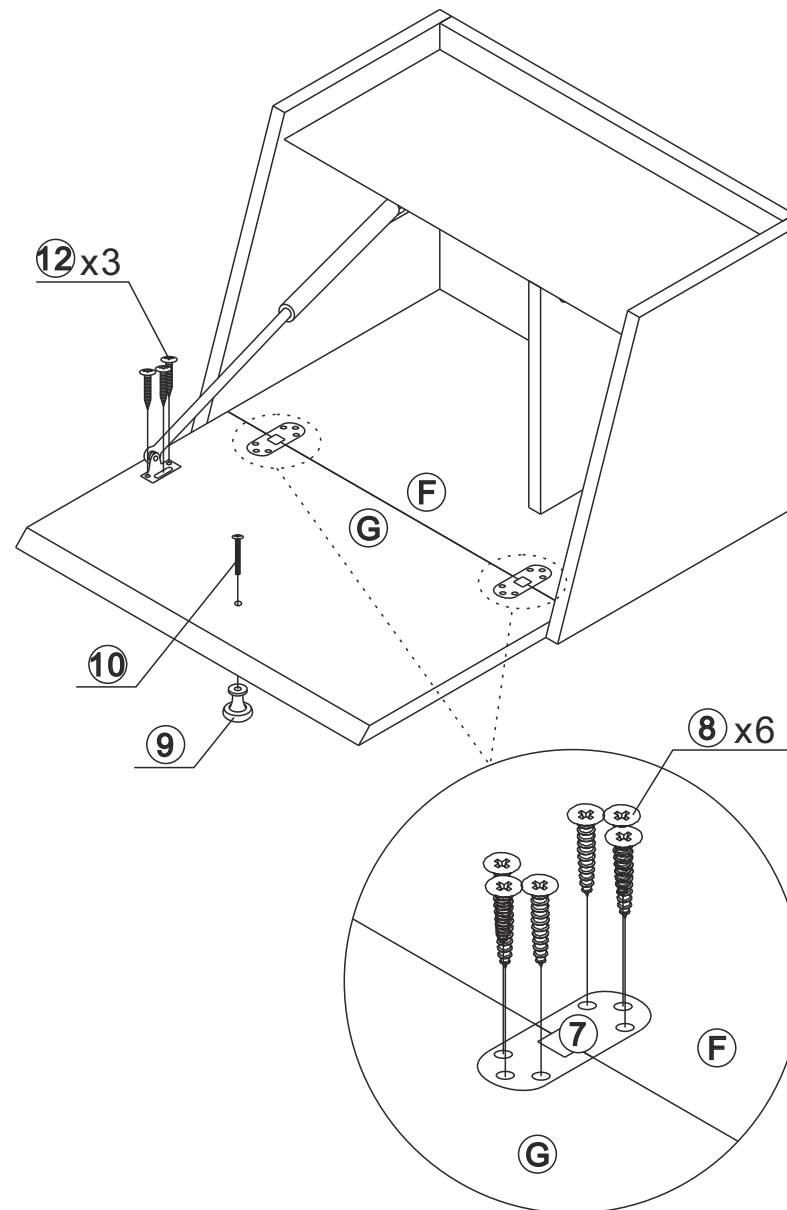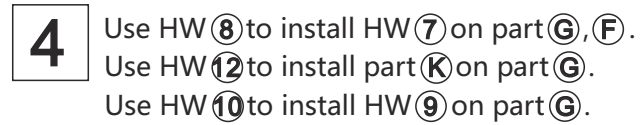


5

Use HW ② to install part ④, ① and ② together.

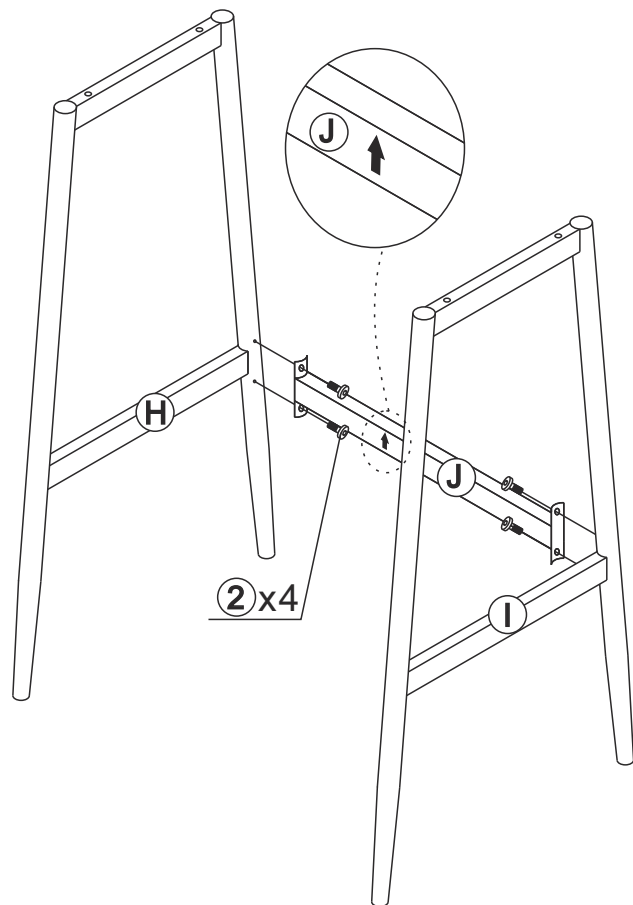

6


Use HW ① to install part ①, ④ and ③ together.

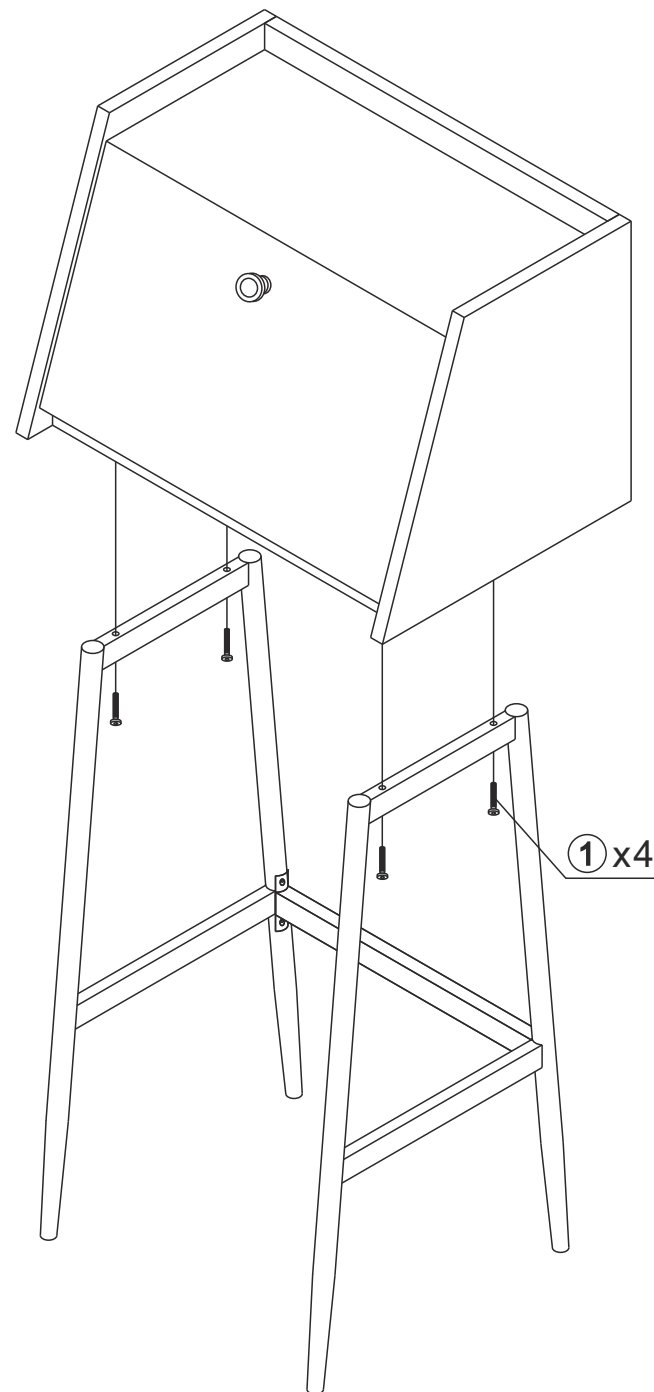

Step 7&8 are for Anti-Tip Kit install.

7

Use HW 12, 15 to install one end of HW 14 on part D.

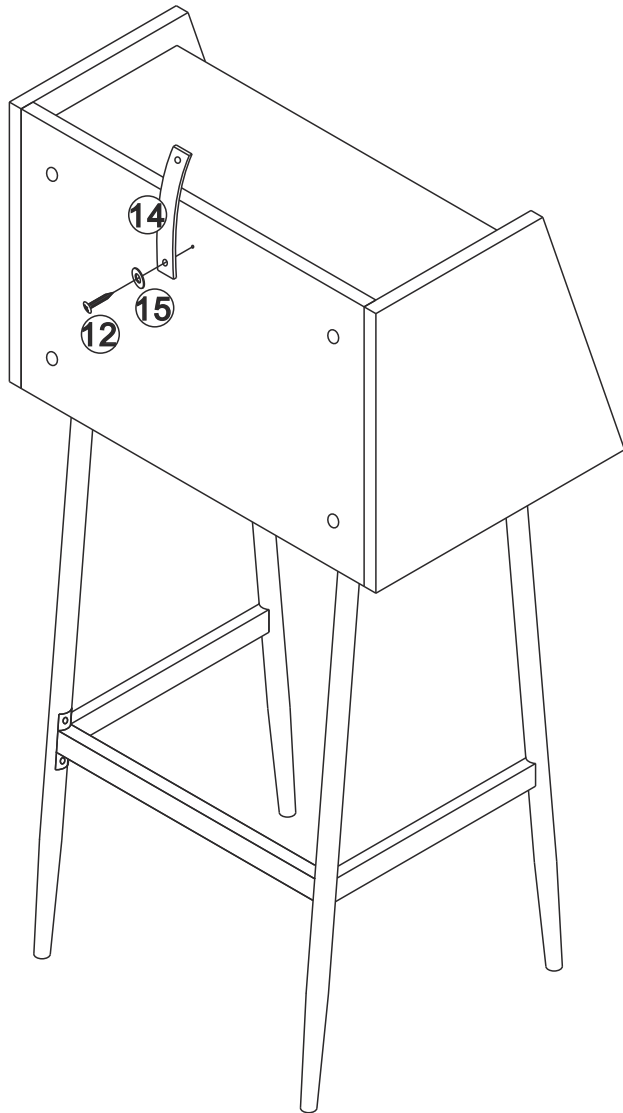

8

Drill a 1/4 inch hole in the wall and insert HW 16.
Use HW 15, 13 to install another end of HW 14 on wall.

