

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 50 minutes.
- * Tools Required for Assembly: Allen Key, Screwdriver, Wooden hammer.


CARE AND MAINTENANCE

Dust regularly with a soft, dry cloth. Never use oiled or treated cloths on lacquered finishes. Some finishes can be wiped with a damp (not wet) cloth, followed at once by rubbing with a dry cloth to remove fingerprints and smudges. For persistent spots, gently clean with a soft cloth and a solution of water and mild soap, make sure to wipe dry. Use adhesive felt pads, coasters and placemats to protect your furniture.




Model# DSK2206A

Product Dimensions: 43.3"W×21.65"D×28.75"H

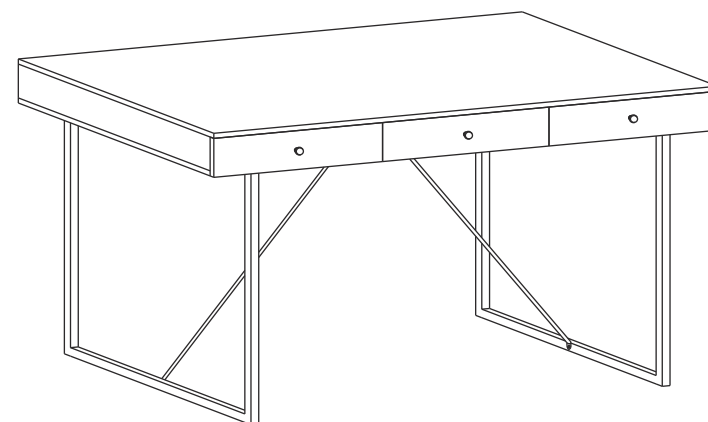





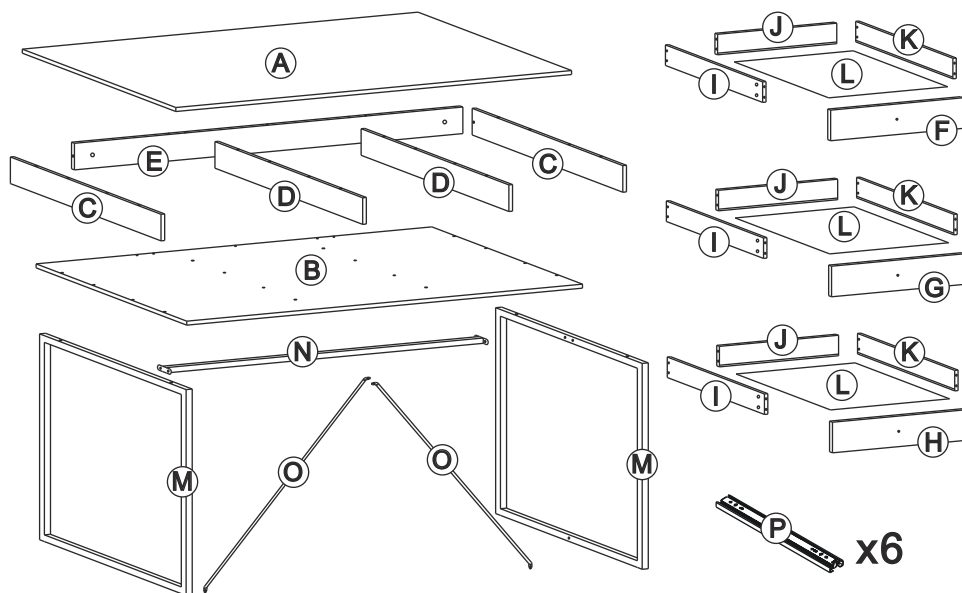








Part List and Hardware List



⚠ WARNING ⚠

Weight Capacity: 70 lbs.
Warning: Do not stand on Desk.
Warning: Do not over torque bolts.

HW1x1 	HW2x24  3.5x12mm	HW3x10  6x85mm	HW4x4  6x32mm	HW5x7  6x12mm
HW6x3 	HW7x3  4x20mm	HW8x22  Ø7.8x30mm	HW9x2  6x45mm	HW10x2  Ø15
HW11x12  4x35mm	HW12x12  6x27mm	HW13x12  Ø12		

Part List & HW List


Piece	Description	Qty
A	Top Board	1
B	Bottom Board	1
C	Side Board	2
D	Middle Board	2
E	Back Board	1
F	Left Drawer Front Board	1
G	Middle Drawer Front Board	1
H	Right Drawer Front Board	1
I	Drawer Side Board Left	3
J	Drawer Back Board	3
K	Drawer Side Board Right	3
L	Drawer Bottom Board	3
M	Leg	2
N	Leg Rod Big	1
O	Leg Rod Small	2
P	Slide Rail	6

Piece	Description	Qty
HW1	Allen Key	1
HW2	Screw M3.5 x 12 mm	24
HW3	Screw M6 x 85 mm	10
HW4	Screw M6 x 32 mm	4
HW5	Screw M6 x 12 mm	7
HW6	Handle	3
HW7	Screw M4 x 20 mm	3
HW8	Dowel	22
HW9	Cambolt M6 x 45 mm	2
HW10	Camlock Big	2
HW11	Screw M4 x 35 mm	12
HW12	Cambolt M6 x 27 mm	12
HW13	Camlock Small	12


PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 50 minutes.
- * Tools Required for Assembly: Allen Key, Screwdriver, Wooden hammer.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com


- 1** Press down and pull away.

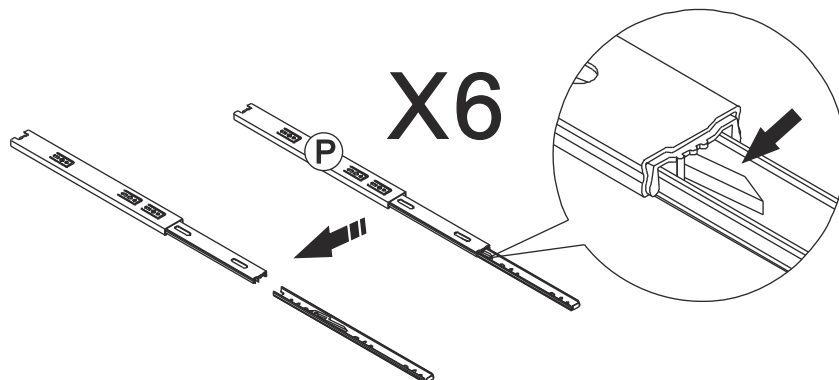


- 2** Use HW ② to install the big piece of part ① on ③, Install HW ⑨ on part ③.

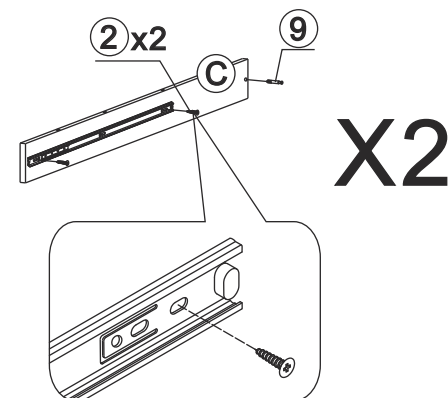


- 3** Use HW ② to install the big piece of part ① on both sides of part ④.

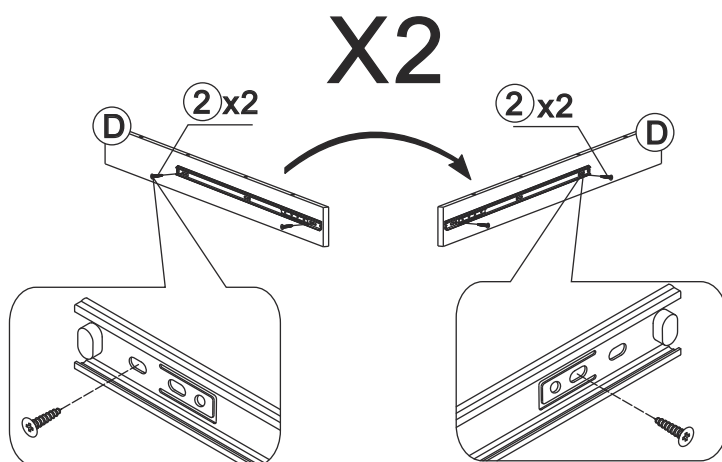


- 4** Insert HW ⑩ in part ⑤, attach part ③ to ⑤, Fasten HW ⑩ to install them together.

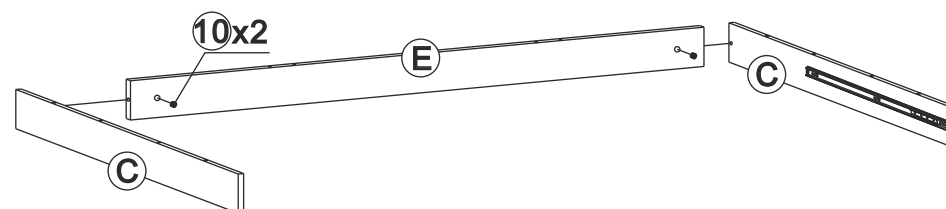


- 5** Insert HW ⑧ in part ①, install part ③, ⑤ and ① together.

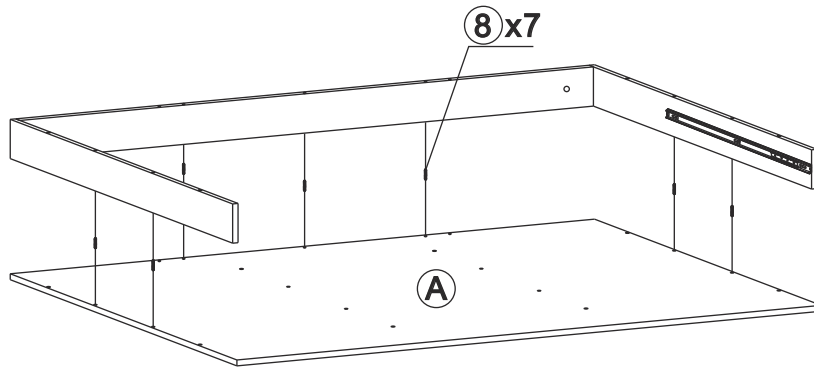


- 6** Insert HW ⑧ in part ①, install part ④ and ① together.

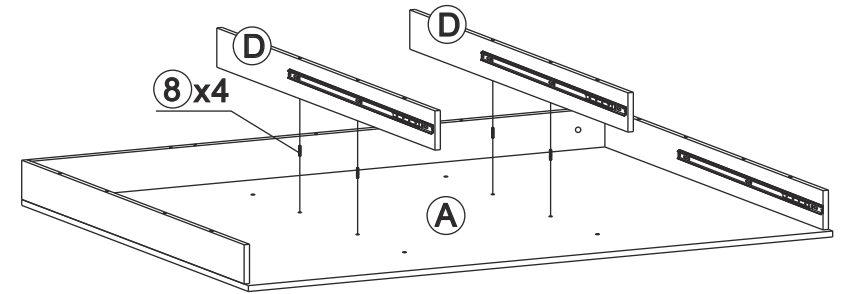

- 7** Insert HW ⑧ in part ③, ④, ⑤, attach to part ②, Use HW ③ to install them together.

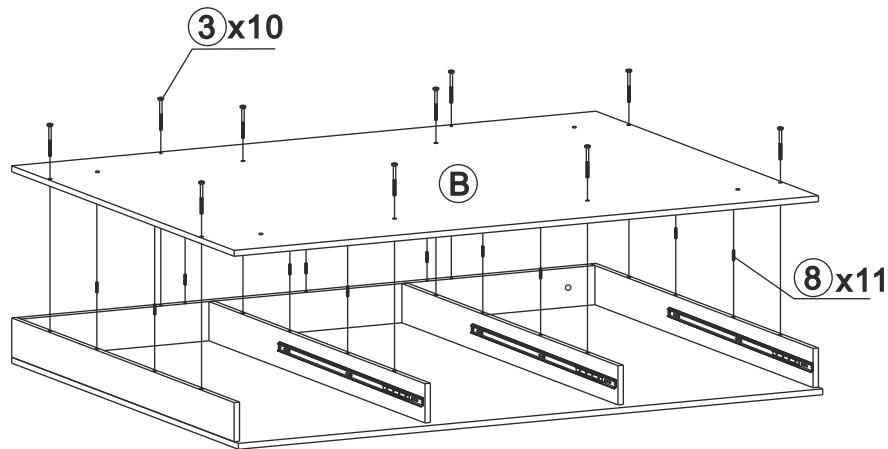


- 8** Use HW ⑤ to install part ⑥ and ⑦ together.

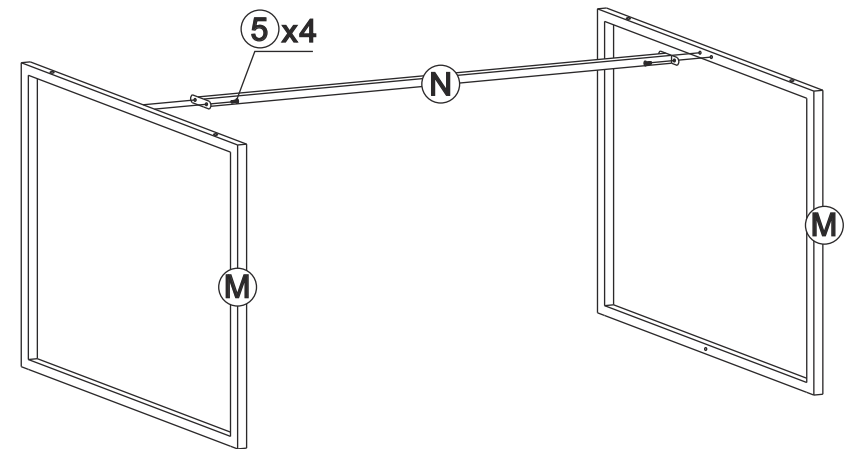


9

Use HW⑤ to install part① on②,③.

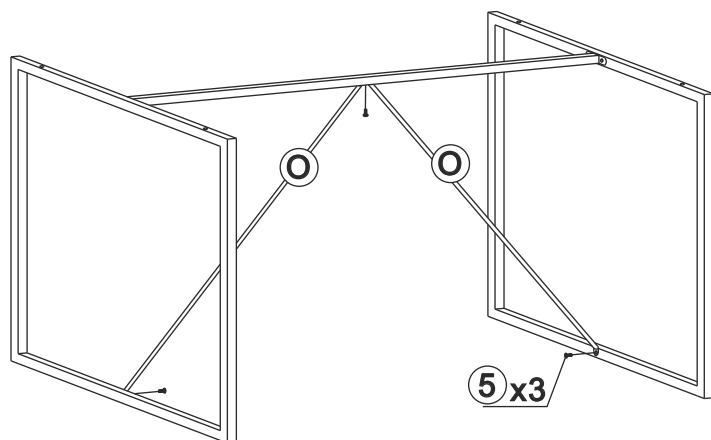




10

Use HW④ to install part④ on⑤.

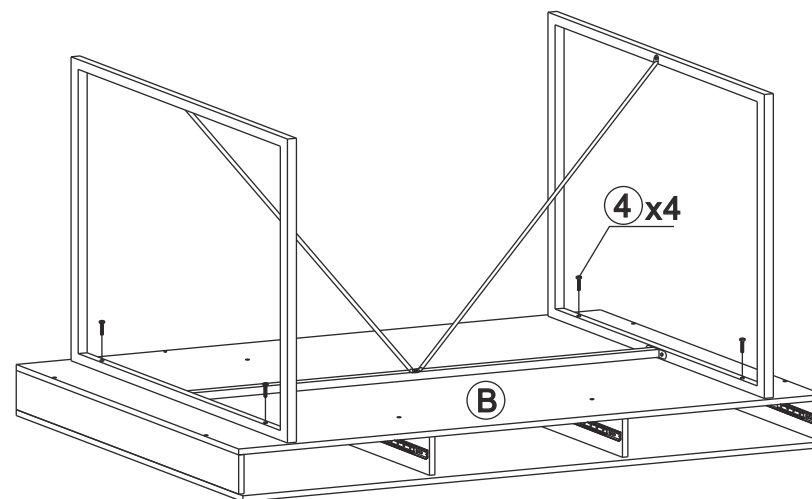



11

Install HW⑫ on part⑥,⑦,⑧.

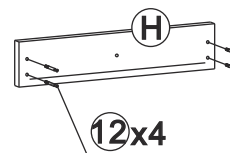
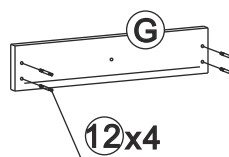
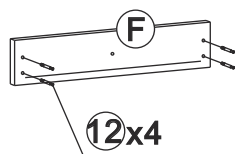


12




Use HW⑪ to install part⑨,⑩ and⑪ together,
Insert part⑬ in⑨,⑩,⑪ frame.

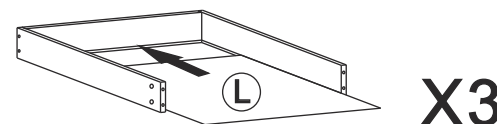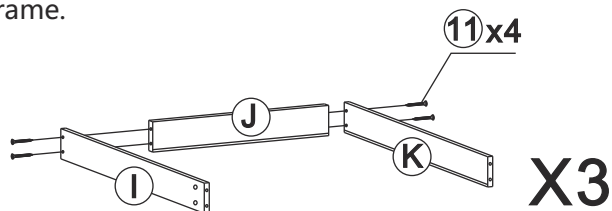


13 Insert HW 13 in part 1, K, attach part F, G, H to 1, K, Fasten HW 13 to install them.

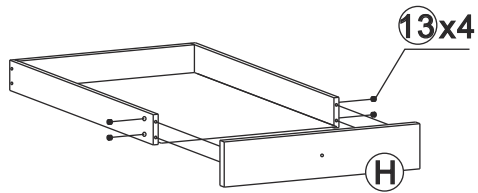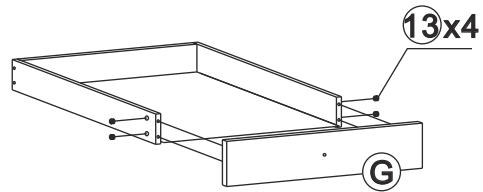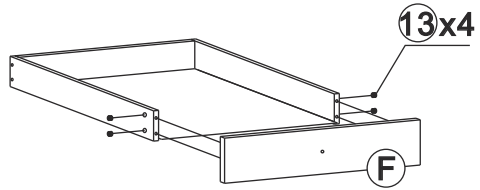

14 Use HW 2 to install the small piece of part P on 1, K, Use HW 7 to install HW 6 on part F, G, H.

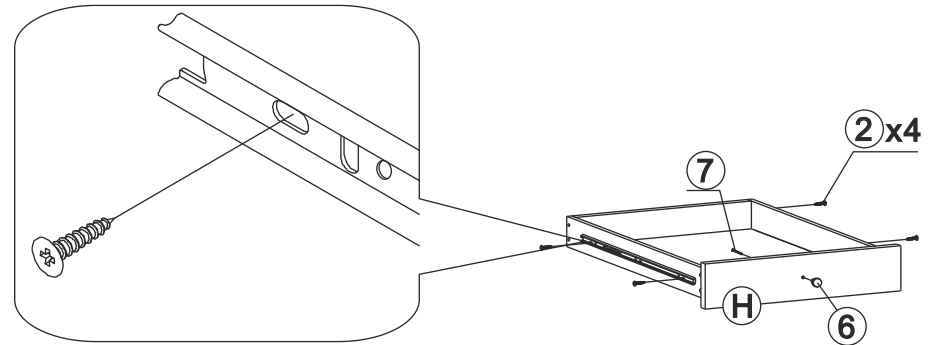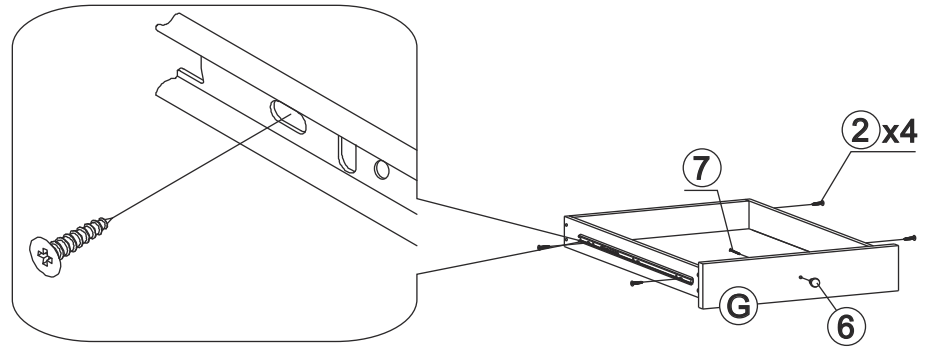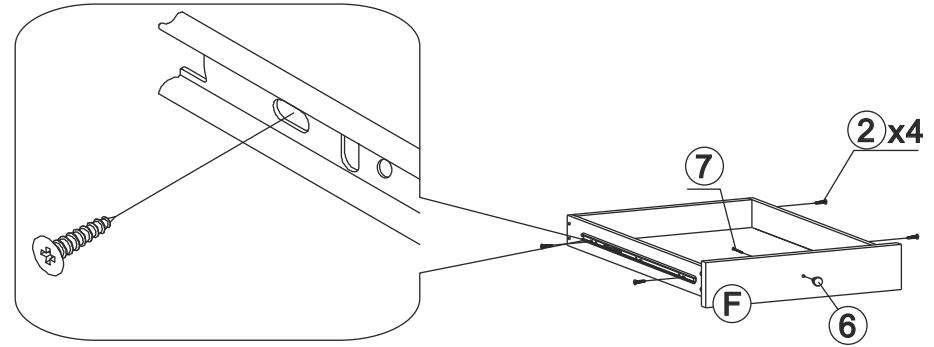

15 Insert drawers in desk.

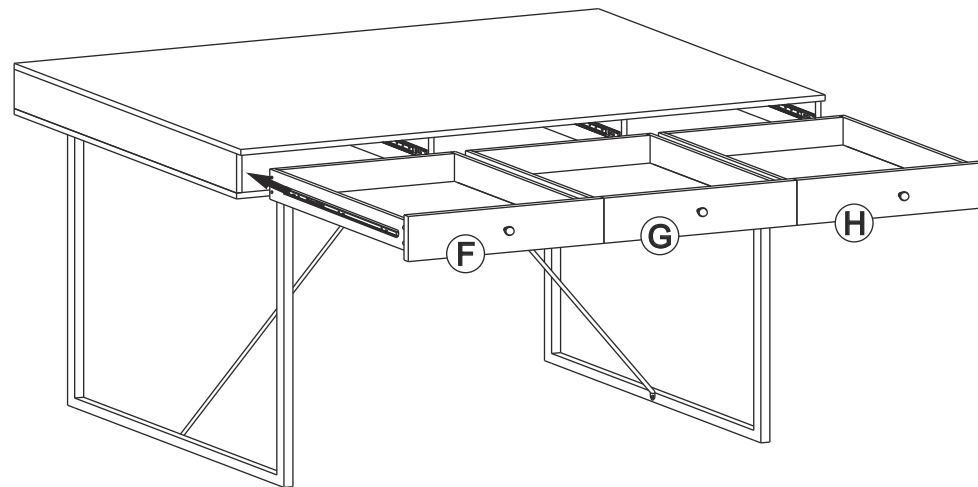

16 Finish.

