NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com


PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 50 minutes.
- * Tools Required for Assembly: Allen Key, Screwdriver, Wooden hammer.

CARE AND MAINTENANCE

Dust regularly with a soft, dry cloth. Never use oiled or treated cloths on lacquered finishes. Some finishes can be wiped with a damp (not wet) cloth, followed at once by rubbing with a dry cloth to remove fingerprints and smudges. For persistent spots, gently clean with a soft cloth and a solution of water and mild soap, make sure to wipe dry. Use adhesive felt pads, coasters and placemats to protect your furniture.

Part List and Hardware List

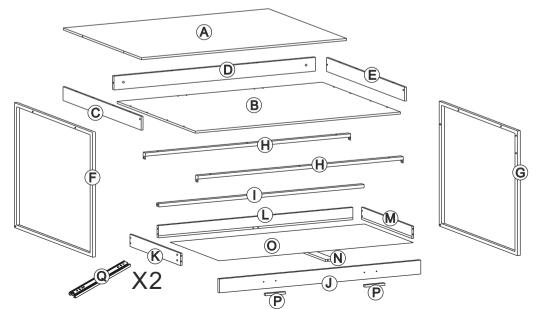



Model# DSK2209

Product Dimensions: 43.3"W×21.7"D×29.5"H



△WARNING △

Weight Capacity: 70 lbs. Warning:Do not stand on Desk. Warning:Do not over torque bolts.

HW1x1	HW2x8	HW3x6	HW4x2	HW5x2
	(\$)		(a) x	<u> </u>
	3.5x12mm	6x95mm	6x45mm	6x20mm
HW6x4	HW7x12	HW8x2	HW9x2	HW10x6
6x12mm		6x45mm		4x35mm
HW11x6	HW12x6	HW13x10	HW14x4	
6x27mm		4x25mm	5x50mm	

Part List & HW List

Piece	Description	Qty
Α	Top Board	1
В	Bottom Board	1
С	Side Board Left	1
D	Back Board	1
E	Side Board Right	1
F	Leg Left	1
G	Leg Right	1
Н	Support Rod	2
I	Leg Rod	1
J	Drawer Front Board	1
K	Drawer Side Board Left	1
L	Drawer Back Board	1
М	Drawer Side Board Right	1
N	Drawer Support Board	1
0	Drawer Bottom Board	1
Р	Handle	2
Q	Slide Rail	2


Piece	Description	Qty
HW1	Allen Key	1
HW2	Screw M3.5 x 12 mm	8
HW3	Screw M6 x 95 mm	6
HW4	Screw M6 x 45 mm	2
HW5	Screw M6 x 20 mm	2
HW6	Screw M6 x 12 mm	4
HW7	Dowel	12
HW8	Cambolt M6 x 45 mm	2
HW9	Camlock Big	2
HW10	Screw M4 x 35 mm	6
HW11	Cambolt M6 x 27mm	6
HW12	Camlock Small	6
HW13	Screw M4 x 25 mm	10
HW13	Screw M5 x 50 mm	4

PREPARATION


- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 50 minutes.

Press down and pull away.


- * Tools Required for Assembly: Allen Key, Screwdriver, Wooden hammer.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

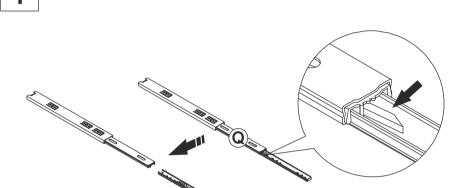



Use HW2 to install the big piece of part on on on, E, Install HW(8) on part(C),(E).

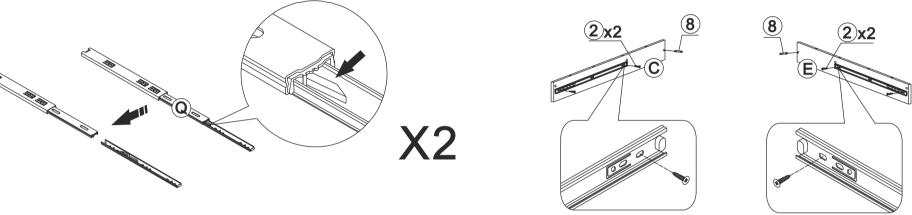


Insert HW 9 in part D, attach part C, E to D, Fasten HW(9) to install them together.




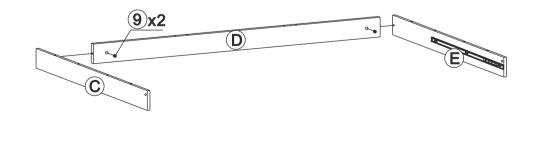

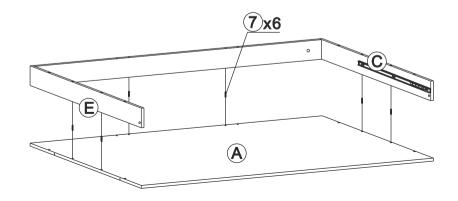


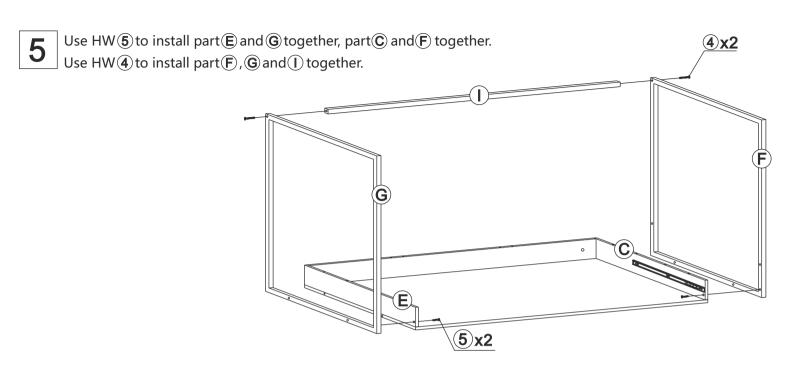


Insert HW(7) in part (C), (D), (E),
Use HW(3) to install part (B) and (C), (D), (E) together.

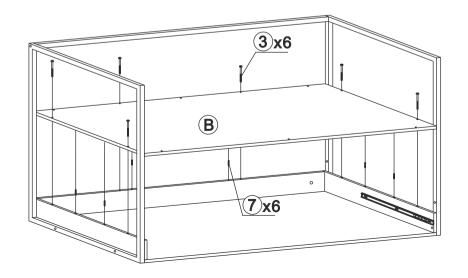


7 Use HW(3) to install part (H) on (B), Use HW(6) to install part (H) and (F), (G) together.

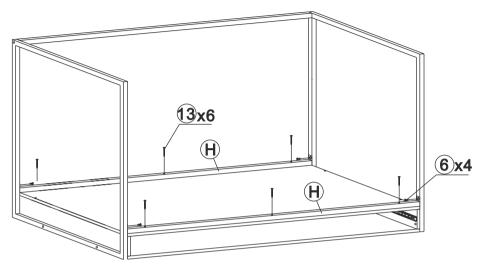



8 Install HW① on part③.




9 Use HW 10 to install part (K), (M), (N) and (L) together.

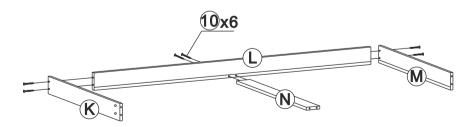





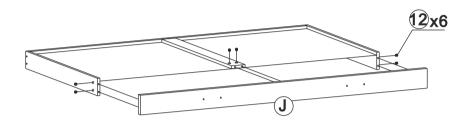

Use HW② to install the small piece of part Q on K,M, Use HW③ to install part P on J.

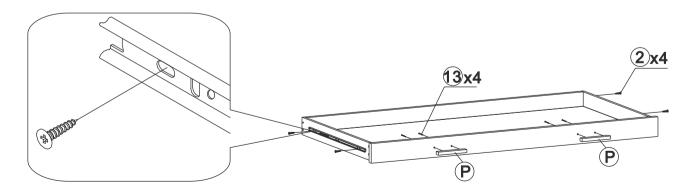



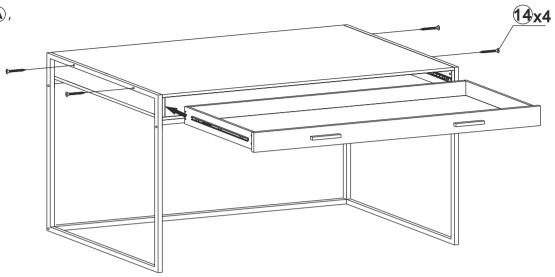

14 Finish.

