

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com






PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 30 minutes.
- * Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

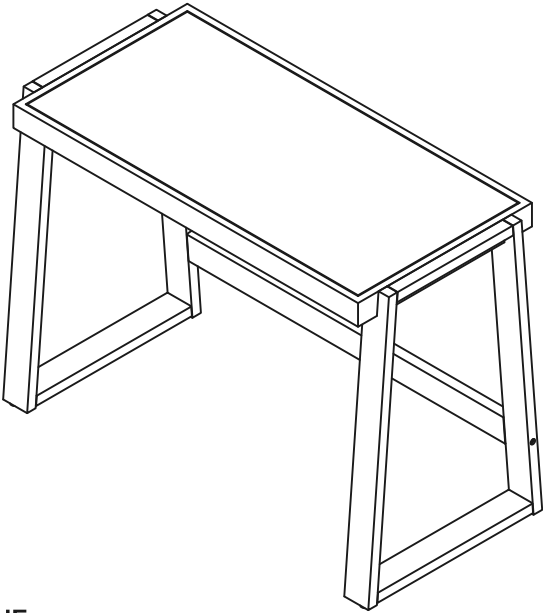
Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish.

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	TOP PANEL		1X
B	FRONT LEFT LEG		1X
C	BACK LEFT LEG		1X
D	FRONT RIGHT LEG		1X
E	BACK RIGHT LEG		1X
F	TOP SUPPORT LEG		2X
G	BOTTOM SUPPORT LEG		2X
H	STRETCHER		1X




Model# DSK5006
Product Dimensions: 42"W x 20"D x 30"H



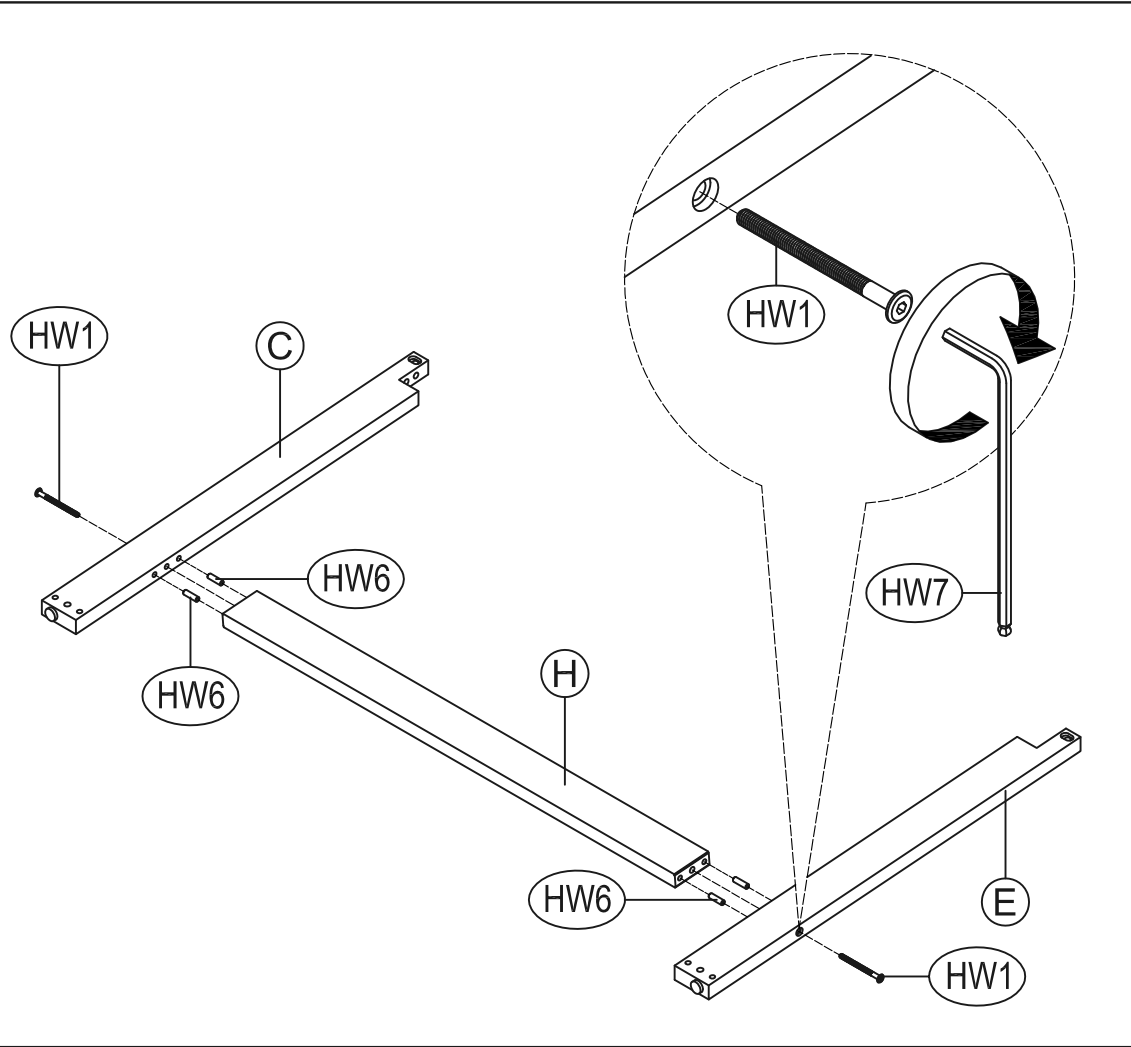
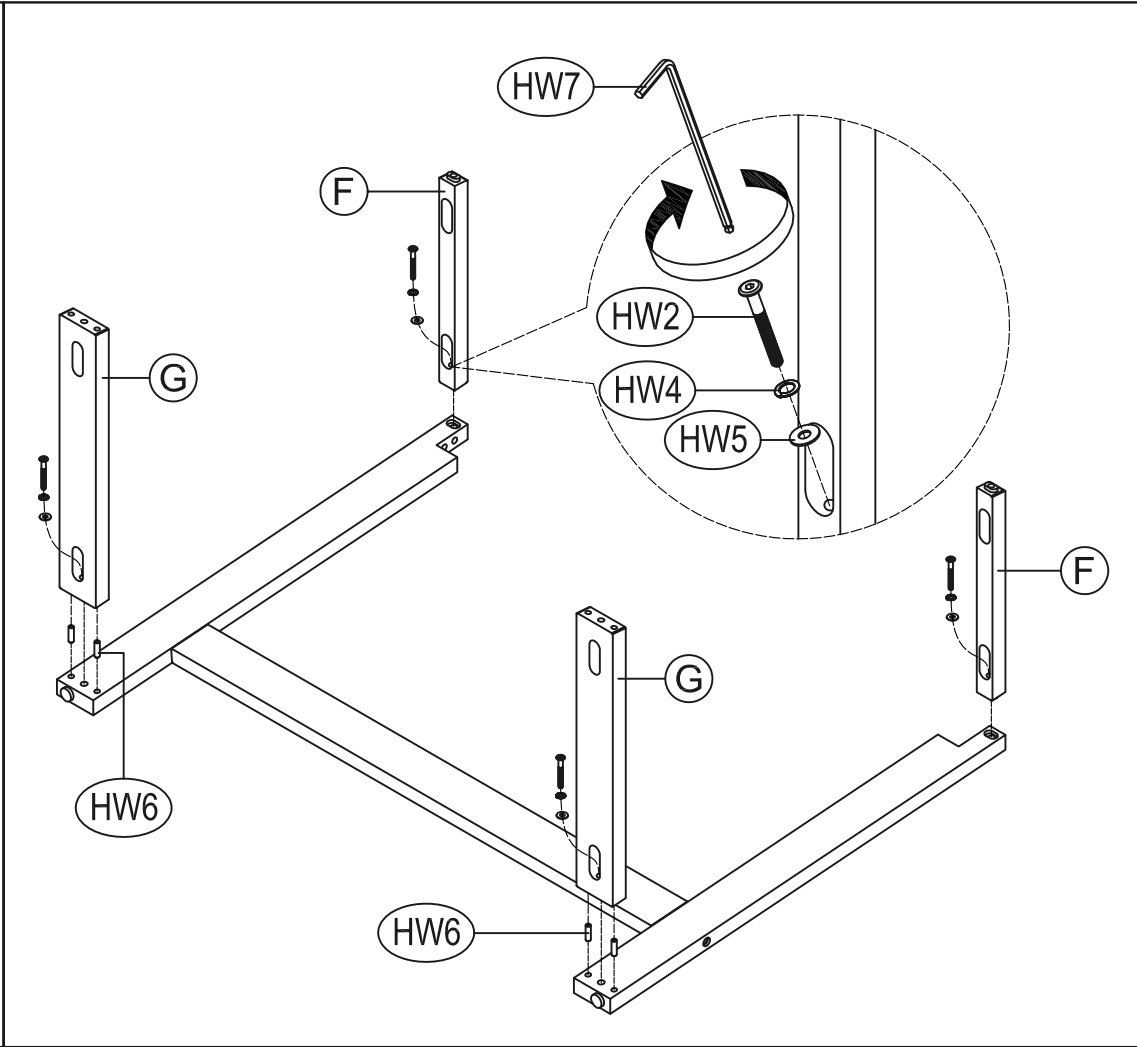
WEIGHT CAPACITY :
TOP : 100 LBS

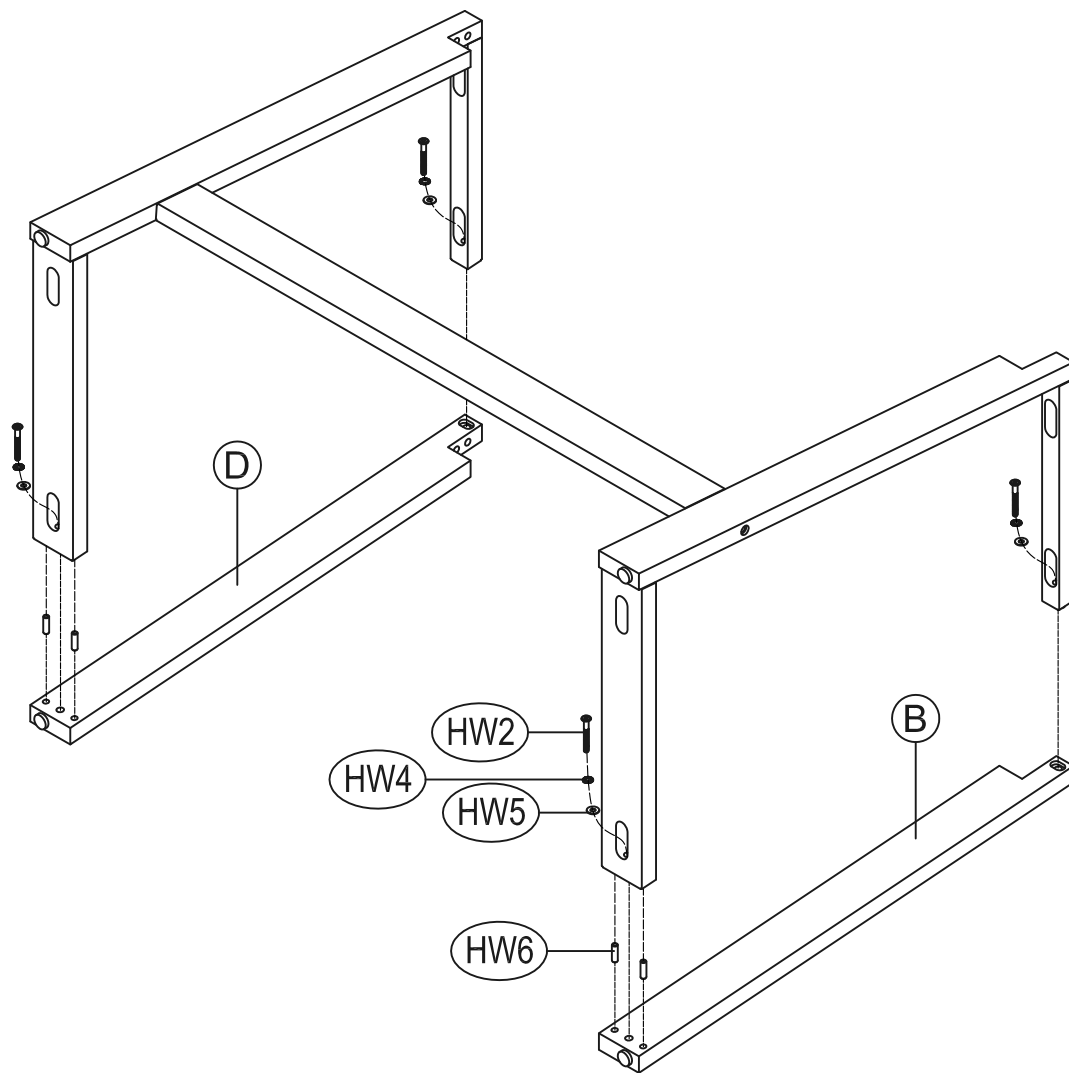
**WARNING: DO NOT OVER TORQUE
BOLTS/SCREWS**

PIECE	DESCRIPTION	PICTURE	QTY
HW1	80 MM BOLT	M6x80mm 	2X
HW2	50 MM BOLT	M6x50mm 	8X
HW3	35 MM BOLT	M6x35mm 	8X
HW4	SPRING WASHER		16X
HW5	FLAT WASHER		16X
HW6	DOWEL	Ø 8x28mm 	12X
HW7	ALLEN KEY		1X

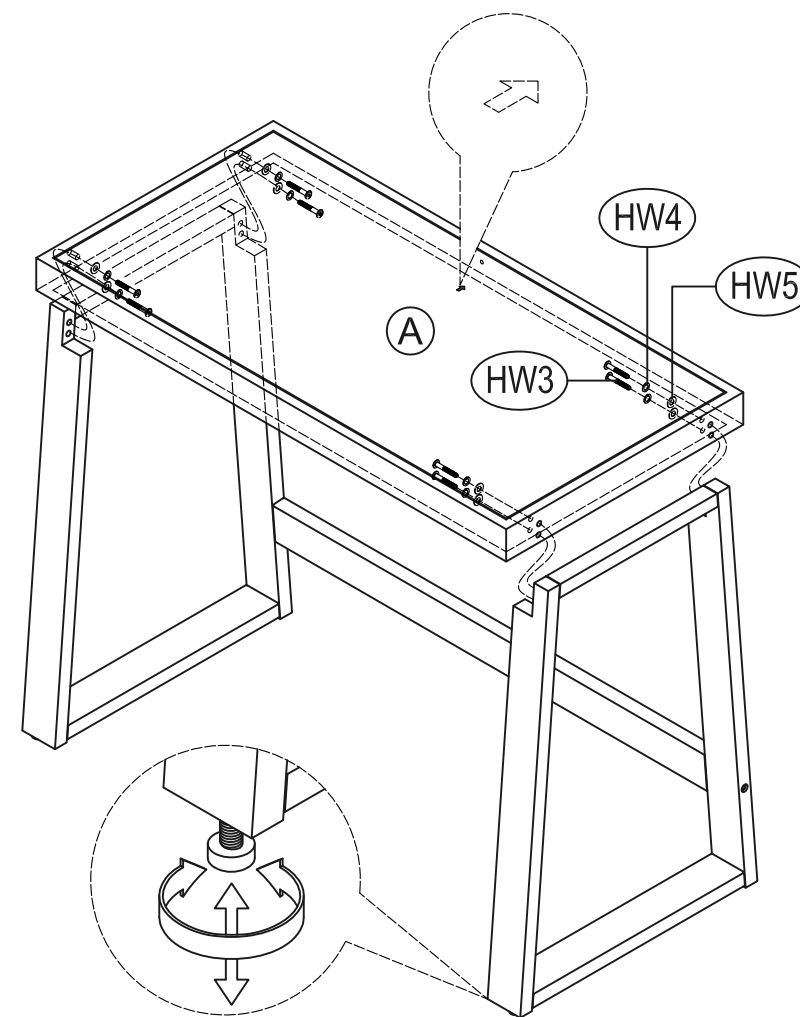
PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 30 minutes.
- * Tools Required for Assembly (included): Allen Key
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

 The diagram shows a perspective view of the assembly process. A long horizontal stretcher (H) is being joined to two angled back legs, labeled C (left) and E (right). Hardware HW1 (80 mm bolts) and HW6 (dowels) are shown being inserted into the legs and the stretcher. A circular inset provides a close-up of an Allen key (HW7) being used to tighten a bolt (HW1) on the stretcher.	 The diagram shows a perspective view of the assembly process. Two vertical support legs, labeled F (top) and G (bottom), are being attached to the main frame. Hardware HW2 (50 mm bolts), HW4 (spring washers), HW5 (flat washers), and HW6 (dowels) are shown being inserted into the legs and the frame. A circular inset provides a close-up of an Allen key (HW7) being used to tighten a bolt (HW2) on the top support leg (F).
STEP 1 ATTACH BACK LEFT LEG (C) AND BACK RIGHT LEG (E) TO STRETCHER (H) USING 80 MM BOLTS (HW1) AND DOWELS (HW6). TIGHTEN THE BOLTS USING ALLEN KEY (HW7).	STEP 2 ATTACH TOP SUPPORT LEGS (F) TO UNIT USING 50 MM BOLTS (HW2), SPRING WASHERS (HW4) AND FLAT WASHERS (HW5). ATTACH BOTTOM SUPPORT LEGS (G) TO UNIT USING 50 MM BOLTS (HW2), SPRING WASHERS (HW4), FLAT WASHERS (HW5) AND DOWELS (HW6). TIGHTEN ALL THE BOLTS USING ALLEN KEY (HW7).



STEP 3 ATTACH UNIT TO FRONT LEFT LEG (B) AND FRONT RIGHT LEG (D) USING 50 MM BOLTS (HW2), SPRING WASHERS (HW4), FLAT WASHERS (HW5) AND DOWELS (HW6). TIGHTEN THE BOLTS USING ALLEN KEY (HW7).



STEP 4 ATTACH TOP (A) TO UNIT USING 35 MM BOLTS (HW3), SPRING WASHERS (HW4) AND FLAT WASHERS (HW5). TIGHTEN THE BOLTS USING ALLEN KEY (HW7). ADJUST THE ADJUSTER THAT HAS ALREADY BEEN ASSEMBLED TO THE LEGS TO STABILIZE YOUR UNIT.