

NOTICE

- \* Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- \* This item may require periodic tightening.
- \* If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

PREPARATION

- \* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- \* If any part is missing or damaged, do not attempt to assemble the product.
- \* Estimated Assembly Time: 30 minutes.
- \* Tools Required for Assembly : Allen Key (included), Phillips screwdriver (not included)

CARE AND MAINTENANCE


Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish.

Part List and Hardware List

| PIECE | DESCRIPTION        | PICTURE                                                                             | QUANTITY |
|-------|--------------------|-------------------------------------------------------------------------------------|----------|
| A     | TOP UNIT           |    | 1X       |
| B     | LEFT FRONT LEG     |    | 1X       |
| C     | RIGHT FRONT LEG    |    | 1X       |
| D     | LEFT BACK LEG      |  | 1X       |
| E     | RIGHT BACK LEG     |  | 1X       |
| F     | FRONT APRON        |  | 1X       |
| G     | BACK APRON         |  | 1X       |
| H     | SIDE STRETCHER     |  | 2X       |
| I     | BACK STRETCHER     |  | 1X       |
| HW1   | BOLT 6 x 1 x 55 MM |  | 6X       |
| HW2   | BOLT 6 x 1 x 40 MM |  | 18X      |
| HW3   | SPRING WASHER      |  | 24X      |
| HW4   | FLAT WASHER        |  | 24X      |
| HW5   | ALLEN KEY          |  | 1X       |
| HW6   | CAMBOLT            |  | 4X       |
| HW7   | CAMLOCK            |  | 4X       |
| HW8   | DOWEL              |  | 4X       |




Model# DSK5012  
Product Dimenions: 42" W x 20" D x 30" H

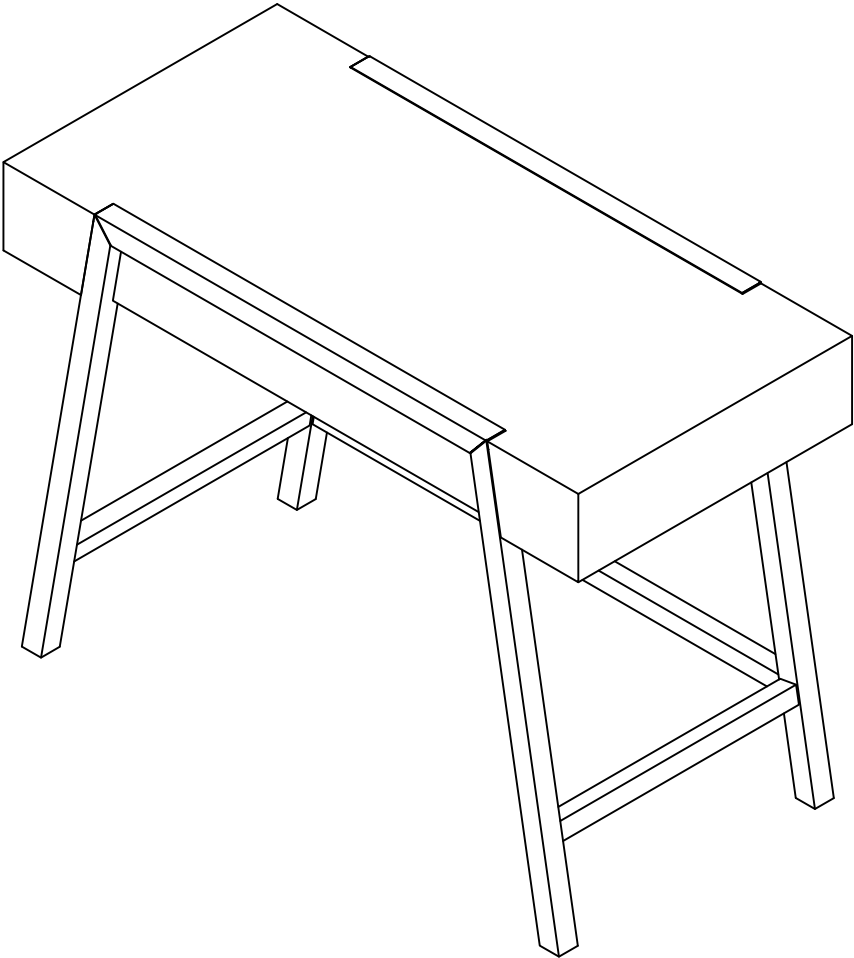


 **WARNING**   
WEIGHT CAPACITY: (TOP) 100 LBS; (DRAWER) 25 LBS  
WARNING: DO NOT STAND ON THE DESK  
WARNING: DO NOT OVER TORQUE NUTS/SCREWS

**PREPARATION**


- \* Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
- \* If any part is missing or damaged, do not attempt to assemble the product.
- \* Estimated Assembly Time: 30 minutes.
- \* Tools Required for Assembly : Allen Key (included), Phillips screwdriver (not included)
- \* If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

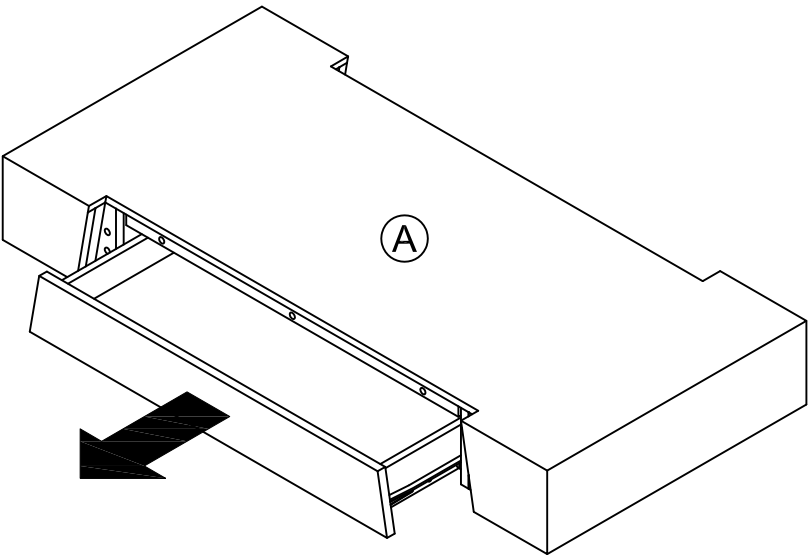


**STEP 1** PULL OUT THE DRAWER ASSEMBLY FROM TOP UNIT (A).

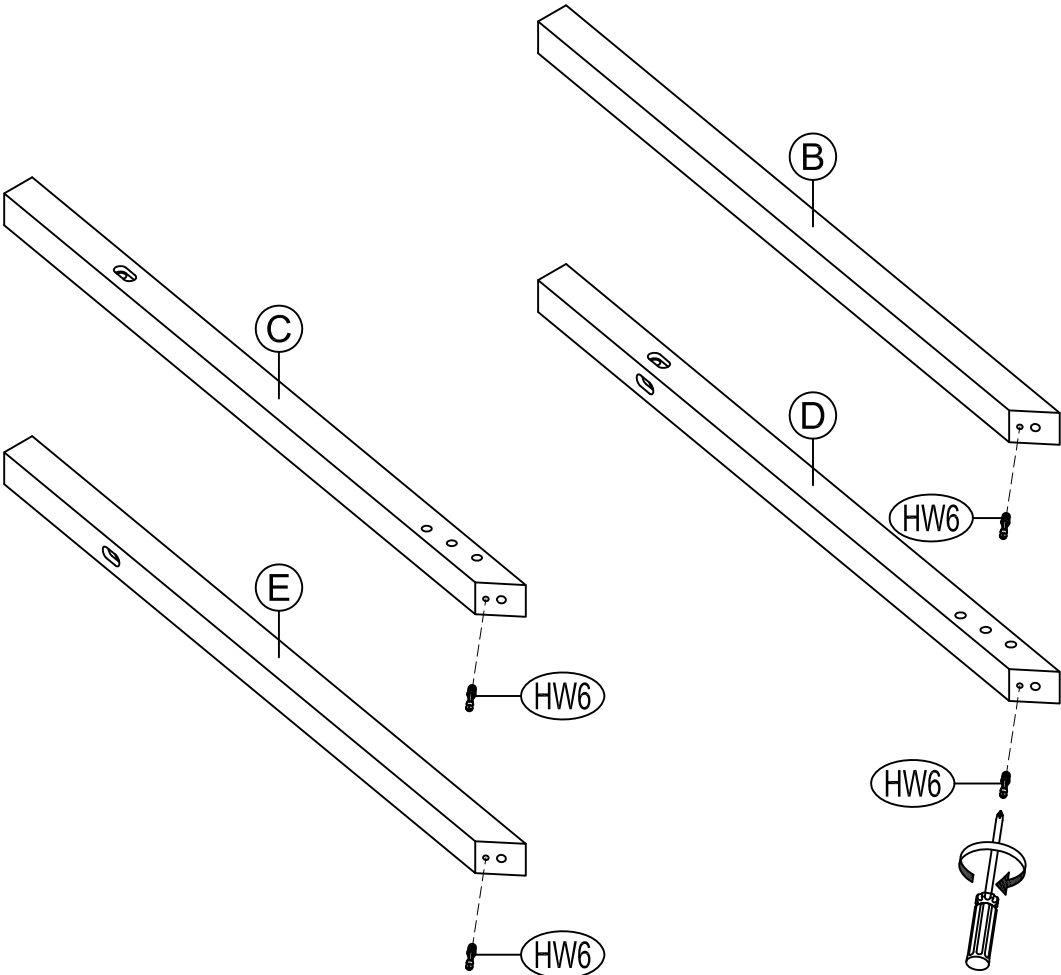


**STEP 2** INSERT CAMBOLTS (HW6) INTO PRE-DRILLED HOLES IN LEFT AND RIGHT FRONT LEGS (B AND C), LEFT AND RIGHT BACK LEGS (D AND E), THEN TIGHTEN. SCREW-IN CAMBOLTS (HW6) MUST BE SCREWED DOWN FLUSH.

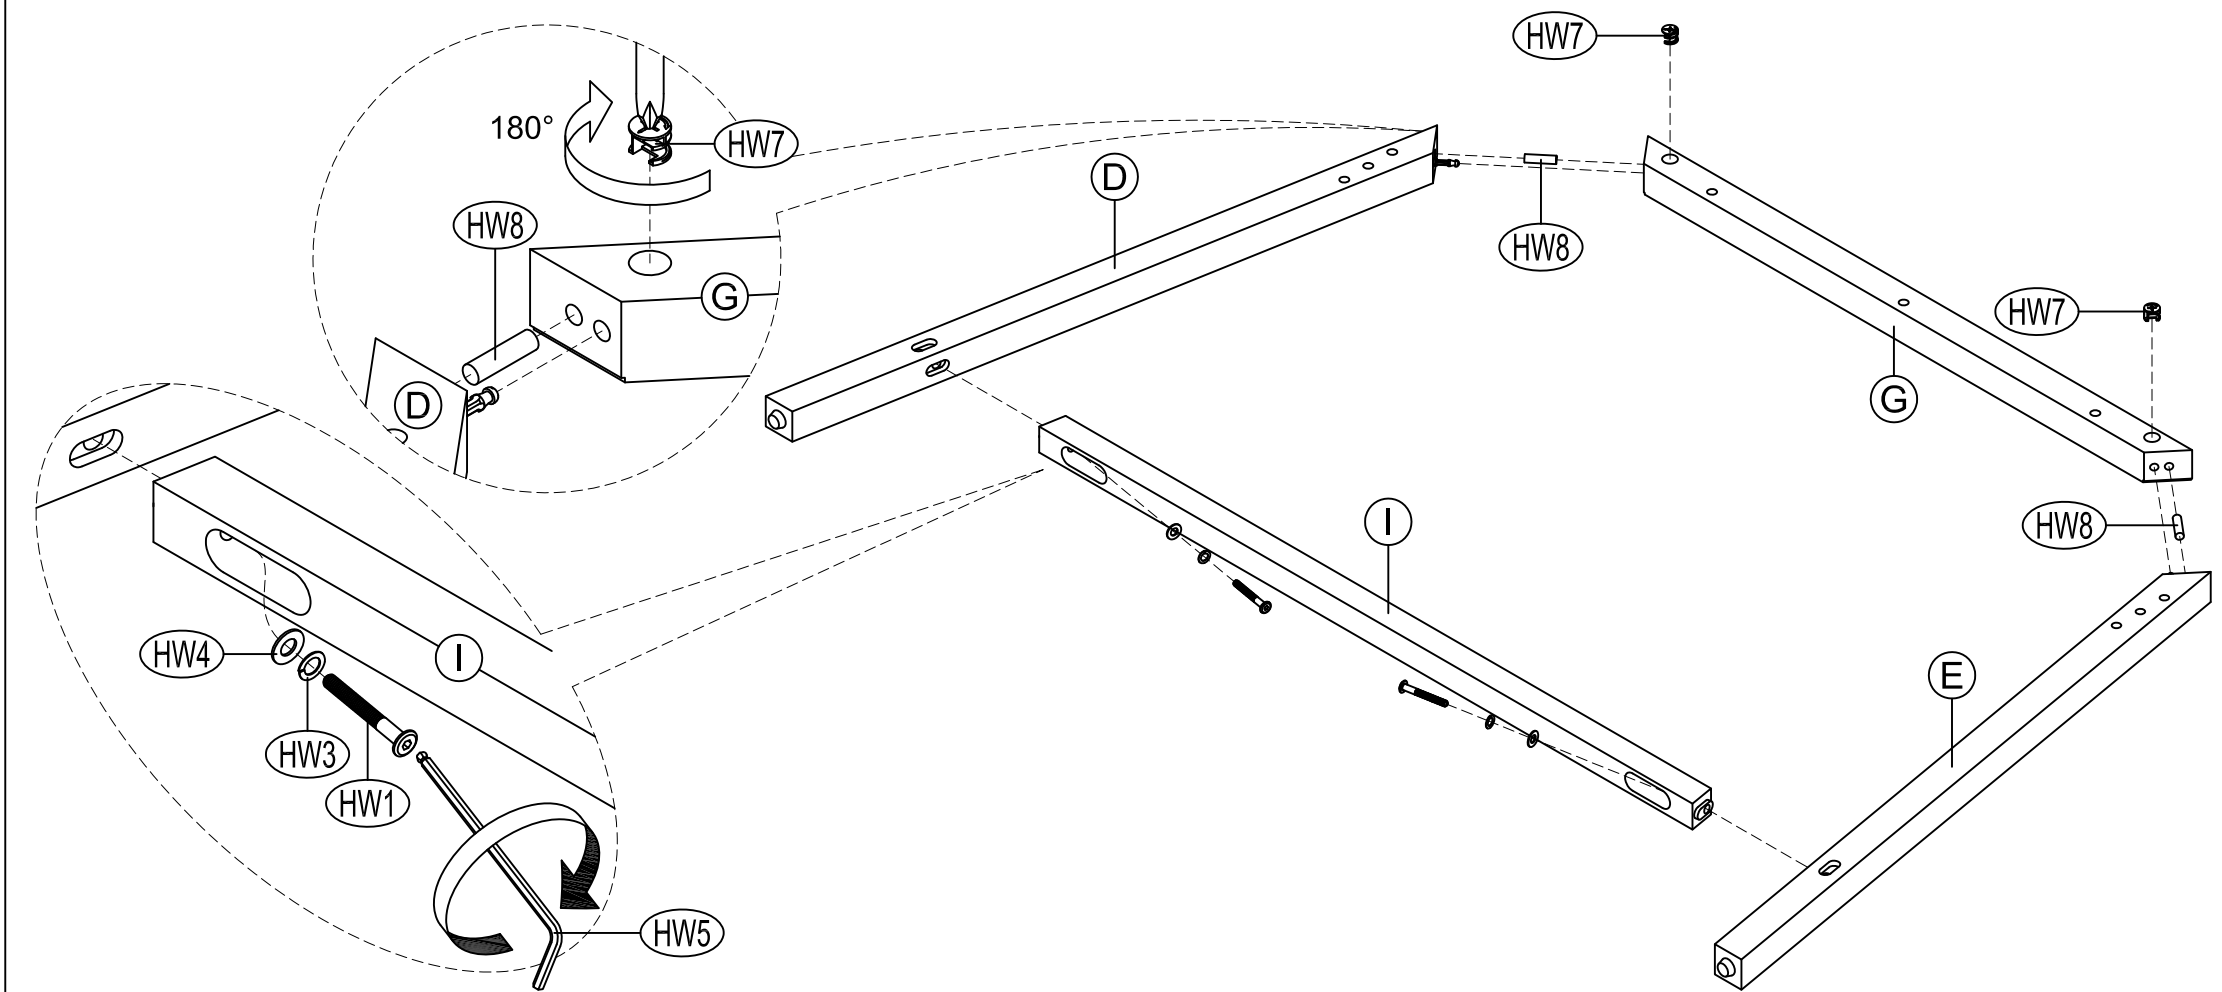


**STEP 3** ATTACH LEFT BACK LEG (D) TO BACK APRON (G) USING CAMLOCK (HW7) AND DOWEL (HW8); TO BACK STRETCHER (I) USING BOLT 55 MM (HW1), SPRING WASHER (HW3) AND FLAT WASHER (HW4). ATTACH RIGHT BACK LEG (E) TO UNIT USING BOLT 55 MM (HW1), SPRING WASHER (HW3), FLAT WASHER (HW4), CAMLOCK (HW7) AND DOWEL (HW8). TIGHTEN BOLTS USING ALLEN KEY (HW5).

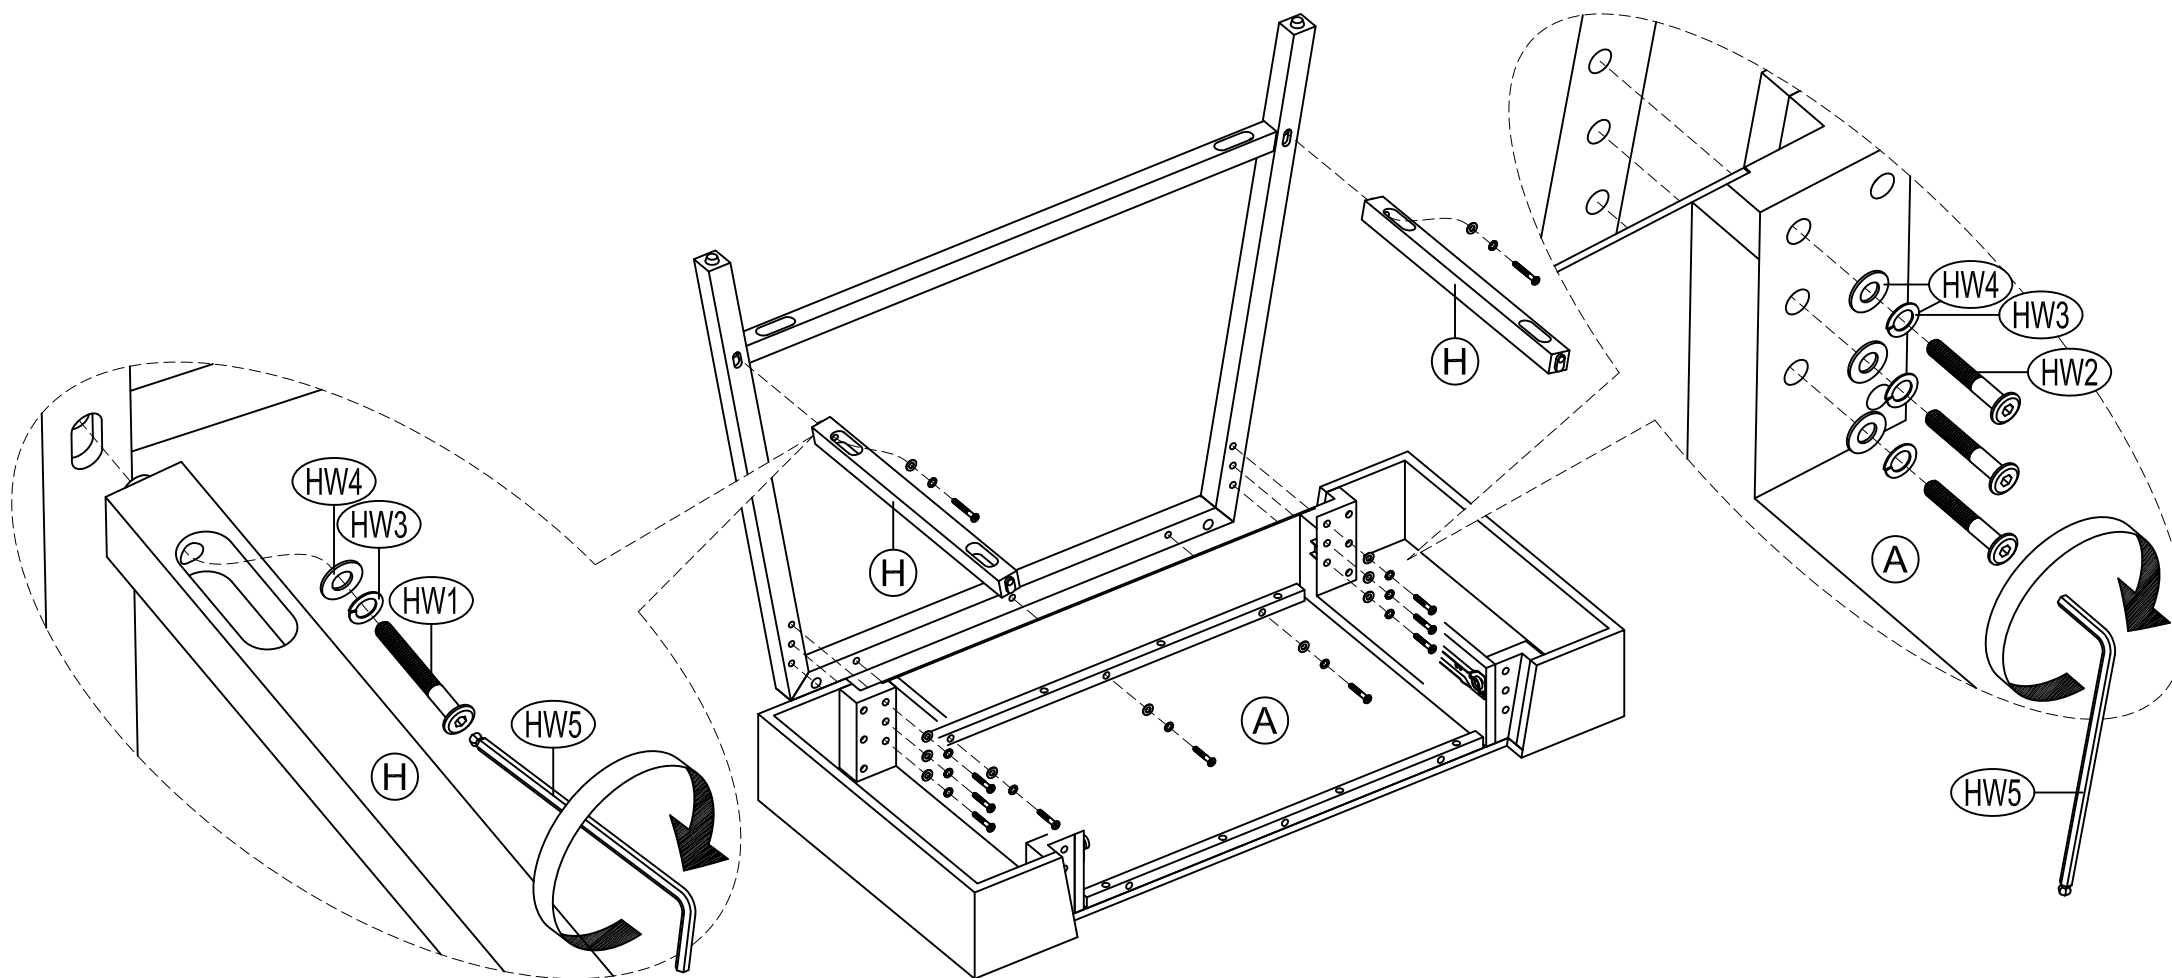


**STEP 4** ATTACH SIDE STRETCHERS (H) TO UNIT USING BOLT 55 MM (HW1), SPRING WASHER (HW3) AND FLAT WASHER (HW4). ATTACH TOP UNIT (A) TO UNIT USING BOLT 40 MM (HW2), SPRING WASHER (HW3) AND FLAT WASHER (HW4). TIGHTEN BOLTS USING ALLEN KEY (HW5).

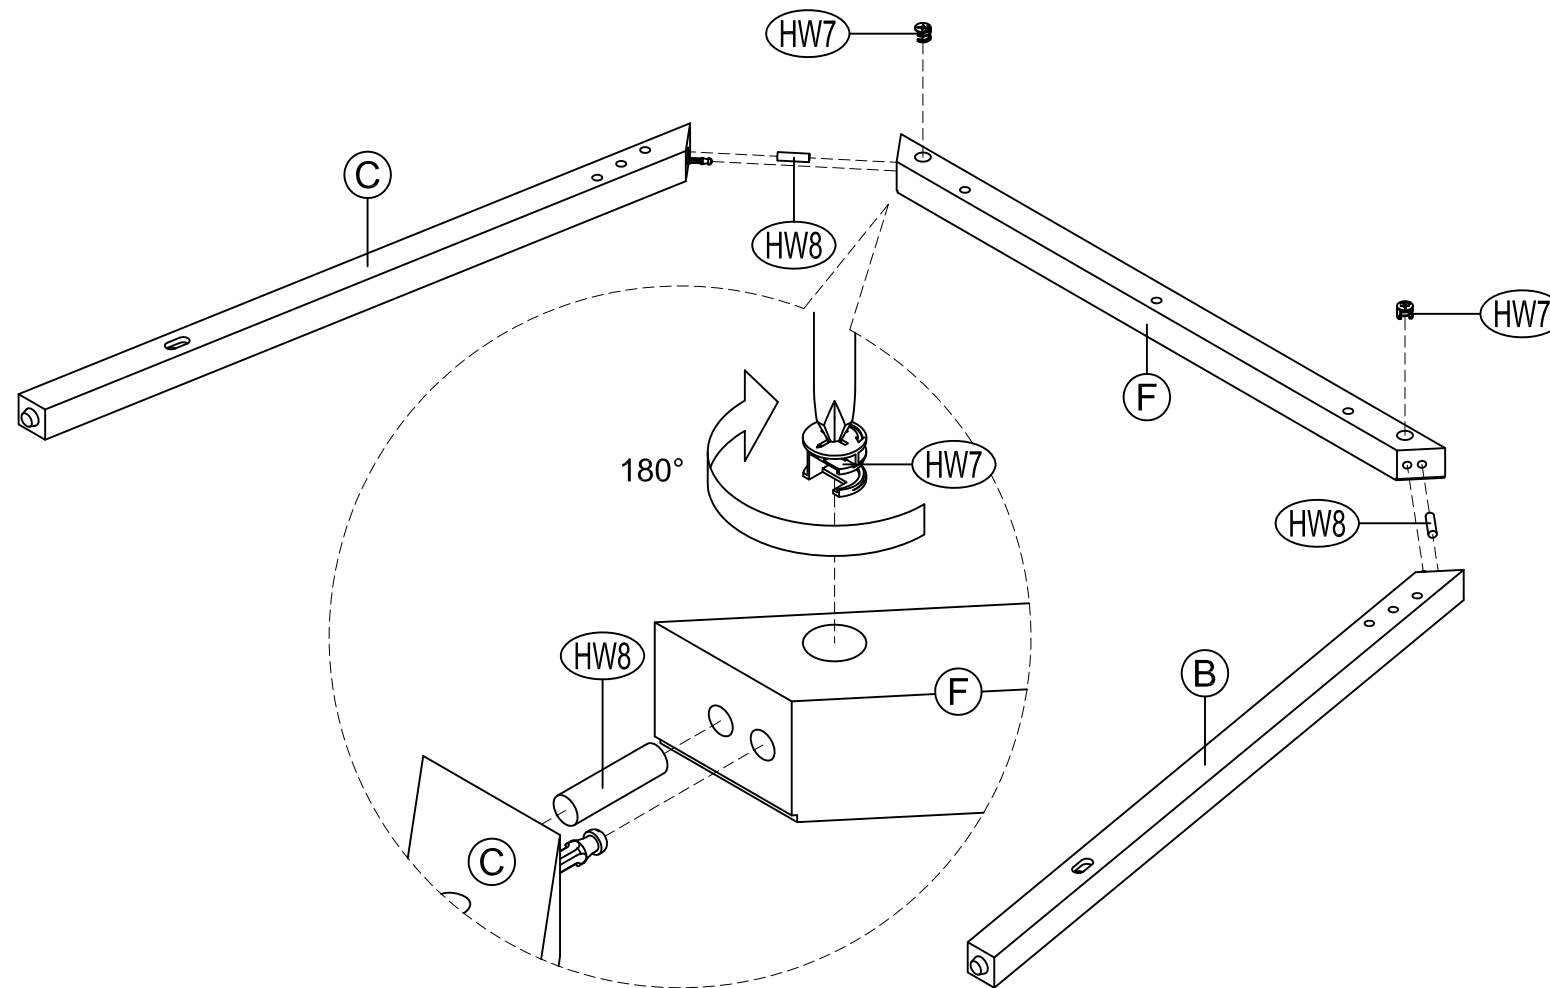

**STEP 5** ATTACH FRONT APRON (F) TO LEFT AND RIGHT FRONT LEGS (B AND C) USING CAMLOCK (HW7) AND DOWEL (HW8).

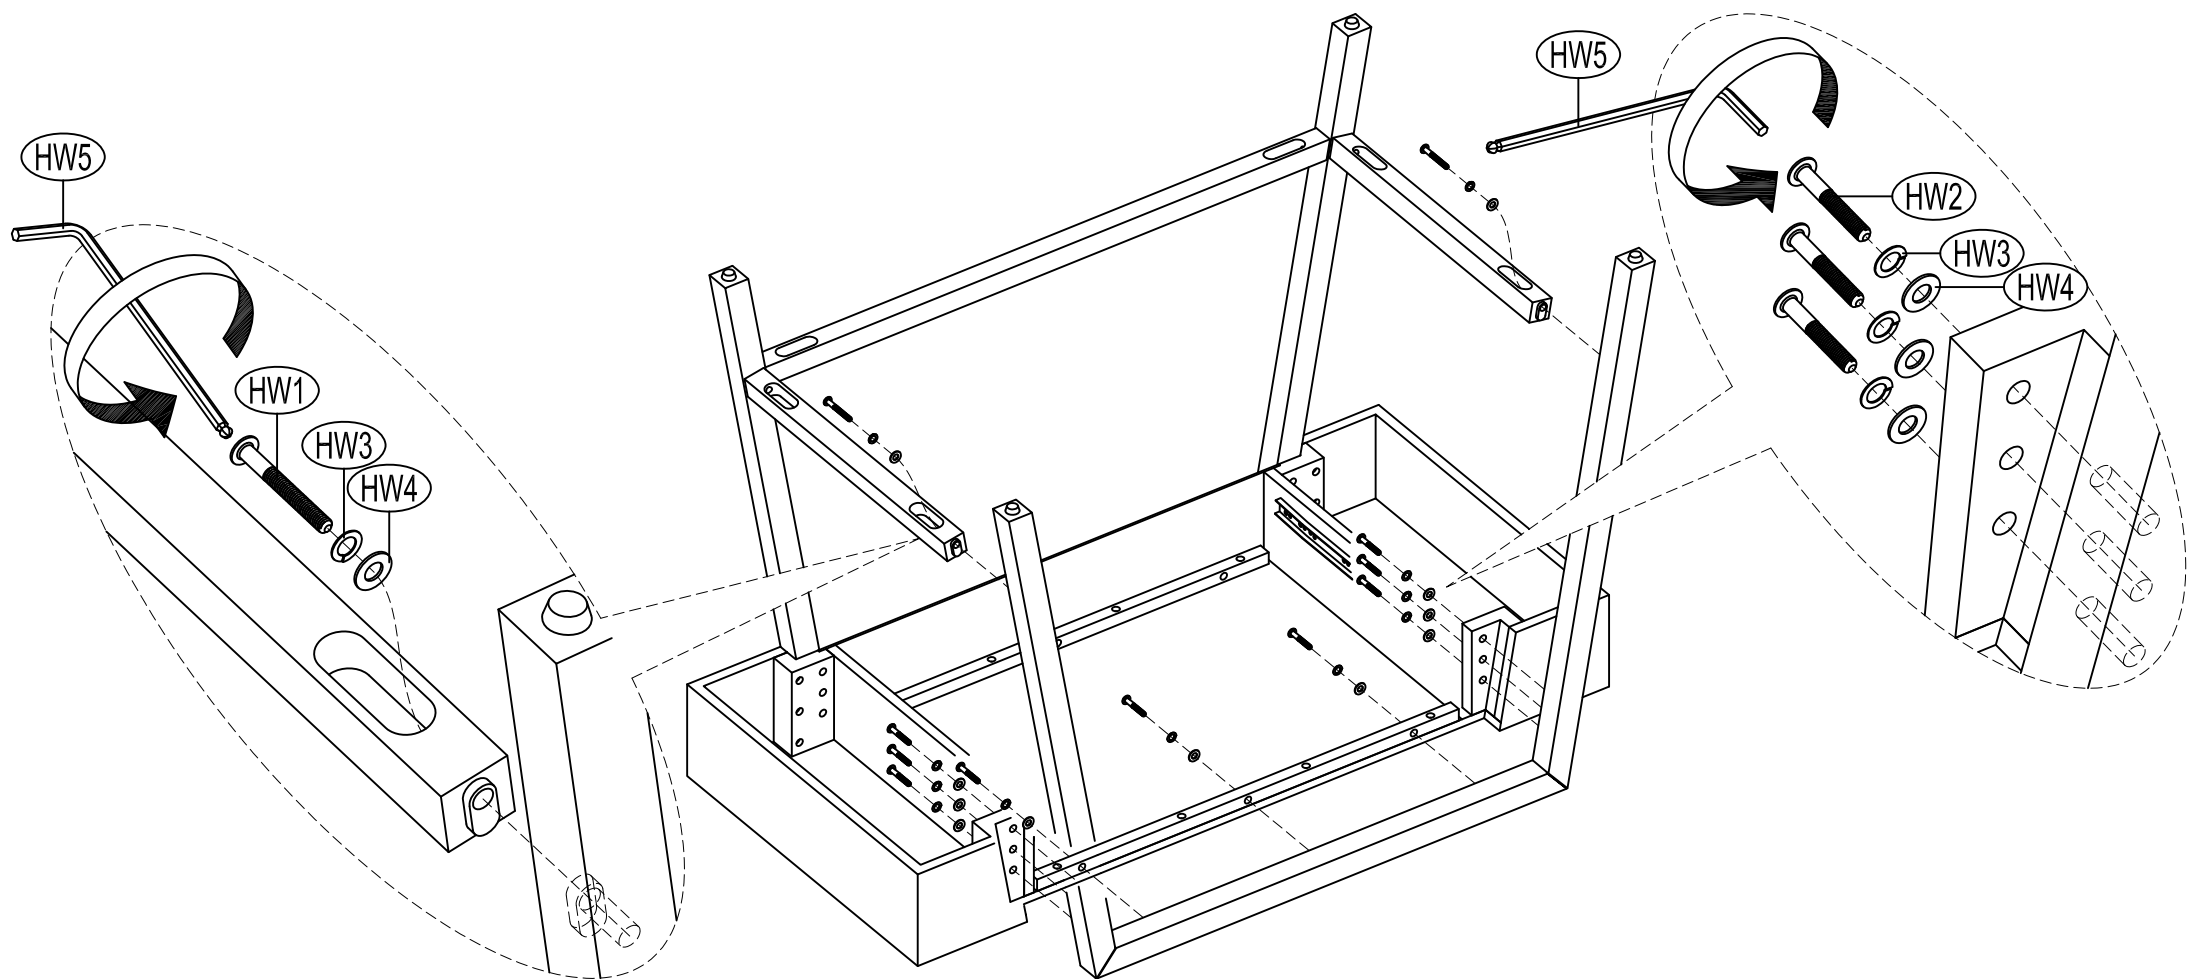

**STEP 6** ATTACH UNIT FROM STEP 5 TO UNIT FROM STEP 4 USING 55mm AND BOLT 40 MM (HW1 AND HW2), SPRING WASHER (HW3) AND FLAT WASHER (HW4). TIGHTEN BOLTS USING ALLEN KEY (HW5).

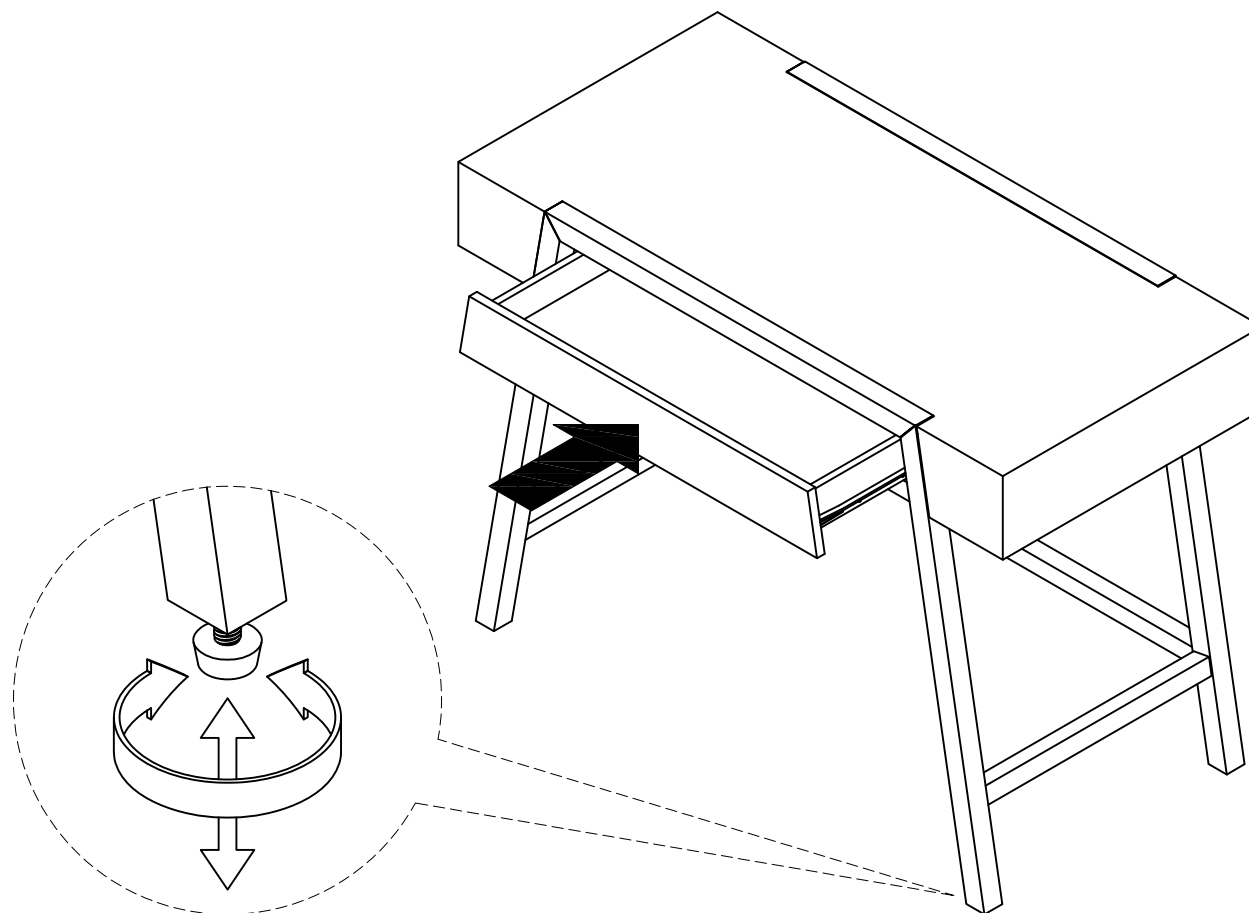

**STEP 7** SLIDE DRAWER ASSEMBLY INTO UNIT. ADJUST THE ADJUSTER BOLT THAT HAS ALREADY ASSEMBLED TO THE LEGS TO STABILIZE YOUR UNIT