

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finished goods during assembly.
- * Do not tighten bolts until completely.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 20 minutes.
- * Tools Required for Assembly (included): Allen key (included) & Phillips head screwdriver (not included)

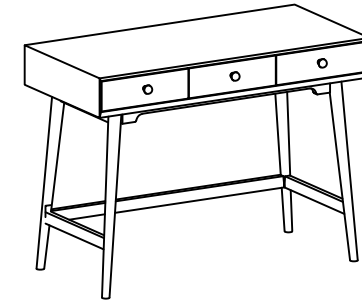
CARE AND MAINTENANCE

WOOD CARE: Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish.

SAFAVIEH FURNITURE

Model# DSK6401

Product Dimensions: 42"W x 20"D x 31"H



Weight Capacity : 25 lbs

Warning : Do not stand on the product

Warning : Do not over torque bolts

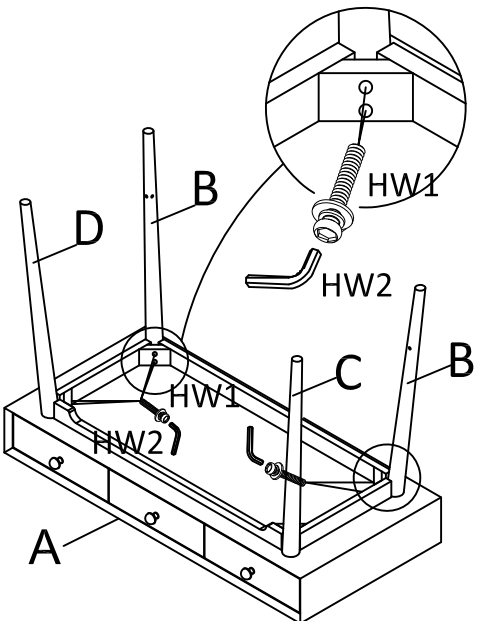
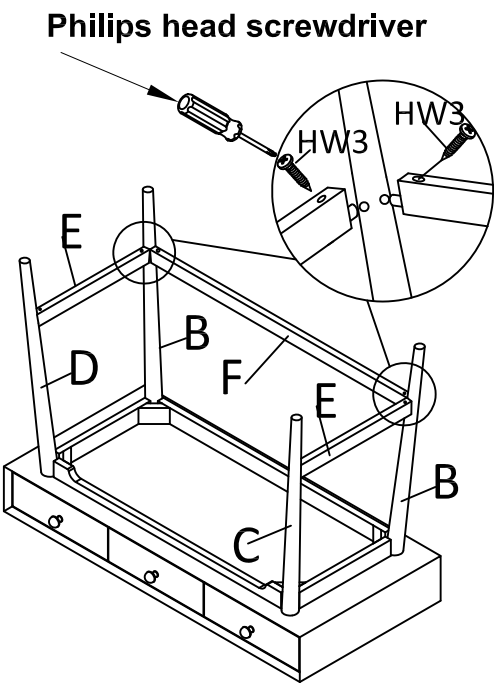
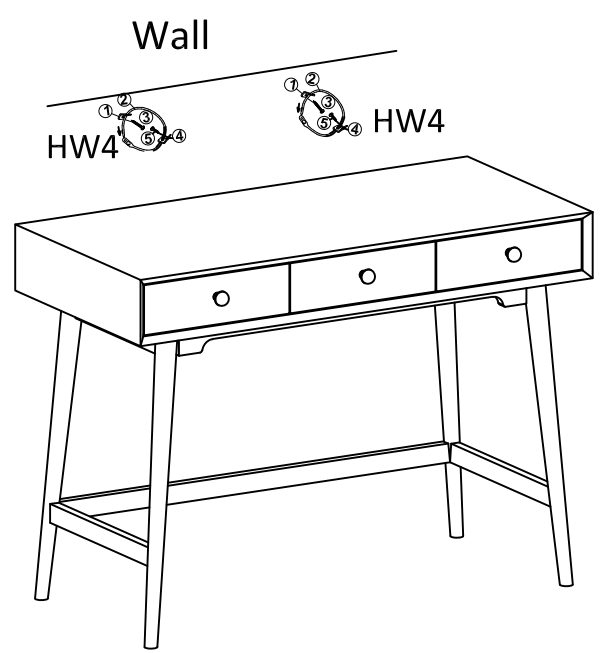
Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QTY
A	CABINET		1 X
B	BACK LEG		2 X
C	FRONT LEG - FACING LEFT		1 X
D	FRONT LEG - FACING RIGH		1 X
E	SIDE STRETCHER - SHORTER		2 X
F	STRETCHER OF BACK LEG- LONGER		1 X

PIECE	DESCRIPTION	PICTURE	QTY
HW1	Hex Socket Bolt	1/4"-20 x 2"	8 X
HW2	Allen Key	M4	1 X
HW3	Wooden Screw	M4*40mm	6 X
HW4	Anti-Tip Hardware		2 X

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 20 minutes.
- * Tools Required for Assembly (included): Allen key (included) & Phillips head screwdriver (not included)
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

1 	2 	3 
Step 1 Install 4 Legs "2*Front Legs - Facing Left (C) & Facing Right (D) and 2*Back Legs (B)" into the apron of at the bottom of Cabinet (A), By using the Allen Key (HW2) to lock with 8*Hex Socket Bolts (HW1), as picture.	Step 2 Assemble 3 Stretchers "2*Side Stretchers-Shorter (E) & Stretcher of back leg- Longer (F)" with legs, By using a Phillips head screwdriver (not included) to lock with 6*Wooden Screws (HW3).	Step 3 Straighten up the assembled product. Following the installation instructions of anti-tipping (HW4) to fix the product in the wall by 2 straps. Assembly is completed.