





CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening

Part List and Hardware List


PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Metal Frame		2X
B	Shelf		4X
H1	Socket Screw 6x0.5x35mm	 M6X35mm	16X
H2	Allen key		1X

 **SAFAVIEH**
FURNITURE

Item ID# ETG4200

Product Dimensions: 16-1/2"WX16-1/2"D X 55"H

Weight Capacity: 30LBS

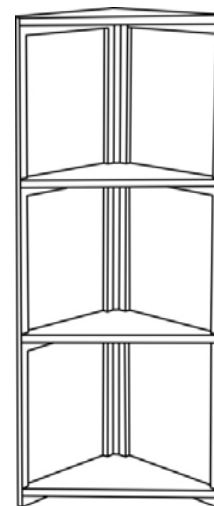

WARNING



Warning: Don not stand on shelve
Warning: Don not over torque screws


PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.

If any part is missing or damaged, do not attempt to assemble the product.


Estimated Assembly Time: 15 minutes.

Tools Required for Assembly (included): Allen Key

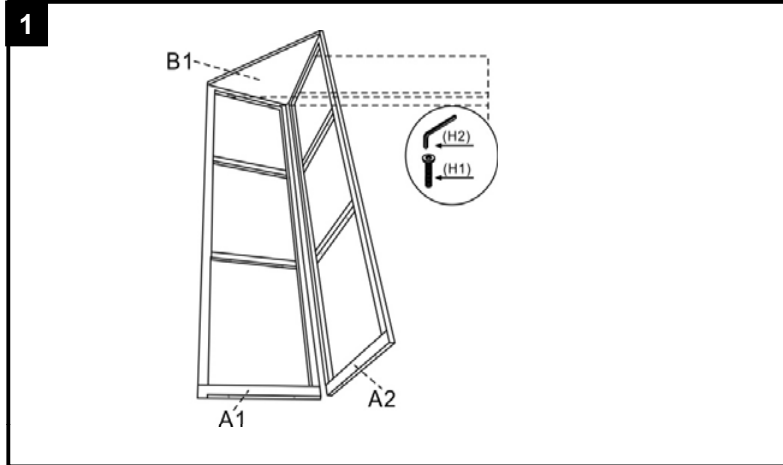


Step 1

Attach the Shelf(B1) to the Metal frame (A1&A2), using **Socket Screw(H1)**
Tighten with Allen key(H2)

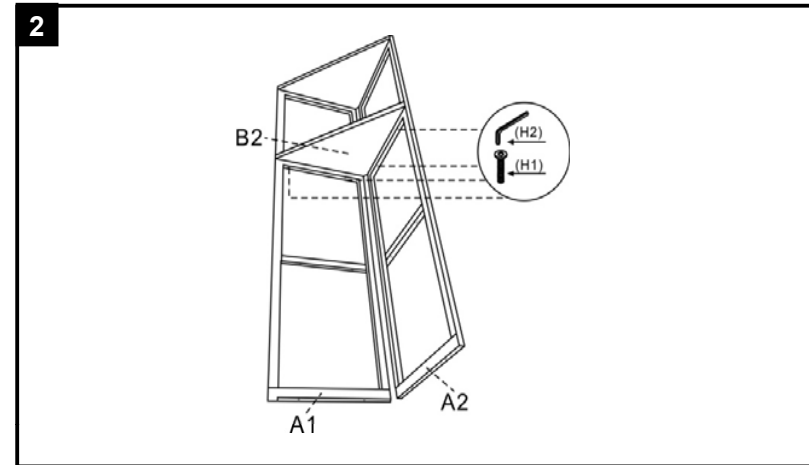


Step 2

Attach the Shelf(B2) to the Metal frame (A1&A2), using **Socket Screw(H1)**
Tighten with Allen key(H2)

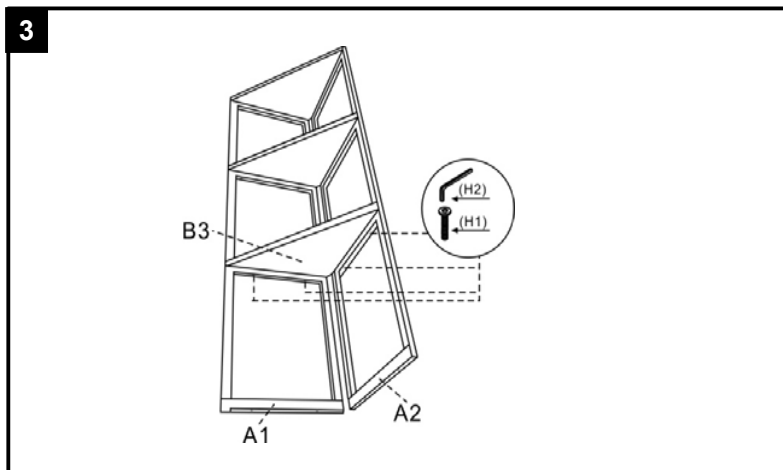

Step 3

Attach the Shelf(B3) to the Metal frame (A1&A2), using **Socket Screw(H1)**
Tighten with Allen key(H2)

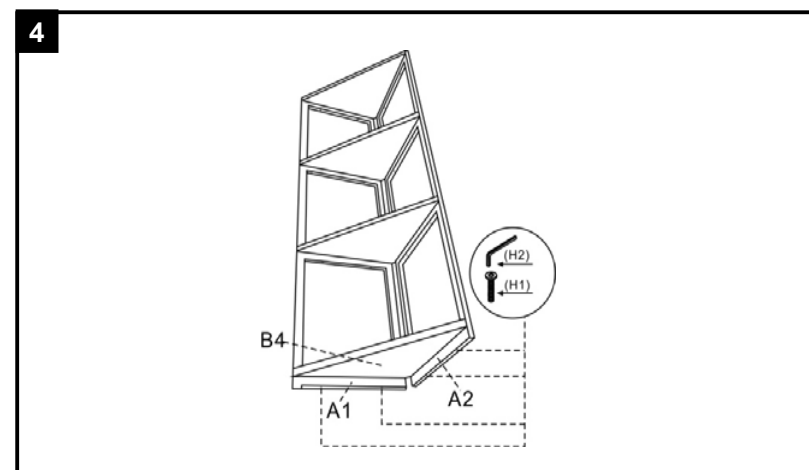

Step 4





Attach the Shelf(B4) to the Metal frame (A1&A2), using **Socket Screw(H1)**
Tighten with Allen key(H2)



Anti-Tip Kit

⚠ WARNING
Serious or fatal crushing injuries can occur from furniture tip over. To prevent tipover:
 Install tipover restraint provided.
 Place heaviest items in the lower drawers.
 Unless specifically designed to accommodate, do not set TVs or other heavy objects on top of this product.
 Never allow children to climb or hang on drawers, doors or shelves.
 Never open more than one drawer at a time.
 Do not defeat or remove the drawer interlock system.
Use of tipover restraints may only reduce, but not eliminate, the risk of tip over.



Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
H3	Nylon Strap		2 PCS
H4	Long Screw	 M4*25mm	2 PCS
H5	Plastic Screw Anchor		2 PCS
H6	Wall Bracket		2 PCS

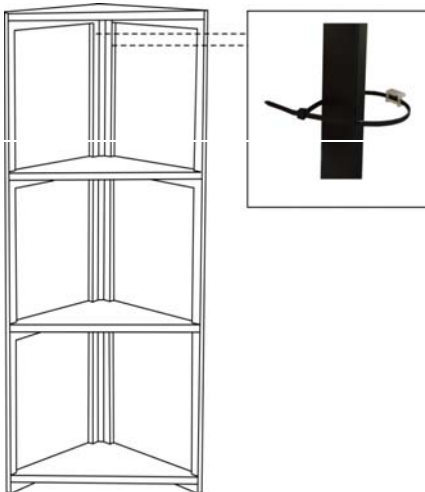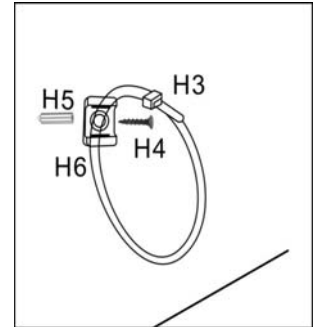

Assembly Steps

1. Mark the location on the wall for mounting the second bracket "H6". Drill a 1/4 inch hole in the wall and insert the plastic screw anchor "H5". Secure the bracket to the wall using the long screw "H4".
2. Place the furniture so the bracket on the back edge of unit is lined with the bracket on the wall.
3. Lace the end of the nylon strap "H3" down through each of the bracket. Bring both ends together and slide the beaded end of the strap through the keyhole shaped slot on the other end. Pull down on the beaded end until it snap-locks into the keyhole.
4. Check to make sure the strap is securely laced and locked to the brackets.
5. Complete!