NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com


PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 40 minutes.
- * Tools Required for Assembly: Allen Key, Screwdriver, Wooden hammer.

CARE AND MAINTENANCE

Dust regularly with a soft, dry cloth. Never use oiled or treated cloths on lacquered finishes. Some finishes can be wiped with a damp (not wet) cloth, followed at once by rubbing with a dry cloth to remove fingerprints and smudges. For persistent spots, gently clean with a soft cloth and a solution of water and mild soap, make sure to wipe dry. Use adhesive felt pads, coasters and placemats to protect your furniture.


Part List and Hardware List

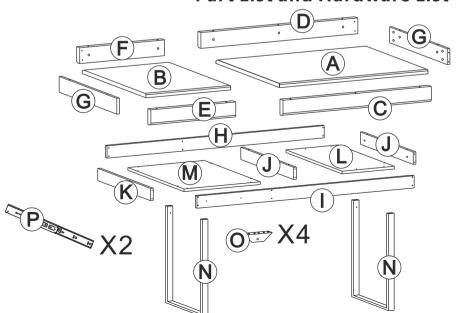




Model# FOX2200A

Product Dimensions: 43.3"W×21.7"D×29.5"H

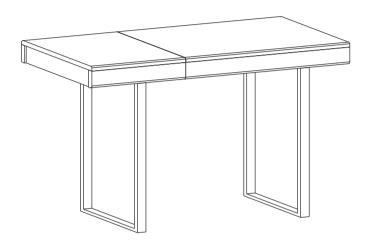

△WARNING △

Weight Capacity: 70 lbs. Warning:Do not stand on Desk. Warning:Do not over torque bolts.

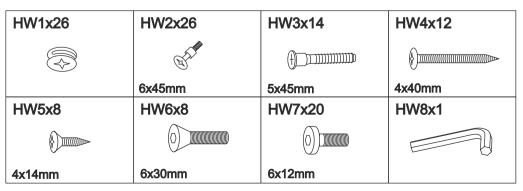


Part List & HW List

Piece	Description	Qty
Α	Top Board Big	1
В	Top Board Small	1
С	Front Board Big	1
D	Back Board Big	1
E	Front Board Small	1
F	Back Board Small	1
G	Side Board	2
Н	Drawer Board Back	1
I	Drawer Board Front	1
J	Drawer Side Board Right	2
K	Drawer Side Board Left	1
L	Bottom Board	1
М	Drawer Bottom Board	1
N	Leg	2
0	Leg Connector	4
Р	Slide Rail	2

Piece	Description	Qty
HW1	Camlock	26
HW2	Cambolt M6 x 45 mm	26
HW3	Screw M5 x 45 mm	14
HW4	Screw M4 x 40 mm	12
HW5	Screw M4 x 14 mm	8
HW6	Screw M6 x 30 mm	8
HW7	Screw M6 x 12 mm	20
HW8	Allen Key	1


PREPARATION


- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 40 minutes.
- * Tools Required for Assembly: Allen Key, Screwdriver, Wooden hammer.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

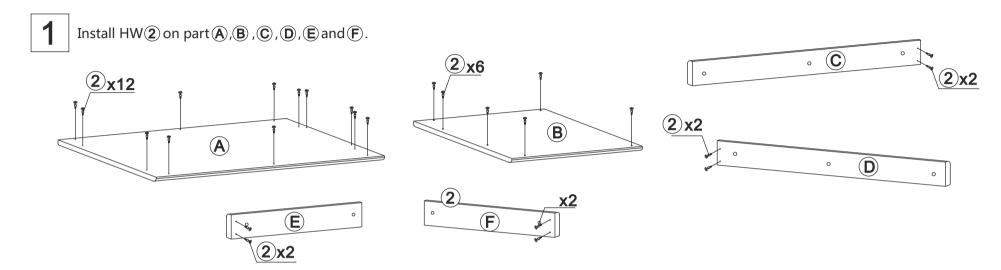


Insert HW① in part⑥, attach part⑥,⑥ to⑥,
Attach part⑥,⑤ to⑥, fasten HW① to install them together.

Insert HW① in part ②, ②, ⑤, ⑤ and ⑥, attach them to part ♠, ⑧, Fasten HW① to install them together.

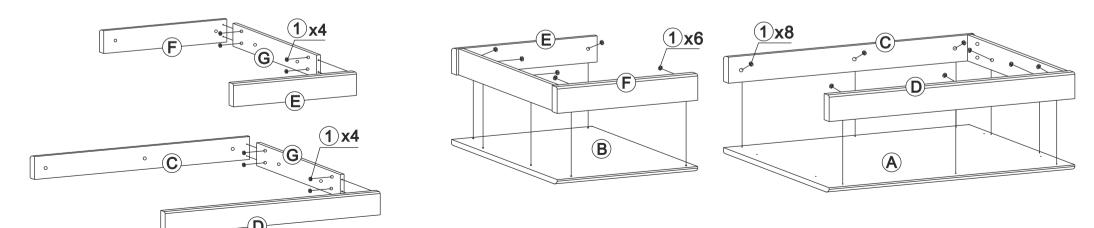





5 Insert HW① in part③, attach the frame to part♠, Fasten HW① to install them together.

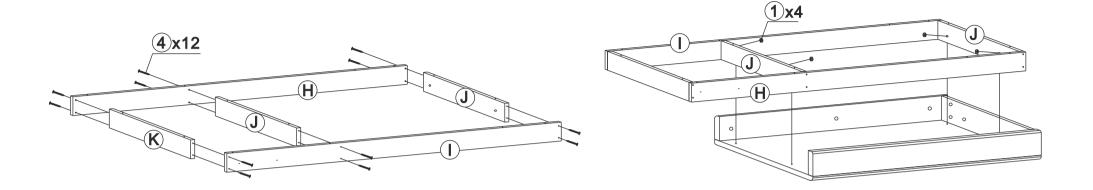


- 6 Use HW3 to install part M, L on the frame.

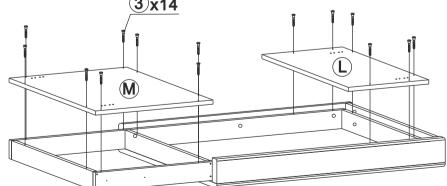

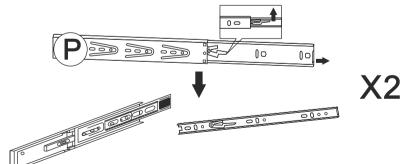



To extend metal sliders lift up the plastic lever.

8 Use HW 5 to install the small piece of part P on E, F, Use HW 5 to install the big piece of part P on H, ().

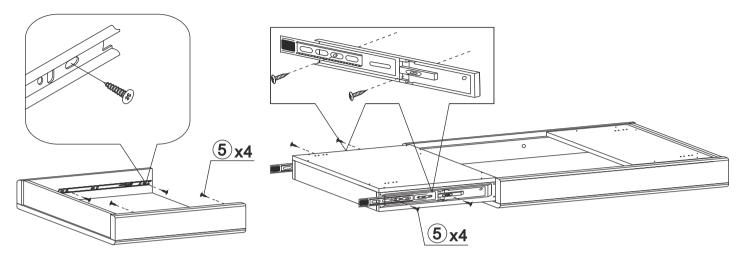


9 Use HW6,7 to install part on N.

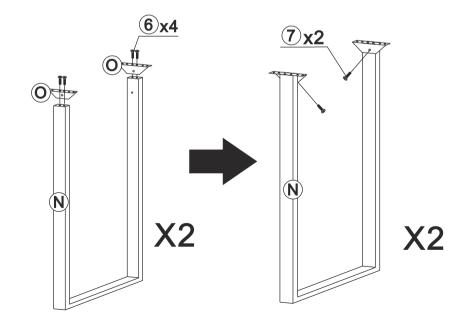

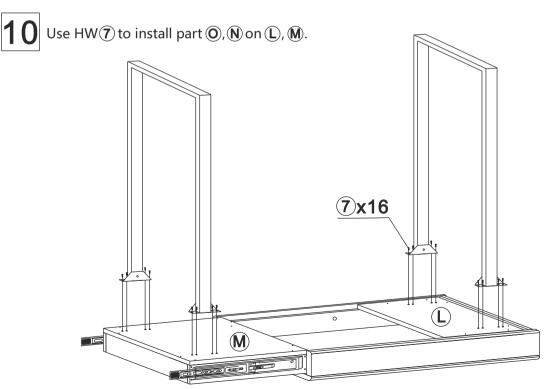



Install the outer frame of drawer on the left of desk.

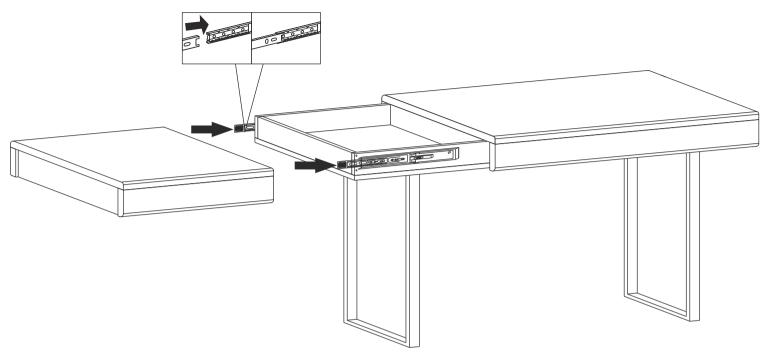

12 Finish.

