

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 60 minutes.
- * Tools Required for Assembly (included): Allen Key, Screwdriver, Wooden hammer.


CARE AND MAINTENANCE

Dust regularly with a soft, dry cloth. Never use oiled or treated cloths on lacquered finishes. Some finishes can be wiped with a damp (not wet) cloth, followed at once by rubbing with a dry cloth to remove fingerprints and smudges. For persistent spots, gently clean with a soft cloth and a solution of water and mild soap, make sure to wipe dry. Use adhesive felt pads, coasters and placemats to protect your furniture.




Model# FOX2202A

Product Dimensions: 47.2W"×21.6"D×29.9"H

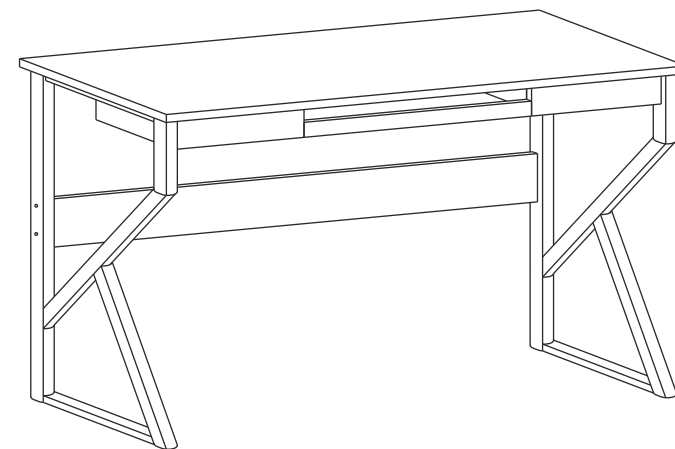

Part List and Hardware List

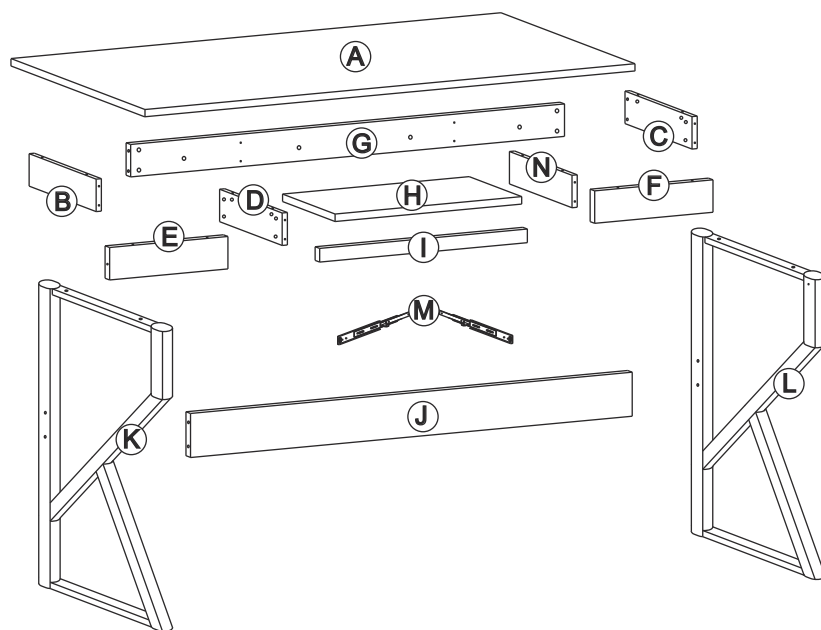

⚠ WARNING ⚠

Weight Capacity: 70 lbs.
Warning: Do not stand on Desk.
Warning: Do not over torque bolts.

HW1x36 	HW2x34 	HW3x2 	HW4x2 	HW5x4 
HW6x4 	HW7x4  6x12mm	HW8x4  6x28mm	HW9x4  6x55mm	HW10x1 

Part List & HW List


Piece	Description	Qty
A	Top Board	1
B	Side Board Left	1
C	Side Board Right	1
D	Middle Board Left	1
E	Front Board Left	1
F	Front Board Right	1
G	Back Board	1
H	Drawer Board	1
I	Drawer Board Front	1
J	Support Board	1
K	Leg Left	1
L	Leg Right	1
M	Slide Rail	2
N	Middle Board Right	1

Piece	Description	Qty
HW1	Camlock Big	36
HW2	Cambolt M 6 x 45 mm	34
HW3	Cambolt M 6 x 40 mm	2
HW4	Leg Pad	2
HW5	Screw M 3.5 x 14 mm	4
HW6	Camlock Small	4
HW7	Screw M 6 x 12 mm	4
HW8	Screw M 6 x 28 mm	4
HW9	Screw M 6 x 55mm	4
HW10	Allen Key	1


PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 60 minutes.
- * Tools Required for Assembly (included): Allen Key, Screwdriver, Wooden hammer.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com


1 Install HW ② in part ①, ②, ③, ④, ⑤ and ⑥.

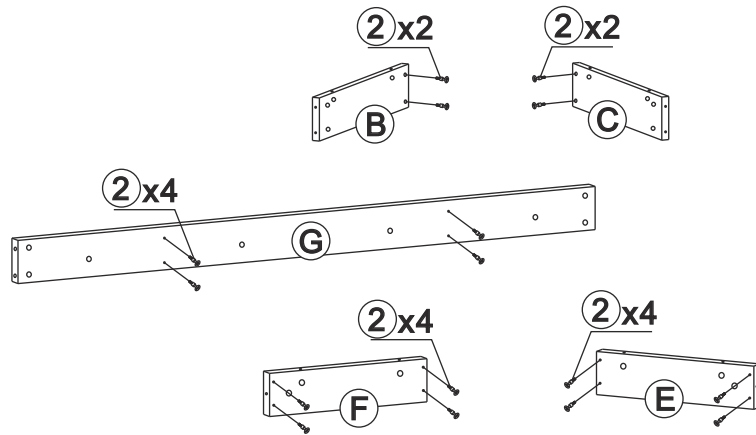


2 Insert HW ① in part ③, ④, ⑤ and ⑥.
Fasten HW ① to install ①, ②, ③, ④, ⑤ and ⑥ together.

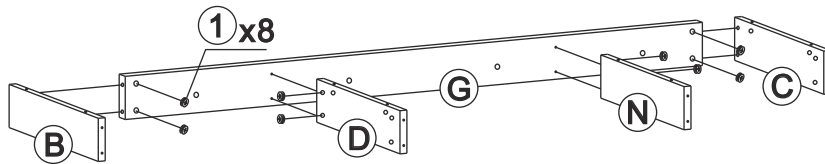


3 Insert HW ① in part ①, ③, ④, ⑤, attach part ⑥ and ⑦.
Fasten HW ① to install them together.

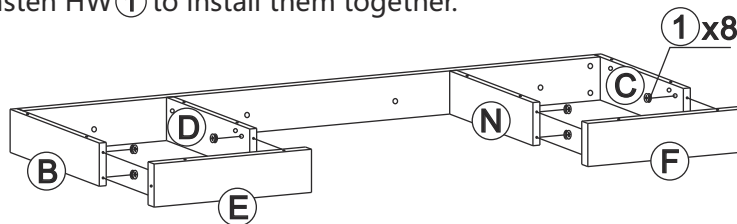


4 Install 16 pieces HW ② in part ①.

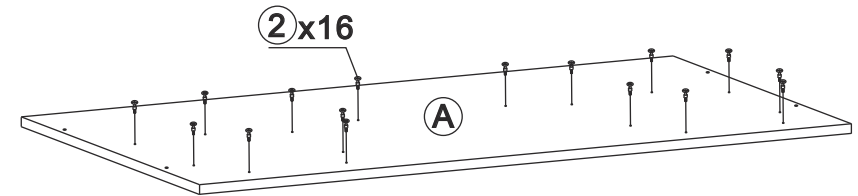


5 Insert 16 pieces HW ① in part ①, ②, ③, ④, ⑤, ⑥ and ⑦.
Attach to part ①, fasten HW ① to install them together.

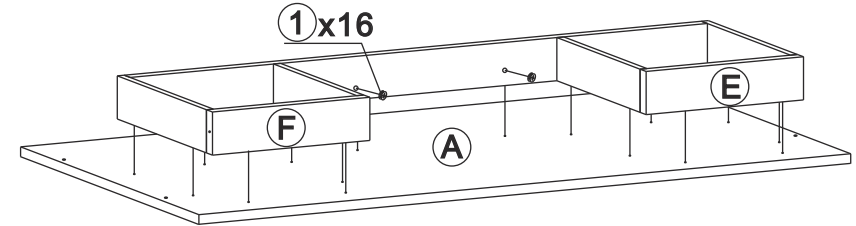


6 Install HW ③ in part ⑧ and ⑨.

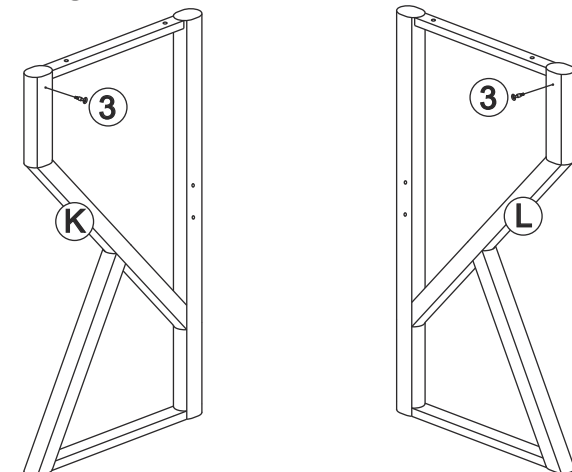


- 7** Insert HW① in part ⑤ and ⑥.
Attach to part ⑦, ⑧, fasten HW① to install them together.

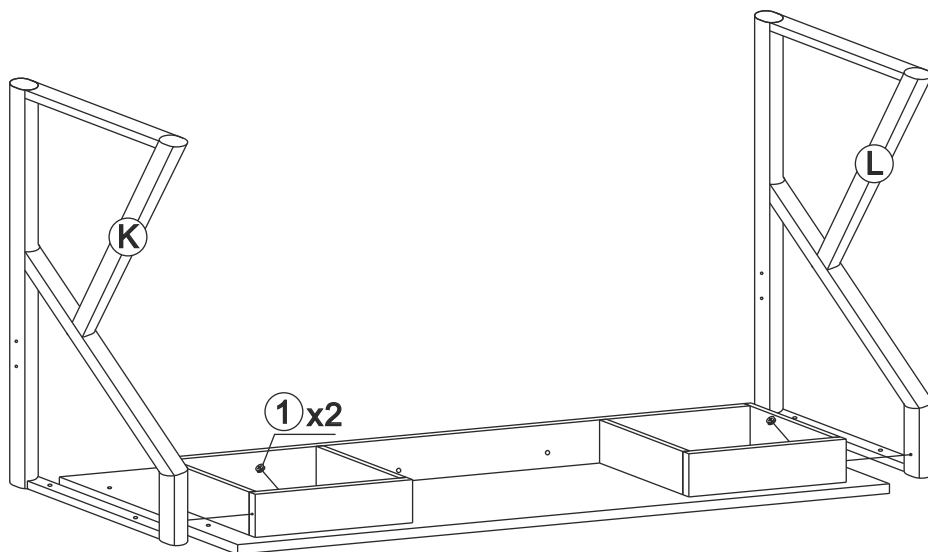


- 8** Use HW⑧ to install part ⑦, ⑧ and ⑨ together.
Attach HW④ on part ⑦, ⑧.

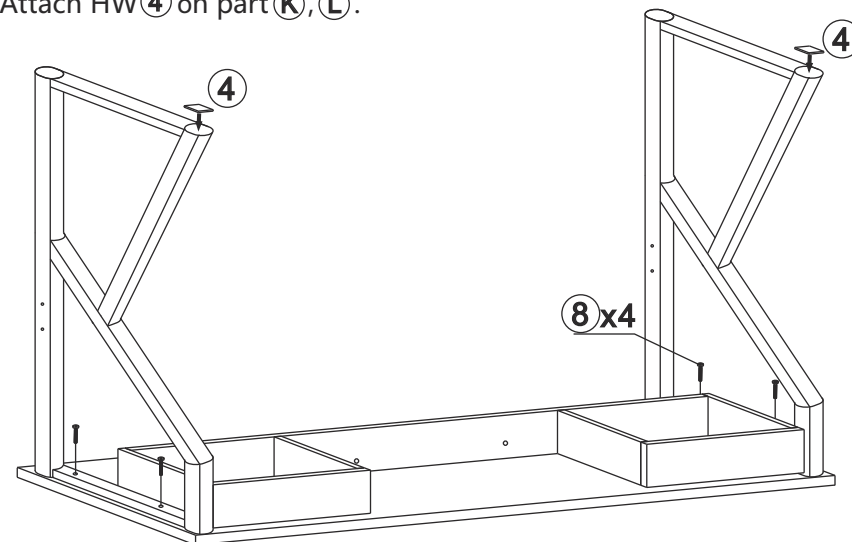


- 9** Insert HW⑥ in part ⑩, use HW⑨ to install part ⑦, ⑧ and ⑩ together.

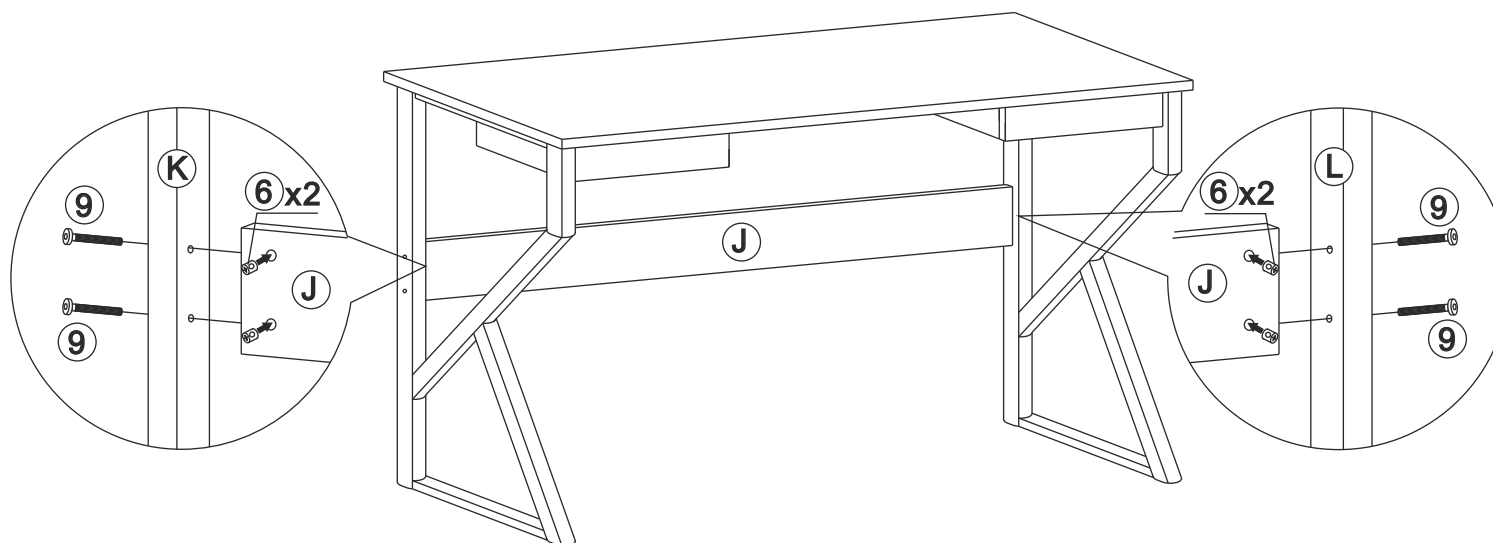

10 Use HW ⑤ to install part ① on part ②, ③.

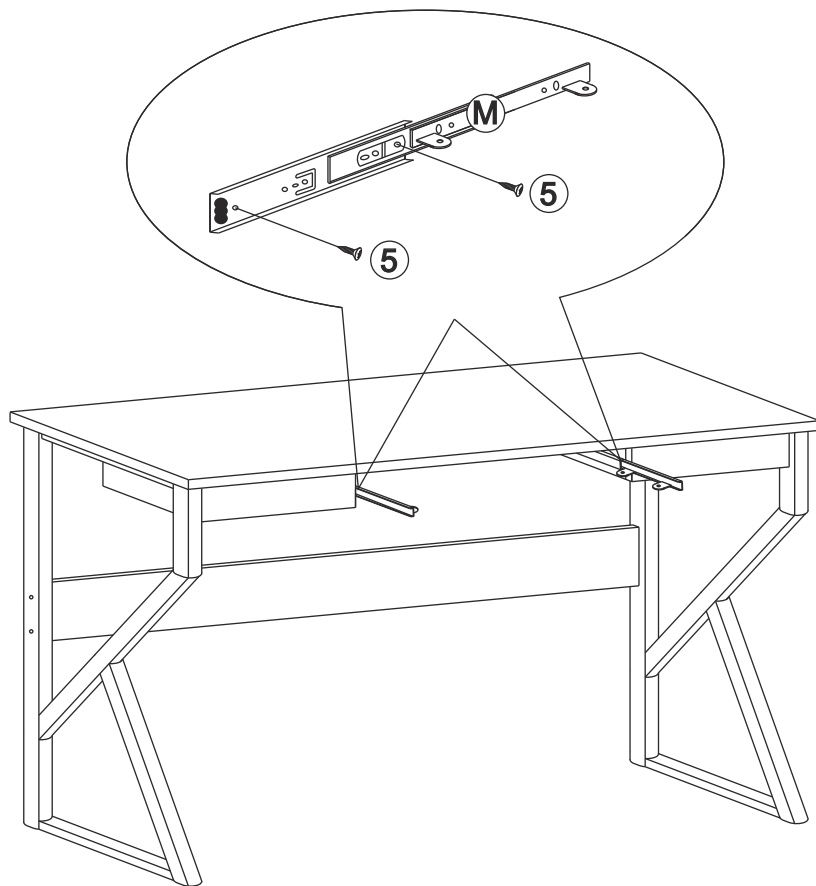

11 Install HW ② in part ①, insert HW ① in part ④.
Fasten HW ① to install part ① and ④ together.

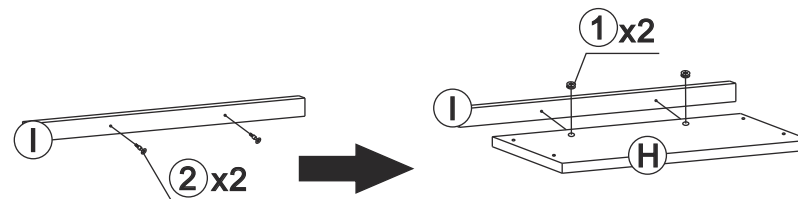

12 Use HW ⑦ to install part ④ and ⑤ together.

