

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com


PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 60 minutes.
- * Tools Required for Assembly (included): Allen Key, Screwdriver, Wooden hammer.

CARE AND MAINTENANCE


Dust regularly with a soft, dry cloth. Never use oiled or treated cloths on lacquered finishes. Some finishes can be wiped with a damp (not wet) cloth, followed at once by rubbing with a dry cloth to remove fingerprints and smudges. For persistent spots, gently clean with a soft cloth and a solution of water and mild soap, make sure to wipe dry. Use adhesive felt pads, coasters and placemats to protect your furniture.

Part List and Hardware List

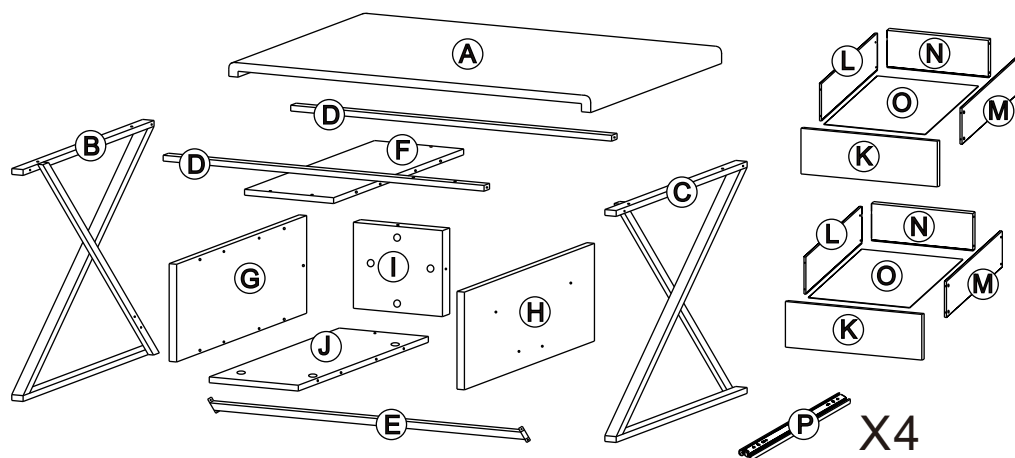

Model# FOX2205A

Product Dimensions: 47.2W"×21.6"D×29.5"H

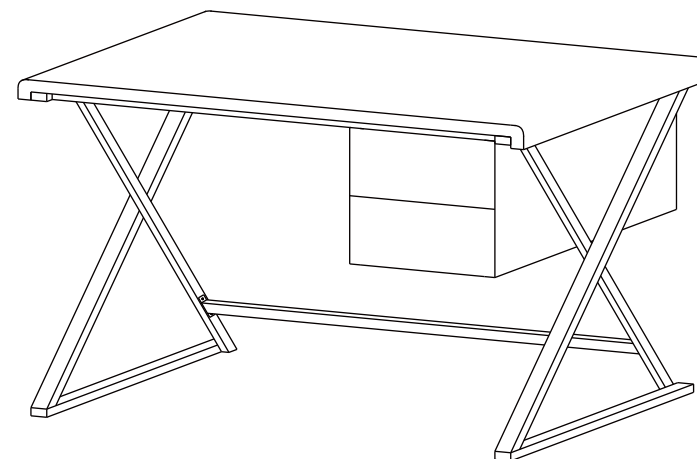

⚠ WARNING ⚠


Weight Capacity: 85 lbs.
Warning: Do not stand on Desk.
Warning: Do not over torque bolts.

HW1x2 	HW2x20 	HW3x20 	HW4x8 	HW5x4 	HW6x2
HW7x4 	HW8x6 6x28mm	HW9x4 6x12mm	HW10x4 6x80mm	HW11x4 6x25mm	HW12x16 3.5x14mm
HW13x2 6x40mm	HW14x8 4x35mm	HW15x2 6x25mm			


PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 60 minutes.
- * Tools Required for Assembly (included): Allen Key, Screwdriver, Wooden hammer.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com


- 1** Insert HW③,④ in part J, F

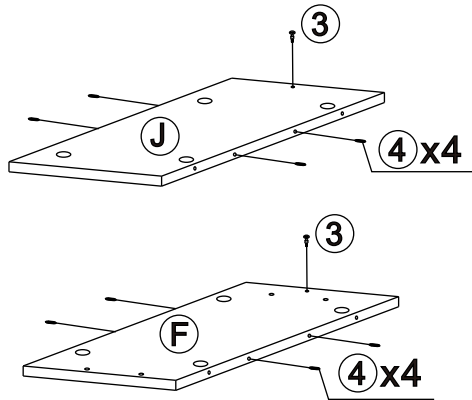



- 2** Insert HW② in part I
Install part F, J and I together

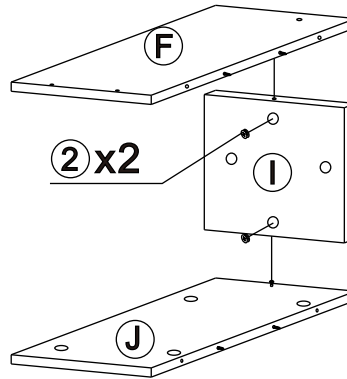


- 3** Press down and pull away

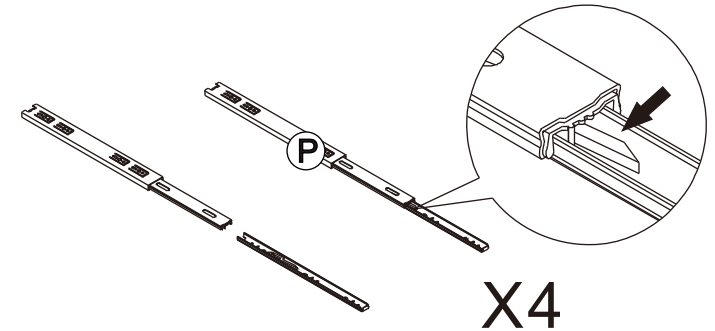


- 4** Use HW⑫ to install sliders on part G, H
Insert HW③ in part G, H

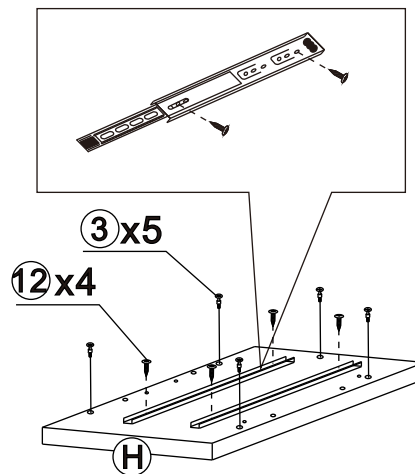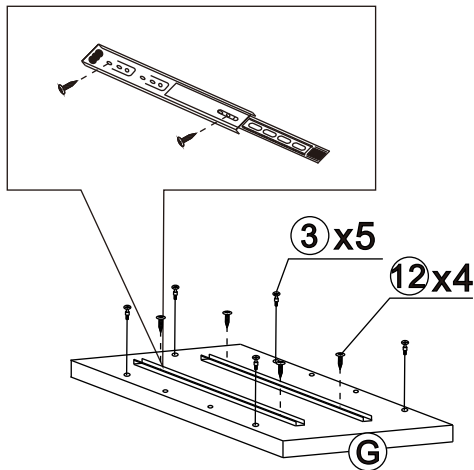


- 5** Insert HW② in part F, I, J
Install part F, I, J and G, H together

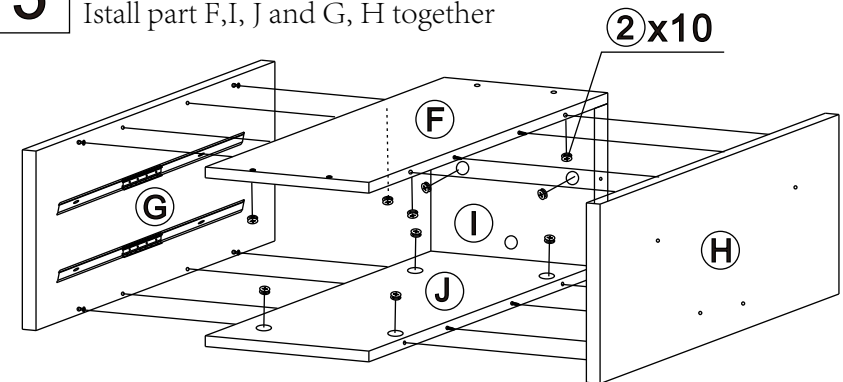


- 6** Use HW ⑩ to install part B,C,D and E together

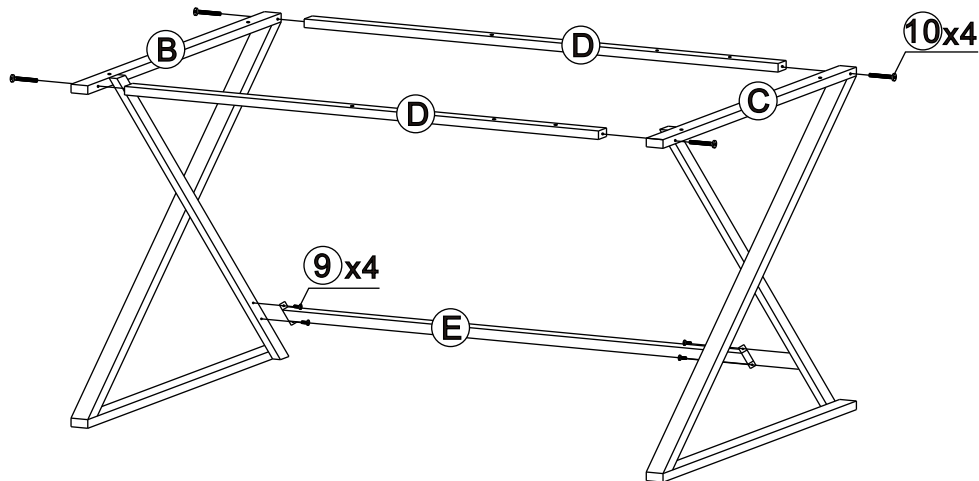


- 7** Use HW ⑤ ⑬⑮ to install part H and C together

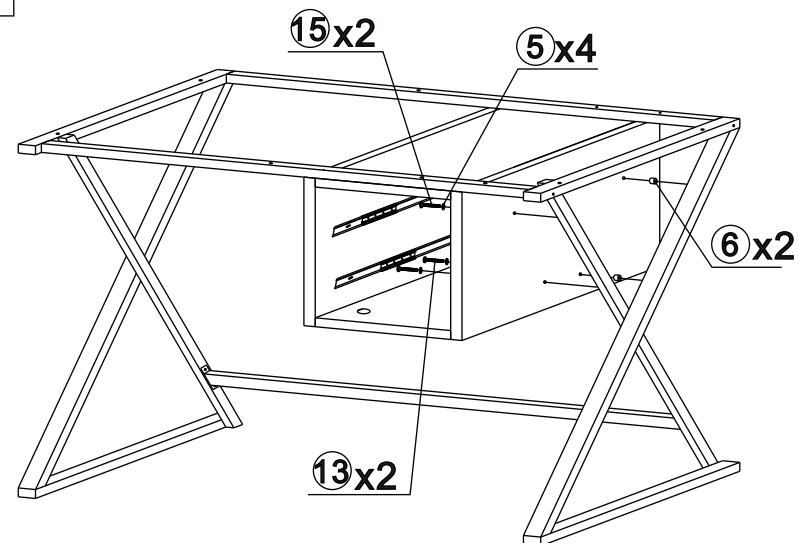


- 8** Use HW ⑦ ⑪ to install part F and D together

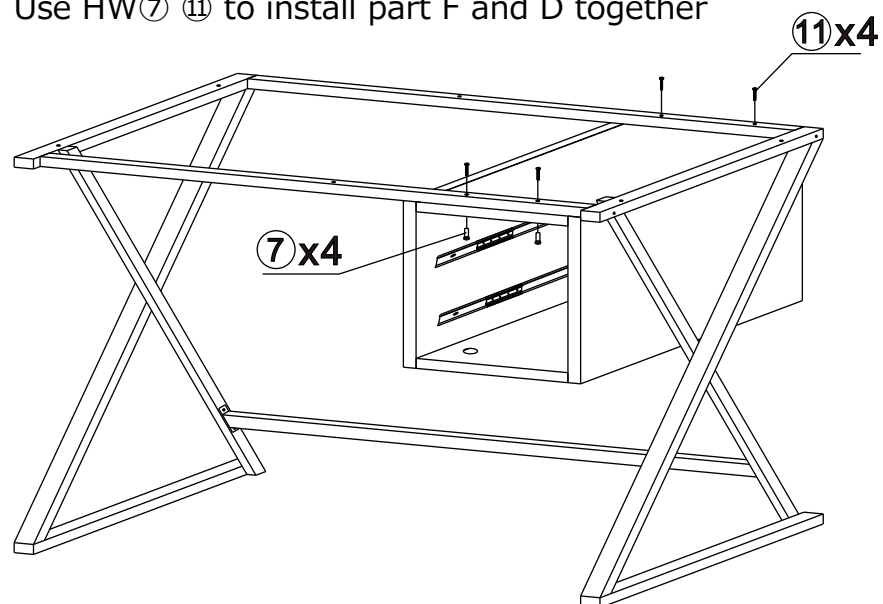


- 9** Use HW ⑧ to install part A, B, C, D together

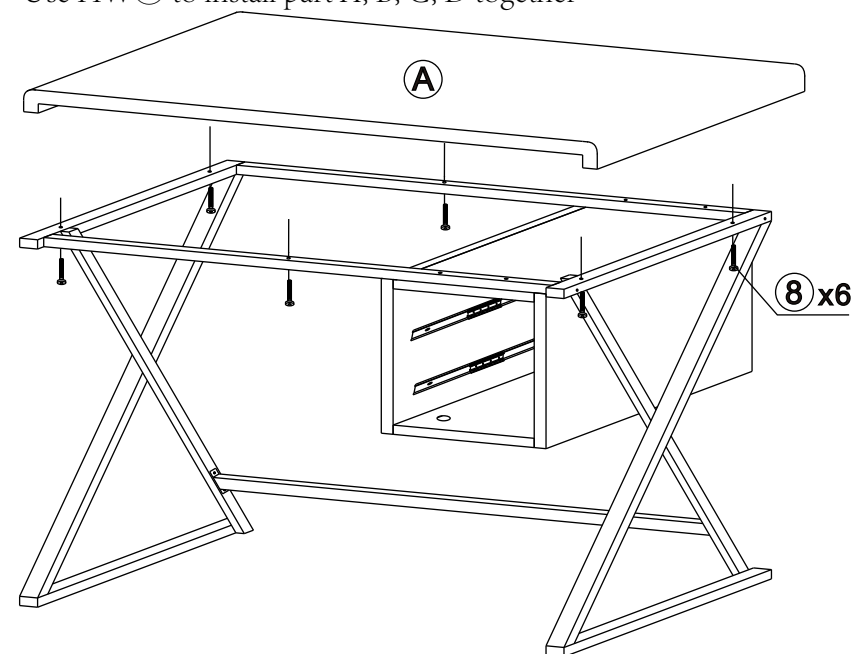


10 Insert HW③ in part K

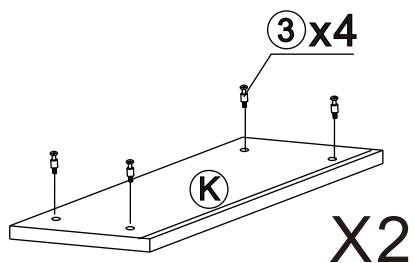

11 Use HW⑭ to install part L,M,N together

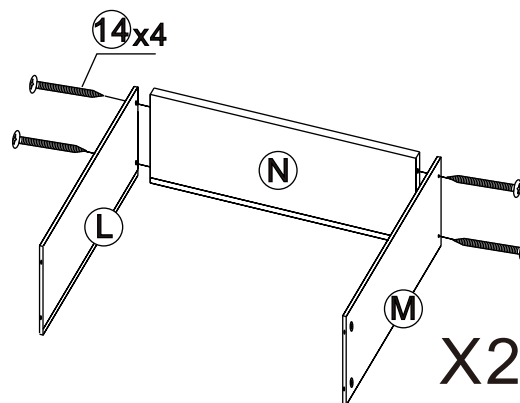


12

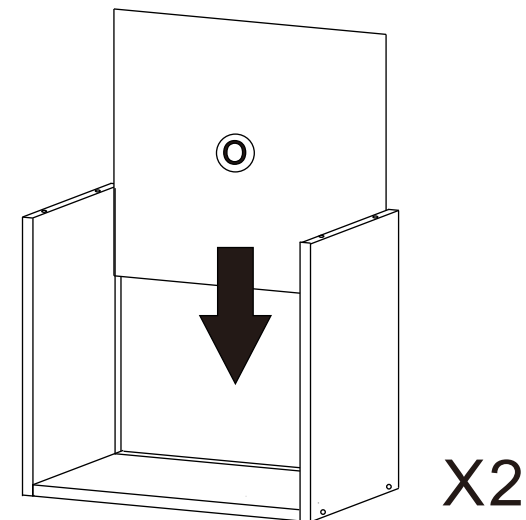


Install part O in L,M,N

13 Insert HW② in part L,M
Install part K,L,M together

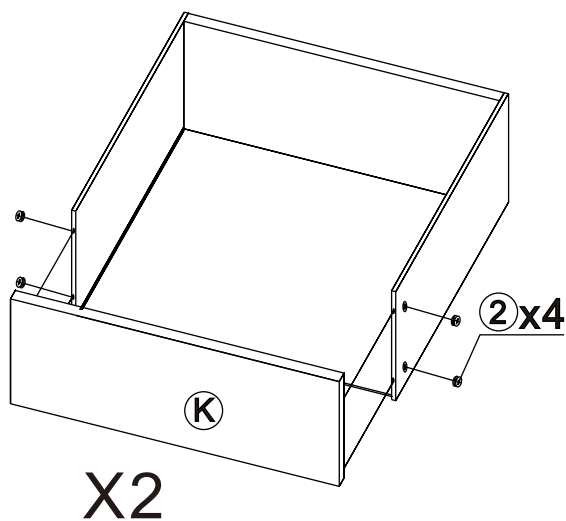


14 Use HW⑫ to install sliders on part L,M

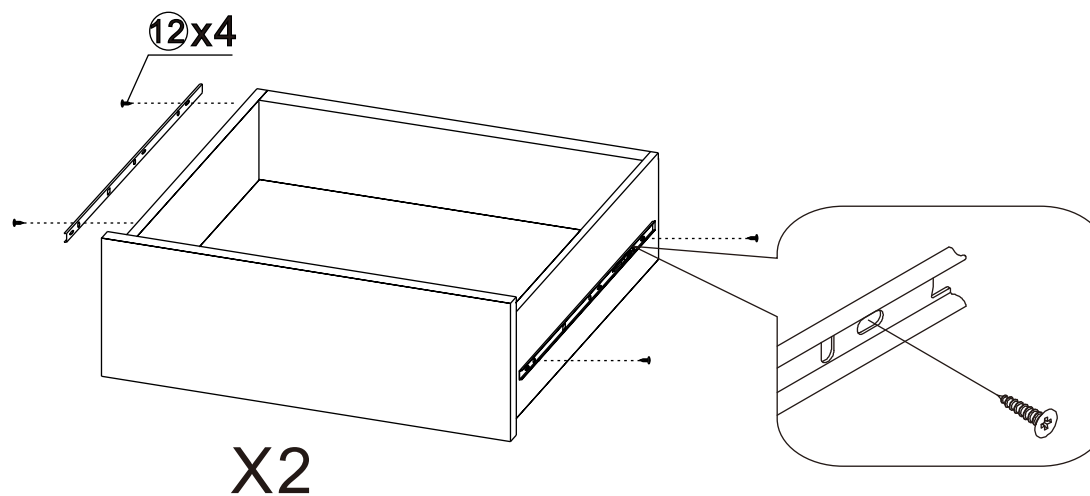

15

Insert drawers in desk

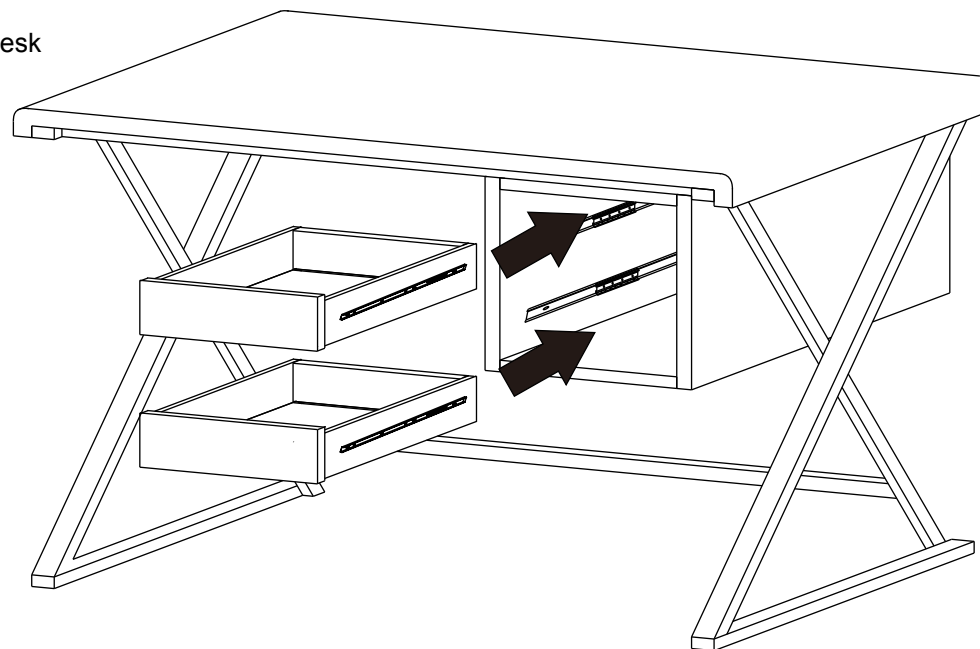

16

