

## NOTICE

- \* Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- \* This item may require periodic tightening.
- \* If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

## PREPARATION

- \* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- \* If any part is missing or damaged, do not attempt to assemble the product.
- \* Estimated Assembly Time: 40 minutes.
- \* Tools Required for Assembly: Allen Key, Screwdriver, Wooden hammer.


## CARE AND MAINTENANCE

Dust regularly with a soft, dry cloth. Never use oiled or treated cloths on lacquered finishes. Some finishes can be wiped with a damp (not wet) cloth, followed at once by rubbing with a dry cloth to remove fingerprints and smudges. For persistent spots, gently clean with a soft cloth and a solution of water and mild soap, make sure to wipe dry. Use adhesive felt pads, coasters and placemats to protect your furniture.




Model# FOX2206A

Product Dimensions: 47.2"W×23.6"D×29.9"H

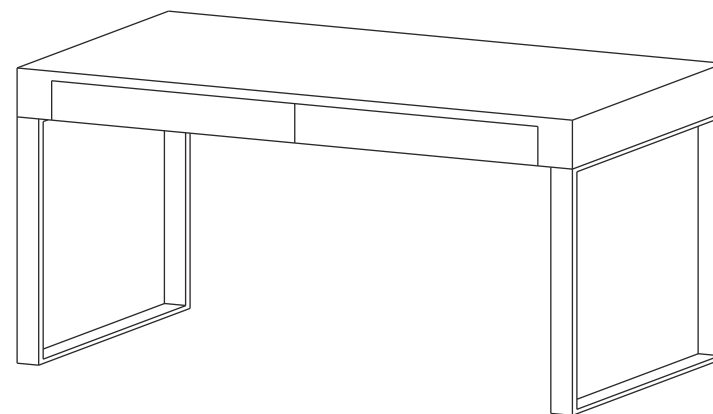

### Part List and Hardware List

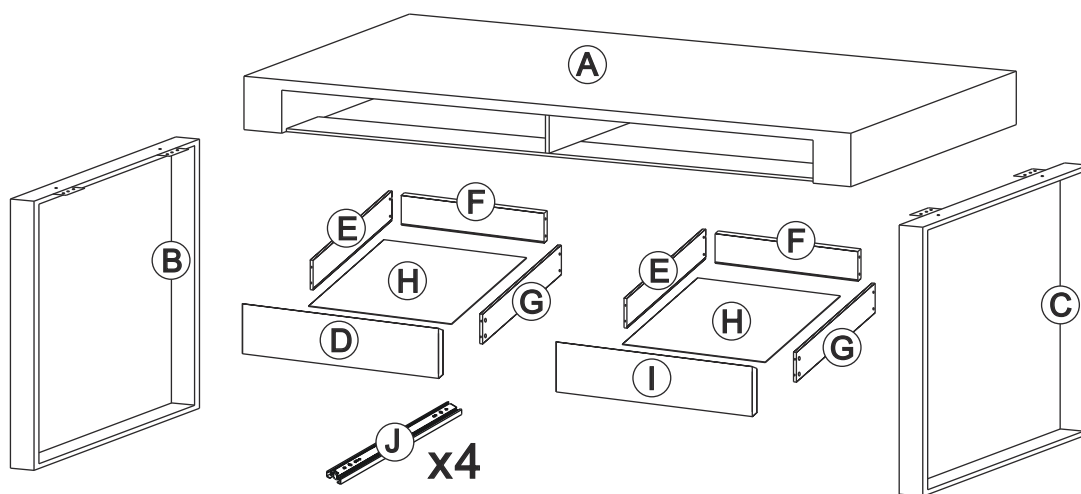

### ⚠ WARNING ⚠

Weight Capacity: 70 lbs.  
Warning: Do not stand on Desk.  
Warning: Do not over torque bolts.

|                             |                            |                            |                            |
|-----------------------------|----------------------------|----------------------------|----------------------------|
| <b>HW1x16</b><br><br>4x12mm | <b>HW2x4</b><br><br>6x30mm | <b>HW3x8</b><br><br>6x12mm | <b>HW4x8</b><br><br>4x35mm |
| <b>HW5x4</b><br><br>6x45mm  | <b>HW6x4</b><br>           | <b>HW7x1</b><br>           | <b>HW8x4</b><br>           |

## Part List & HW List


| Piece | Description              | Qty |
|-------|--------------------------|-----|
| A     | Top Board                | 1   |
| B     | Left Leg                 | 1   |
| C     | Right Leg                | 1   |
| D     | Drawer Front Board Left  | 1   |
| E     | Drawer Side Board Left   | 2   |
| F     | Drawer Back Board        | 2   |
| G     | Drawer Side board Right  | 2   |
| H     | Drawer Bottom Board      | 2   |
| I     | Drawer Front Board Right | 1   |
| J     | Slide Rail               | 4   |

| Piece | Description        | Qty |
|-------|--------------------|-----|
| HW1   | Screw M4 x 12 mm   | 16  |
| HW2   | Screw M6 x 30 mm   | 4   |
| HW3   | Screw M6 x 12 mm   | 8   |
| HW4   | Screw M4 x 35 mm   | 8   |
| HW5   | Cambolt M6 x 45 mm | 4   |
| HW6   | Camlock            | 4   |
| HW7   | Allen Key          | 1   |
| HW8   | Dowel              | 4   |


# PREPARATION

- \* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- \* If any part is missing or damaged, do not attempt to assemble the product.
- \* Estimated Assembly Time: 40 minutes.
- \* Tools Required for Assembly: Allen Key, Screwdriver, Wooden hammer.
- \* If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)



**1** Use HW ②, ③ to install part ⑥, ⑦ on ①.

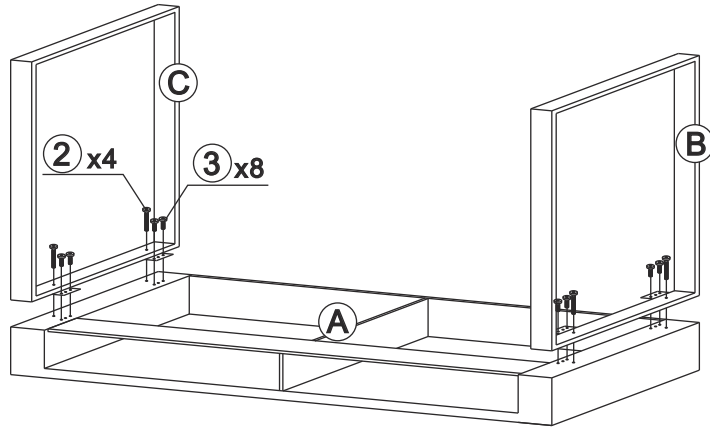

**2** Press down and pull away.

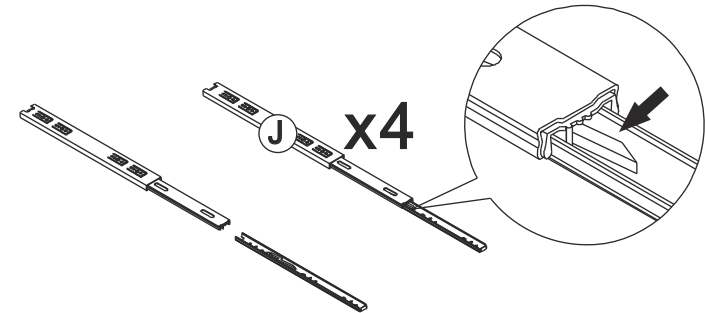


**3** Use HW ① to install the big piece of part ⑨ on the side board of part ①, Pay attention to the direction.

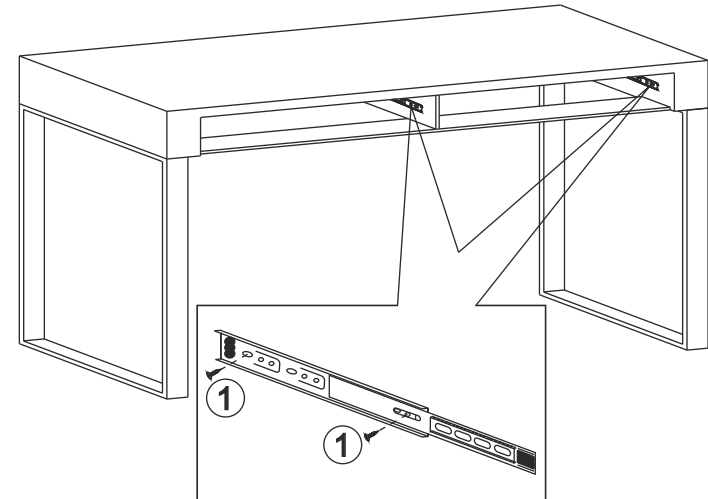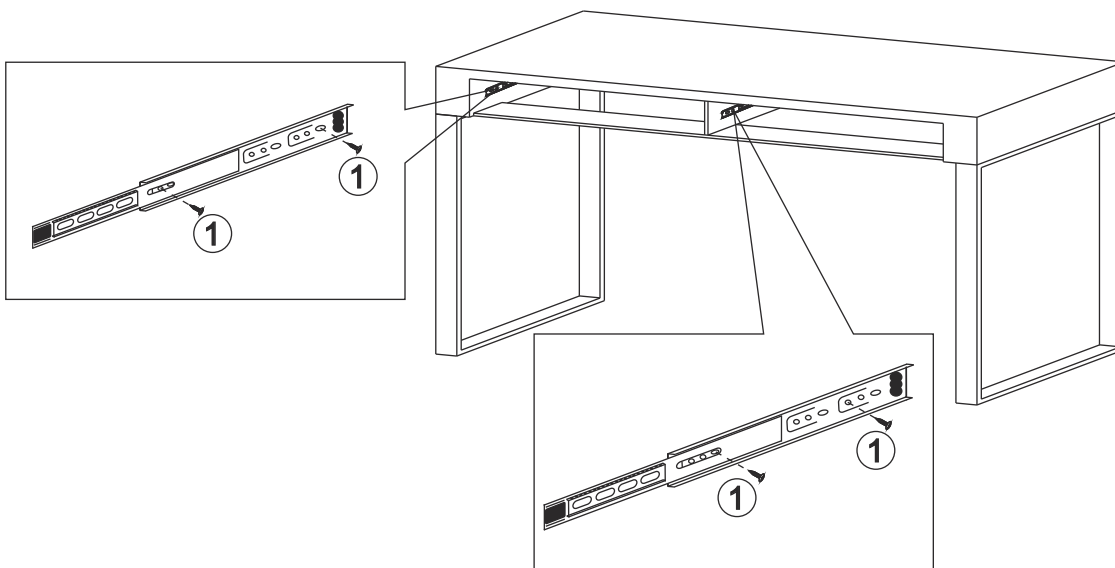


4

Install HW⑤, ⑧ on part①, use HW④ to install②, ③ and④ together,  
Insert part⑤ in part②, ③, ④ frame, insert HW⑥ in part② and④,  
Attach part① to②, ④, fasten HW⑥ to install them together.

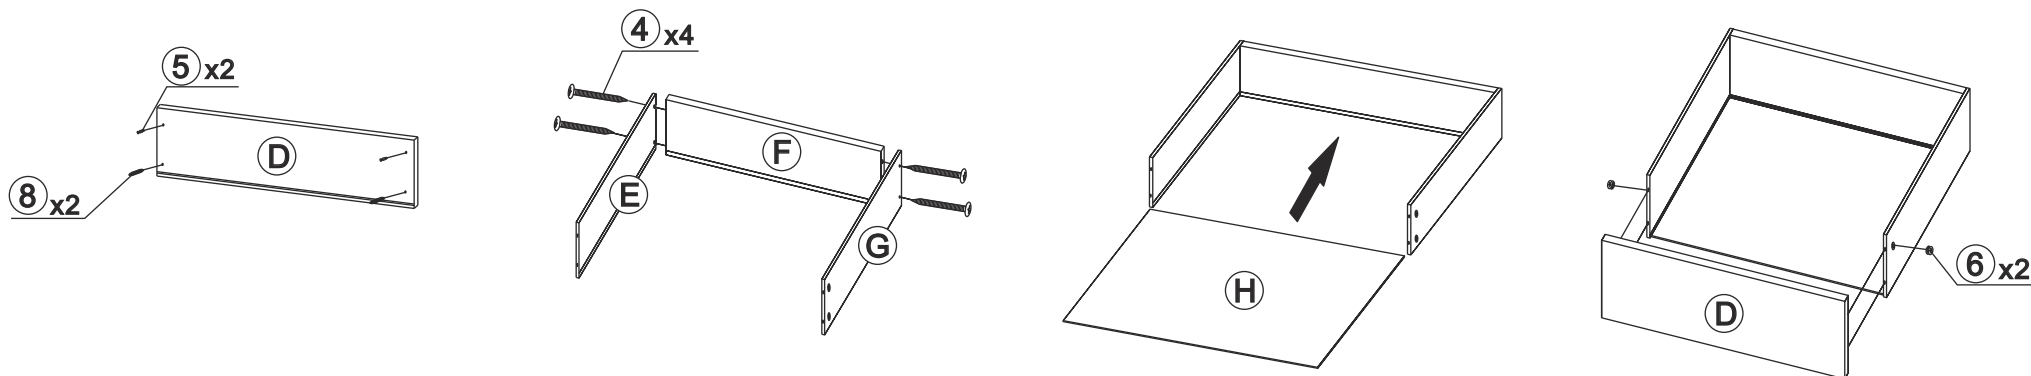


5


Use HW① to install the small piece of part② on③, ④,  
Pay attention to the direction.

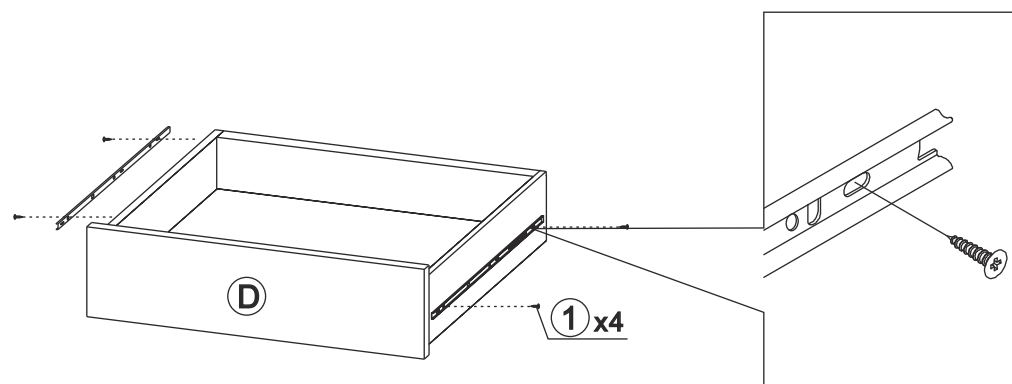


- 6** Install HW⑤, ⑧ on part①, use HW④ to install⑤, ⑥ and⑦ together,  
Insert part⑧ in part⑤, ⑥, ⑦ frame, insert HW⑥ in part⑤ and⑦,  
Attach part① to⑤, ⑦, fasten HW⑥ to install them together.

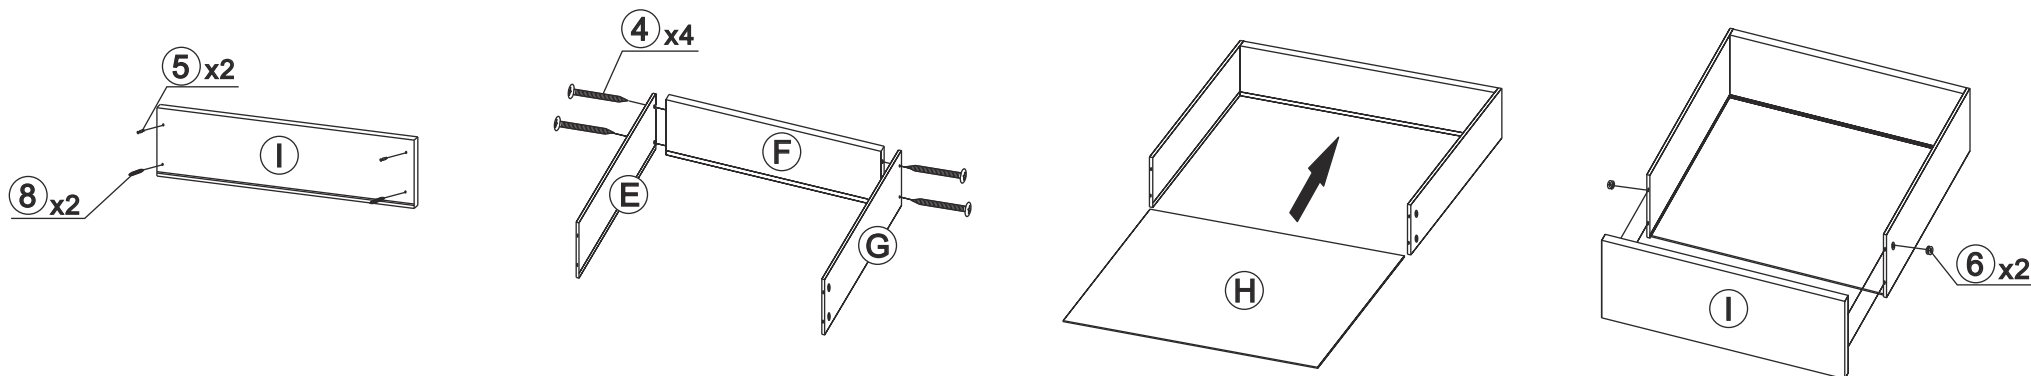

- 7** Use HW① to install the small piece of part② on⑤, ⑦,  
Pay attention to the direction.

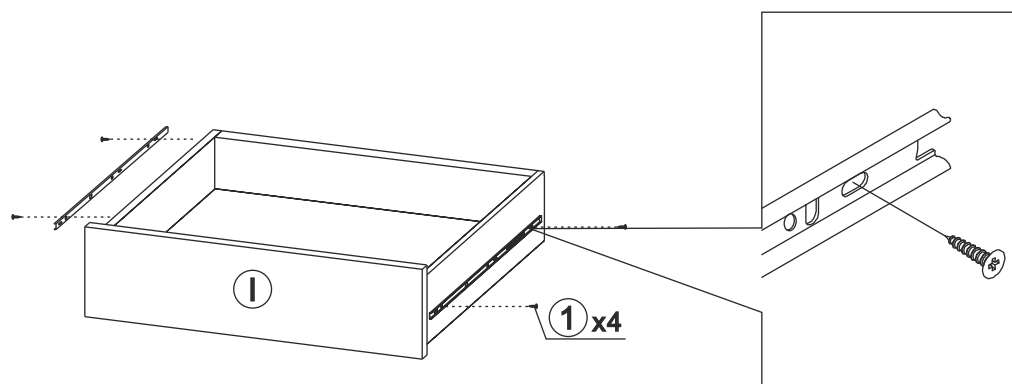

**8** Insert two drawers in desk.

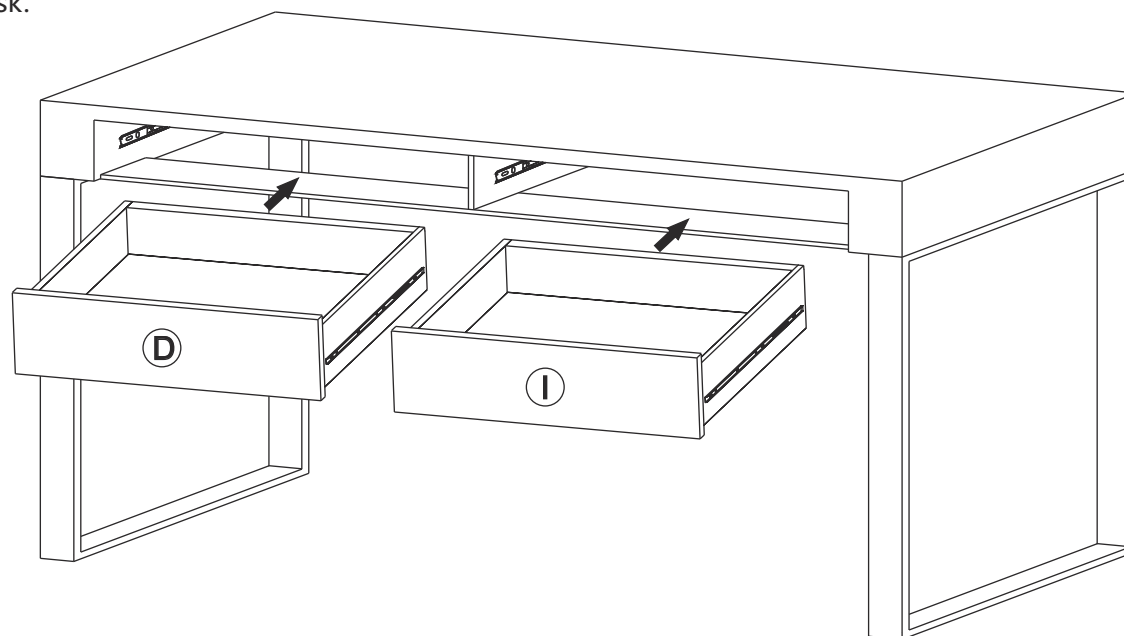

**9** Finish.

