

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com



PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 15 minutes.
- * Tools Required for Assembly : Allen Key,Screwdriver,Spanner,Wooden hammer.

CARE AND MAINTENANCE

Dust regularly with a soft, dry cloth. Never use oiled or treated cloths on lacquered finishes. Some finishes can be wiped with a damp (not wet) cloth, followed at once by rubbing with a dry cloth to remove fingerprints and smudges. For persistent spots, gently clean with a soft cloth and a solution of water and mild soap, make sure to wipe dry. Use adhesive felt pads, coasters and placemats to protect your furniture.


Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Top panel		1X
B	Left Leg		1X
C	Right Leg		1X
D	Bar		1X
HW1	Bolt M6 x 12 mm		12X
HW2	Nut		8X
HW3	Leg adjusting pin		4X
HW4	Washer		8X
HW5	Spanner		1X
HW6	Allen Key		1X



Model# FOX2208

Product Dimensions: 47.2"W x 23.6"D x 29.1"H

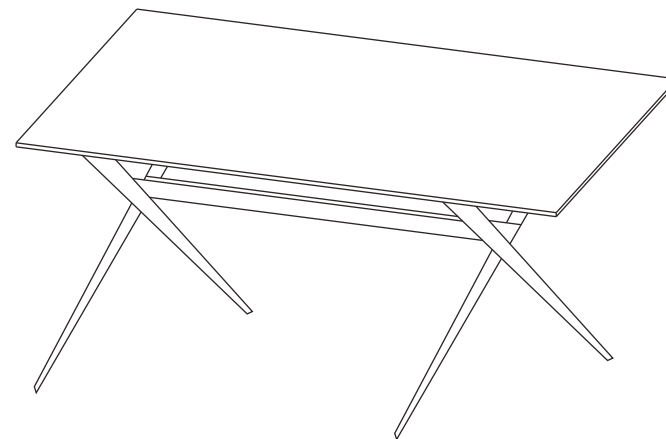

⚠ WARNING ⚠


Weight Capacity: 70 lbs.

Warning:Do not stand on Desk.


Warning:Do not over torque bolts.

PREPARATION


- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 15 minutes.
- * Tools Required for Assembly : Allen Key,Screwdriver,Spanner,Wooden hammer.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

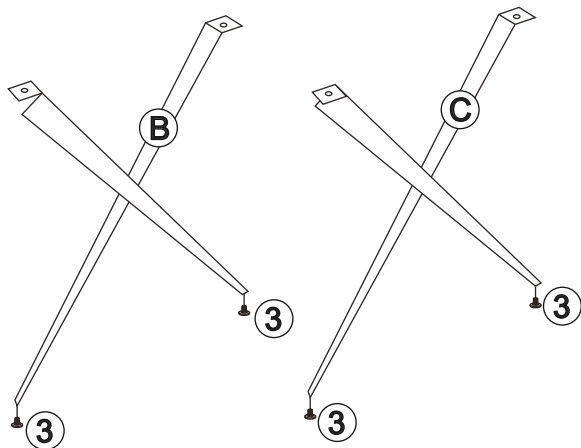


STEP1: Attach HW③ at the end of part ②,③.

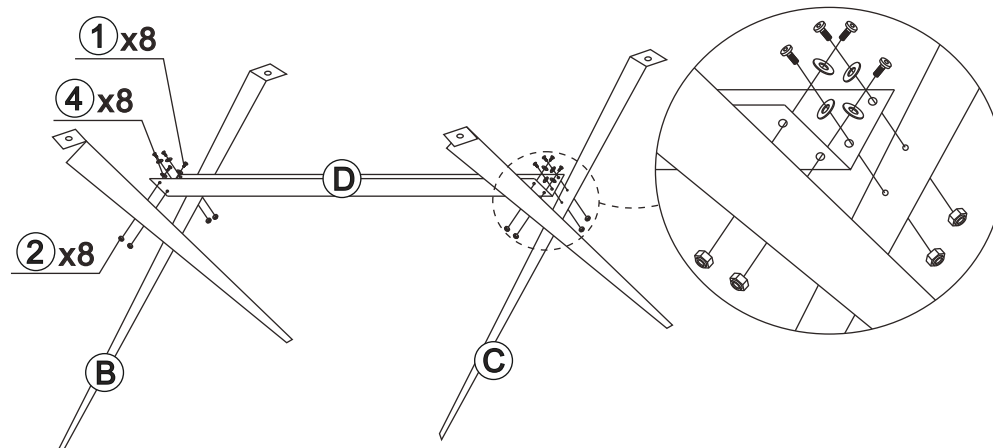

STEP2: Attach part ②,③ to ④ using HW①,HW④, HW②.

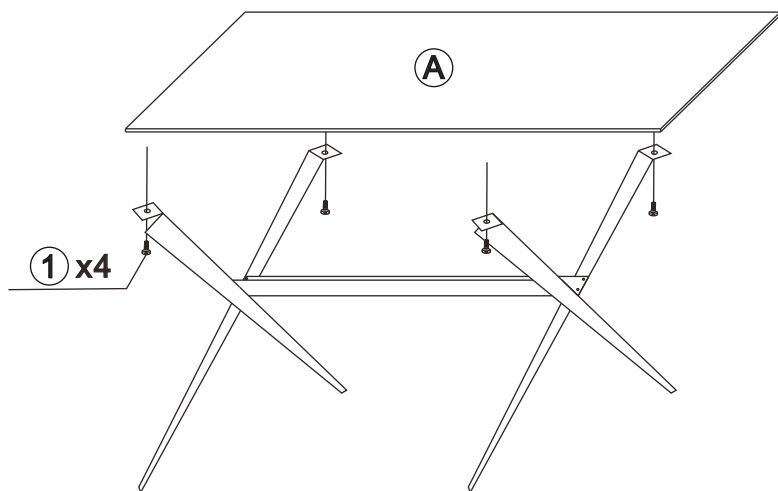

STEP1: Attach part ① to ②,③ using HW①.

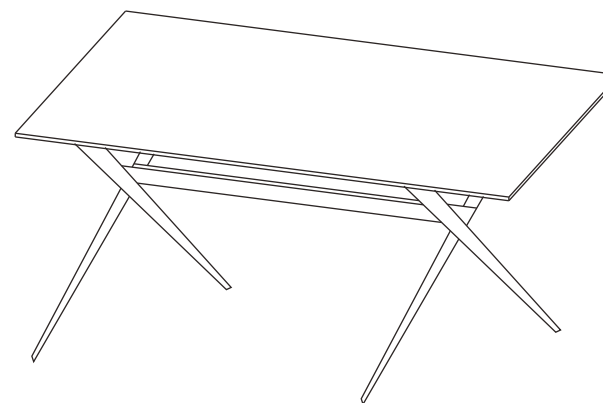

STEP4: Finish.