

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com


PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 50 minutes.
- * Tools Required for Assembly (included): Allen Key, Screwdriver, Wooden hammer.

CARE AND MAINTENANCE

Dust regularly with a soft, dry cloth. Never use oiled or treated cloths on lacquered finishes. Some finishes can be wiped with a damp (not wet) cloth, followed at once by rubbing with a dry cloth to remove fingerprints and smudges. For persistent spots, gently clean with a soft cloth and a solution of water and mild soap, make sure to wipe dry. Use adhesive felt pads, coasters and placemats to protect your furniture.

Part List and Hardware List


Ax2 	Bx1 	Cx1 	Dx1 
Ex1 	Fx1 	Gx1 	

HW1x2 	HW2x2 	HW3x2 	HW4x10 	HW5x10 
HW6x10 	HW7x16  3.5x12mm	HW8x8  6x12mm	HW9x8 	HW10x1 
HW11x4  3.5x16mm				



Model# FOX2217A

Product Dimensions: 39.4W"×19.7"D×29.5"H

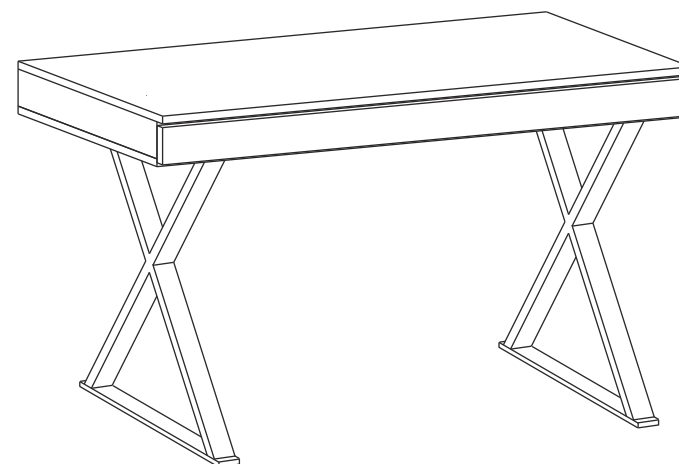

⚠ WARNING ⚠

Weight Capacity: 70 lbs.

Warning: Do not stand on Desk.

Warning: Do not over torque bolts.

Part List & HW List


Piece	Description	Qty
A	Leg	2
B	Side Board Back	1
C	Top Board	1
D	Bottom Board	1
E	Side Board Right	1
F	Side Board Left	1
G	Side Board Front	1

Piece	Description	Qty
HW1	Hinge	2
HW2	Metal Plate	2
HW3	Magnet Holder	2
HW4	Camlock	10
HW5	Cambolt M 6 x 45 mm	10
HW6	Dowel	10
HW7	Screw M 3.5 x 12 mm	16
HW8	Screw M 6 x 12 mm	8
HW9	Screw M 5 x 45 mm	8
HW10	Allen Key	1
HW11	Screw M 3.5 x 16 mm	4


PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 50 minutes.
- * Tools Required for Assembly (included): Allen Key, Screwdriver, Wooden hammer.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com


- 1** Use HW⑪ to install HW③ on part ⑤ and ⑥.
Install HW⑤ on part ⑤ and ⑥.
Insert HW⑥ in part ⑤ and ⑥.

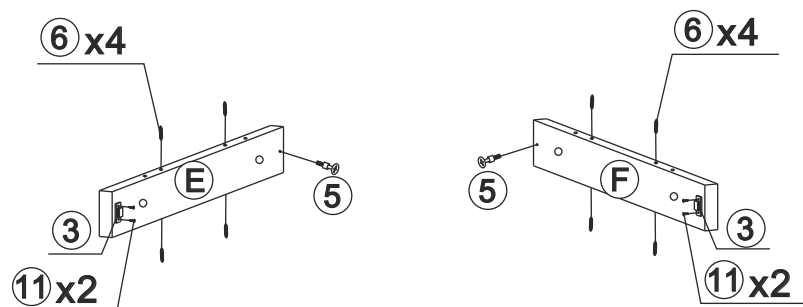


- 2** Install HW⑤ on part ③.

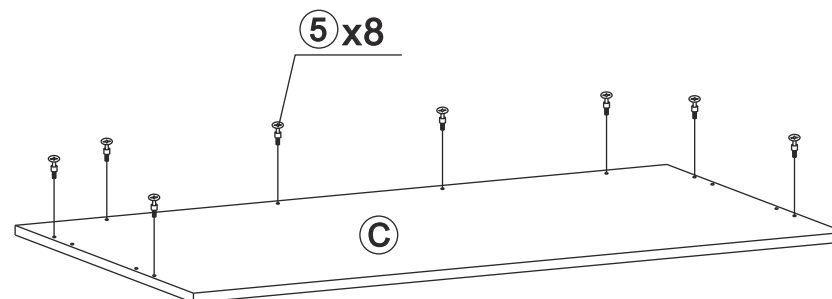


- 3** Insert HW④ in part ②, attach to part ⑤, ⑥.
Fasten HW④ to install ②, ⑤ and ⑥ together.
Insert HW⑥ in part ②.

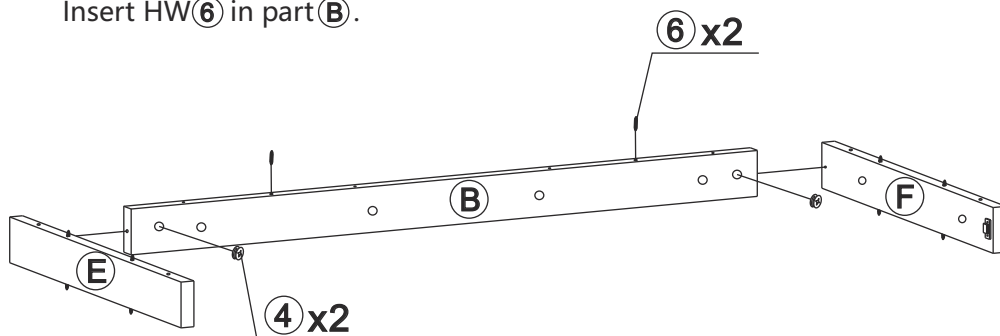


- 4** Insert HW④ in part ②, ⑤ and ⑥, attach to part ③.
Fasten HW④ to install part ②, ⑤, ⑥ and ③ together.

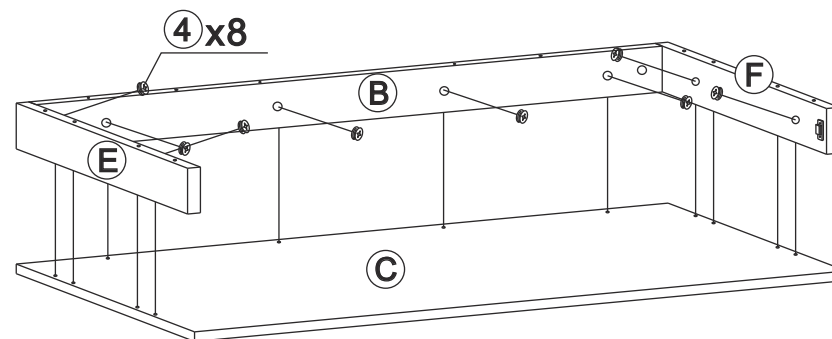


- 5** Use HW⑦ to install HW② on part⑥.
Use HW⑦ to install HW① on part④ and⑥.

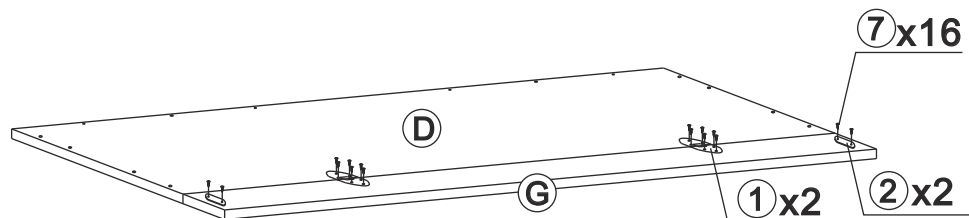

- 6** Flip over part ④ and ⑥.
Use HW⑨ to install part ③, ⑤, ⑧ and ④ together.

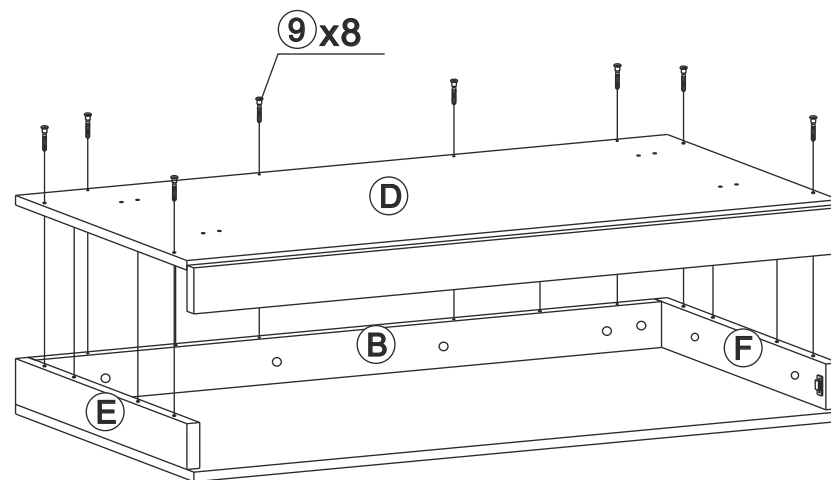

- 7** Use HW⑧ to install part ① and ④ together.
Flip over the desk.

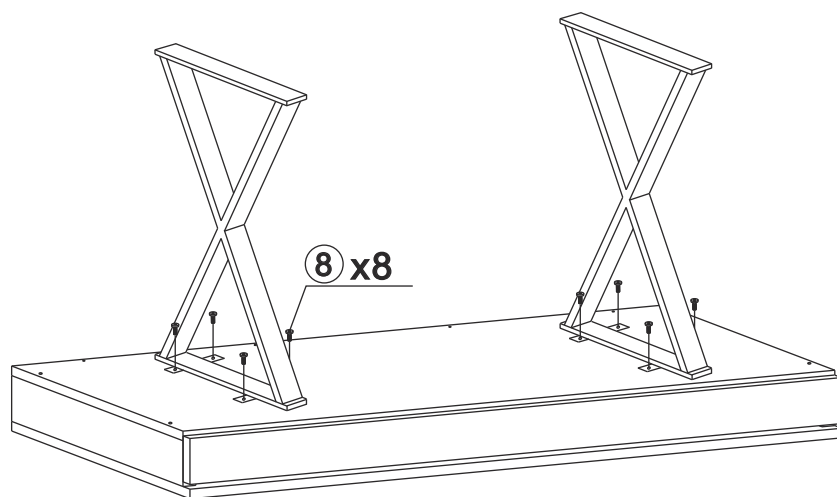

- 8** Finish.

